



Frigidaire

Factory Parts Catalog

Product No.	FGMV185KBA	FGMV185KFA	FGMV185KWA	FPMV189KFA
Market	North America	North America	North America	North America
Color	black	stainless	white	stainless
Volts	120	120	120	120
Watts	1000	1000	1000	1000
Wiring Diagram	5995536520	5995536520	5995536520	5995536520
Owner's Guide	316495055en	316495055en	316495055en	316495055en
Installation Instructions	316495060	316495060	316495060	316495060



Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995536520
09/03/26
(EN/SERVICE/KC)
099

OVER-RANGE MICROWAVE

Model No.
FGMV185K / FPMV189K

Copyright © 2009 Electrolux Home Products, Inc.
All rights reserved.

OVEN,CABINET

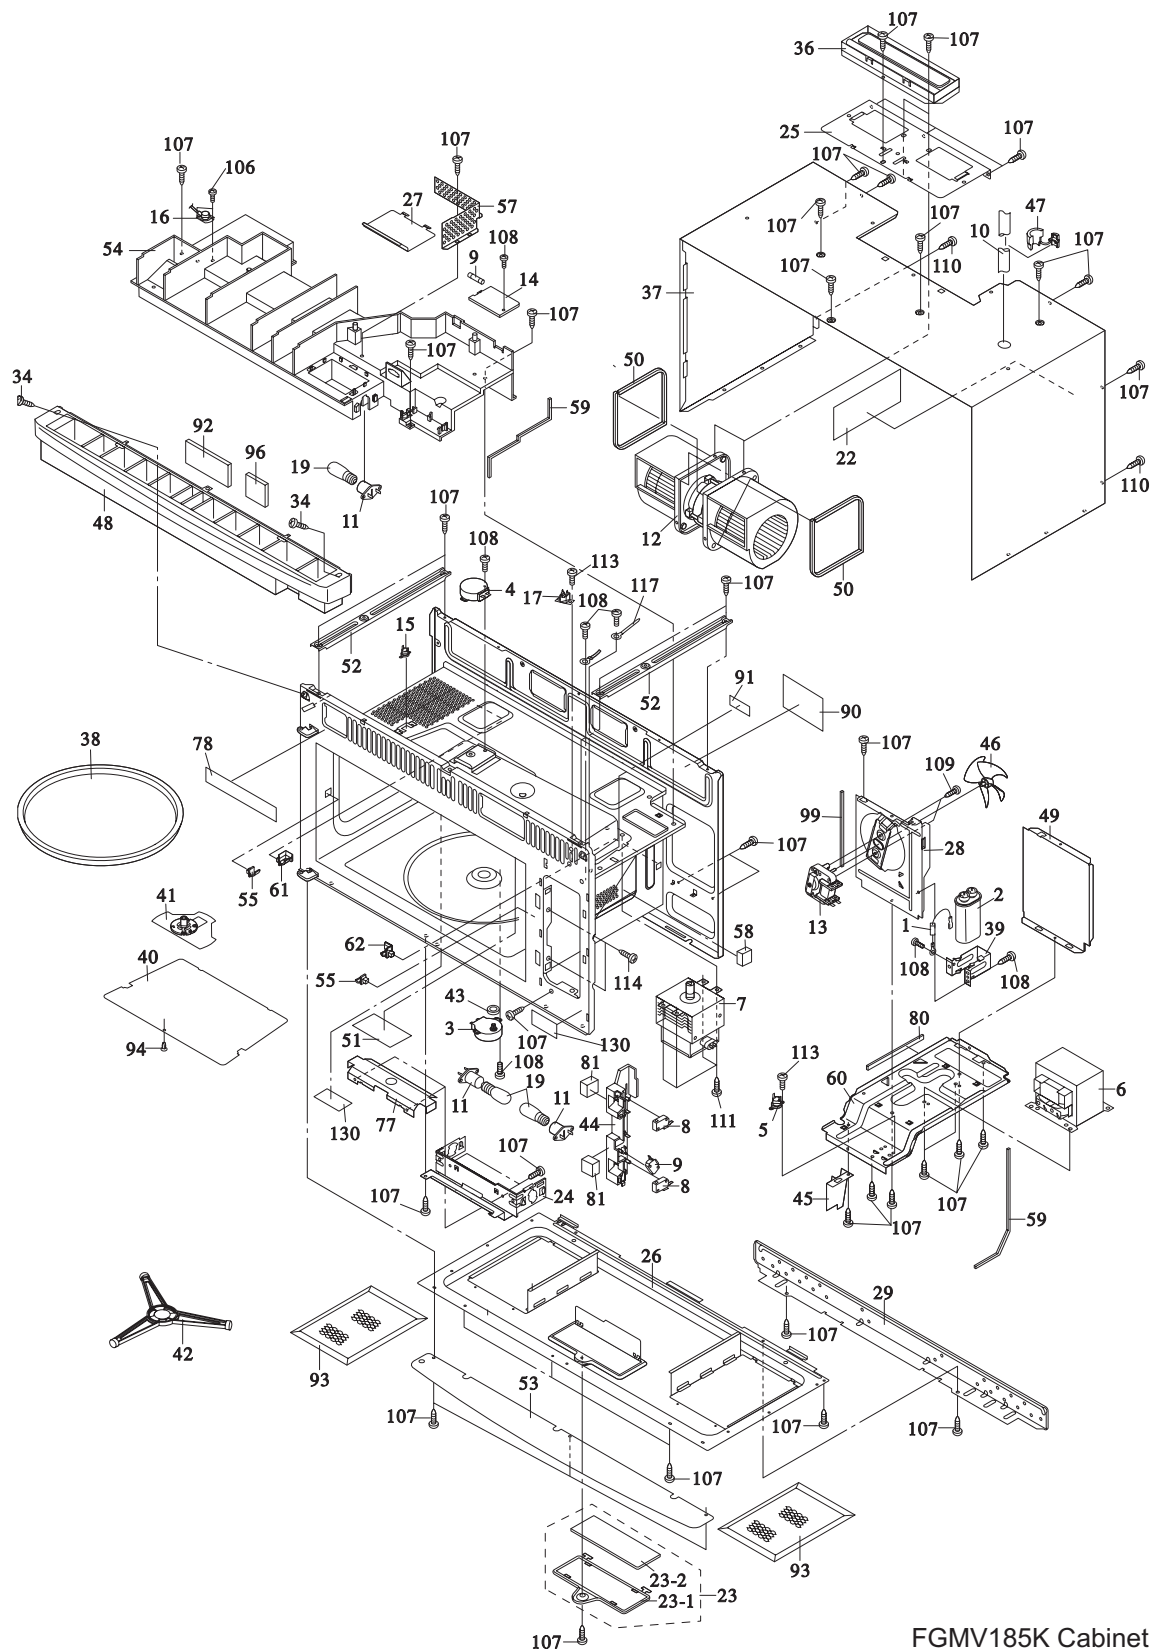


FGMV185K Cabinet

OVEN,CABINET

Model Index: **A** FGMV185K (FGMV185KBA)
B FGMV185K (FGMV185KFA)
C FGMV185K (FGMV185KWA)
D FPMV189K (FPMV189KFA)

POS. NO	PART NO.	DESCRIPTION			
1 #	5304467670	A	B	C	D
2 #	5304467671	A	B	C	D
3 #	5304467690	A	B	C	D
4 #	5304467691	A	B	C	D
5 #	5304440023	A	B	C	D
6 #	5304467692	A	B	C	D
7 #	5304467693	A	B	C	D
8 #	5304467694	A	B	C	D
9 #	5304467695	A	B	C	D
10 #	5304440028	A	B	C	D
11 #	5304463785	A	B	C	D
12 #	5304467696	A	B	C	D
13 #	5304467697	A	B	C	D
14 #	5304467698	A	B	C	D
15 #	5304440032	A	B	C	D
16 #	5304463786	A	B	C	D
17 #	5303319550	A	B	C	D
19	5304440031	A	B	C	D
22	5304472030	A	B	C	D
23	5303319573	A	B	C	D
23-1	5303319574	A	B	C	D
23-2	5303319575	A	B	C	D
24	5304468909	A	B	C	D
25	5304467704	A	B	C	D
26	5304468910	A	B	C	D
27	5304468911	A	B	C	D
28	5304467708	A	B	C	D
29	5304467709	A	B	C	D
34	5304467710	A	B	C	D
36	5304464343	A	B	C	D
37	5304467712	A	B	-	D
37	5304467713	-	-	C	-
38	5304441872	A	B	C	D
39	5304468912	A	B	C	D
40	5304467715	A	B	C	D
41 #	5304467716	A	B	C	D
42	5304467717	A	B	C	D
43	5304467718	A	B	C	D
44	5304440289	A	B	C	D
45	5304467719	A	B	C	D
46 #	5304467720	A	B	C	D
47	5304467721	A	B	C	D
48 #	5304468915	A	-	-	-
48 #	5304472032	-	B	-	-
48 #	5304472033	-	-	C	-
48 #	5304472031	-	-	-	D
49	5304467725	A	B	C	D

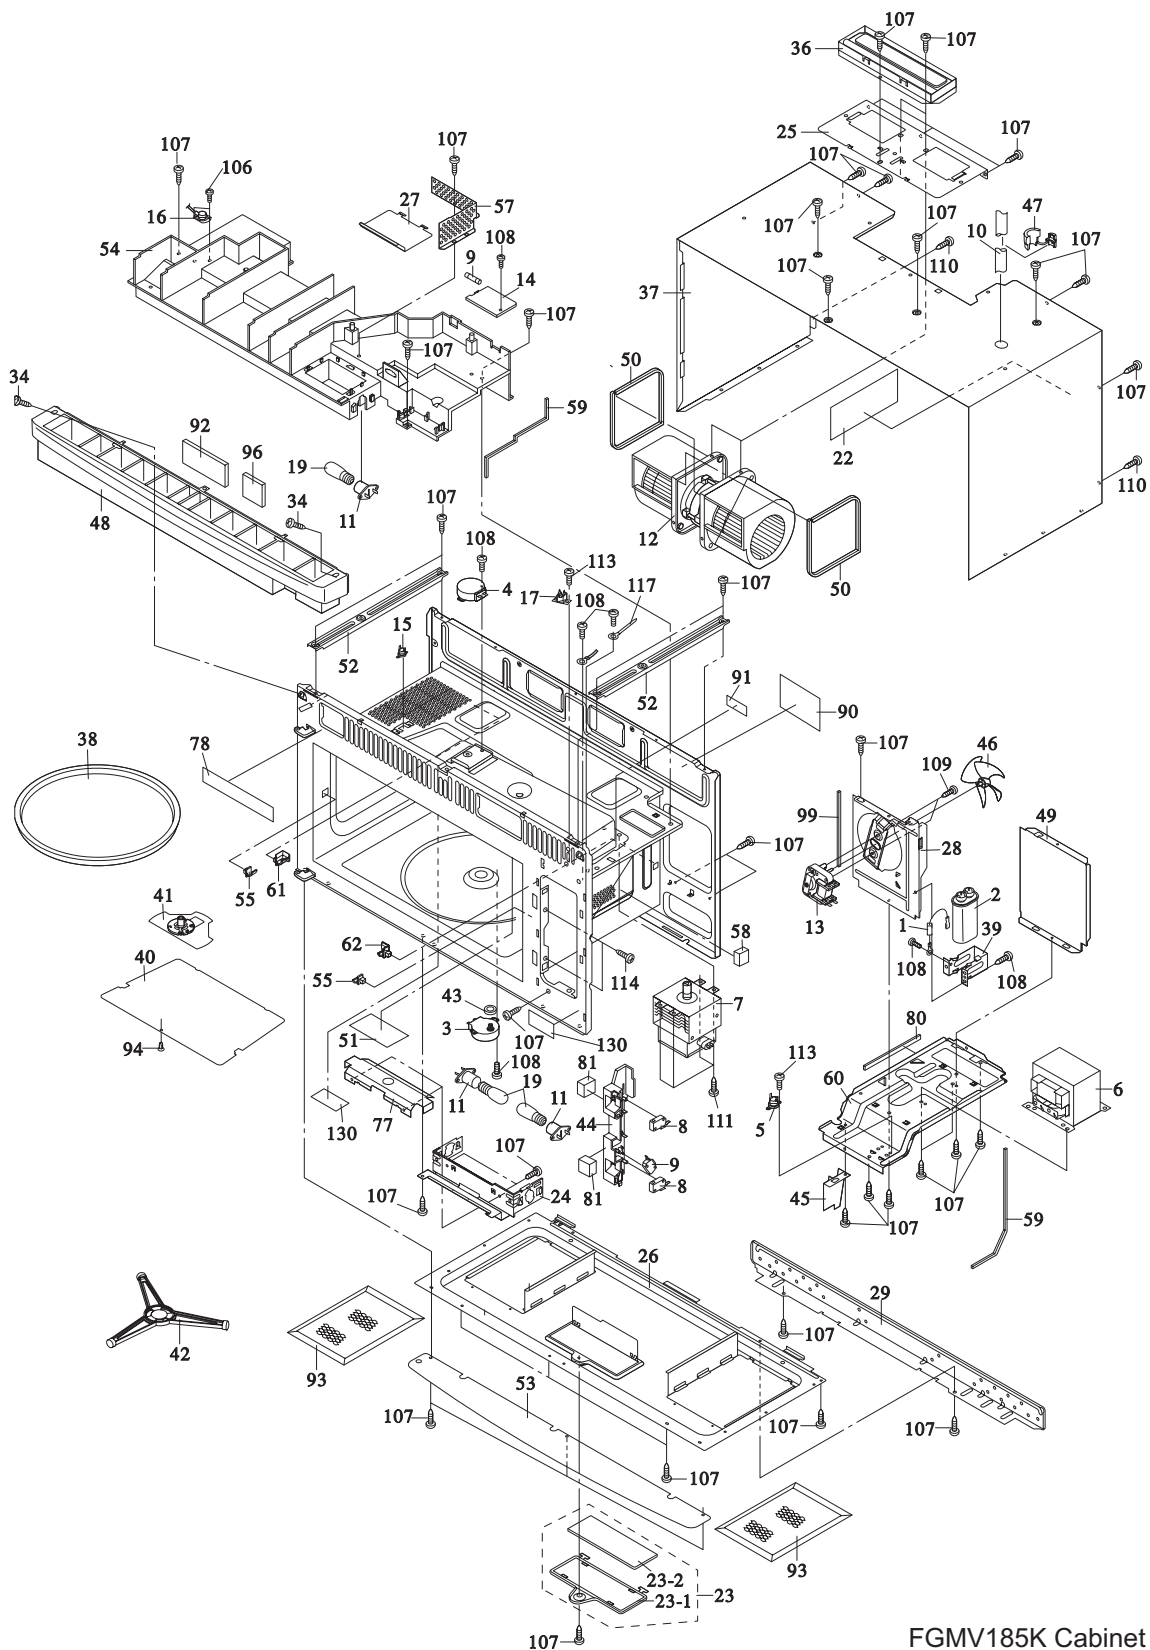OVEN,CABINET


FGMV185K Cabinet

OVEN,CABINET

Model Index: **A** FGMV185K (FGMV185KBA)
B FGMV185K (FGMV185KFA)
C FGMV185K (FGMV185KWA)
D FPMV189K (FPMV189KFA)

POS. NO	PART NO.		DESCRIPTION
50	5304467726	A B C D	Gasket, hood fan motor, cushion
51	5304467727	A B C D	Lens, lamp filter
52	5304467728	A B C D	Support, chassis
53	5304467730	A B - D	Deflector, black
53	5304467731	- - C -	Deflector, white
54	5304467732	A B C D	Duct, exhaust hood
55	5304468916	A B C D	Support, rack, front
57	5304467734	A B C D	Barrier
58	5304467759	A B C D	Cushion, transformer pad
59	5304467760	A B C D	Cushion, intake duct, seal
60	5304467761	A B C D	Plate, base, right
61	5304468917	A B C D	Support, rack, left rear
62	5304468918	A B C D	Support, rack, right rear
77	5304468919	A B C D	Reflector, hood lamp
78	5304471813	A B C D	Label, menu
80	5304467768	A B C D	Cushion, base, right side, seal
81	5304467769	A B C D	Cushion, latch hook, pad
90	5304467770	A B C D	Label, Caution-DHHS
91	5304467771	A B C D	Label, Caution-monitor
92 #	5304467772	A B C D	Filter, inside exhaust, charcoal
93	5303319568	A B C D	Filter, grease, (2)
94	5304467773	A B C D	Clip, canoe type, stirrer cover
96 #	5304467774	A B C D	Filter, air
99	5304467776	A B C D	Cushion, fan duct, seal
106	5304467778	A B C D	Screw, 3 mm x 8 mm
107	5304451552	A B C D	Screw, 4 mm x 8 mm, white
107	5304467777	A B C D	Screw, 4 mm x 8 mm, black
108	5304451550	A B C D	Screw, 4 mm x 8 mm
109	5304450253	A B C D	Screw, 4 mm x 8 mm
110	5304451557	A B C D	Screw, 4 mm x 12 mm
111	5304467780	A B C D	Screw, 4 mm x 8 mm, Tap Tight
113	5304467781	A B C D	Screw, 3 mm x 6 mm
114	5303319641	A B C D	Screw
117	5304468921	A B C D	Holder, wire
130	5304468191	A B C D	Label, Caution-DHHS

CONTROL PANEL,DOOR,MISC.

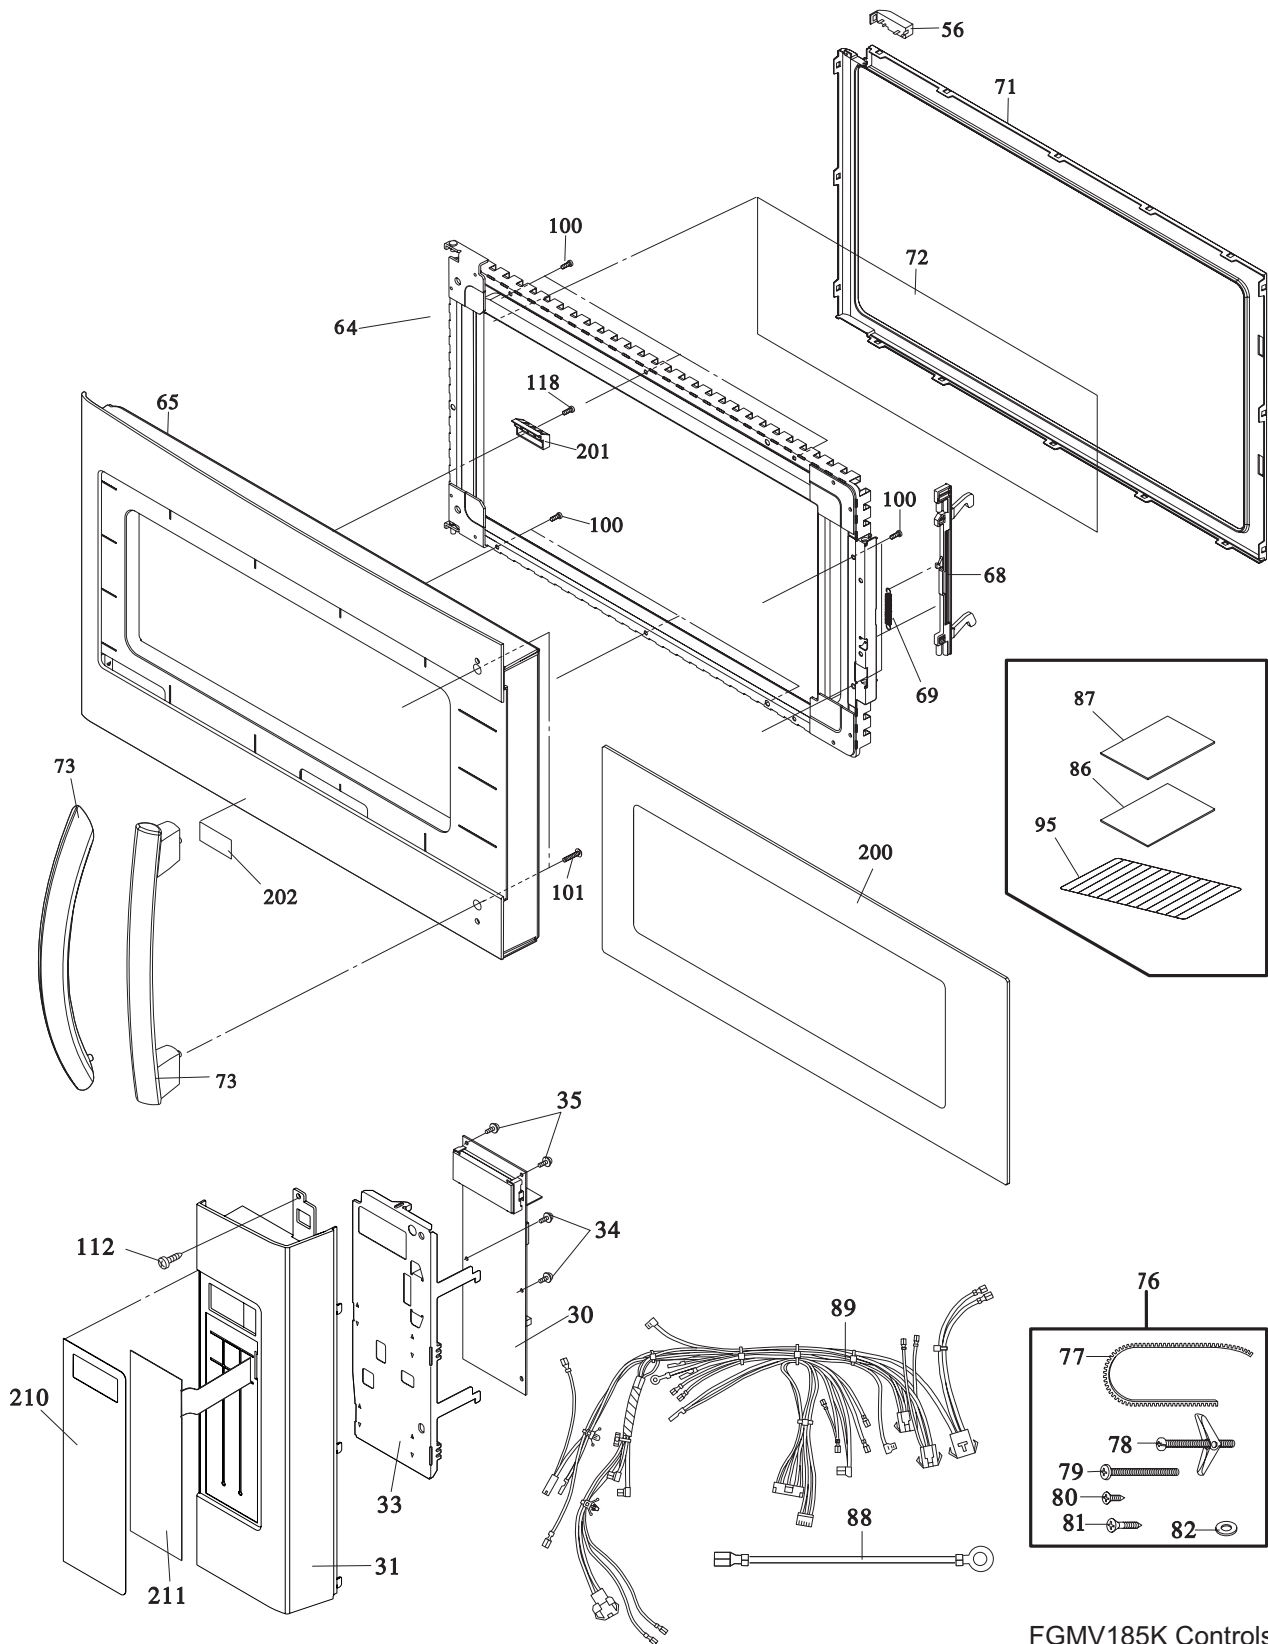

FGMV185K Controls

CONTROL PANEL,DOOR,MISC.

Model Index: **A** FGMV185K (FGMV185KBA)
B FGMV185K (FGMV185KFA)
C FGMV185K (FGMV185KWA)
D FPMV189K (FPMV189KFA)

POS. NO	PART NO.	DESCRIPTION			
30 #	5304472034	A	B	C	D
31	5304472038	A	-	-	-
31	5304472036	-	B	-	-
31	5304472037	-	-	C	-
31	5304472035	-	-	-	D
33	5304472039	A	B	C	D
34	5304467710	A	B	C	D
35	5304456930	A	B	C	D
56	5304463156	A	B	C	D
64	5304467789	A	B	-	-
64	5304468946	-	-	C	-
64	5304471822	-	-	-	D
65	5304472045	A	-	-	-
65	5304472052	-	B	-	-
65	5304472044	-	-	C	-
65	5304472051	-	-	-	D
68	5304467798	A	B	C	D
69	5304440316	A	B	C	D
71	5304467802	A	B	C	D
72	5304467803	A	B	C	D
73	5304472047	A	-	-	-
73	5304472054	-	B	-	-
73	5304472046	-	-	C	-
73	5304472053	-	-	-	D
76	5304467765	A	B	C	D
77	5303318761	A	B	C	D
78	5303318762	A	B	C	D
79	5304453895	A	B	C	D
80	5304451552	A	B	C	D
81	5304453723	A	B	C	D
82	5304453724	A	B	C	D
86	5304467832	A	B	C	D
87	5304467833	A	B	C	D
88 #	5304467828	A	B	C	D
89 #	5304468945	A	B	C	D
95	5304463180	A	B	C	D
100	5304468930	A	B	C	D
101	5304471832	A	B	C	D
112	5304451553	A	B	C	D
118	5304451561	A	B	C	D
200	5304472049	A	B	-	-
200	5304472048	-	-	C	-
200	5304472050	-	-	-	D
201	5304467794	A	B	C	D
202	5304471837	A	B	C	-
202	5304471838	-	-	-	D
210	5304472041	A	B	-	-
210	5304472042	-	-	C	-
210	5304472040	-	-	-	D
211#	5304472043	A	B	C	D

WIRING SCHEMATIC

OVEN SCHEMATIC

SCHEMATIC

NOTE: CONDITION OF OVEN

1. DOOR CLOSED.
2. CLOCK APPEARS ON DISPLAY

NOTE: "★" indicates components with potential above 250V

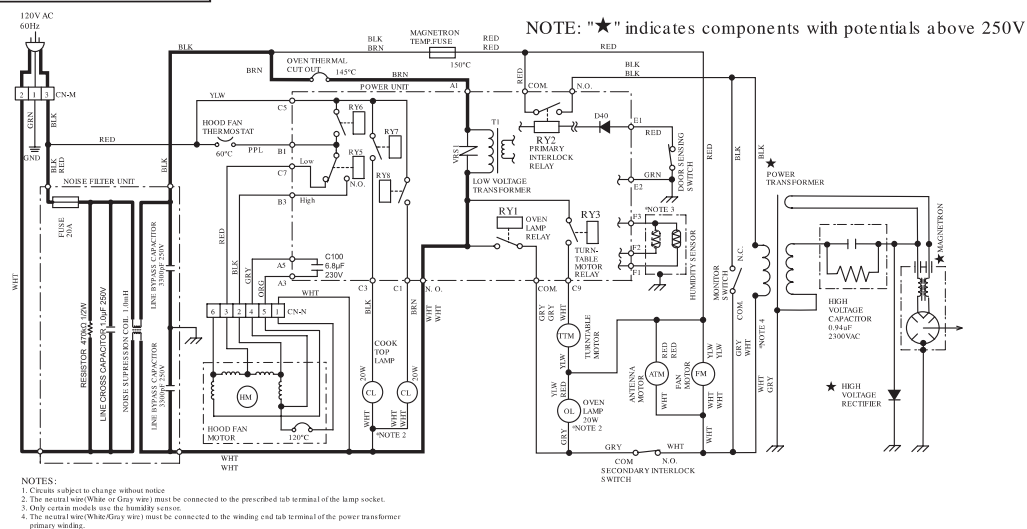


Figure O-1. Oven Schematic-Off Condition

SCHEMATIC

NOTE: CONDITION OF OVEN

1. DOOR OPENED.
2. COOKING TIME PROGRAMMED.
3. VARIABLE COOKING CONTROL "HIGH".
4. START PAD TOUCHED.

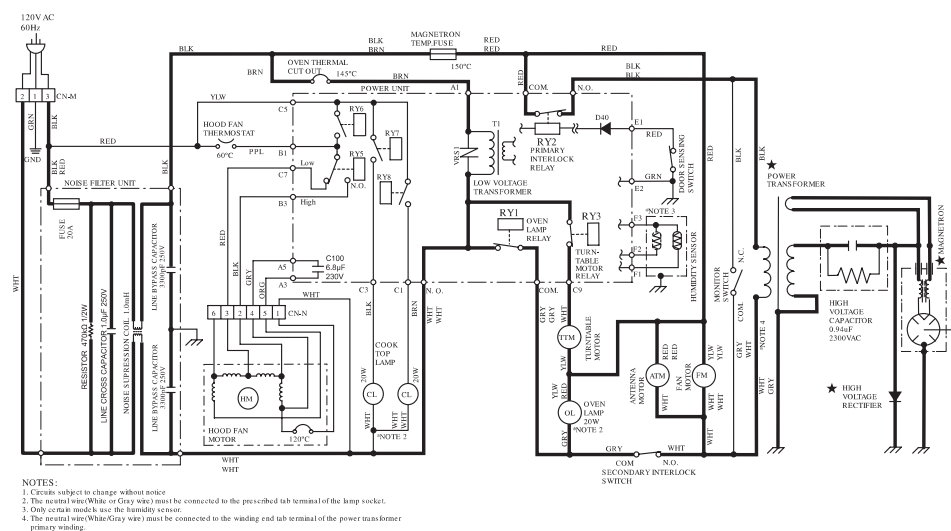


Figure O-2. Oven Schematic-Cooking Condition