INSTALLATION Product Manual



IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product.follow the manual thoroughly and keep it for further reference.





AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembled on a soft layer-could be a rug.



IMPROVE EFFICIENCY!

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.







ANTI-TOPPLE WARNING!


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT!

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly,and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

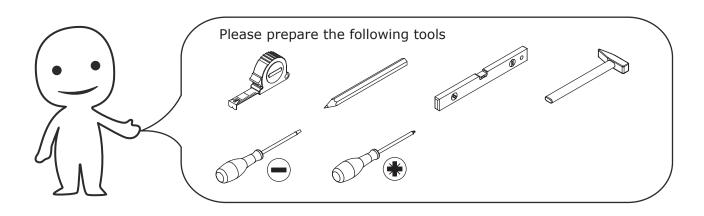




Ø4 x 20 mm




When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

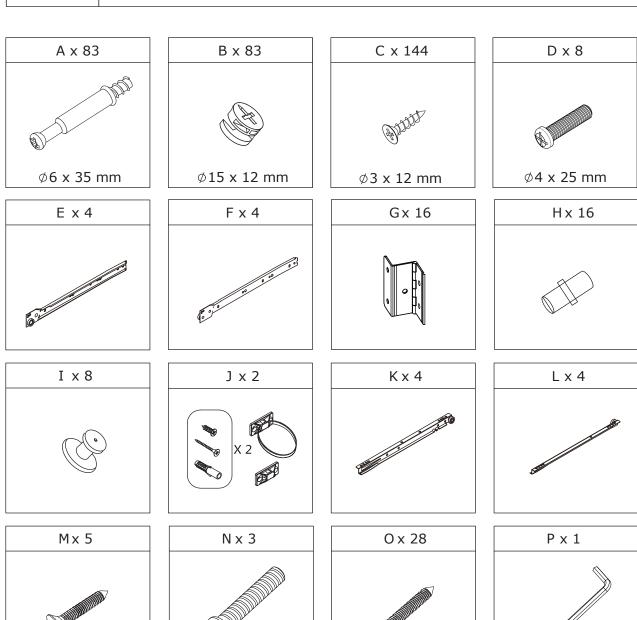

Ø4 x 30 mm


Ø6 x 40 mm

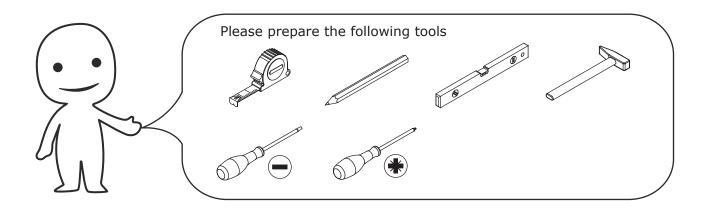









When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

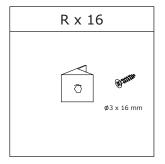

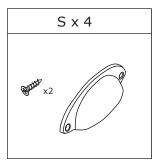

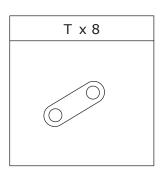

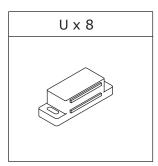

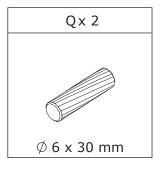

AWARNING




 
Children have died from furniture tipover.To reduce the risk of furniture tipover:

 
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand,climb
- or hang on drawers,doors,or shelves.

 NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.


This is a permanent label. Do not remove!

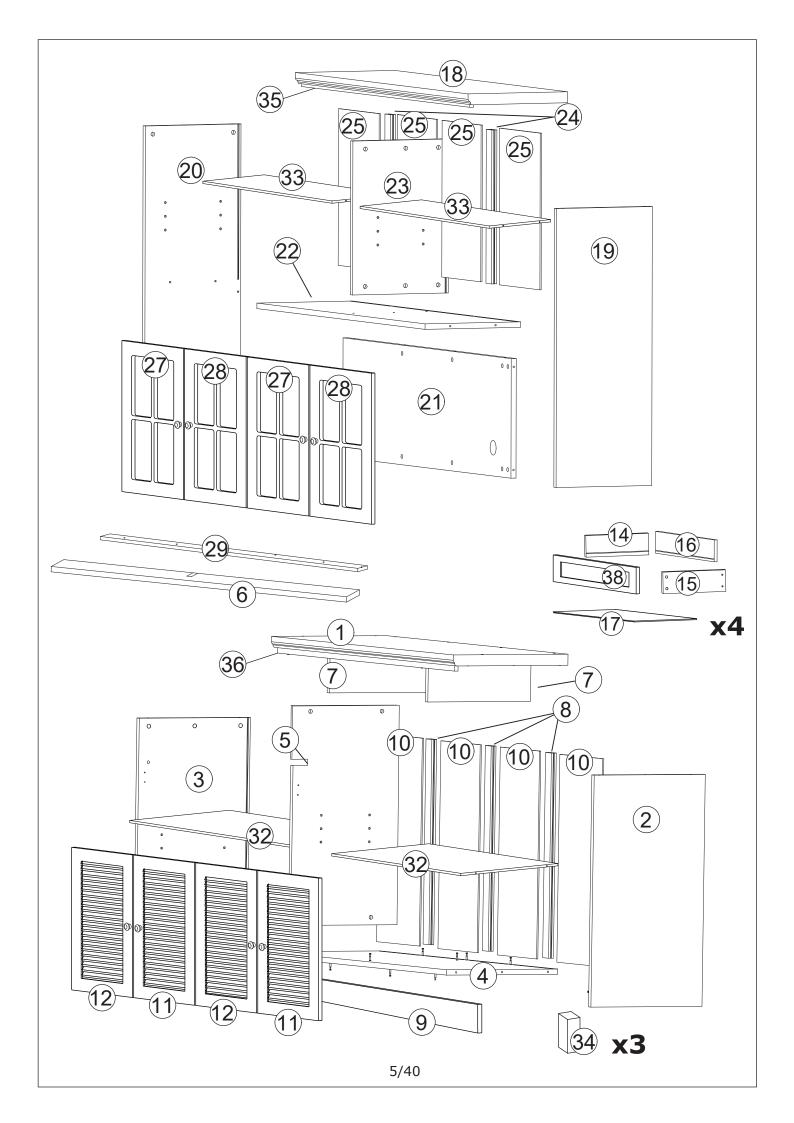







Fix slide rail(F) to plate 5, fix slide rail(E) to plate 5 using screw(C) as shown.

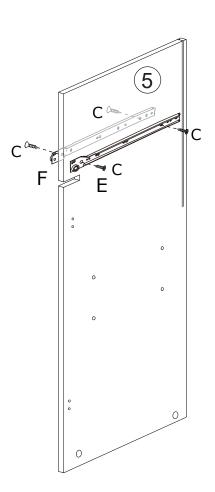

 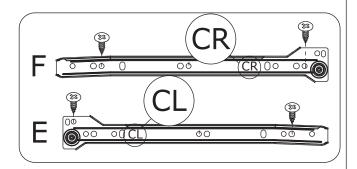


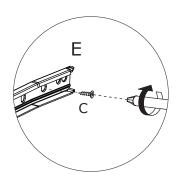










Insert quickfit screw(A) into corresponding holes in plate 4 and 9 with a screwdriver at first.

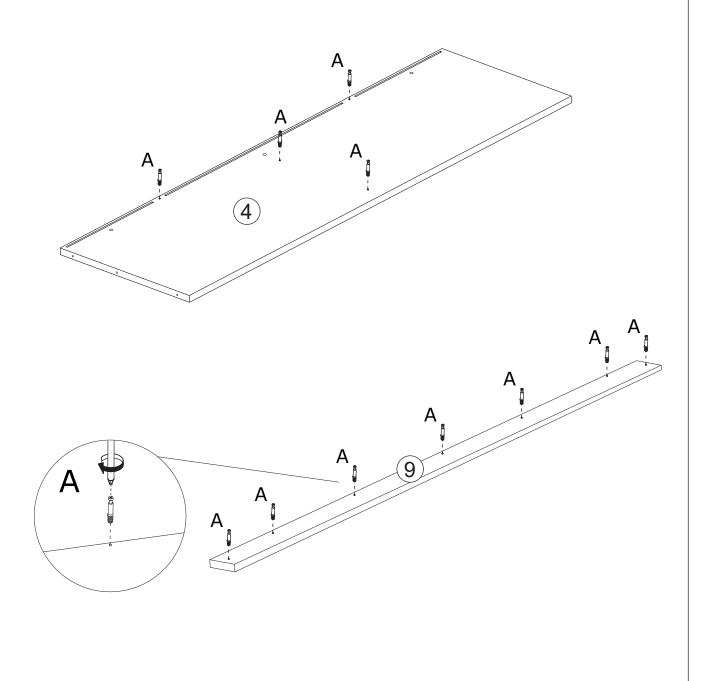









 Fix leg support 34 to plate 4 using screw(N) as shown.



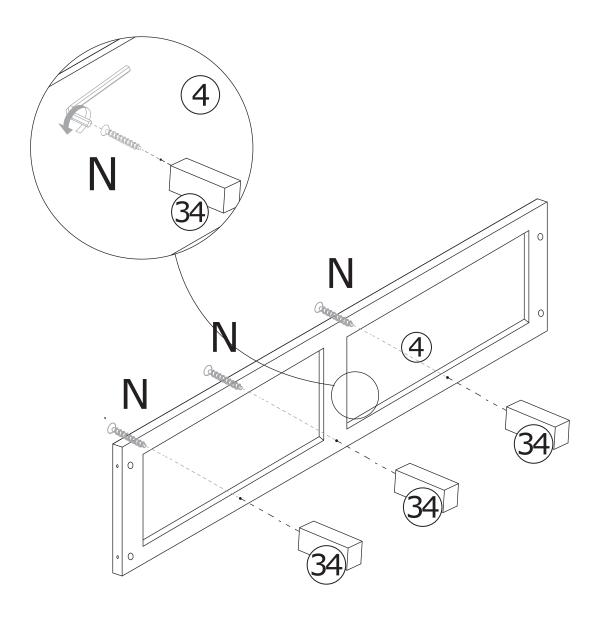












Fix part(U) to plate 6 with screw(C) as shown.
Insert wooden dowel(Q) into board 6 as shown.

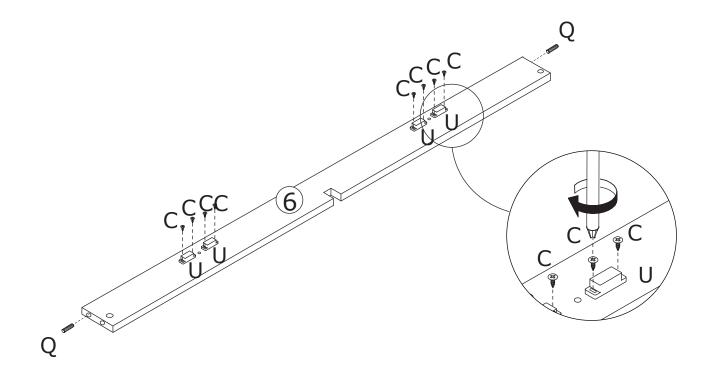










 Connect plate 4 and 6 with plate 5, insert cam lock(B) into holes in plate 5 and turn clockwise to tighten as shown. Embed plate 6 into slot in plate 5 as shown.



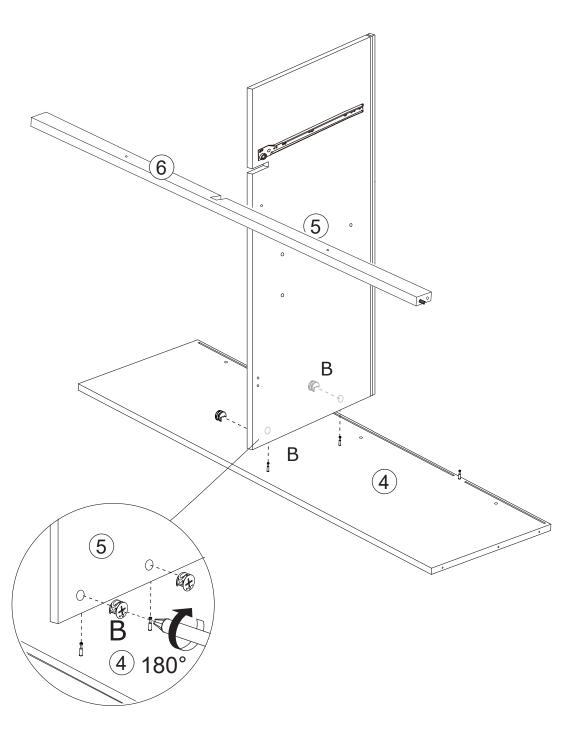

 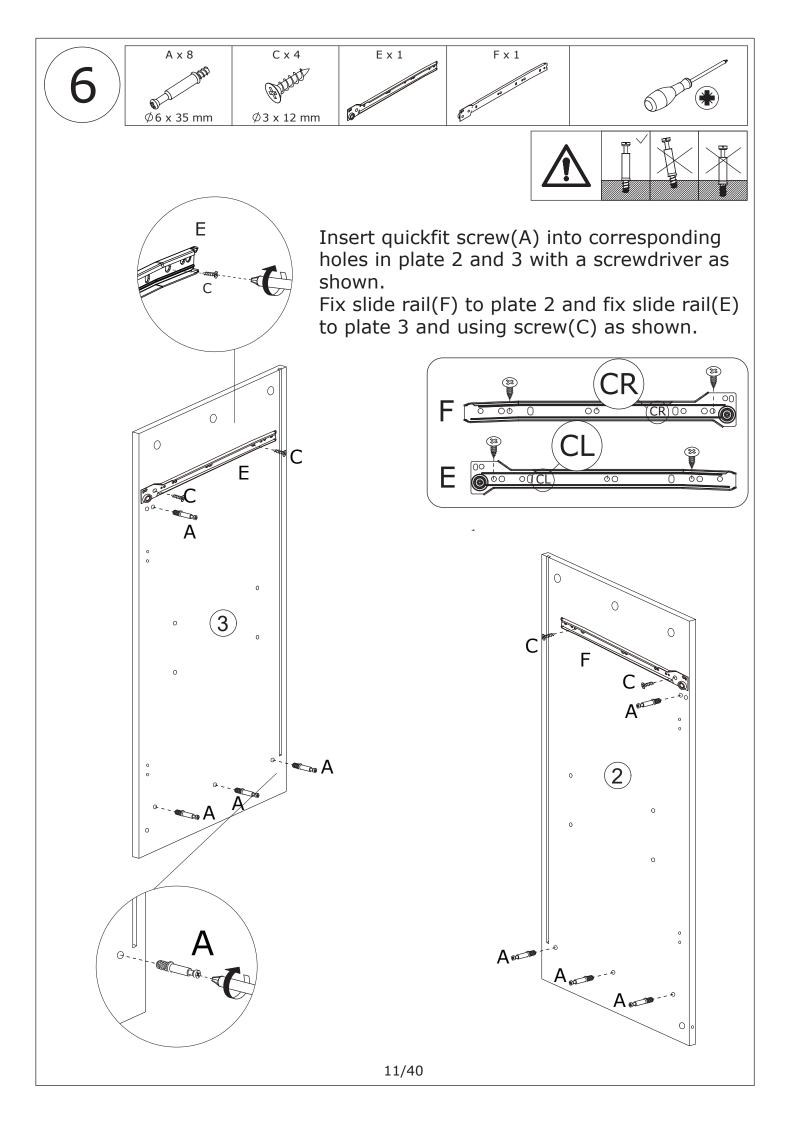














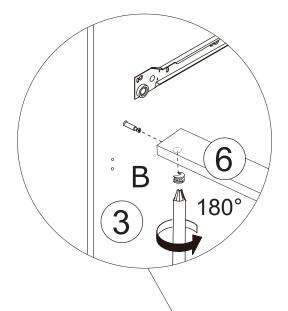

Connect plate 2 and 3 with plate 4 and 6, insert cam lock(B) into holes in plate 4,6 and turn clockwise to tighten as shown.

 
At last fix plate 29 to plate 4 with screw(M) as shown.

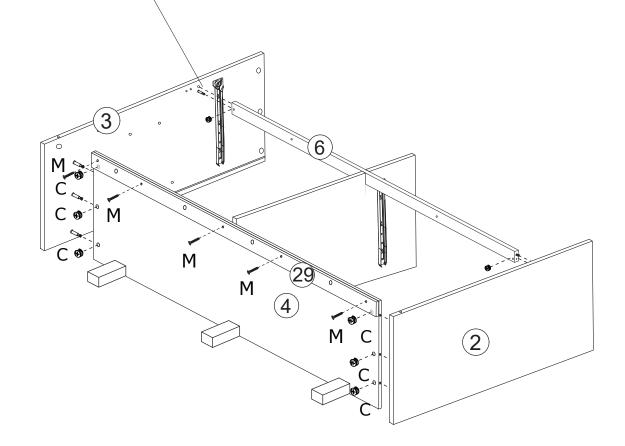











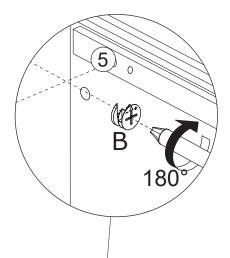

 
Attach plate 9 to plate 2, 29 and 3, insert cam lock(B) into holes and turn clockwise to tighten as shown.

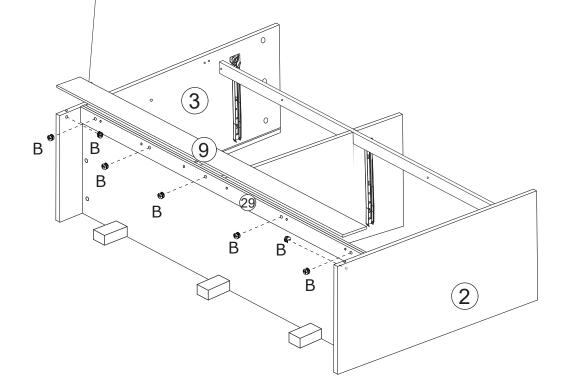











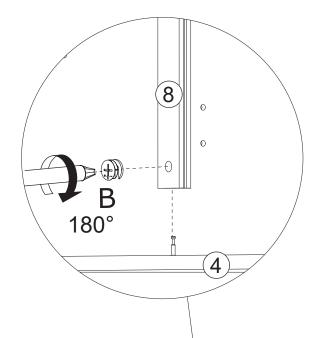



Attach plate 8 to plate 4, insert cam lock(B) into holes in plate 8 and turn clockwise to tighten as shown.

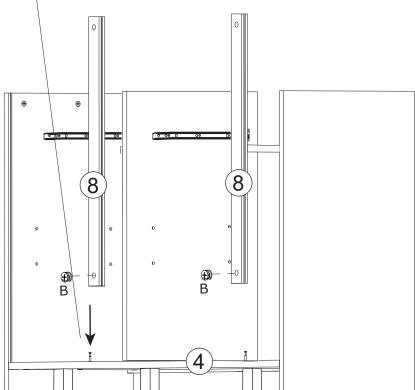




Slide plate 10 into available slots as shown.

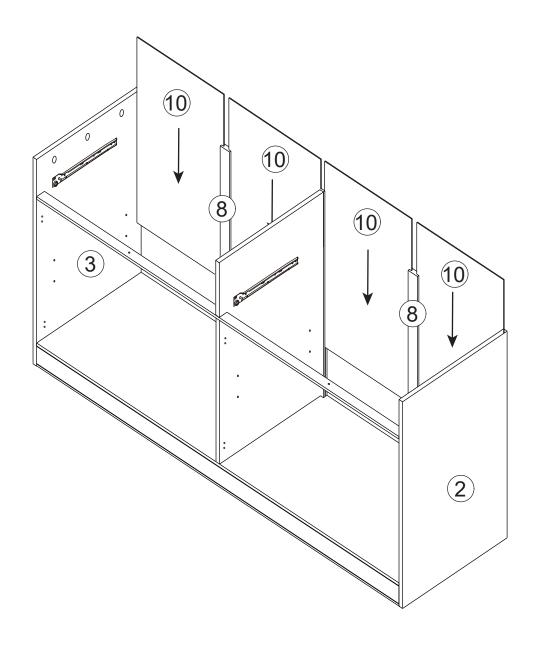

 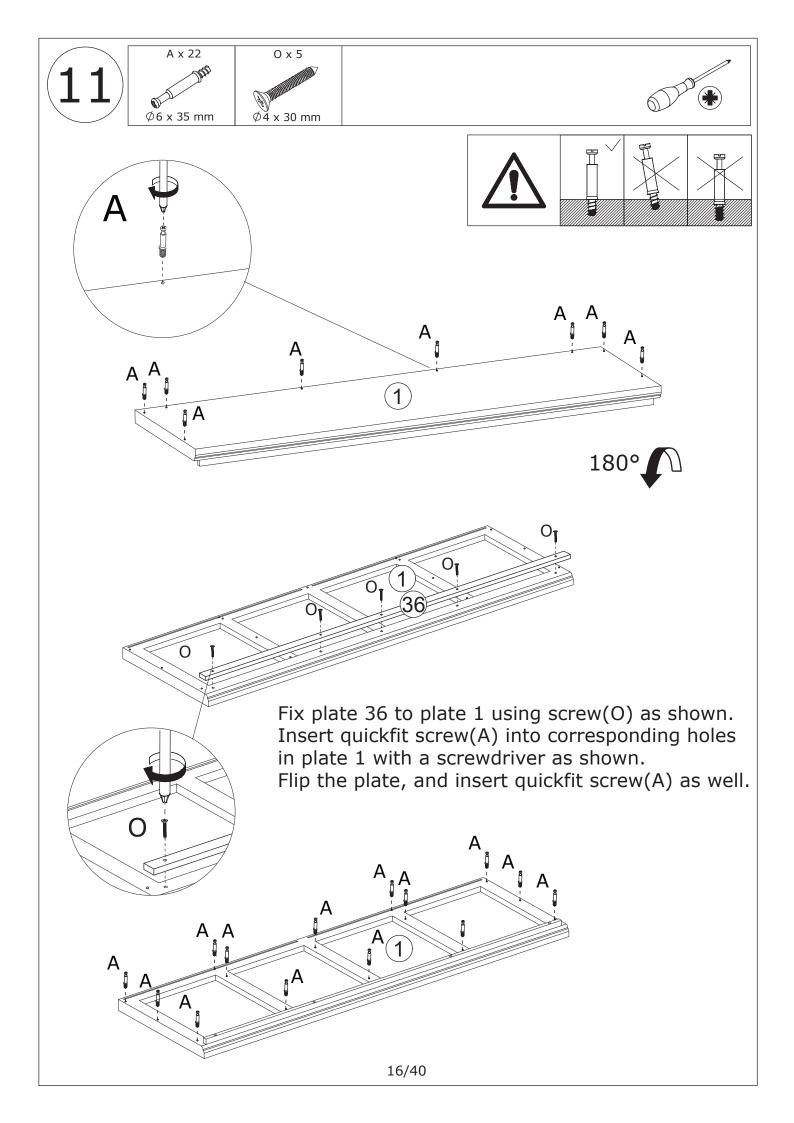


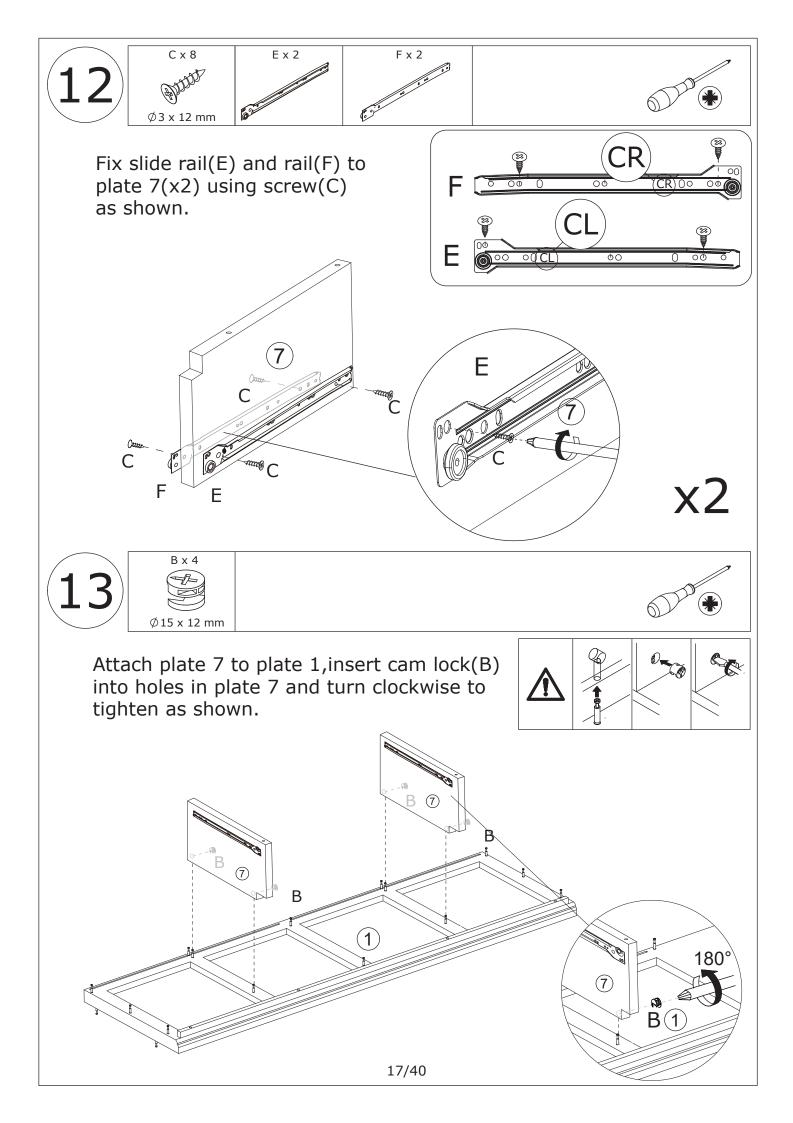










Cover plate 1 to the top of the component, insert cam lock(B) into holes in plate 3,5,2,8 and turn clockwise to tighten as shown.

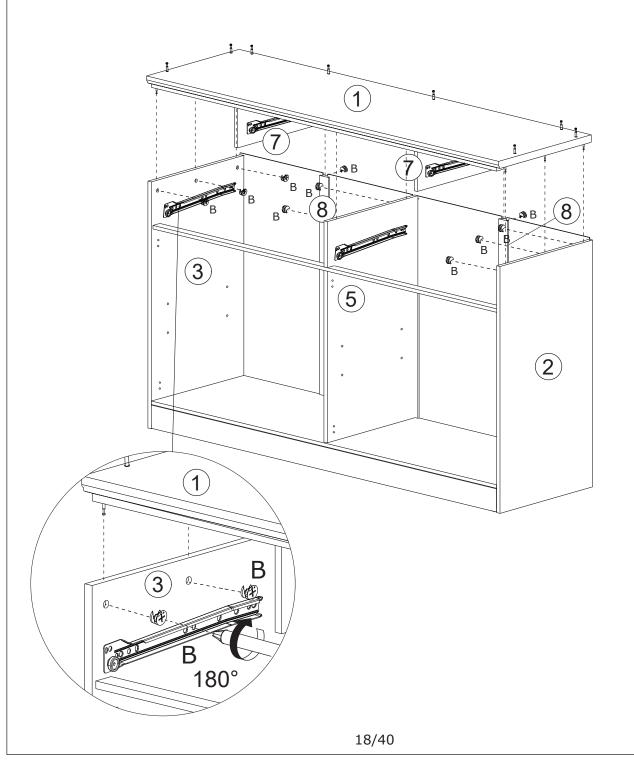









Fix plate 6 to plate 7 with screw(O) as shown.

 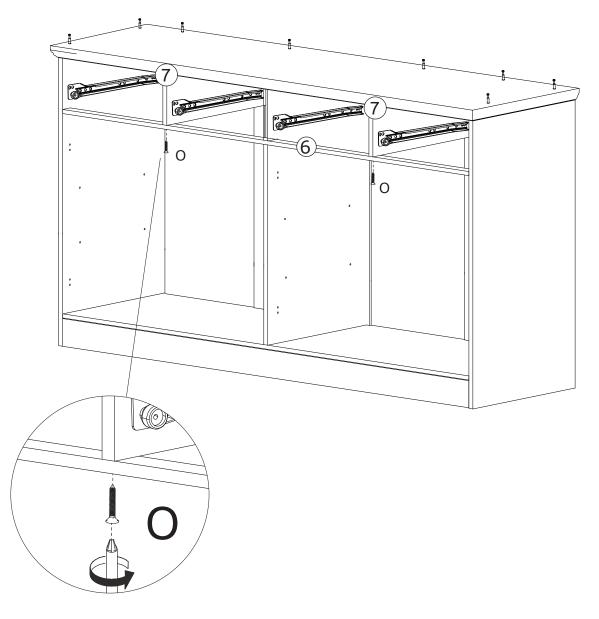


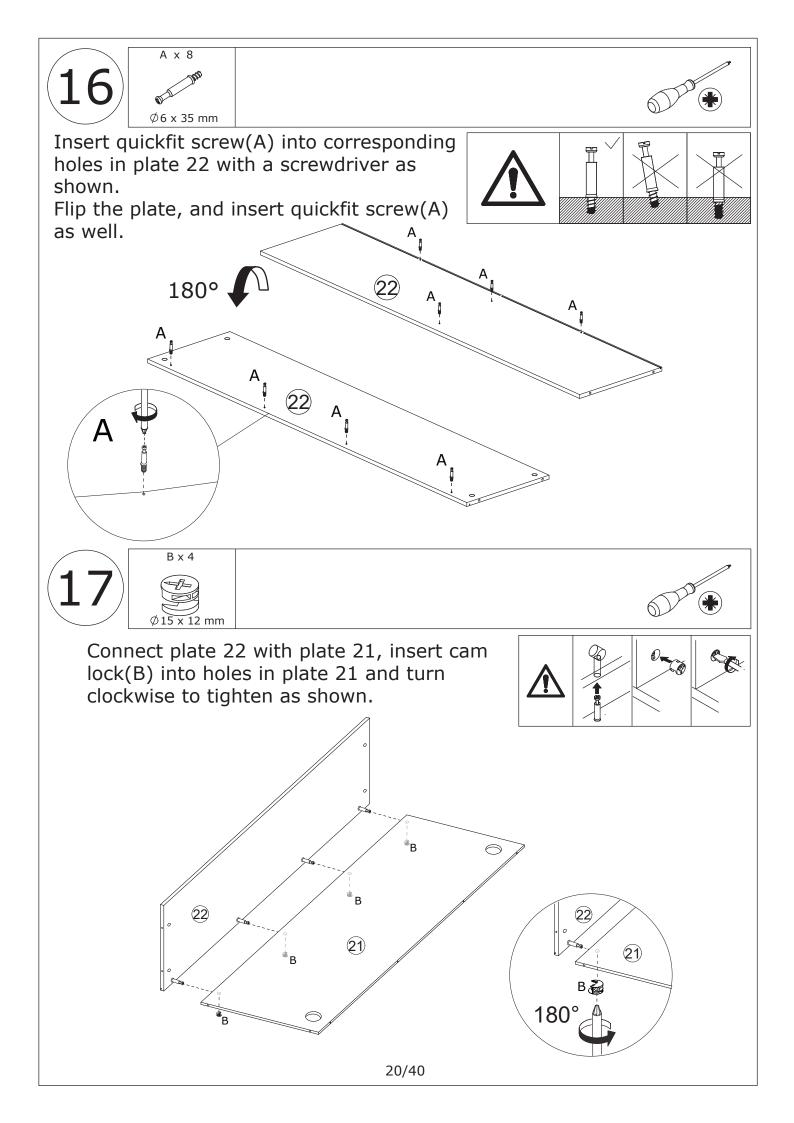











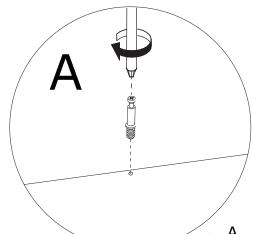

 
Insert quickfit screw(A) into corresponding holes in plate 19 and 20 with a screwdriver as shown.

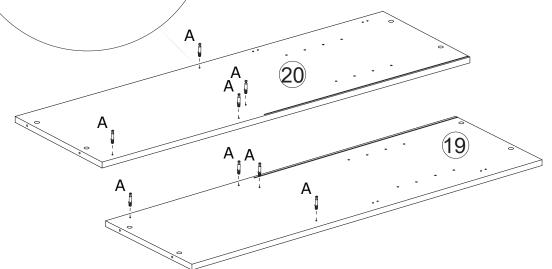










 
Connect plate 19 and 20 with plate 21 and 22, insert cam lock(B) into holes in plate 21,22 and turn clockwise to tighten as shown.

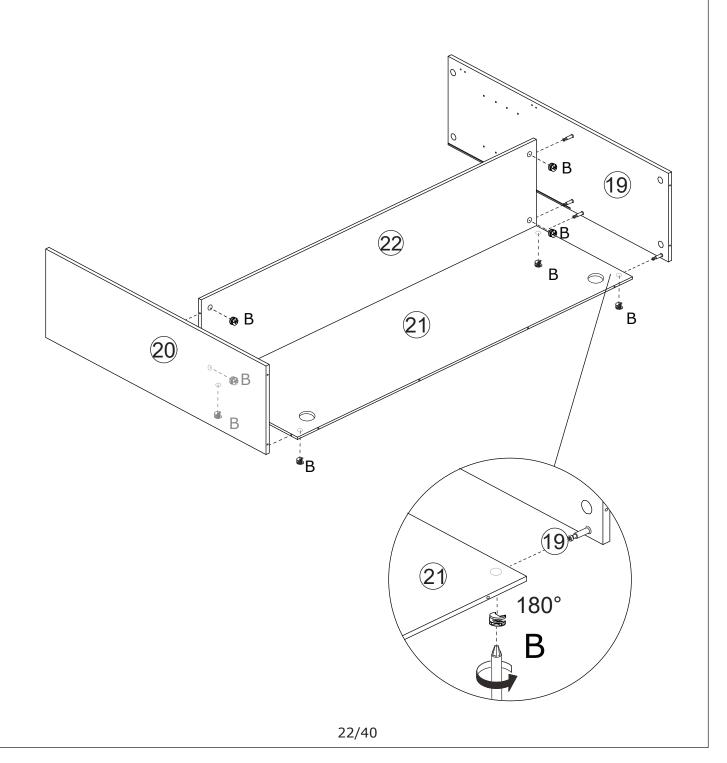











Attach plate 23 and 24(x2) to plate 22, insert cam lock(B) into holes in plate 23,24 and turn clockwise to tighten as shown.

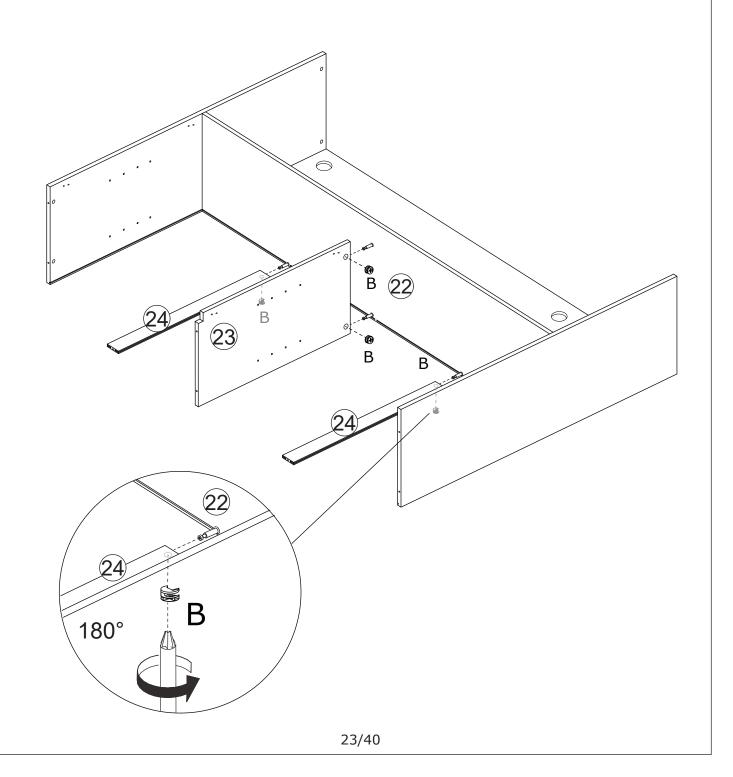


Slide plate 25 into available slots as shown.

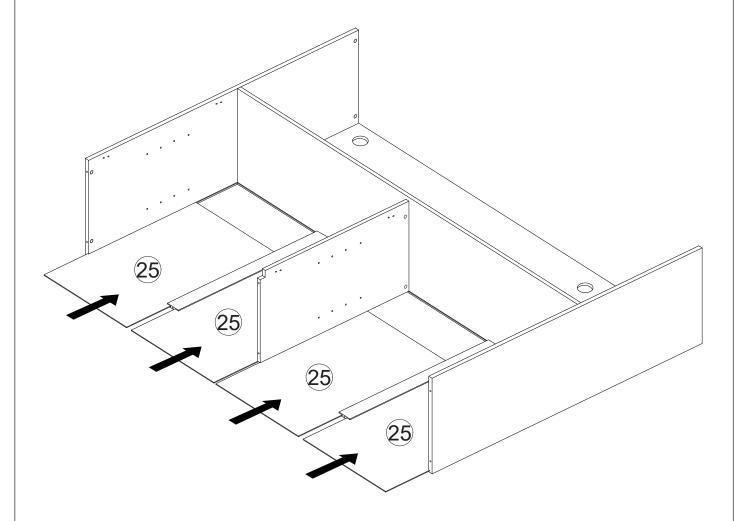





 
Fix plate 35 to plate 18 using screw(O) as shown.

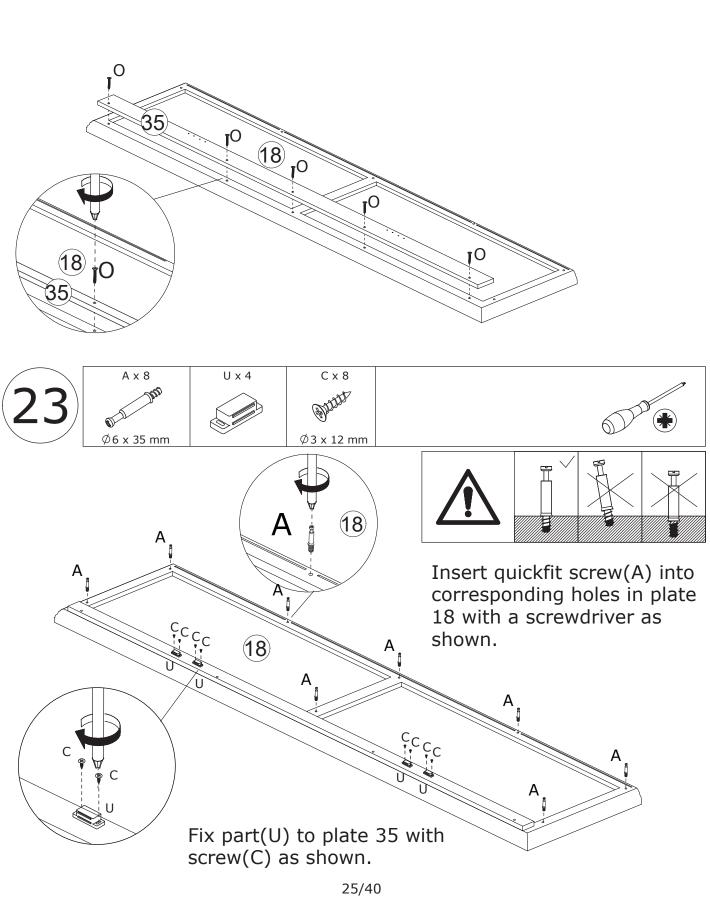













Cover plate 18 to plate 19,23,20 and 24, insert cam lock(B) into holes in plate 19, 23,20,24 and turn clockwise to tighten as shown.

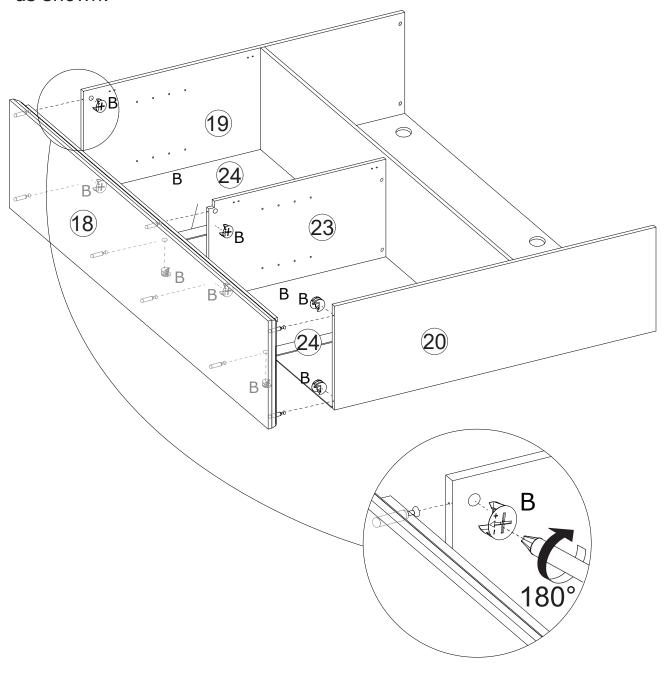


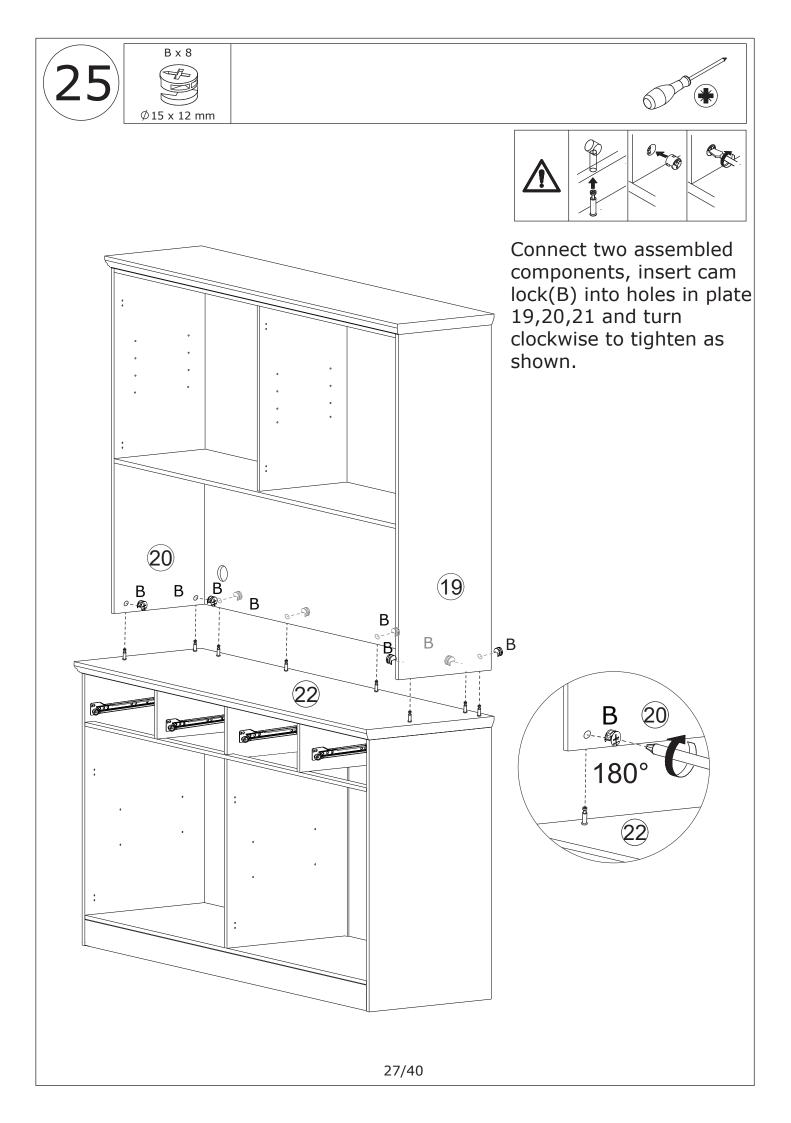

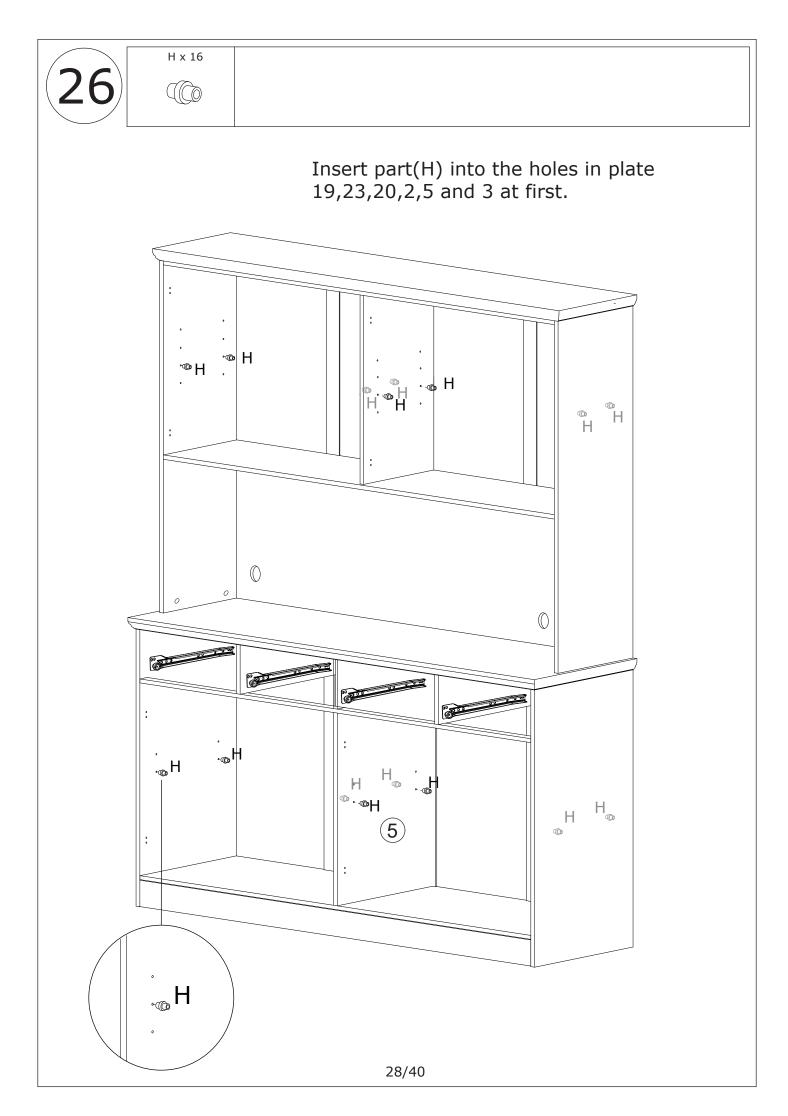

Place shelf 32 and 33 into corresponding position as shown.

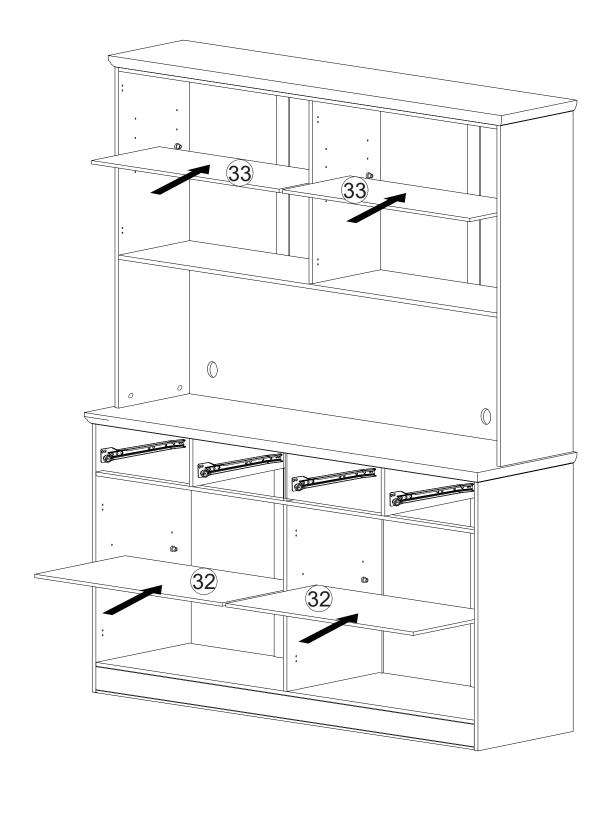

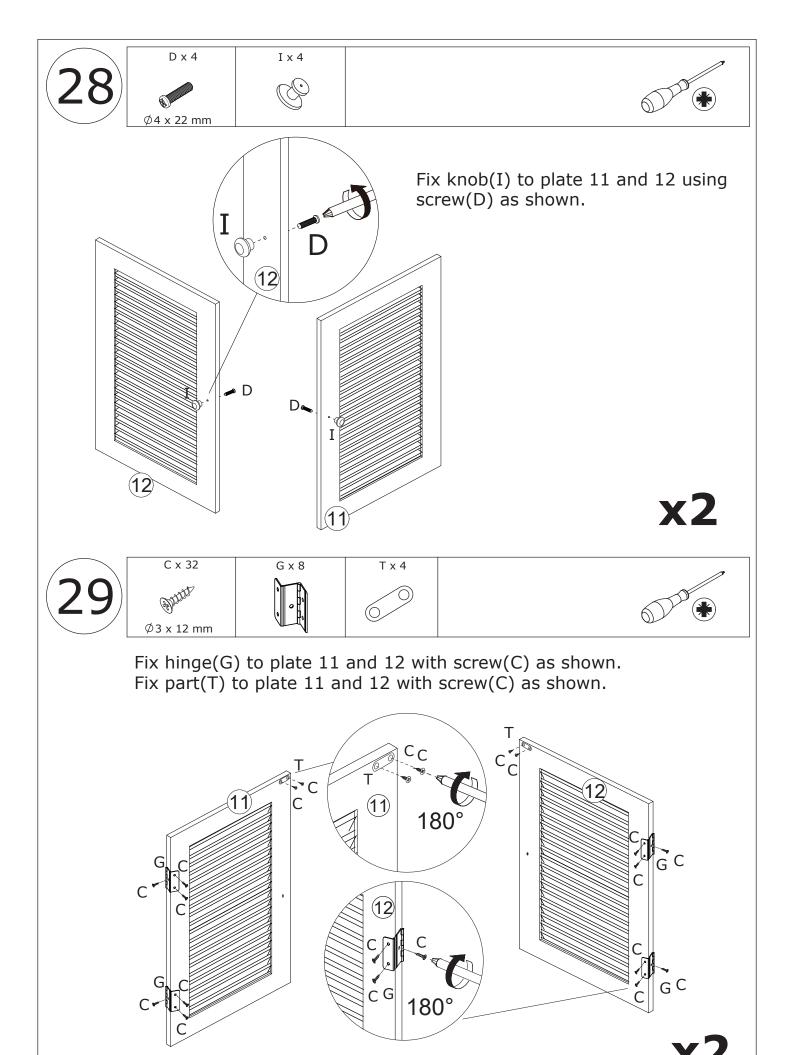


30/40










  Attach door plate 12 to plate 3 and 5; door plate 11 to plate 2 and 5 by fixing hinge with screw(C) as shown.

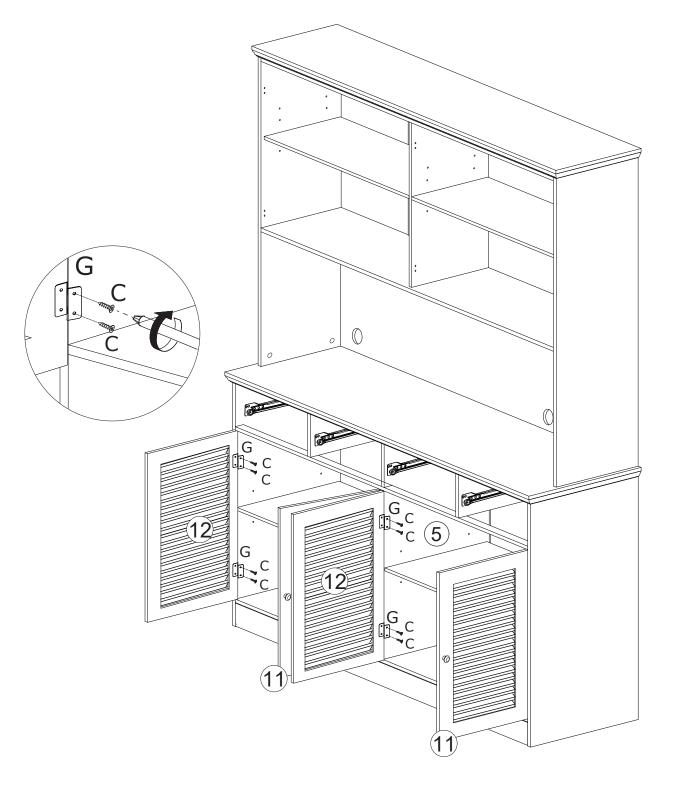




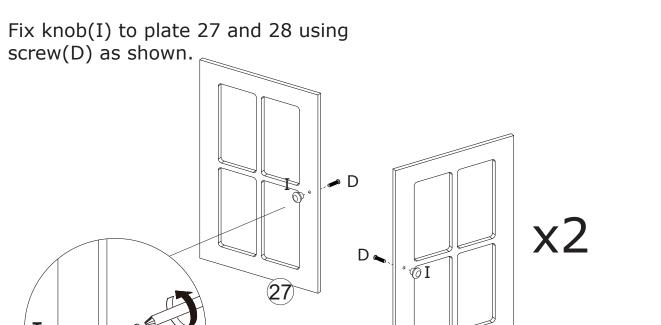



Fix hinge(G) to plate 27 and 28 with screw(C) as shown. Fix part(T) to plate 27 and 28 with screw(C) as shown.

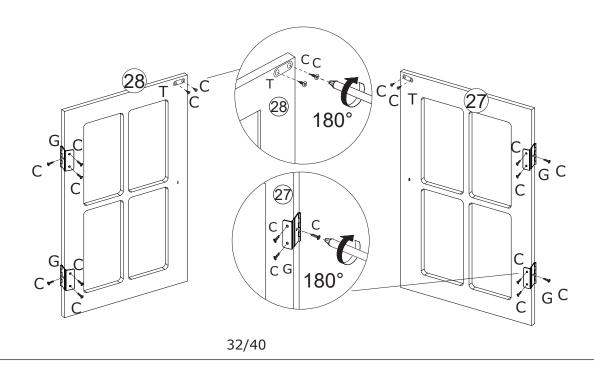









 
Attach door plate 27 to plate 20 and 23; door plate 28 to plate 23 and 19 by fixing hinge with screw(C) as shown.

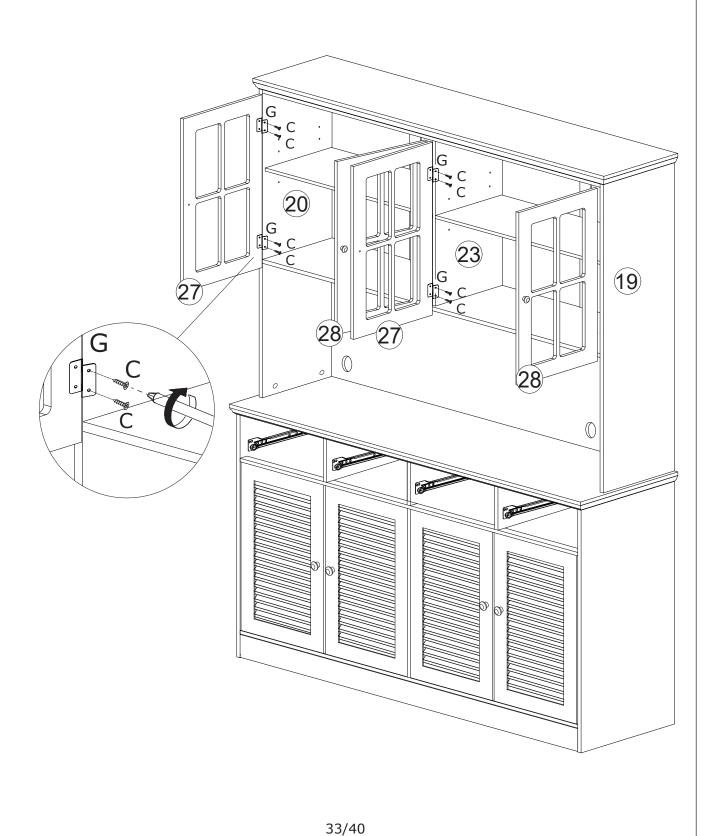





Insert quickfit screw(A) into plate 38 as shown. Fix knob(S) to plate 38 using screw as shown.

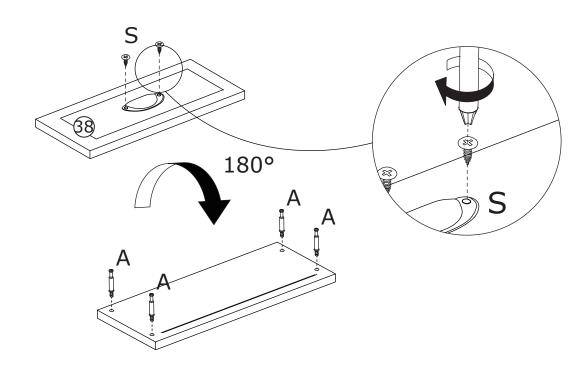


x4







Connect plate 14 and 15 with plate 16 using screw(O) as shown. Slide plate 17 into available slots as shown.

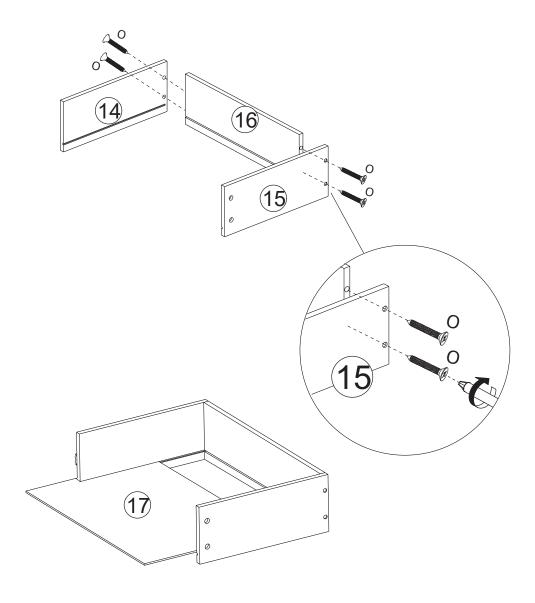


 $\times 4$









 


Attach plate 38 to plate 14 and 15, insert cam lock(B) into holes in plate 14,15 and turn clockwise to tighten as shown.

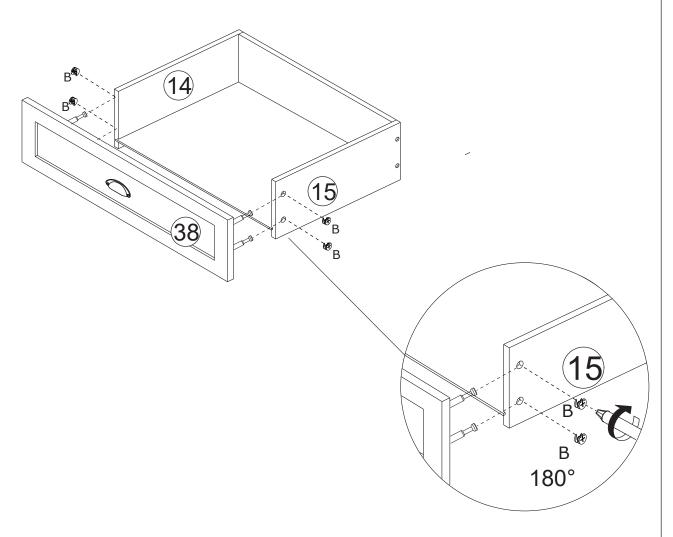

 $\times 4$

 


Fix runner(K) to plate 14 and fix runner(L) to plate 15 respectively using sctew(C) as shown.

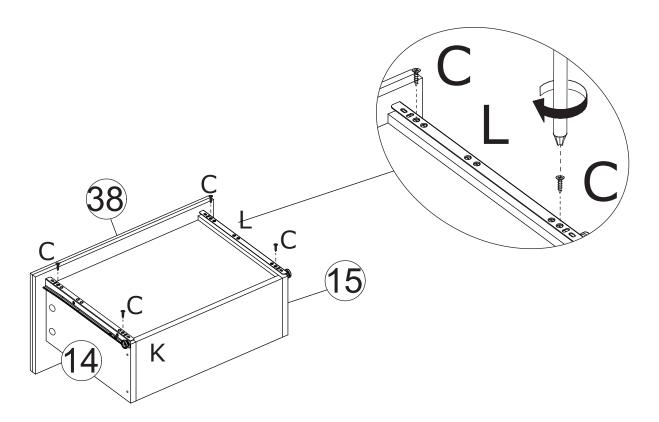

 $\times 4$

Align rails. slide all drawers.

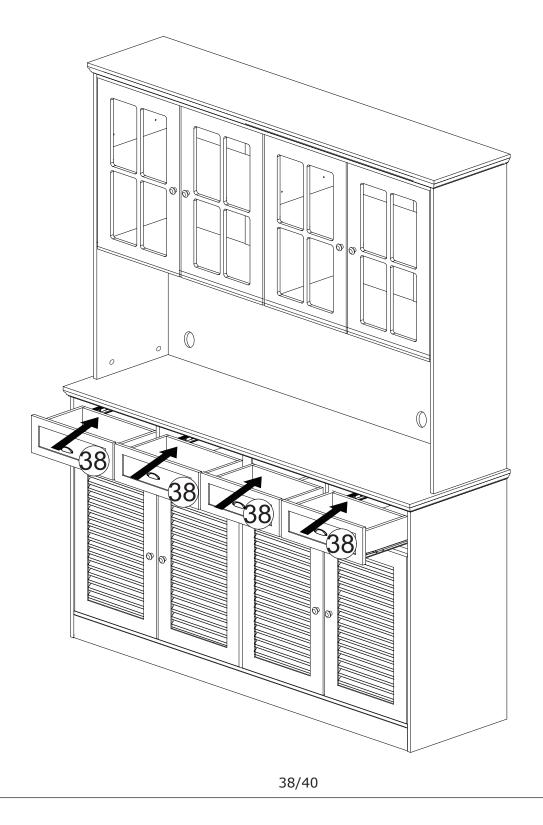









Reinforce back plate using part(R) with screw as shown.

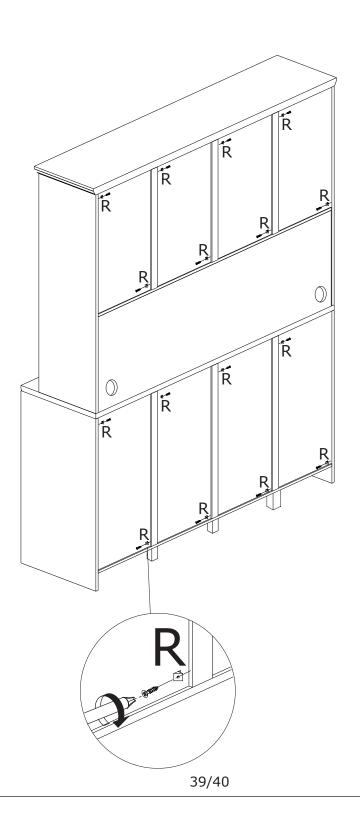

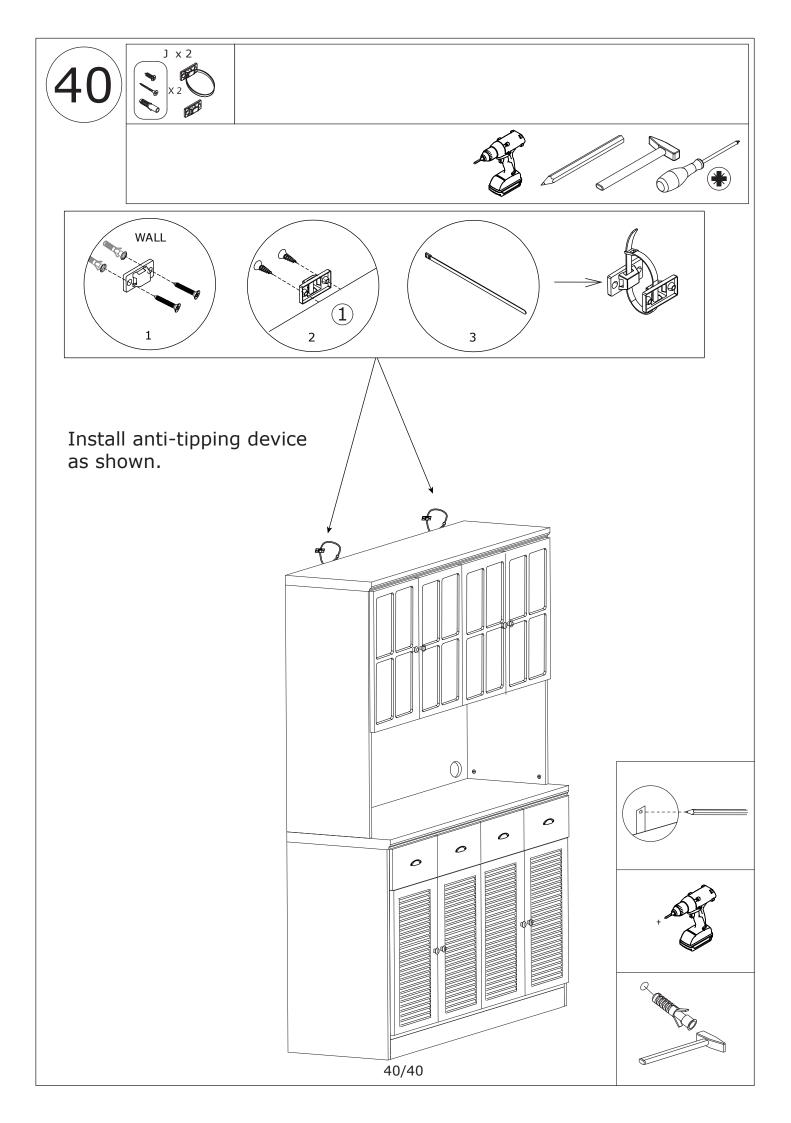

WARRANTY

WARRANTY CLAIMS

- •There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- •Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- •The product must be used in accordance with the instructions provided. For health reasons.
- •For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- •Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- •Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- •After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- •Sheet parts: 1 month from the date of purchase.
- •Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

•If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

•If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

•If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387