

# INSTALLATION MANUAL

## Ceiling lamp

**IMPORTANT:** Before starting to install the equipment, please check whether the main power socket is turned off.


### INSTALLATION

1. Attach mounting bracket to the ceiling or junction box with mounting screws.
2. Make electric connections with wire nuts. Connect the Ceiling Fan Neutral Wire (White) to the Neutral Wire (White) coming through the ceiling. Connect the Ceiling Fan Live Wire (Black/Blue) to the Live wire (Black or Colored) coming through the ceiling.
3. Attach the side screws on the mounting bracket. Don't screw to the end.
4. Snap the side screws into four bayonets on canopy. Tighten the screws to ensure that the fan does not loosen and shake.
5. Install light bulbs. This fixture has been rated for up to **four(4)E26**.


### NOTE:

To avoid the risk of fire, DO NOT EXCEED THE RECOMMENDED LAMP WATTAGE.

 This is a replaceable light bulb ceiling fan, it can't be gradually dimmed, **DO NOT** use any Dimmer Switch for this.

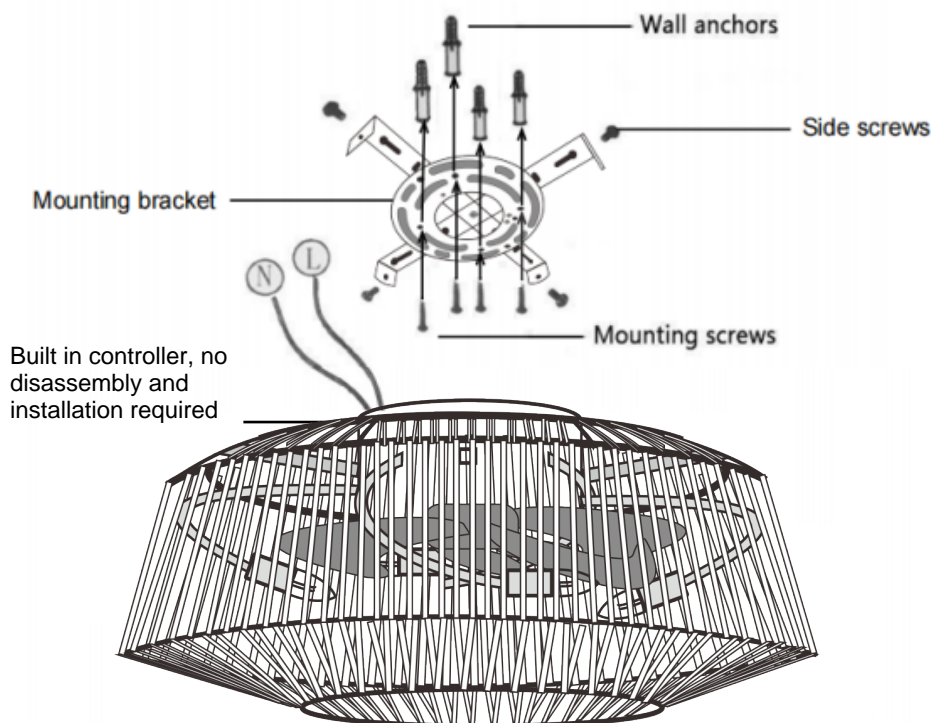

## TOOLS REQUIRED

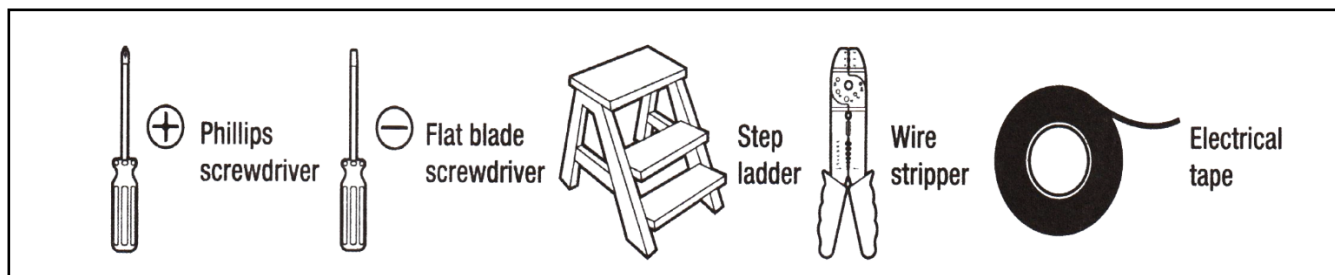 


## OPERATION FOR REMOTE

The wireless control is designed to operate both the light and speed of the fan.

Please make sure the battery is inserted in the right direction or the remote may not function. Remove the battery from the remote if you do not plan to use the remote for a long time.

**\*The fan cannot use the wall switch.**

 **\*Please DO NOT install any wall switch. Use the remote control to control the light and wind speed.**

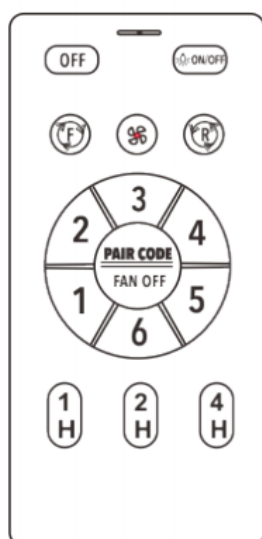

OFF	Turn off light
ON/OFF	Turn on / Turn off light
F	Direction of the fan(forward switch)
R	Direction of the fan(reverse switch)
	Turn on fan
1/2/3/4/5/6	wind speed
FAN OFF	Turn off fan
1H	Timer 1h
2H	Timer 2h
4H	Timer 4h