



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Avant de Commencer

- ⚠ Veuillez lire attentivement toutes les instructions.
- ⚠ Conservez les instructions pour vous y référer ultérieurement.
- ⚠ Vérifiez toutes les pièces et les accessoires.
- ⚠ Lisez attentivement chaque étape et suivez l'ordre correct.
- ⚠ Nous recommandons que, dans la mesure du possible, tous les produits soient assemblés à proximité de la zone où ils seront utilisés, afin d'éviter tout déplacement inutile du produit une fois assemblé.
- ⚠ Placez toujours le produit sur une surface plane et stable.
- ⚠ Conservez toutes les petites pièces de ce produit et les matériaux d'emballage hors de portée des bébés et des enfants, car ils pourraient présenter un risque d'étouffement.

NO VENTING REQUIRED	
	WARNING Read and understand this entire owner's manual, including all safety information before plugging in or using this appliance. Failure to do so could result in fire, electric shock, or serious personal injury.

PAS DE VENTILATION NÉCESSAIRE	
	AVERTISSEMENT Lisez et comprenez l'intégralité de ce manuel d'utilisation, y compris toutes les informations de sécurité, avant de brancher ou d'utiliser cet appareil. Le non-respect de cette consigne peut entraîner un incendie, un choc électrique ou des blessures graves.

CERTIFIED UNDER CANADIAN AND
AMERICAN NATIONAL STANDARDS: ETL

CERTIFIÉ SELON LES NORMES
NATIONALES CANADIENNES ET
AMÉRICAINES : ETL



Electric Fireplace
Cheminée Électrique

IMPORTANT SAFETY INSTRUCTIONS



WARNING

These instructions should be carefully read before installation and retained by the user. The booklet must be kept and delivered to the new user in case of disposal of the heater. The manufacturer reserves the right to vary the features of the product without prior notice. The technical data are indicative only.

1. THIS APPLIANCE IS HOT WHEN OPERATED AND CAN CAUSE SEVERE BURNS IF TOUCHED.

2. Do not operate the appliance before reading and understanding to operating instructions. Failure to operate the appliance according to operating instructions could cause fire or injury.
3. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of this appliance and keep away from the sides and the rear.

WARNING: To avoid overheating, do not cover the heater. The clearance may be inadequate when installed in a recreational vehicle with the slide-out closed.

4. Risk of burns. Power to the appliance should be turned off, and the appliance should be allowed to cool before servicing. To disconnect the appliance from the power supply, turn off the controls, and then remove the plug from the outlet.
5. Do not install damaged, incomplete, or substitute components.
6. Young children should be carefully supervised when they are in the same room with the appliance. Toddlers, young children, and others may be susceptible to accidental contact burns.
7. To prevent accidental swallowing, media bed kits should be kept away from children and infants.
8. The remote control contains small batteries. Keep them away from children. If swallowed, seek medical assistance immediately.
9. Do not recharge the batteries. Do not mix the batteries with the used ones or other battery types, store them with hazardous or combustible materials, or place loose batteries in a pocket, purse, or other container containing metal objects.
10. Ensure that you have incorporated adequate safety measures to

protect infants/toddlers from touching hot surfaces.

11. It is imperative that the control compartments, circulating blower, and its passageway in the appliance are kept clean. The appliance should be inspected before use and at least annually by a qualified service person.

12. Under no circumstances should this appliance be modified.

13. Do not use this appliance if any part has been in contact with water. Immediately call a qualified service technician to inspect the appliance and replace any part of the control system which has been in contact with water.

14. Do not operate the appliance with the glass door removed, cracked, or broken. A licensed or qualified service person should do the replacement of the glass.

15. Do not strike or slam shut the appliance's glass door.

16. Keep the packaging material out of reach of children and dispose of the material in a safe manner. These are not toys like all plastic bags and should be kept away from children and infants.

17. Servicing should be done only while the appliance is disconnected from the power supply circuit.

18. Always unplug the appliance when not in use.

19. Do not operate this appliance with a damaged cord or plug after the appliance has been defective, dropped, or damaged in any manner.

20. Do not use the appliance outdoors.

21. Never place the appliance where it may fall into a bathtub or other water container.

22. Do not run cord under carpeting. Do not cover the cord with throw rugs, runners, etc. Arrange the cord away from high-traffic areas to avoid a tripping hazard.

23. Connect to properly grounded outlets only.

24. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the appliance.

25. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use it on soft surfaces, like a carpet, where openings may become blocked.



26. Always plug appliances directly into a wall outlet/receptacle.

Never use an extension cord or relocatable power tap (outlet/power strip).

SAVE THESE INSTRUCTIONS

1.0 PACKING LIST

NO.	Description	Quantity
1	Front Frame	x1
2	Electric Fireplace	x1
3	Mounting Bracket (Pre-attached)	x1
4	Manual	x1
5	Decorative Stuff	Varies
6	Remote Control (Battery included)	x1

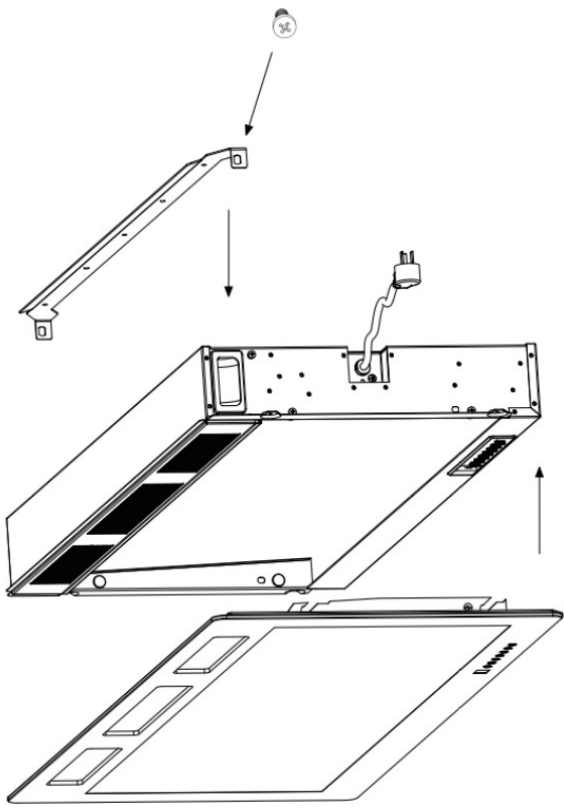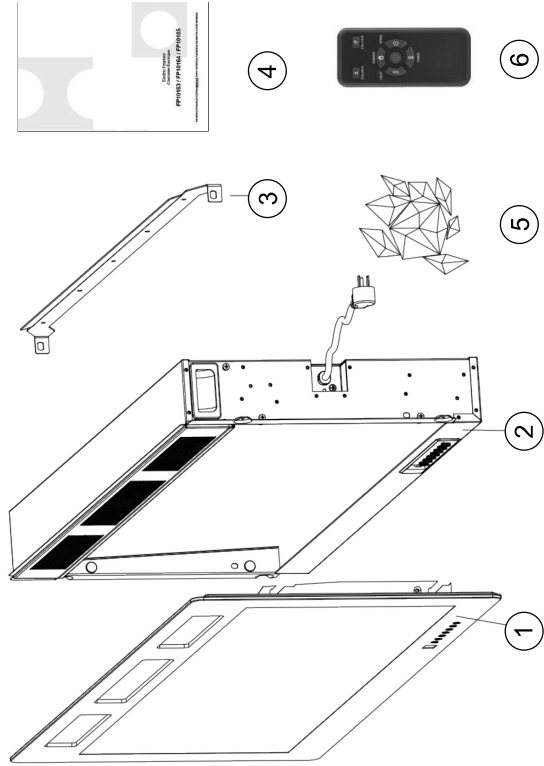

HARDWARE INCLUDED

Model: FP10163 / FP10164 / FP10165



(A) x5


ST5.2X35 Screw




(B) x5

Plastic Wall Anchor

 1.1 DIMENSIONS

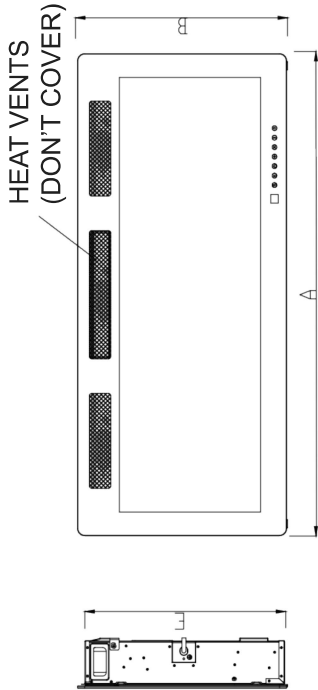

Model No.	A(mm)	B(mm)	C(mm)	D(mm)	E(mm)	A(in.)	B(in.)	C(in.)	D(in.)	E(in.)
FP10163	1016	440	951	102	421.5	40	17.32	37.44	4.02	16.59
FP10164	1270	440	1205	102	421.5	50	17.32	47.44	4.02	16.59
FP10165	1524	440	1459	102	421.5	60	17.32	57.44	4.02	16.59

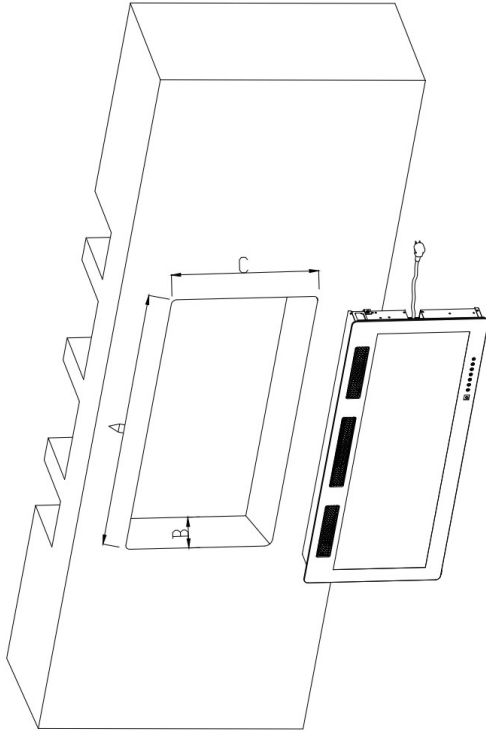 

Model No.	A(mm)	B(mm)	C(mm)	A(in.)	B(in.)	C(in.)
FP10163	955-965	>96	425-435	37.6-38	>3.78	16.73-17.13
FP10164	1209-1219	>96	425-435	47.6-48	>3.78	16.73-17.13
FP10165	1464-1474	>96	425-435	57.6-58	>3.78	16.73-17.13

NOTE:

Please leave enough space to place the power cord on the right side of the fireplace.

LISTING APPROVALS

This appliance has been tested in accordance with the ETL Standards for fixed and location dedicated electric room appliances in the United States and Canada. If you need assistance during installation, please contact after-sales service center.

NOTE: This appliance must be electrically wired and grounded in accordance with local or, in the absence of local, with National Electric Code ANSI/NFPA 70-latest edition in the United States or the Canadian Electric Code and ETL in Canada.

Model No.	FP10163/FP10164/FP10165
Description	Wall-mounted Appliance
Voltage	120VAC
Watts	Max:1500W
Amps	12.5AMP
BTUs	5100BTU

2.0 ELECTRICAL INSTALLATION NOTES

2.1 GENERAL INSTRUCTIONS

 **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- A. Prior to plugging your appliance into an electrical outlet, verify that the house circuit breakers for the outlet are on.
- B. The appliance may emit a slight, harmless odor when first used. This odor is normal and caused by the initial heating of internal appliance elements, and the odor will not occur again.
- C. If your appliance does not emit heat, consult the operation section of this manual for further information.
- D. Use with an ETL or UL certified surge protector.

RISK OF FIRE! THE POWER CORD MUST NOT BE PINCHED AGAINST A SHARP EDGE. SECURE CORD TO AVOID TRIPPING OR SNAGGING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY. DO NOT RUN CORD UNDER CARPETING. DO NOT COVER THE CORD WITH THROW RUGS, RUNNERS, ETC.



ARRANGE THE CORD AWAY FROM HIGH-TRAFFIC AREAS TO AVOID A TRIPPING HAZARD.

RISK OF FIRE: TO PREVENT A POSSIBLE FIRE, DO NOT BLOCK AIR INTAKE OR EXHAUST IN ANY MANNER. ALSO, DO NOT USE IT ON SOFT SURFACES WHERE OPENINGS MAY BECOME BLOCKED.

RISK OF FIRE: DO NOT BLOW OR PLACE INSULATION AGAINST THE APPLIANCE.

THIS ELECTRIC APPLIANCE IS TESTED AND LISTED FOR USE ONLY WITH THE APPROVED OPTIONAL ACCESSORIES. USE OF OPTIONAL ACCESSORIES NOT SPECIFICALLY TESTED FOR THIS ELECTRIC APPLIANCE COULD RESULT IN A SAFETY HAZARD.

IF THE INFORMATION IN THESE INSTRUCTIONS IS NOT FOLLOWED EXACTLY, A FIRE MAY RESULT CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH. DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. THIS APPLIANCE IS HEAVY. IT IS HIGHLY RECOMMENDED THAT TWO PEOPLE INSTALL THIS APPLIANCE. HEATER VENTS ON THE ELECTRIC APPLIANCE CAN NOT, IN ANY WAY, BE COVERED. AS IT MAY CREATE A FIRE HAZARD.

Follow all national and local electrical codes.

- 1. The heaters should be installed only using the mounting brackets we provided if you want to mount them.
- 2. The heater must not be recessed in the ceiling. There must be enough space around the top of the heater to ensure adequate ventilation.
- 3. The heater should be at least 60cm/24 inches away from any surrounding walls.
- 4. A distance of at least 90cm/36 inches should always be left in front of the heaters to ensure safety.
- 5. The heater must be located neither directly below nor in front of a socket outlet.
- 6. The heater must be installed to prevent any control switches from being touched by anyone who is in the shower or bath.
- 7. Ensure that there is no possibility of inflammable material, combustible material, or curtains coming into contact with the heater. There is a risk of fire if this happens.
- 8. **DO NOT LEAVE THE HEATER UNATTENDED DURING USE.**

3.0 INSTALLATION INSTRUCTIONS


3.1 UNPACKING AND TESTING APPLIANCE WALL

Carefully remove the appliance from the box. Prior to installing the appliance, test to make sure the appliance operates properly by plugging the power supply cord into a conveniently located 120 Volt grounded outlet.


3.2 GROUNDING APPLIANCE

This appliance is for use on 120 Volts. The cord has a plug as shown in (A). As shown in (C), an adapter is available for connecting three-blade grounding type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground, such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

To disconnect the appliance, turn off the controls, then remove the plug from the outlet.

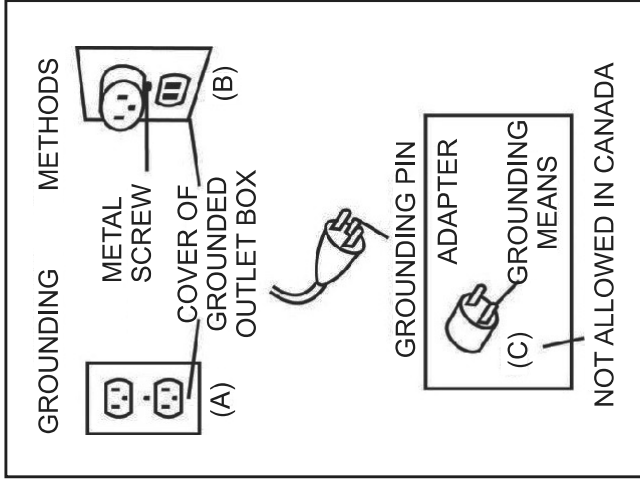

Option 2: Built-in Construction

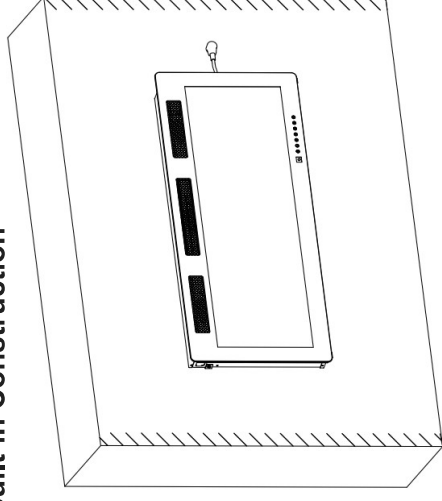

Installation 1: Wall Hanging

3.3 ASSEMBLY


The fireplace can be installed with 2 options:

1. Wall hanging with provided mounting bracket.
2. Built-in construction (in-wall recessed).

Follow the installation instructions below based on installation preference.


Option 1:

Wall Hanging

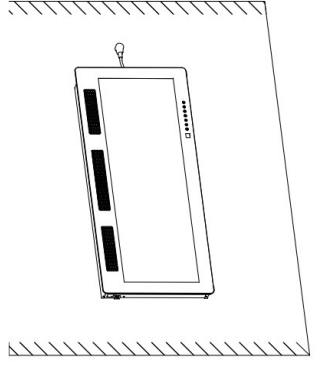


1 Remove the Glass Frame

- Unscrew the screw (M5 x 12) from each side with a Phillips screwdriver. (Do not discard them)
- Lift the glass frame 0.4-0.8 inches vertically. Then the entire glass frame can be removed from the front.

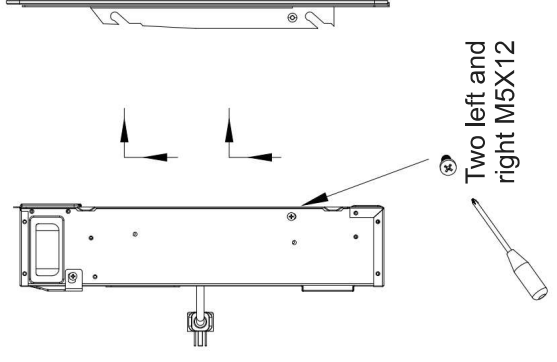

2


Remove the Mounting Bracket

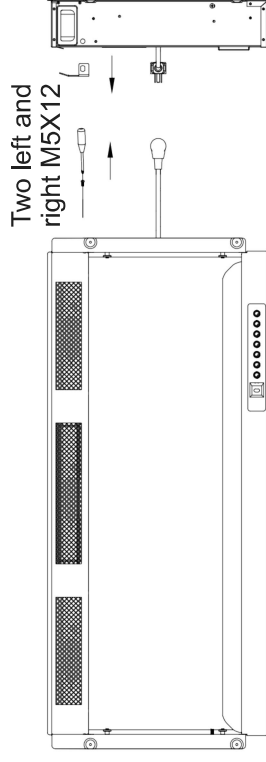

- Unscrew the screw (M5 x 12) from each side with a Phillips screwdriver. (Do not discard them)
- Then remove the pre-attached mounting bracket

3

Choose a Wall Location

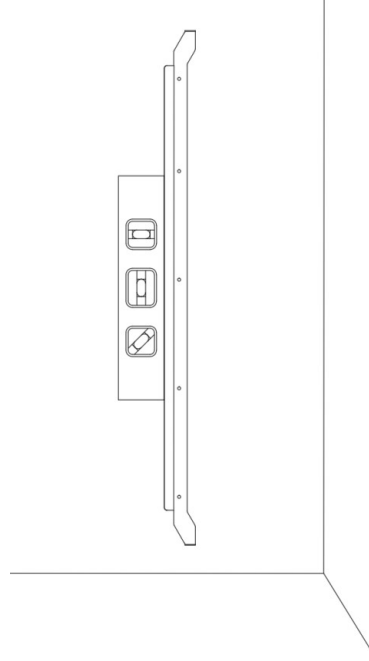


- On the wall where the fireplace is going to be installed, use a level to align the bracket and mark the holes which need to be drilled with a pencil.

Note: It is highly recommended to reserve enough space around the fireplace to be installed. Leave at least 20mm of free space between the product and other flammable materials, like the curtains.

4


Drill the Holes

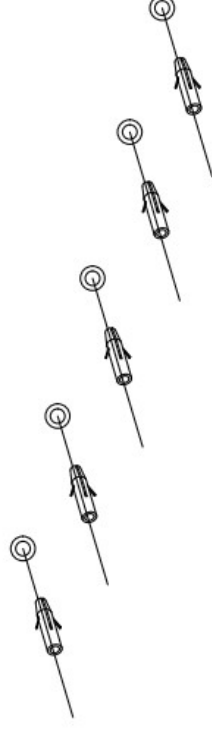

- Drill 5 holes on the wall according to the marks. Each hole is 8.5mm in diameter.


5

Attach the Mounting Bracket

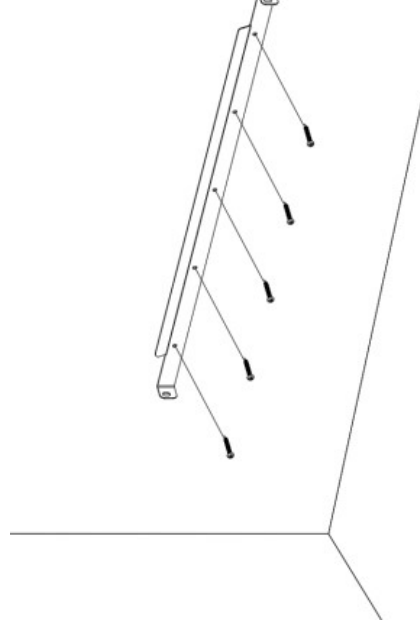

- Insert the wall anchors' plastic parts into holes with a hammer.
- Install the mounting bracket by fastening the Anchor Screws into the wall anchor.


Hang the Fireplace on the Bracket

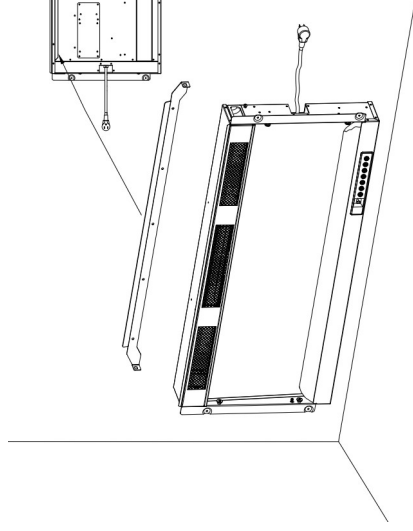

- Hang the slotting behind the appliance on the hooks at the left and right sides of the bracket.
Note: Please hold the appliance tightly to avoid it dropping down before the installation is finished.


Lock the Fireplace on the Bracket

Two left and right M5x12

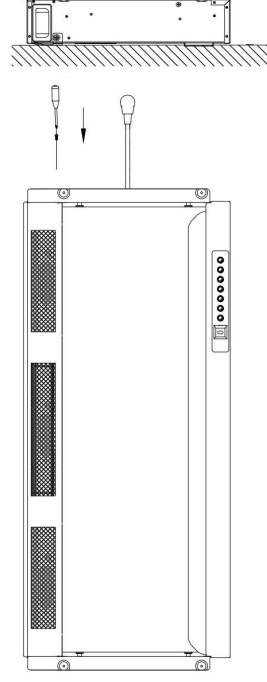


- Lock the bracket at each side with a M5X12 screw to ensure a solid combination of the fireplace and bracket.

Place the Decorations

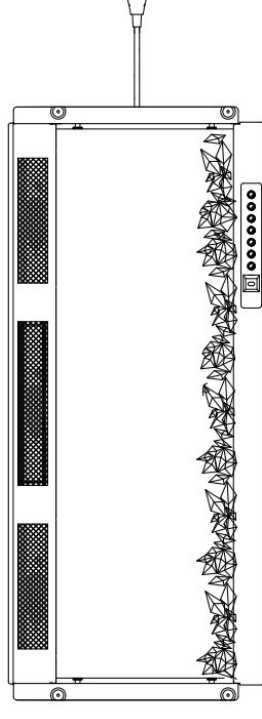

- Carefully place crystal stone sand other decorations into the bottom tray on the front of the appliance as illustrated.
NOTE: The decoration kits may have sharp edges. Please wear safety gloves when handling.

Fasten the Glass Frame

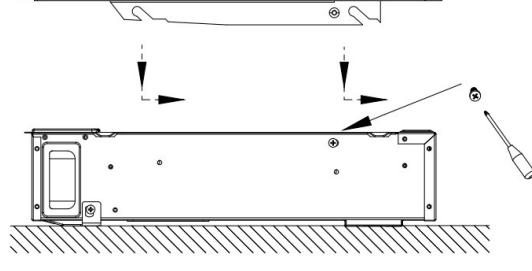

- Gently place the glass panel by aligning the hooks until it is in the proper position.
- Secure the glass panel with the M5X12 screw at each side.
- Check the alignment of the glass panel and securely tighten the screws.


Installation 2 : Built-in Construction

1 Remove the Glass Frame

2 Remove the Mounting Bracket


(For Step 1 and Step 2, please refer to "Wall Hanging Installation")

3 Choose a Wall Location

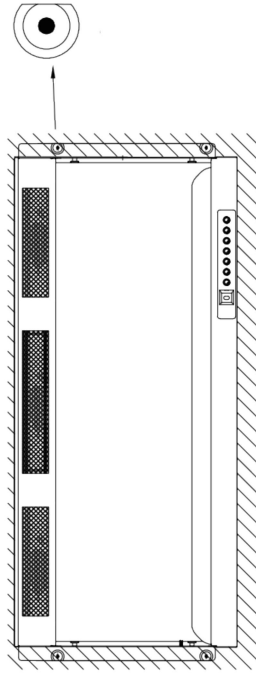


- Put the fireplace in place, mark the holes which need to be drilled with a pencil. Then take it out of the cavity again.
- **WARNING:** It's better to reserve some space between the frame and the wall to enable better air circulation if available.

4 Drilling & Installing the Wall Anchors

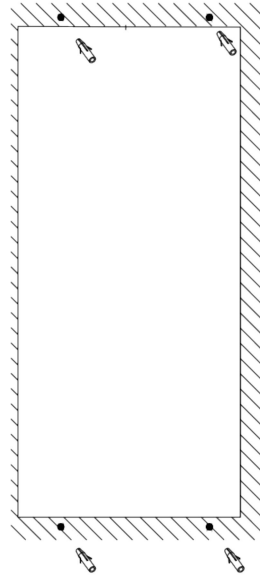


- Drill 4 holes on the wall according to the marks. Each hole is 8.5mm in diameter.
- Insert the wall anchors into the holes using a hammer.

5 Fix the Fireplace

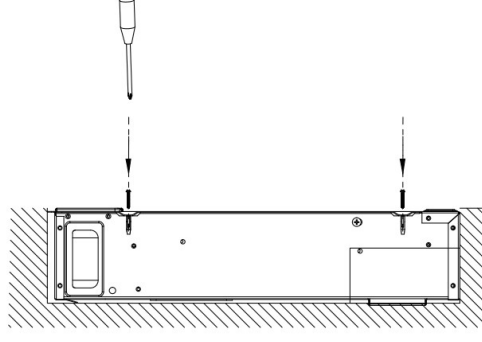


- Put the fireplace into the prepared cavity.
- Fasten the fireplace firmly into the wall by tightening the screws (ST5.2X35) at each side.

6 Place the Decorations

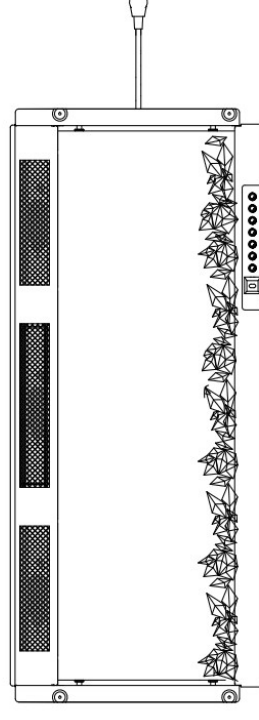

- Carefully place crystal stone and other decorations into the bottom tray on the front of the appliance as illustrated.
- **NOTE:** The decoration kits may have sharp edges. Please wear safety gloves when handling.

Fasten the Glass Frame

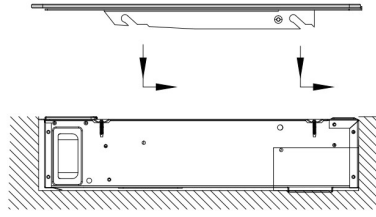

- Gently place the glass panel by aligning the hooks until it is in the proper position.

4.0 FINISHING

THE GRILLE MAY BE HOT. DO NOT TOUCH THE AIR OUTLET UNTIL COOLED.



THE DOOR HOOKS ARE PART OF A SAFETY SYSTEM AND MUST BE PROPERLY ENGAGED. DO NOT OPERATE THE APPLIANCE WITH HOOKS DISENGAGED.

FACING AND/OR FINISHING MATERIALS MUST NOT INTERFERE WITH AIR FLOW THROUGH AIR OPENINGS, OPERATION OF DOORS OR ACCESS FOR SERVICE. OBSERVE ALL CLEARANCES WHEN APPLYING COMBUSTIBLE MATERIALS. BEFORE DOOR IS REMOVED, TURN THE APPLIANCE OFF AND WAIT UNTIL APPLIANCE IS COOL TO THE TOUCH. DOORS ARE HEAVY AND FRAGILE SO HANDLE WITH CARE.

NOTE: The glass front must be removed, and the appliance must be finished in its final location before the media bed kits are installed. Media bed kits may have sharp edges. Wear safety glasses and gloves when handling.

5.0 OPERATION INSTRUCTIONS


Once the appliance has been plugged into a grounded electrical outlet, it is ready to operate.


5.1 CONTROL PANEL / REMOTE CONTROL OPERATION

(Main Power Switch must be turned ON before using the remote control.)

The touch display panel is shown on the bottom right of the front of the appliance.

- Move the battery's transparent insulating piece away before using the remote control.

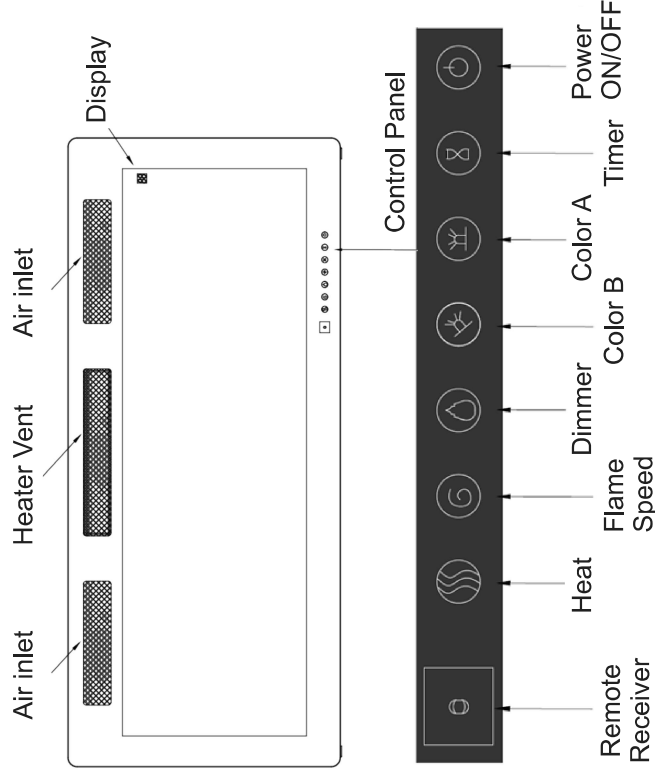

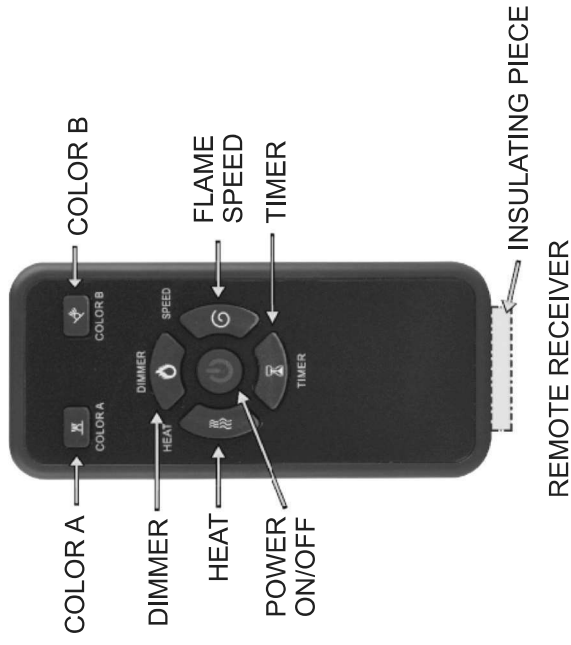

POWER		Turn the appliance ON/OFF. NOTE: Make sure the main switch on the top of the fireplace is turned on before operating.
DIMMER		Control Flame brightness. 5 Settings: (L1-L2-L3-L4-L5) Flame dims from L1 to L5. The L5 is the brightest setting. NOTE: Long press the "DIMMER" button for 6 seconds, and the appliance will go into sleep mode: all the lights are off, but the heating function goes on. Long-press again (>6 sec.) to restore the appliance to the normal mode
TIMER		Control the Timer. 8 Settings: (1h, 2h, 3h, 4h, 5h, 6h, 7h, 8h). Press the button until the desired setting is reached.

FLAME SPEED		Control Flame speed. 5 Settings: (U1-U2-U3-U4-U5) Flame speed from U1 to U5. The U5 is the fastest setting.
HEATER		Control the Heater. Press the button to initiate the heater. (OFF) no heater or blower. (-), heater blows warm air (750W) (--), heater blows hot air (1500W) NOTE: Heater functions cycle from (OFF) (-)(--)
COLOR A		Control the flame color. 12 Settings: 1.red 2.yellow 3.blue 4.orange 5.red & yellow 6.red & blue 7.red & orange 8.yellow & blue 9.yellow & orange 10. blue & orange 11.red & yellow & blue 12. multi-color NOTE: When you press the button for 6 seconds, the indicator will show digital "O", and the flame color and brightness will be changed automatically.
COLOR B		Control the flame bed color. 12 Settings: 1.red 2.gentian blue 3.green 4.pink 5.yellow 6.cyan 7.purple 8.white 9.saffron 10.sky blue 11.verdant 12.capri blue NOTE: When you press the button for 6 seconds, the indicator will show digital "O", and the flame color and brightness will change automatically.

WARNING: Do not move or remove the mesh trim panel, when the appliance is plugged in and operating. This will cause the remote control and touch panel to no longer function.


NOTICE: When the heater is turned on for the first time, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

NOTICE: To improve the heater's performance, aim the remote control at the front of the fireplace.

DO NOT press the buttons too quickly. Give the unit enough time to respond to each command.

5.2 REMOTE CONTROL

- Remove the battery's transparent insulating piece away before using.

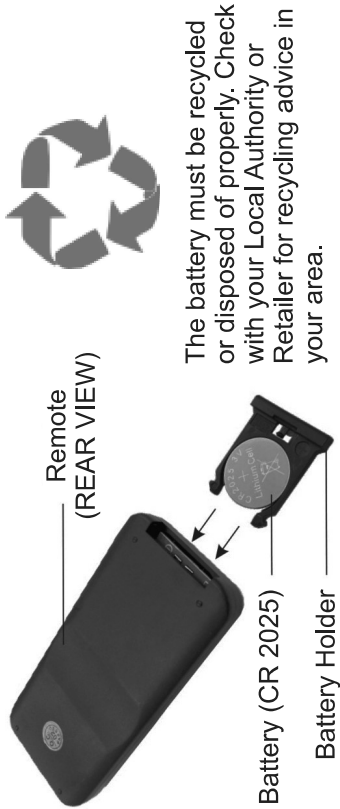

6.0 TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
The mounting bracket cannot be removed.	- The mounting bracket is pre-attached. Unscrew the two screws at both sides of the fireplace with a Phillips screwdriver, and then remove the pre-attached mounting bracket. - If the problem is still not solved, please ask qualified technician for help.
The control panel functions do not work.	- Make sure the Power Switch on the control panel is turned on before operation. - Make sure you have reconnected the data cable which was pulled out when you removed the glass frame. - If the problem is still not solved, please ask qualified technician for help.

Sudden power outage during the heating process.	- Don't cover the air outlet. - Unplug the unit, and wait for 10 minutes and try to open it again. - If the problem is still not solved, please ask qualified technician for help.
The appliance does not blow hot air when it turns on and off.	This is normal. The fans blow cool air while the appliance gradually heats up. The fans blow after the appliance is turned off to prevent overheating.
The heater doesn't turn on with the power switch.	- Main power supply switch is off. Turn the main power supply switch to "ON" position. - Circuit breaker has been tripped. Too many appliances are on this circuit. Make sure that the electrical supply for this unit is an independent circuit. - Heater is unplugged from wall outlet. Make sure the power cord is plugged into a functioning and properly grounded 15 Amp 120V AC electrical outlet. - Power cord or power plug are damaged. Contact a qualified electrician to replace the power cord. - Power outlet for power plug prong is loose. Check the power outlet and replace it with a new one.

The heater is on, but no flame or low flame intensity.	6. Loose wiring.	Contact a qualified electrician to check all wiring for loose connections.
	1. Heater switches is on, but flame is not on.	Long-press the "DIMMER" button for 6 seconds, the appliance will go into sleep mode. All the lights off, the heating function goes on. Long-press for 6 seconds again, the appliance will back to normal mode.
	2. Flame adjusting knob is at a low setting.	Turn the knob to the maximum setting.
Flame is frozen.	3. Loose wiring.	Contact a qualified electrician to check all wiring for loose connections.
	1. Flame element is not attached to the motor.	Please ask qualified technician for help.
	2. Rotation motor is defective.	Please ask qualified technician for help.
Excessive noise is in the lower portion of the heater.	1. Flame element isn't seated properly.	Please ask qualified technician for help.

The heater system doesn't come on.	2. Motor is defective.	Please ask qualified technician for help.
	1. Heater power switch is off.	Turn the heater power switch to the "ON" position.
	2. Heater system is overheated.	Maybe the heater is covered or the air inlet or air outlet is blocked; Remove the clothes or the blockage and turn off the power switch and unplug it. Wait for 10 minutes, and then turn the heater on again.
	3. Loose wiring.	Contact a qualified electrician to check all wiring for loose connections.
	4. The air inlet or air outlet is blocked completely.	Leave adequate space around the unit. Remove the blockage, on or in front the air outlet.
	1. The heater system is overheated. The temperature Limit thermostat is cut off.	Check the air inlet and out let. Turn off the power switch and unplug it. Wait for 10 minutes, and then turn the heater on again.
"HEAT" switch has been flipped in the on position, but there is no airflow.	2. Fan motor is defective.	Please ask qualified technician for help.

	3. Fan blower is balanced badly.	Please ask qualified technician for help.
	4. The "POWER" and the "HEAT" switches are not turned on.	Turn these two switches on.
	1. Loose wiring.	Please ask qualified technician for help.
	2. Bad heating element.	Please ask qualified technician for help.
The fan runs but no heat is coming out.	3. Buildup of dirt on the fans.	Clean all the fans.
	4. Heater fan is defective.	Please ask qualified technician for help.
The remote control does not work.	1. The battery is not properly installed.	Make sure the battery is properly installed. Move the battery's transparent insulating piece away before using.
	2. Not pointing to the right position.	Aim the remote control at the receiver.
	3. There is an obstacle in front of the machine.	Remove the obstacles. Items between the remote control and the remote-control receiver will block the signal.

	4. Press the remote-control buttons too quickly.	Don't press the remote-control buttons too quickly. Give the unit enough time to respond to your commands.
There is an odor coming from the heater.	The heater may emit a slight, harmless odor when first used. This is a normal condition caused by the initial heating of the internal parts and will not occur again.	
NOTE: For the most of functional problems, you can unplug the unit, wait for 10 minutes and plug it again, the machine will reset to the initial status(original system state). If the problem is still not solved, please ask qualified technician for help.		

7.0 MAINTENANCE




DISCONNECT POWER AND ALLOW THE HEATER TO COOL BEFORE ATTEMPTING ANY MAINTENANCE OR CLEANING TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR DAMAGE TO PERSON.

THE FIREPLACE SHOULD NOT BE OPERATED WITH AN ACCUMULATION OF DUST OR DIRT ON OR IN THE UNIT, AS THIS CAN CAUSE A BUILD-UP OF HEAT AND SUBSEQUENT EVENTUAL DAMAGE. FOR THIS REASON, THE HEATER MUST BE INSPECTED REGULARLY, DEPENDING ON CONDITIONS AND AT LEAST AT YEARLY INTERVALS.

7.1 PARTIALLY REFLECTIVE GLASS CLEANING

The partially reflective glass is cleaned in the factory during the assembly operation. During shipment, installation, handling, etc., the partially reflective glass may collect dust particles; these can be removed by dusting lightly with a clean, dry cloth.

To remove fingerprints or other marks, the partially reflective glass can be cleaned with a damp cloth. The partially reflective glass should be completely dried with a lint-free cloth to prevent water spots. To prevent scratching, do not use abrasive cleaners.

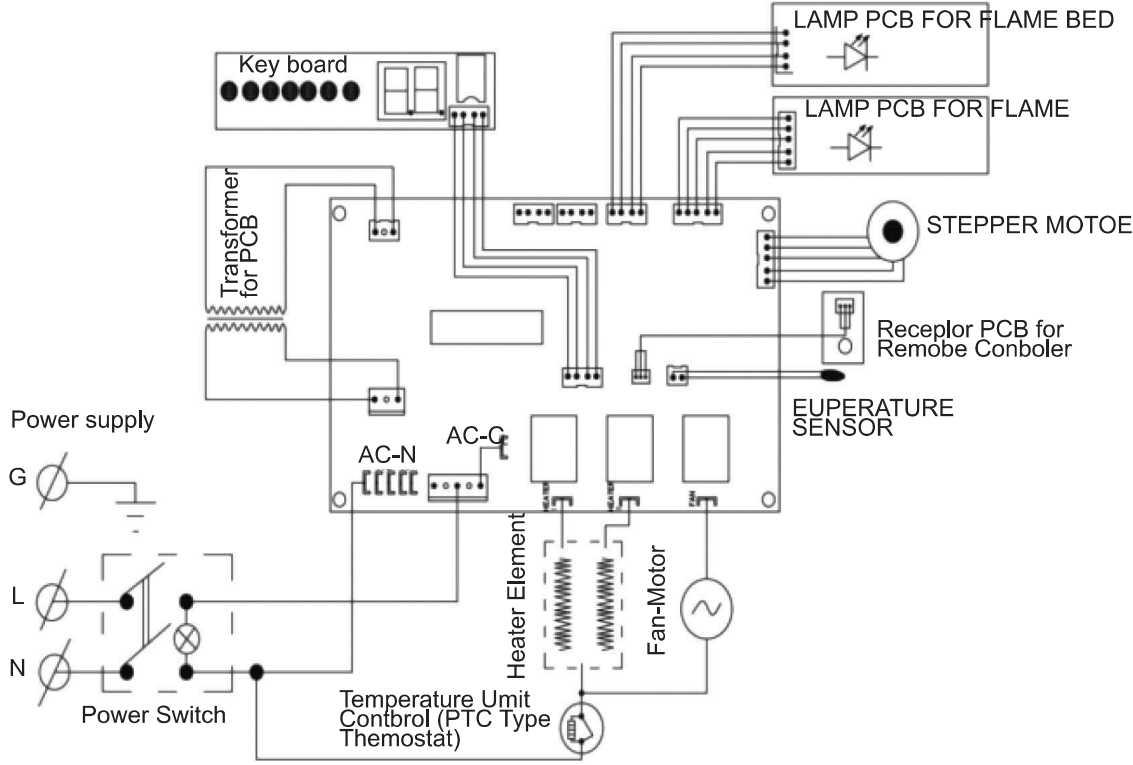

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES



AVERTISSEMENT

Ces instructions doivent être lues attentivement avant l'installation et conservées par l'utilisateur. Le livret doit être conservé et remis au nouvel utilisateur en cas de mise au rebut de l'appareil. Le fabricant se réserve le droit de modifier les caractéristiques du produit sans préavis. Les données techniques sont données à titre indicatif.

1. CET APPAREIL EST CHAUD LORSQU'IL FONCTIONNE ET PEUT PROVOQUER DE GRAVES BRÛLURES S'IL EST TOUCHÉ.

2. Ne pas utiliser l'appareil avant d'avoir lu et compris les instructions d'utilisation. Si l'appareil n'est pas utilisé conformément au mode d'emploi, il peut provoquer un incendie ou des blessures.

3. Maintenez les matériaux combustibles, tels que les meubles, les oreillers, la literie, les papiers, les vêtements et les rideaux à au moins 3 pieds (0,9 m) de l'avant de l'appareil et à l'écart des côtés et de l'arrière.

AVERTISSEMENT : Pour éviter toute surchauffe, ne couvrez pas l'appareil. Le dégagement peut être insuffisant si l'appareil est installé dans un véhicule récréatif dont la glissière est fermée.

4. Risque de brûlures. Il convient de couper l'alimentation électrique de l'appareil et de le laisser refroidir avant de procéder à son entretien. Pour déconnecter l'appareil de l'alimentation électrique, éteignez les commandes, puis retirez la fiche de la prise de courant.

5. N'installez pas de composants endommagés, incomplets ou de remplacement.

6. Les jeunes enfants doivent être surveillés de près lorsqu'ils se trouvent dans la même pièce que l'appareil. Les tout-petits, les jeunes enfants et d'autres personnes sont susceptibles de subir des brûlures par contact accidentel.

7. Pour éviter tout risque d'ingestion accidentelle, les kits de lit multimédia doivent être tenus hors de portée des enfants et des nourrissons.

8. La télécommande contient de petites piles. Gardez-les hors de portée des enfants. En cas d'ingestion, consultez immédiatement un médecin.

9. Ne rechargez pas les piles. Ne pas mélanger les piles avec des piles usagées ou d'autres types de piles, ne pas les stocker avec des matériaux dangereux ou combustibles, ne pas placer les piles en vrac dans une poche, un sac à main ou tout autre récipient contenant des objets métalliques.

10. Assurez-vous que vous avez intégré des mesures de sécurité adéquates pour protéger les nourrissons et les enfants en bas âge contre