

- A: Foot dics
- B: Backrest
- C: Headrest
- D: Seat
- E: Armrest
- F: Caster
- G: Base
- H: Gas lift
- I: Back plate
- J: Footrest
- Q: Tilt Mechanism

(Note: Some of the components have already been installed in advance!!!)




Pull the controller to adjust the lying angle of the backrest, please pay attention to the adjustment!!!

Pull the controller, adjust the force of the chair to adjust the lifting height of the chair!!




K:	WRENCH	FOOT
	M: (M8*40)*4	L: M6*14)*10
O: (M6*30)*4	ARMREST	N: ARMREST COVER*4
	S: (M6*20)*4	P: (M8*25)*4(三組合)
(M6*30)*1 (M6*14)*1 (M8*40)*1 (M8*25)*1(三組合)	BACK&SHEETSTEEL	BACK&SEAT
	SPARE SCREW	T: RUBBER RINGS*2
		RUBBER RINGS

1

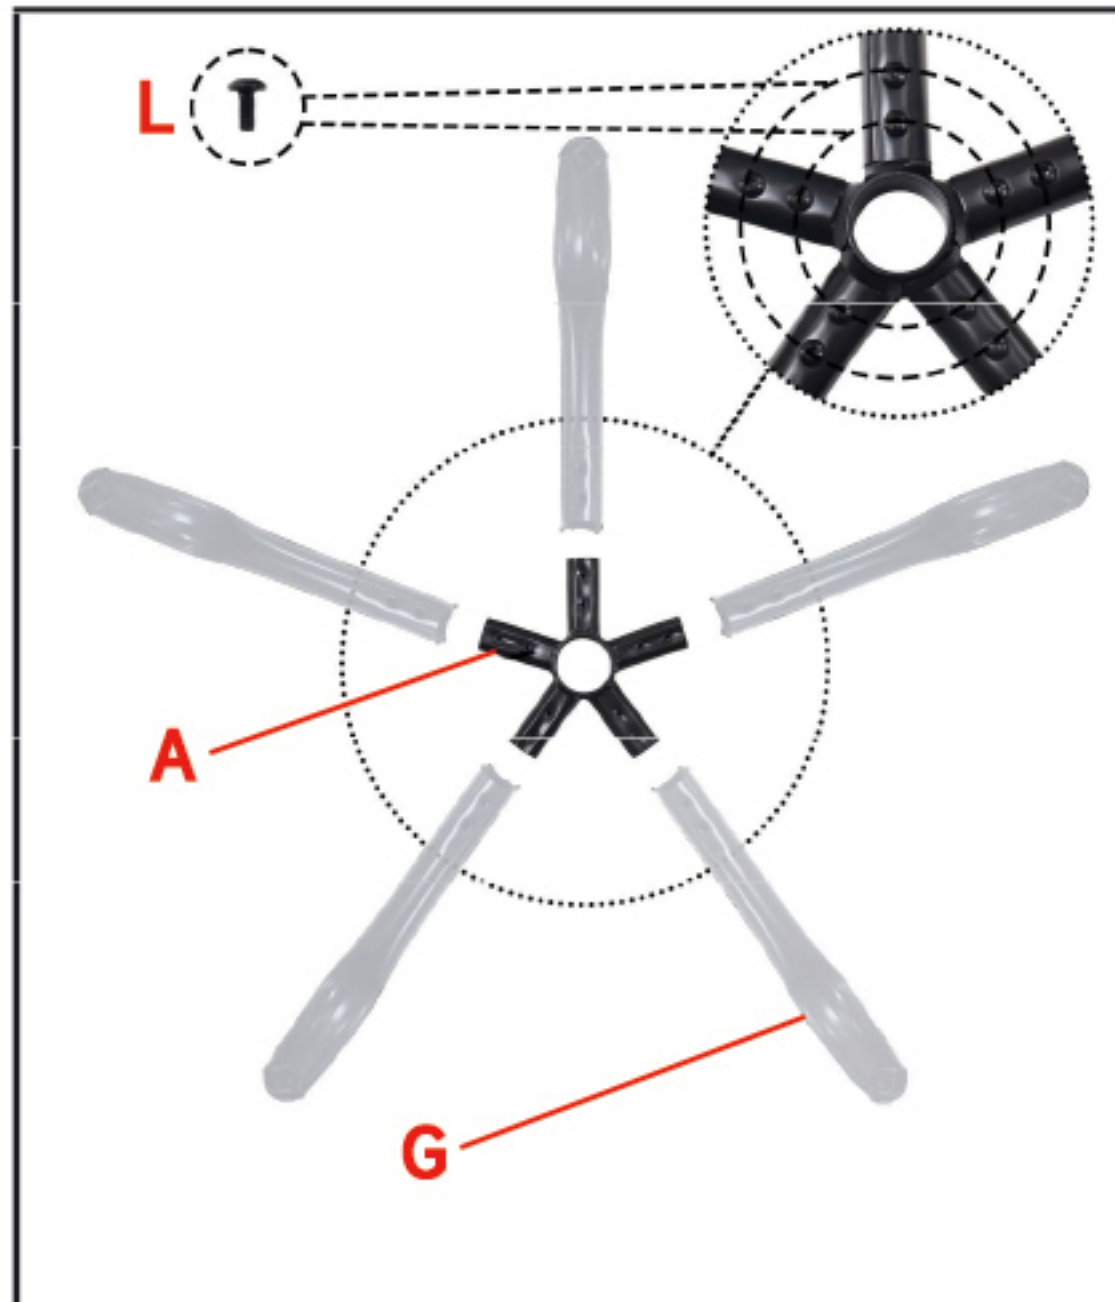


2

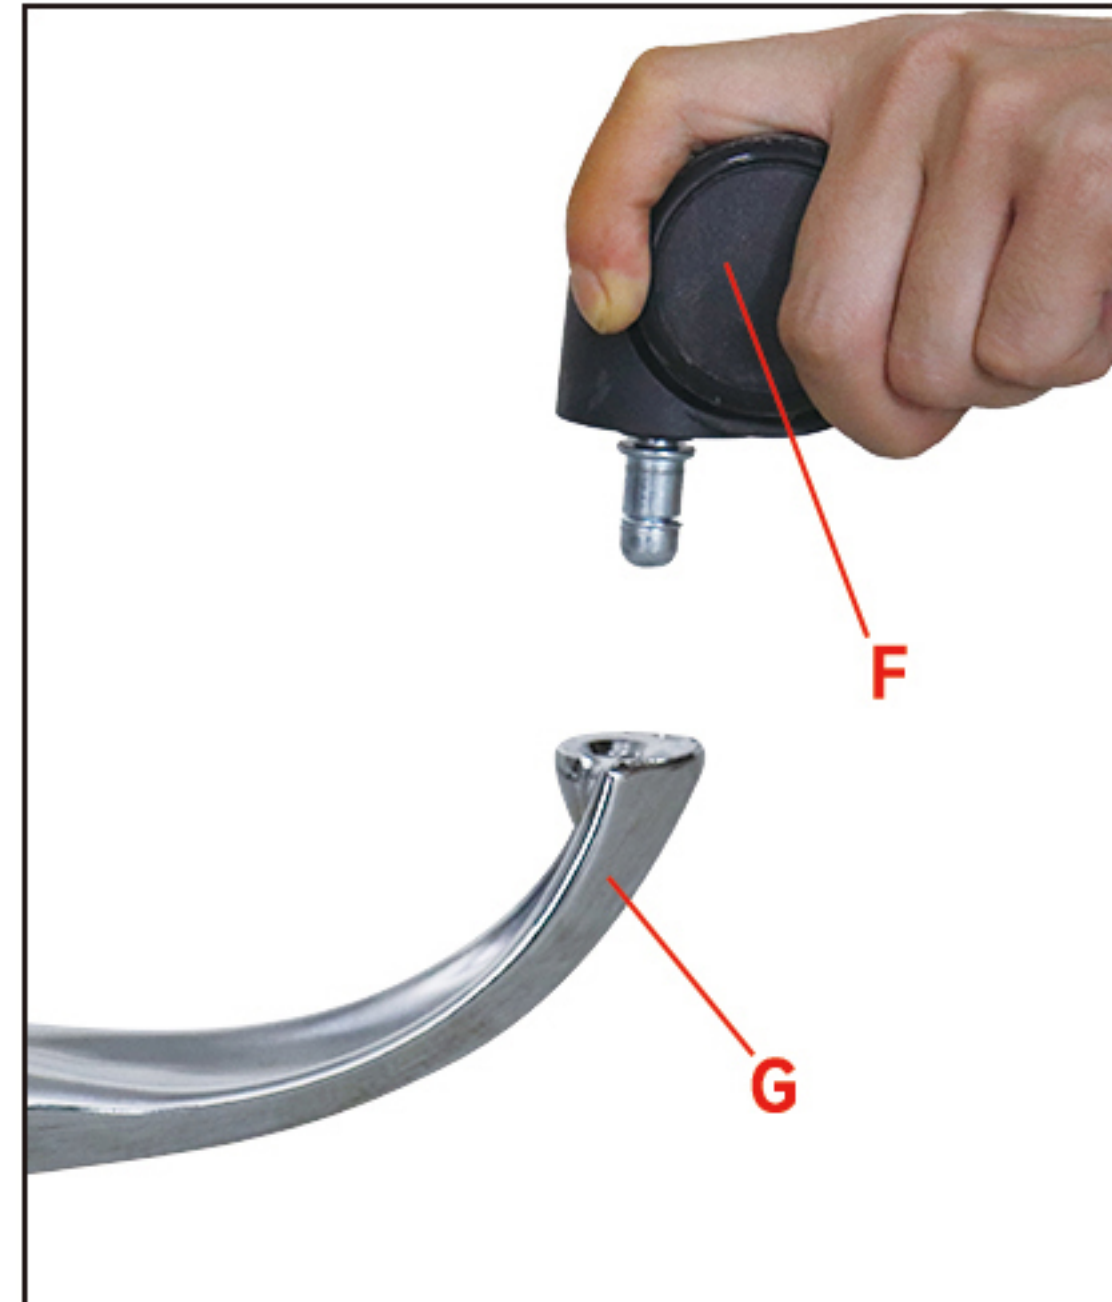


3




4

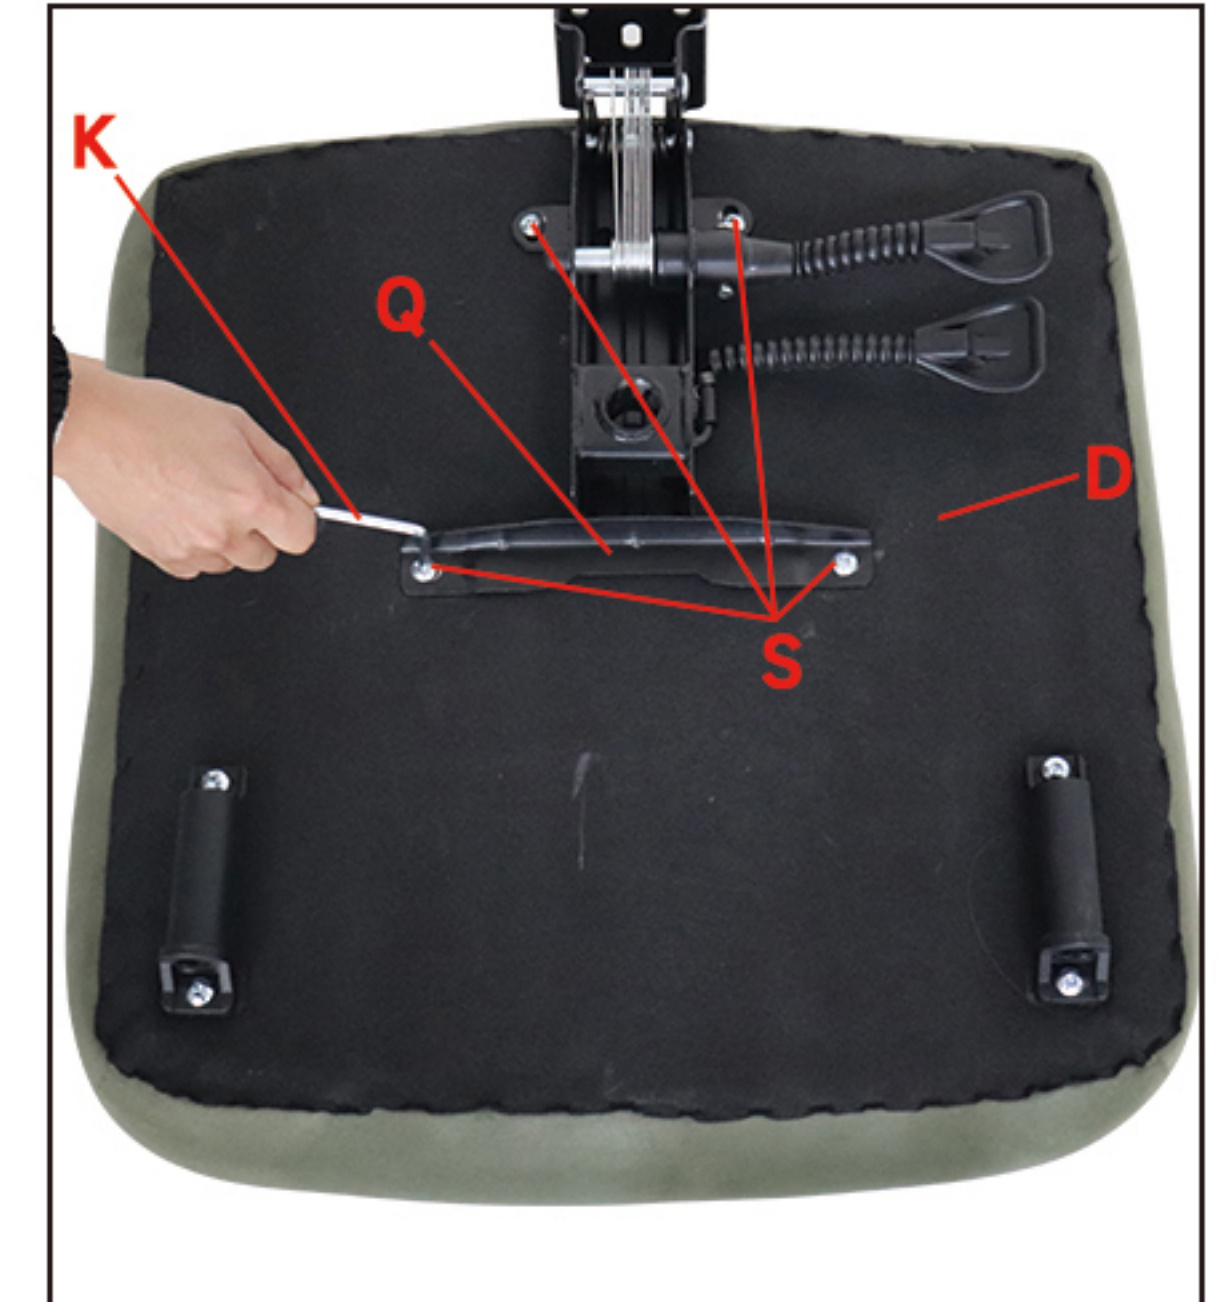

5

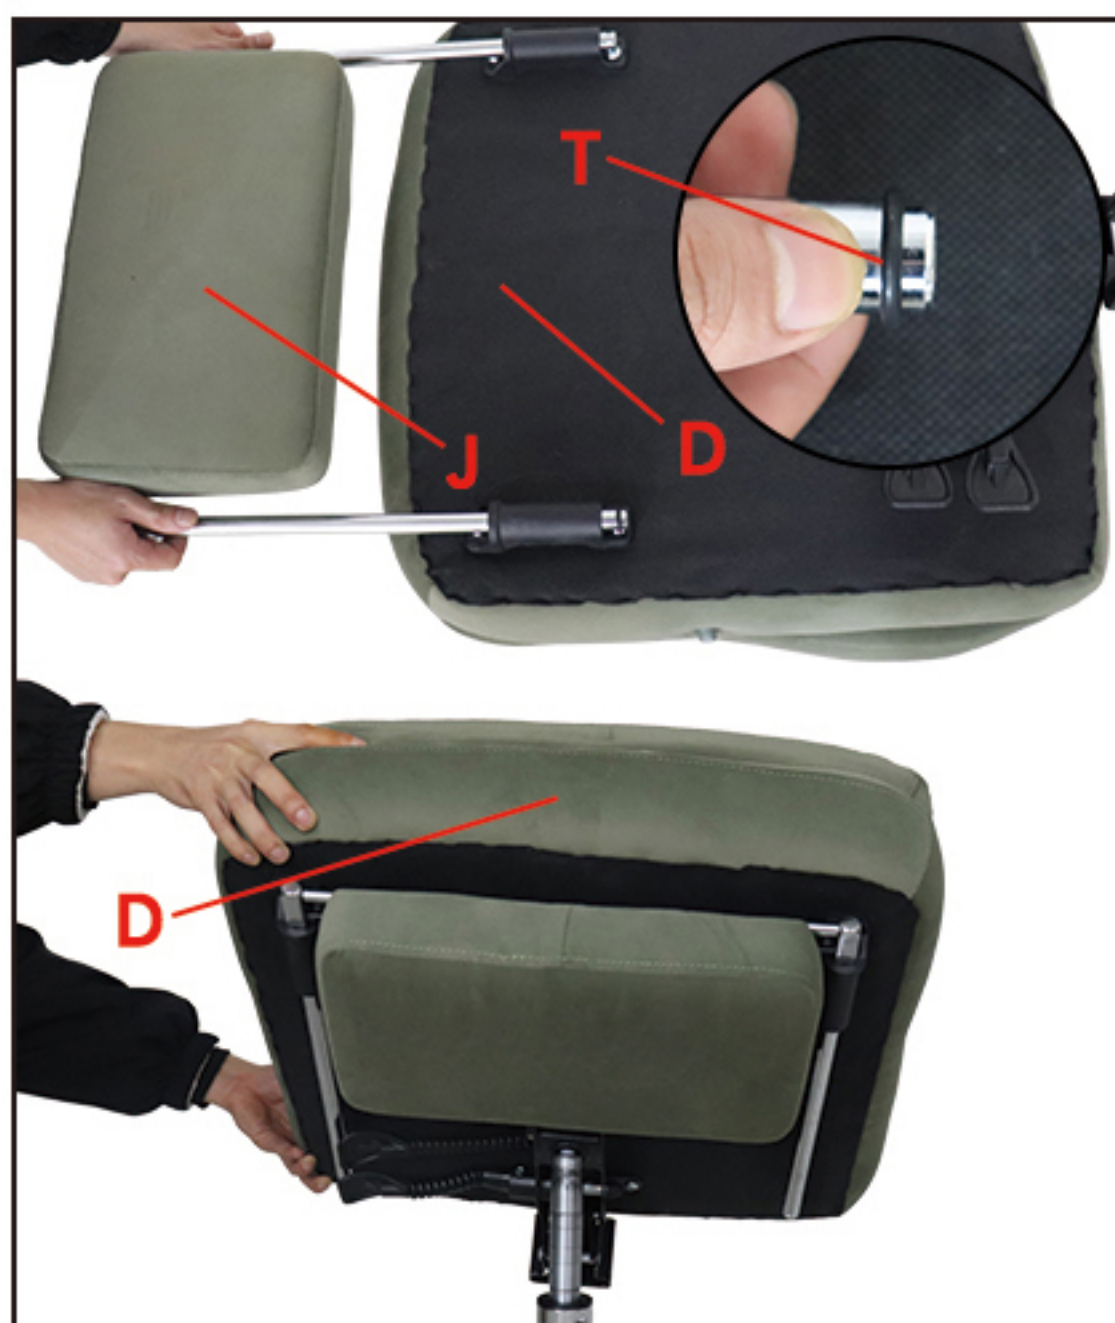

6

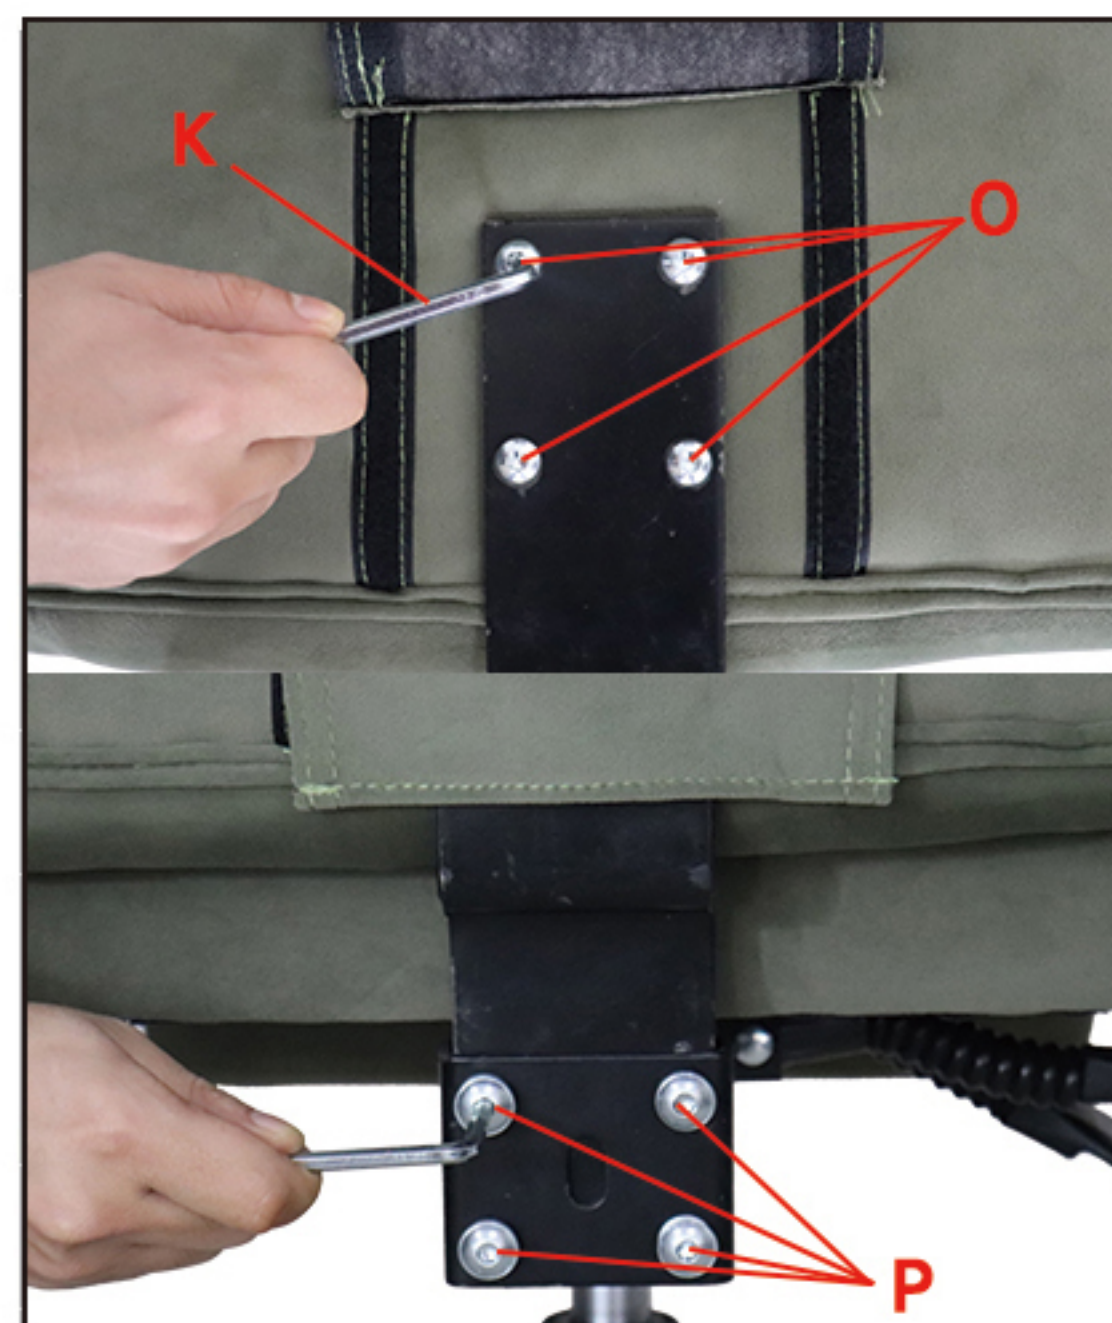

7



8

