

10' (3.0m) OFFSET PATIO UMBRELLA



PLEASE READ CAREFULLY AND RETAIN FOR FUTURE REFERENCE

SAFETY WARNING

Offset patio umbrellas are designed to provide protection from the sun **NOT** the wind.

- **NEVER** open or operate this umbrella in wind conditions greater than **5mph (8kph)**.
- **NEVER** use the tilt function in any wind (even a light breeze).
- **NEVER** use excessive force on the crank handle to open or close the umbrella.
- **ALWAYS** close and secure the umbrella when not in use or during any strong wind event, especially gusting wind and rain.
- **ALWAYS** close the umbrella when unattended or not in use. If you are not sitting under it, the umbrella should be closed.
- **ALWAYS** use the Velcro straps to properly secure the canopy to the frame when the umbrella is closed.
- Base weights are required (additional purchase) to secure this umbrella. **NEVER** open or operate the umbrella without first placing base weights in each open section of the cross base. It is important to use a correctly weighted base; more weight is always better than less weight. This model requires a **MINIMUM** base weight of 192lb (88kg).

FAILURE TO CAREFULLY OBSERVE THESE SAFETY WARNINGS CAN RESULT IN CATASTROPHIC DAMAGE TO YOUR UMBRELLA, POTENTIAL PERSONAL INJURY AND OR PROPERTY DAMAGE.

IMPORTANT INFORMATION

If the umbrella is showing ANY signs of stress, or IF the umbrella begins to move around excessively even when properly weighted it indicates the wind is too strong and the umbrella must be closed and secured immediately.



 




CARE AND MAINTENANCE

- To help extend the life of the polyester fabric and reduce the effects of fading we strongly advise using a protective storage cover whenever the umbrella is not being used.
- During extended periods of bad weather (especially through winter months) your umbrella should be stored inside in a dry place.
- The polyester fabric has been treated to make it dirt and shower resistant (not waterproof), if your umbrella gets wet please allow it to fully dry before storing it away. The fabric can be cleaned with a soft brush then use a damp cloth and mild detergent to remove any stubborn stains.

BEFORE YOU START

- Check you have all the listed parts before you start assembling.
- In the event of missing or damaged parts, contact our customer support team via your Amazon account.
- Assemble on a soft surface such as a drop sheet or rug to avoid scratching.


WHAT'S IN THE BOX

Item	Part	Qty	Part Description
A		1	Lower Cross Base
B		1	Upper Cross Base
C		1	Central Spigot
D	 M10	4	Hex Bolt M10*20mm
E	 M10	4	Washer M10
F		1	Main Frame and Canopy
G	 M10	1	Wrench M10

ASSEMBLY INSTRUCTIONS


Step 1

Place the upper cross base (B) over the lower cross base (A).

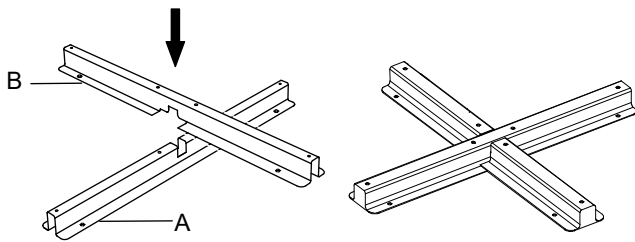


Step 2

Using the M10 wrench fix the central spigot to the assembled cross base with 20mm M10 hex bolts and M10 washers. Tighten firmly.

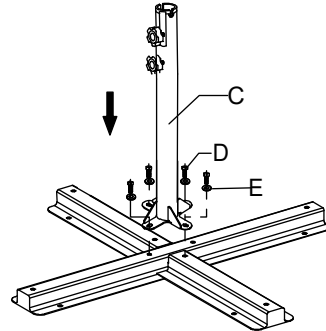


Step 3

Place the assembled cross base in your preferred location then follow the 'Cross Base Installation Tips' on page 4.

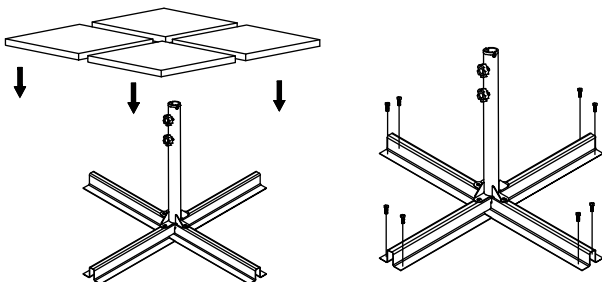


Step 4

Connect the upper and lower cantilever arm sections by pressing the spring clip button in whilst aligning the holes, release the spring clip button once the two holes are aligned.

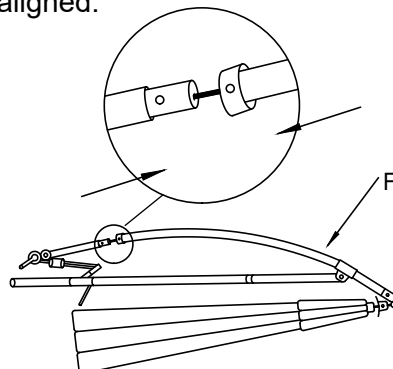

Step 5

Attach the main frame and canopy to the central spigot. Ensure that the locating pin is positioned into the cutout in the top of the central spigot. Tighten the two tension screws firmly.

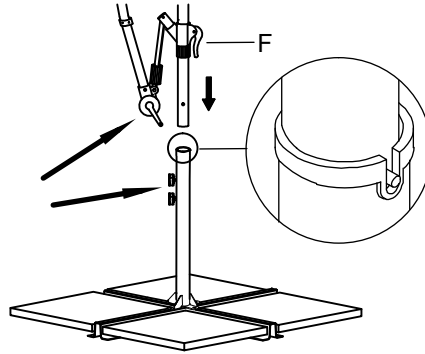


NOTE: The central spigot is designed with a reverse angle to ensure the canopy sits level once assembled. It is very important to correctly locate the crank winder directly above the tension screws as shown.

OPERATING INSTRUCTIONS


Step 1

Unfasten the Velcro storage straps from the canopy and main frame.

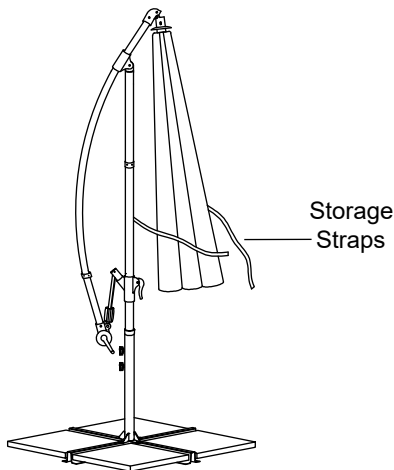


Step 2

Unlock the lift clamp. Gently slide the arm upwards to fully extend the umbrella.

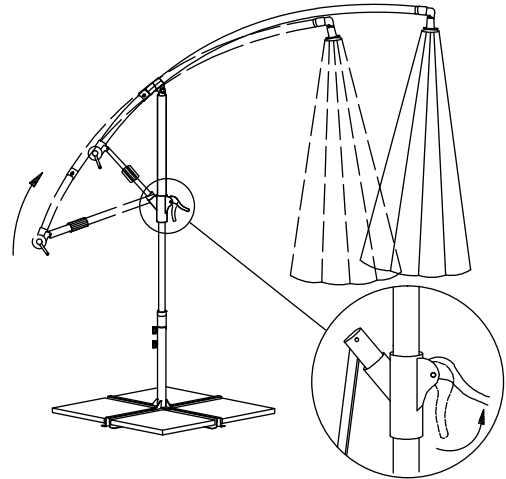


Step 3

When the umbrella arm is fully extended, lock the lift clamp and slide the lock cover into place as shown.

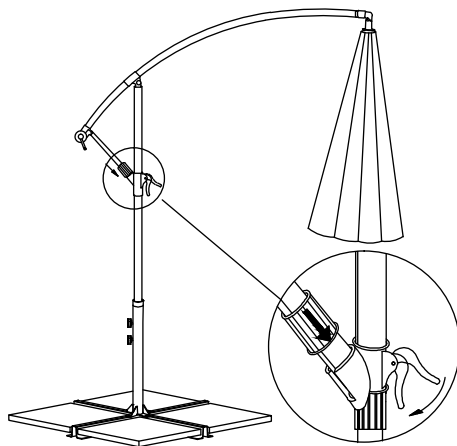

Step 4


Turn the crank handle in a clockwise direction to open the canopy (take care not to keep winding the crank handle once the canopy is fully opened). Use the tie strings provided at the back of the canopy to secure it to the main umbrella pole.

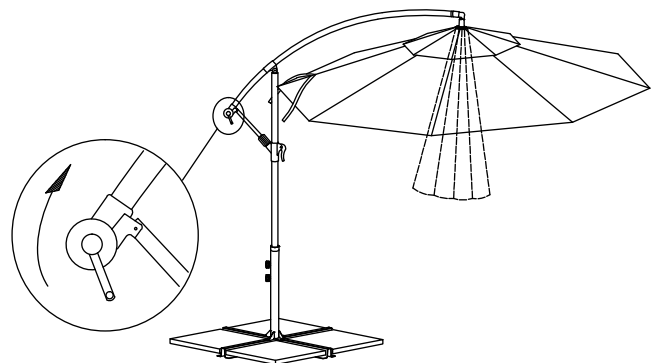

Step 5

To close the umbrella, first undo the tie strings and then wind the crank handle gently in a counter-clockwise direction until the canopy is fully closed. **CRITICAL STEP: Always remember to slide the lock cover away from the vertical lift mechanism BEFORE lowering the umbrella arm.** Unlock the lift clamp and gently slide the arm downwards to fully lower the umbrella. Fasten the Velcro storage straps around the canopy and main frame.


NOTE: A regular application of silicon spray to the sliding mechanisms will assist with smooth operation.

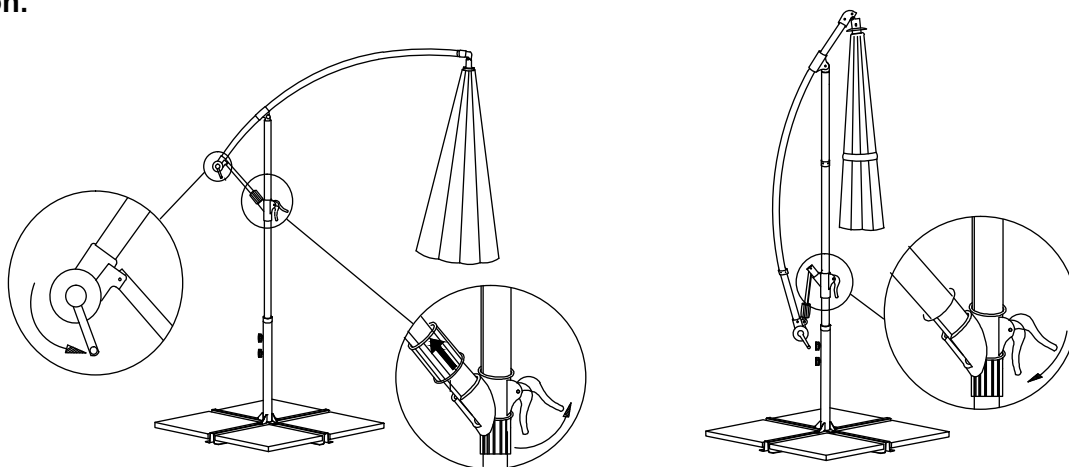

OFFSET UMBRELLA BASE TIPS


STANDARD INSTALLATION

- The cross base supplied with this offset umbrella requires 4 individual base weights at least 48lb (22kg) each for a minimum combined weight of 192lb (88kg) to provide the necessary support and stability. As a general rule the more weight the better the umbrella will be supported.
- Failing to use the minimum base weight will damage the umbrella and may also cause personal injury.

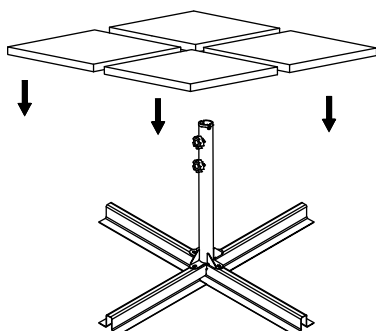

SPECIAL INSTALLATION

- If you have a suitable timber deck, the cross base can be secured to it using 2" (5cm) M8 coach bolts or deck screws (not supplied). Ensure the fixing points are made into joists or bearers not just the decking boards. If using this option, extreme care must be taken to ensure the umbrella is never opened or used in wind greater than 5mph (8kph).

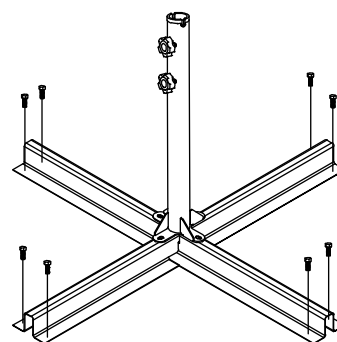

CUSTOMER SUPPORT

Please contact us via your Amazon account before leaving any negative review or feedback on Amazon.

Your complete satisfaction matters to us, so if our product hasn't met or exceeded your expectations, or if you are having problems with assembly, missing or damaged parts, before you do anything else please email our support team directly, let us know the full details of the issue (attaching clear pictures to your email will always help us to better understand exactly what's gone wrong).

We promise to respond to your email within 24 hours, and we guarantee that we will fix the problem to your complete satisfaction.