

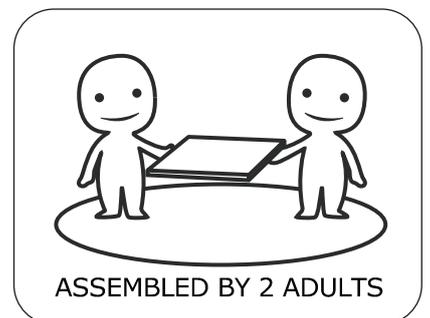



# Cabinet

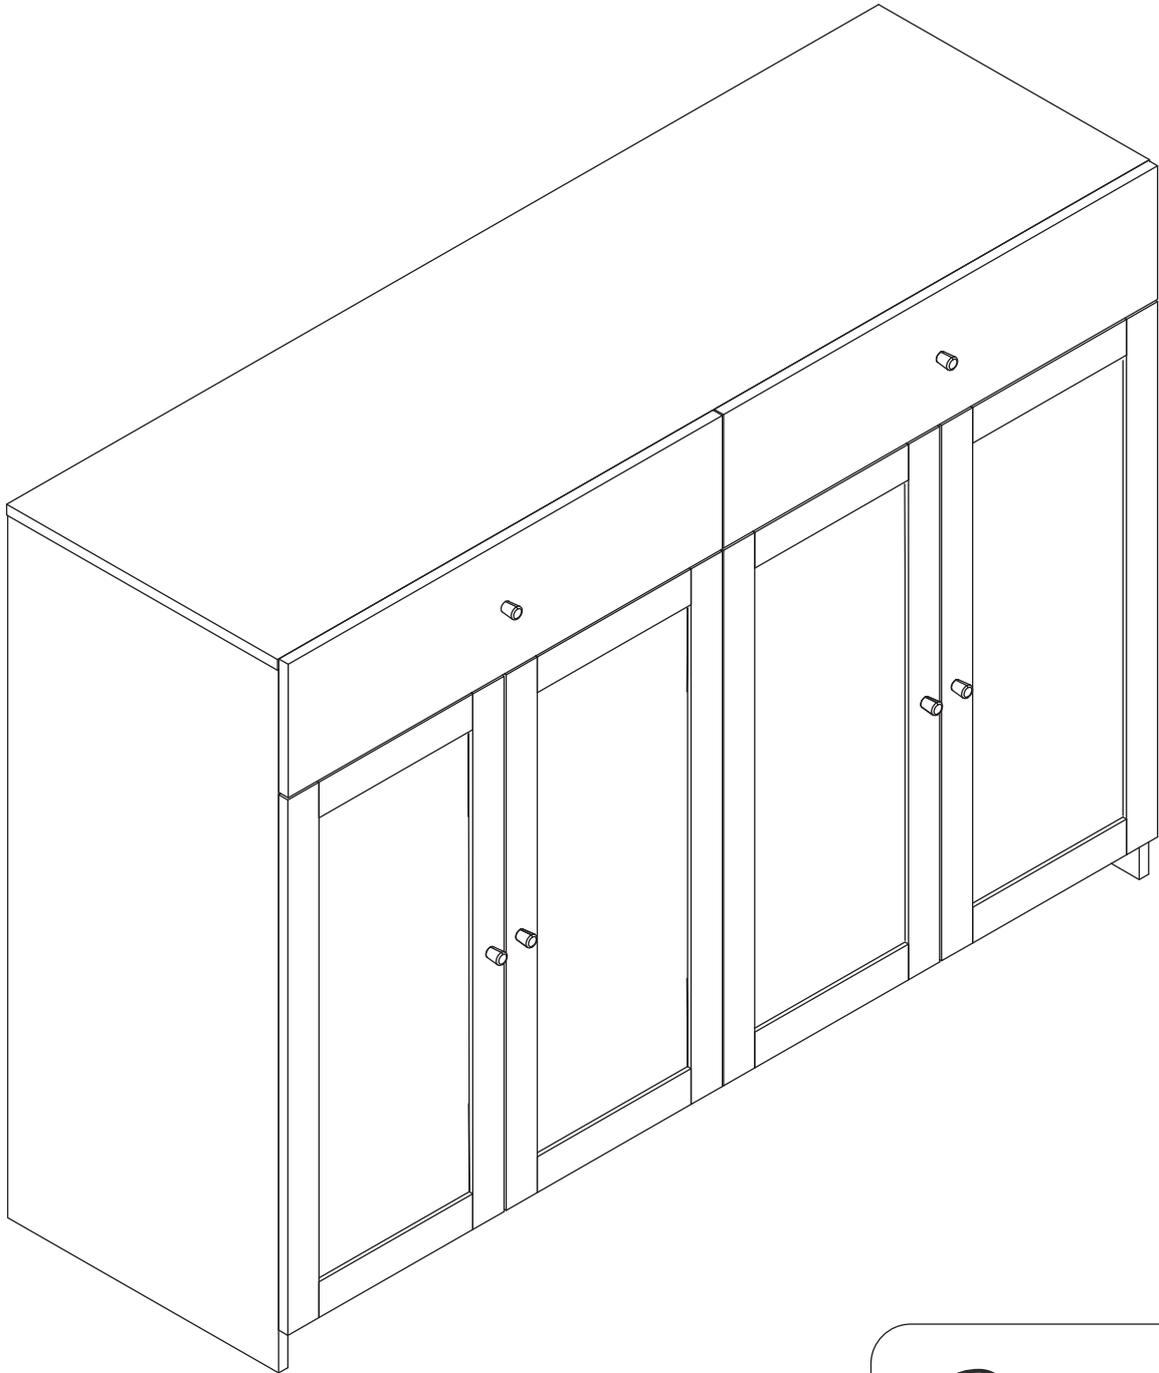

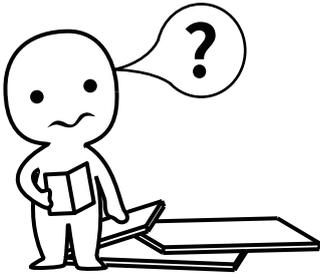


### **IMPORTANT INFORMATION!**

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

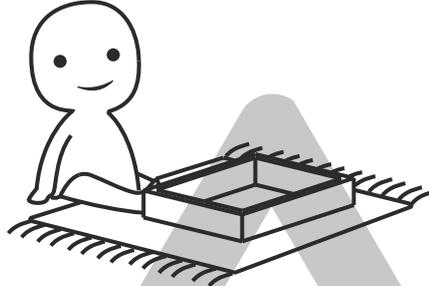



### **AVOID SCRATCHES!**

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

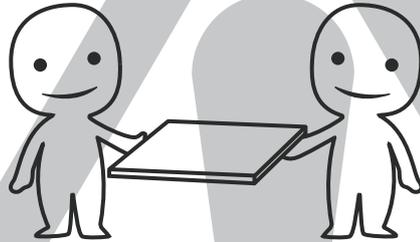

### **IMPROVE EFFICIENCY !**

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

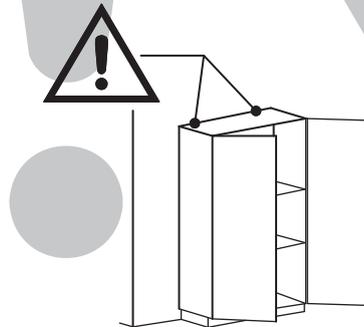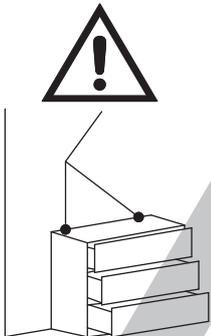

### **ANTI-TOPPLE WARNING !**


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

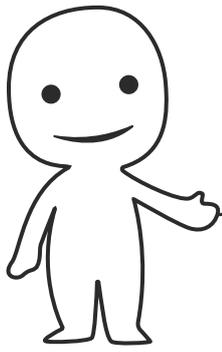


Please prepare the following tools

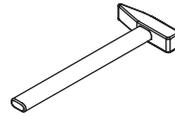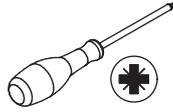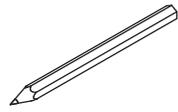

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 42

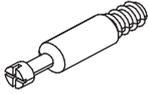

Ø6 x 35 mm

B x 30



Ø6 x 30 mm

C x 42



Ø15 x 10 mm

D x 5



Ø6 x 35 mm

E x 48



Ø4 x 14 mm

F x 1



G x 2



H x 10+2




I x 10+2



Ø3 x 16 mm

J x 4

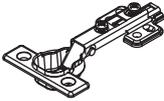

K x 6



L x 6



Ø4 x 12 mm

M x 8



N x 14



Ø4 x 35 mm

P x 2



Q x 2



R x 2



Ø3.5 x 12 mm

S x 4



T x 24




Ø3 x 12 mm


U x 4




CL x 2

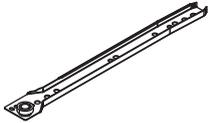


CR x 2


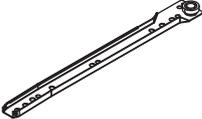


DL x 2

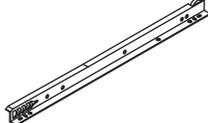

DR x 2

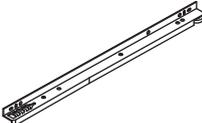

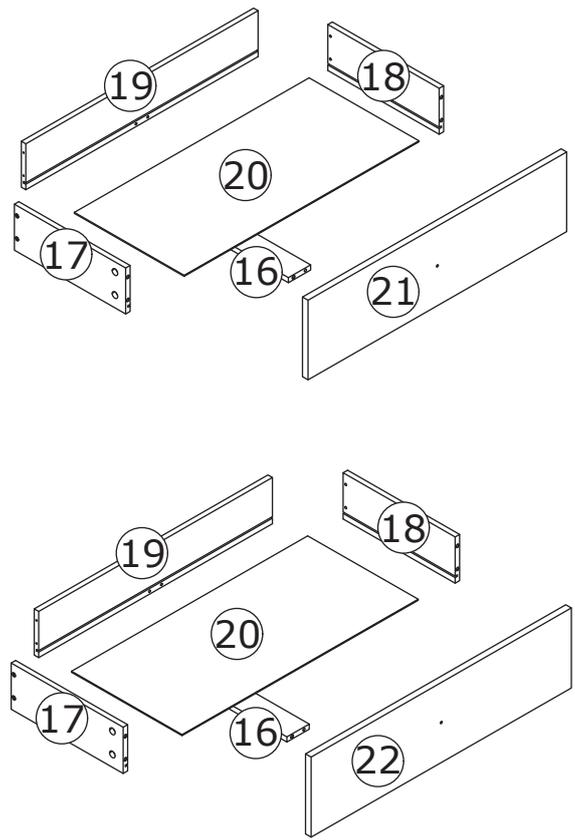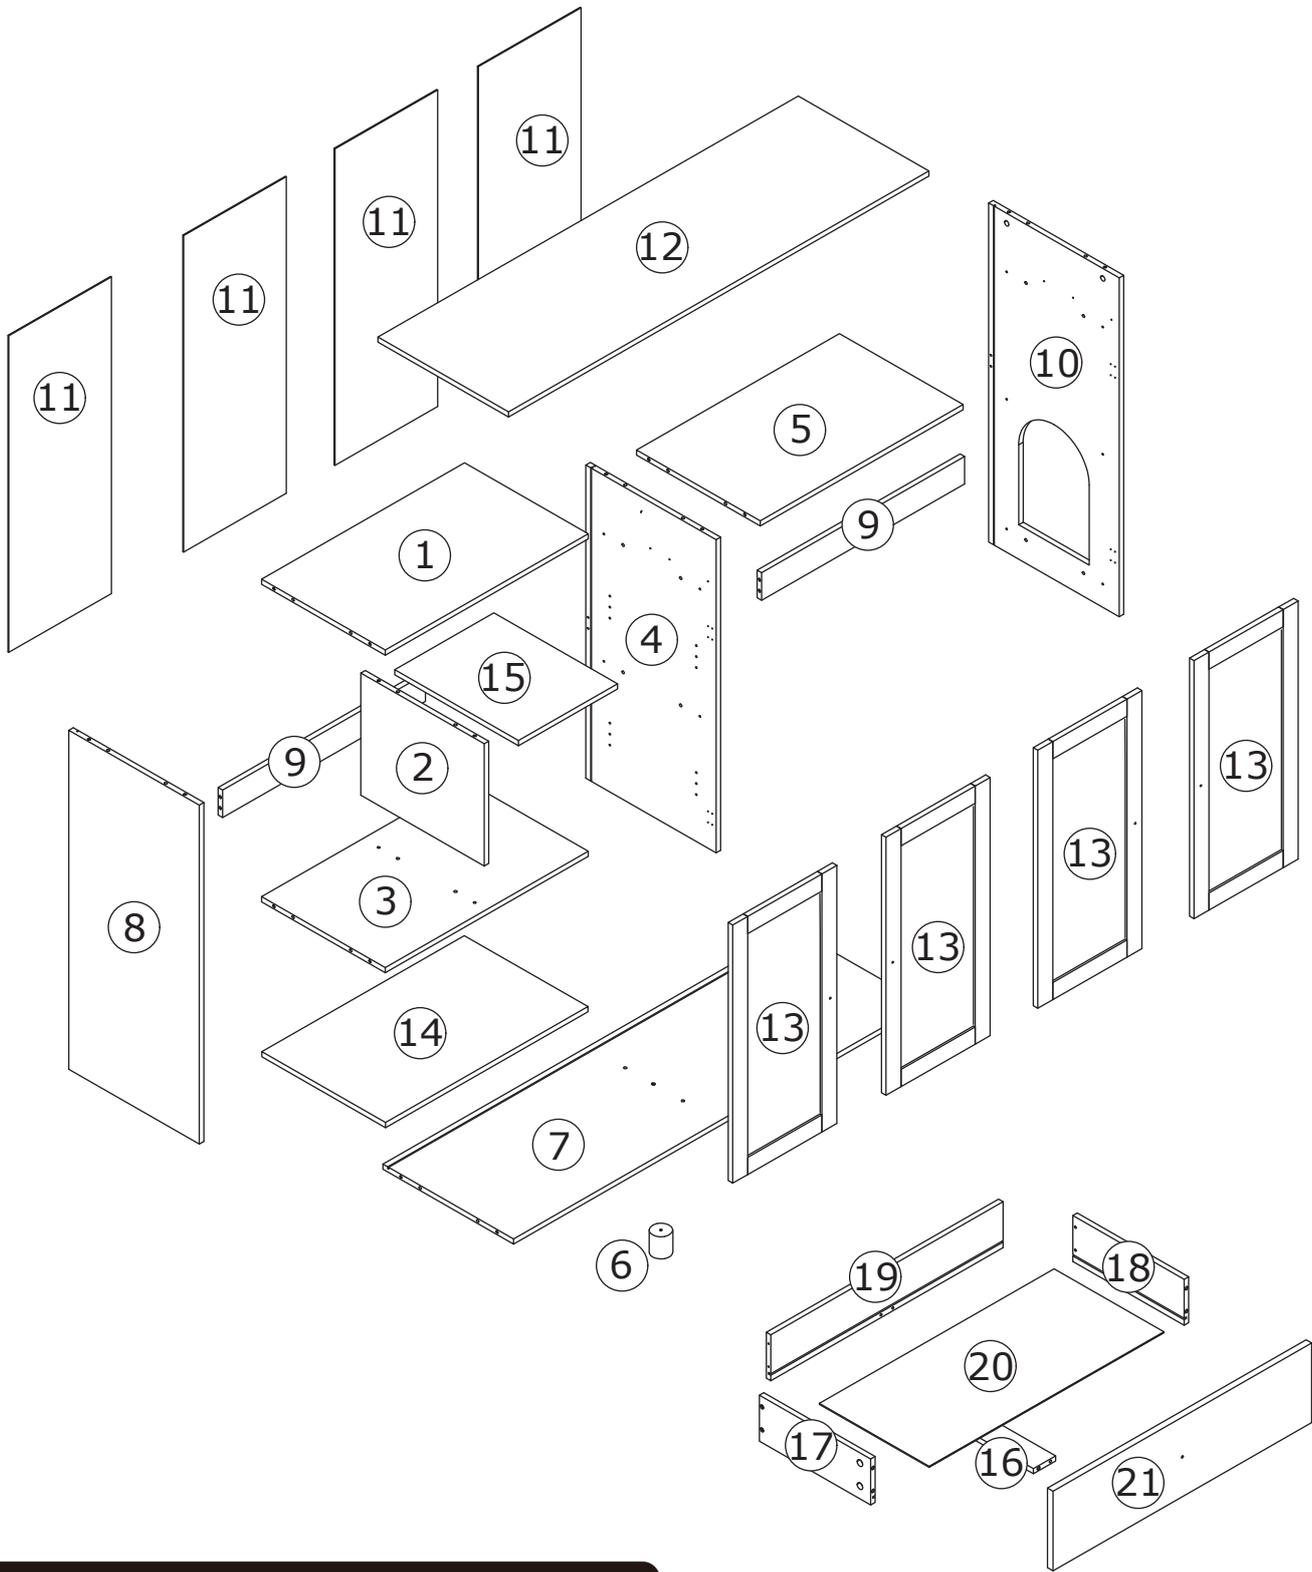




**⚠ WARNING**

**Children have died from furniture tipover. To reduce the risk of furniture tipover:**






- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label. Do not remove!*


1

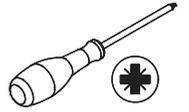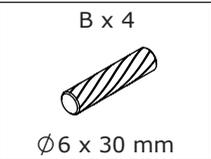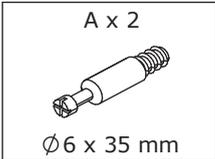




Screw eccentric rod(A) into board 1 with a screwdriver as shown.  
Insert wooden dowel(B) into board 1 as shown.

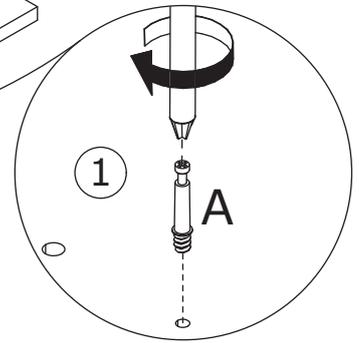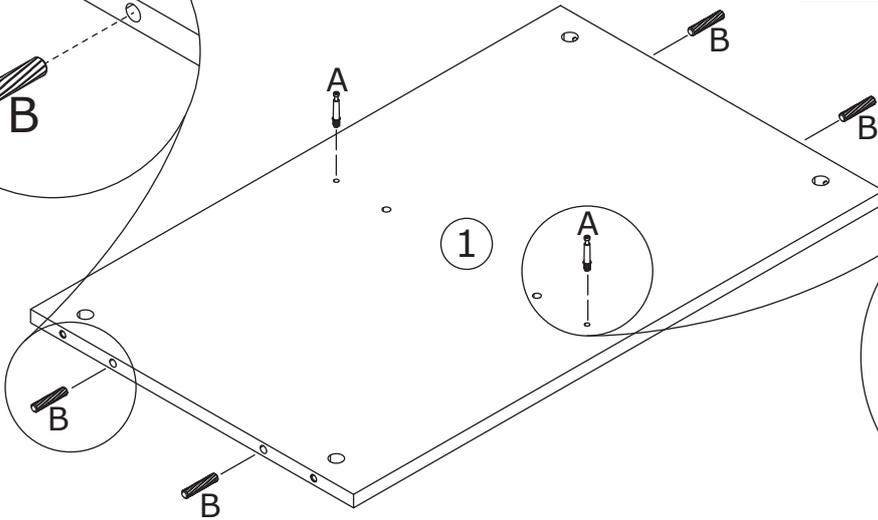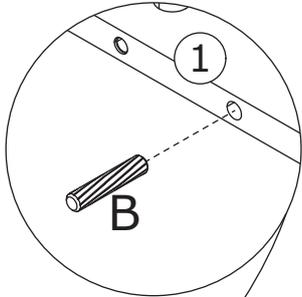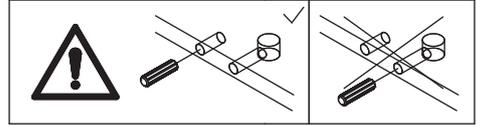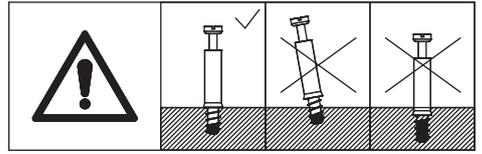

2

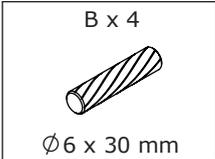


Insert wooden dowel(B) into board 2 as shown.

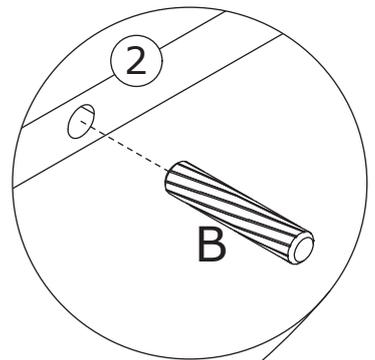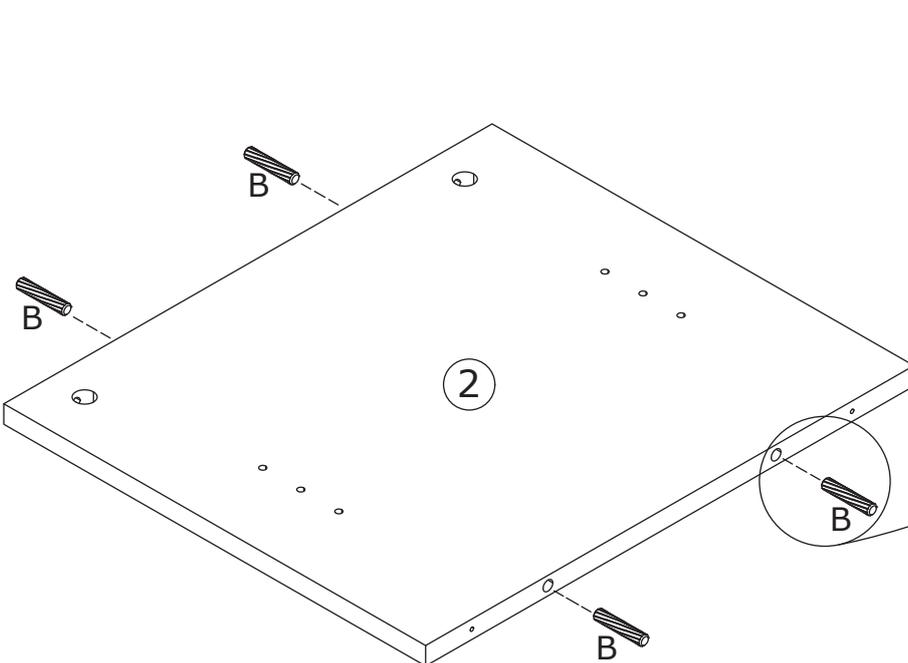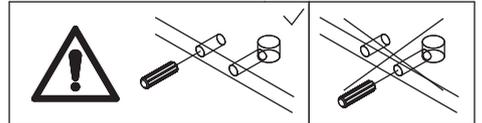


3


C x 2  
Ø15 x 10 mm

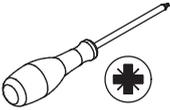

Connect board 2 to board 1, add cam lock(C) into board 2 and turn clockwise to tighten as shown.

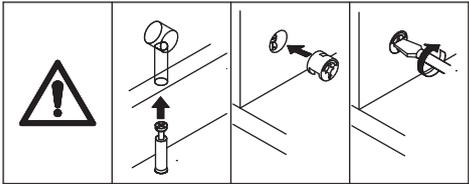


When assembling, keep Back Side of the Cabinet upwards.

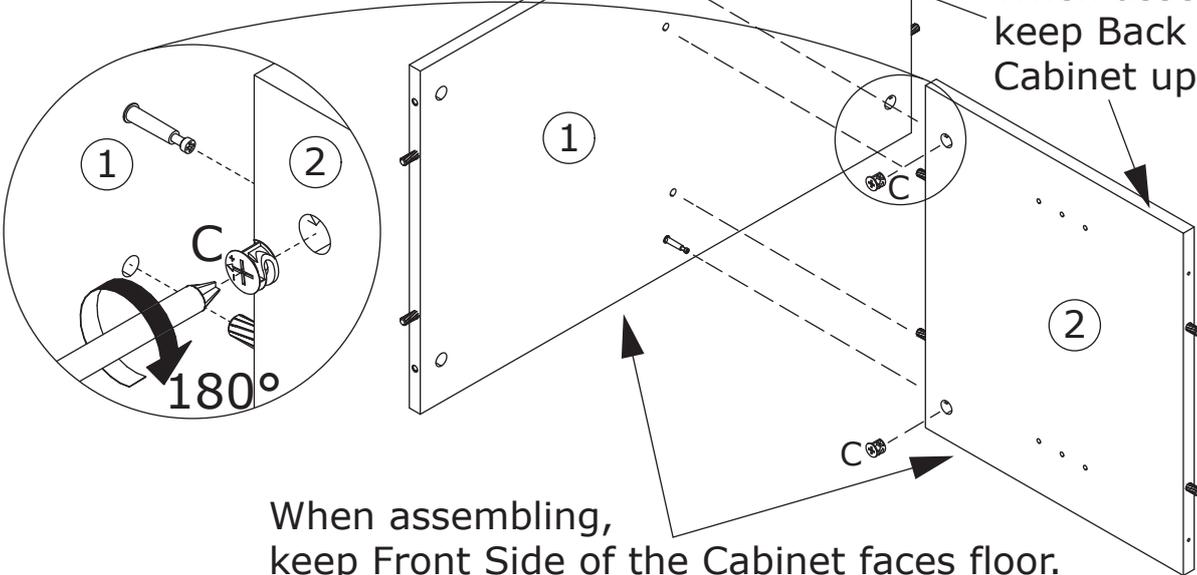


When assembling, keep Front Side of the Cabinet faces floor.

4


B x 4  
Ø6 x 30 mm

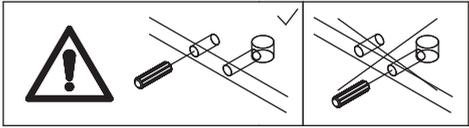

Insert wooden dowel(B) into board 3 as shown.


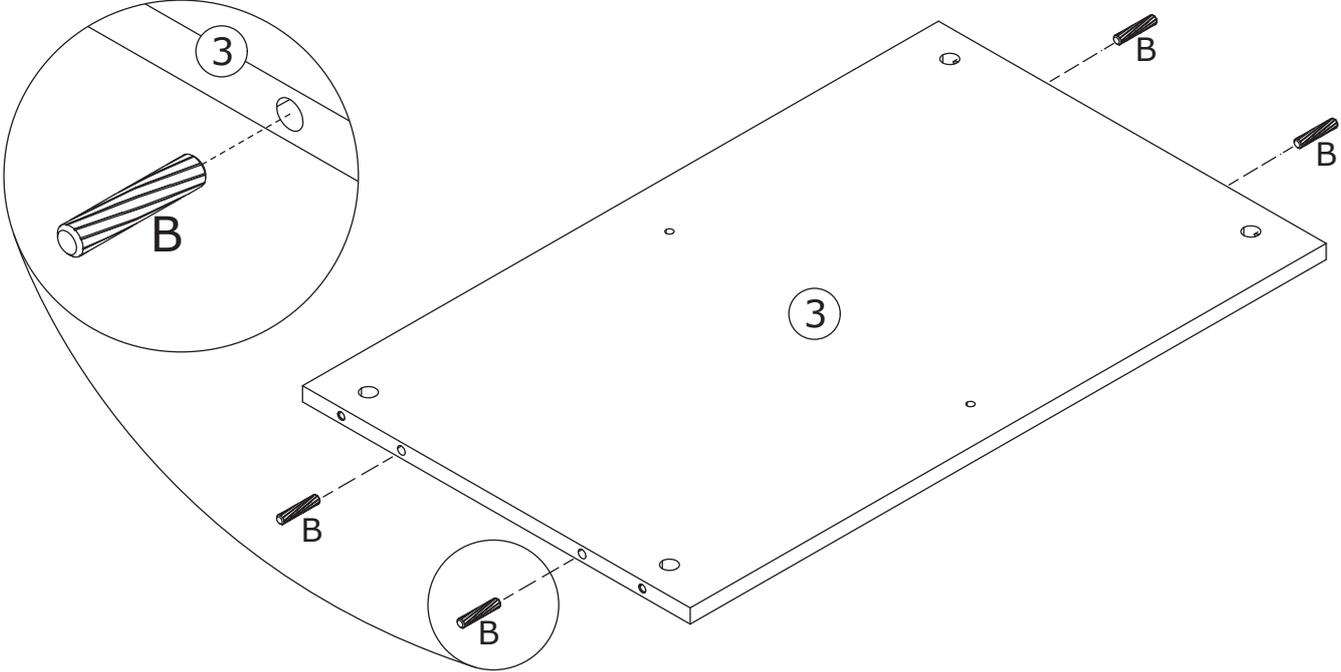


5

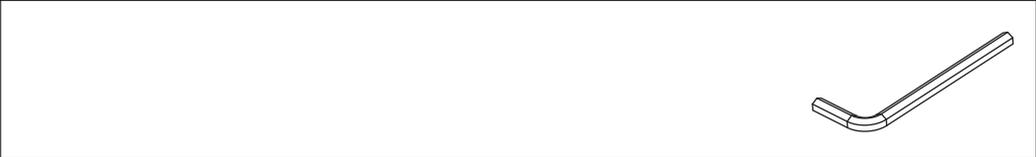





Connect board 3 to board 2 using wooden dowel(B), and fix screw(D) with a L wrench as shown.

When assembling, keep Back Side of the Cabinet upwards.




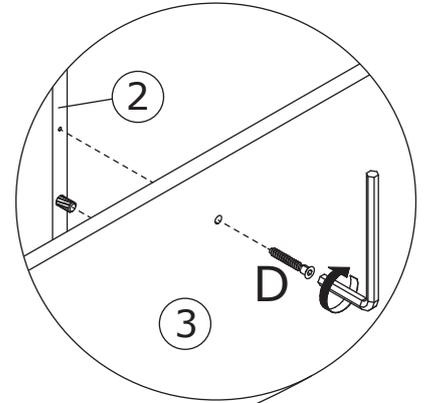
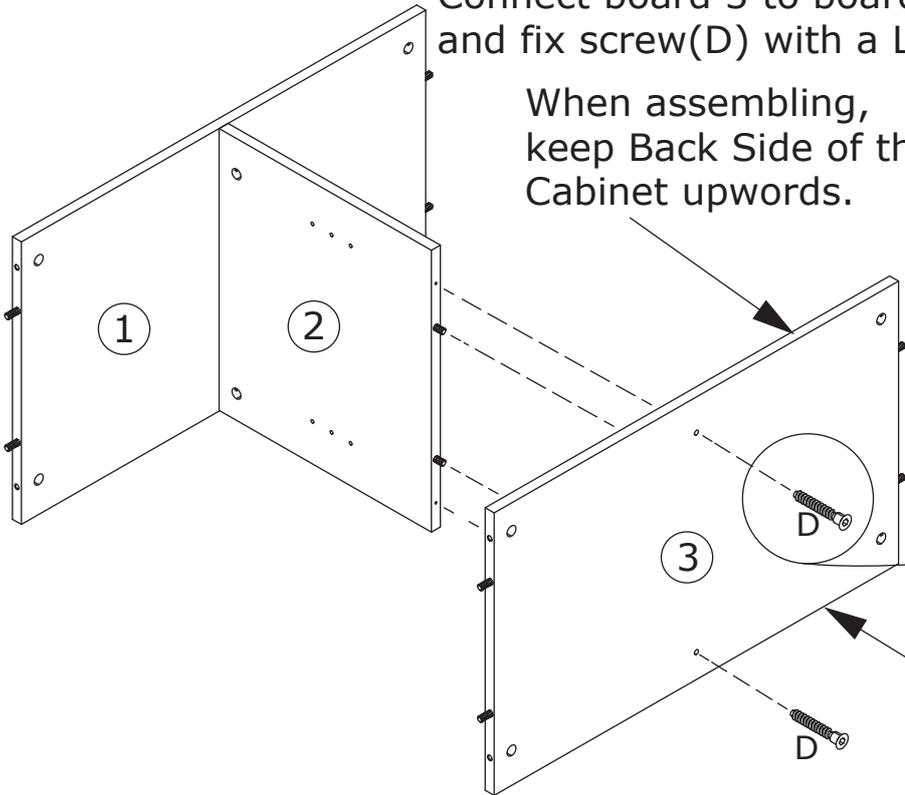


When assembling, keep Front Side of the Cabinet faces floor.




6

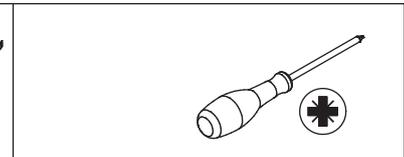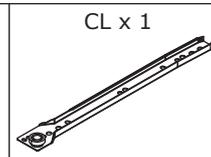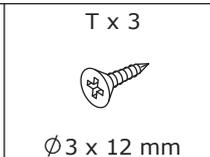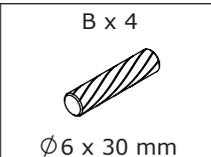




Screw eccentric rod(A) into board 4 with a screwdriver as shown. Insert wooden dowel(B) into board 4 as shown. Fix rail(CL) to board 4 with screw(T) as shown.

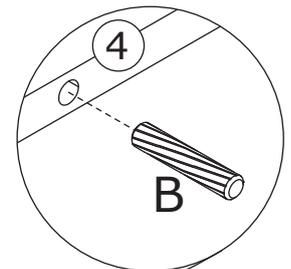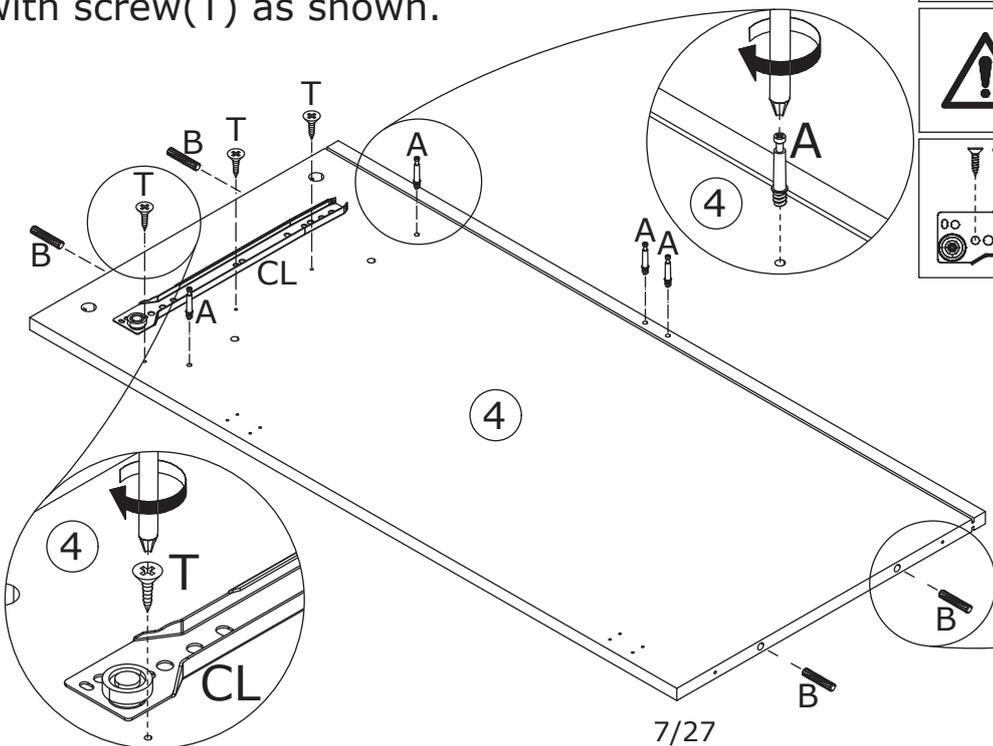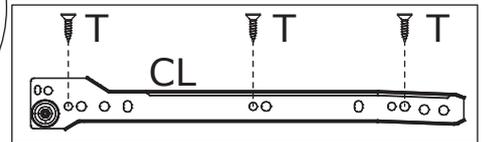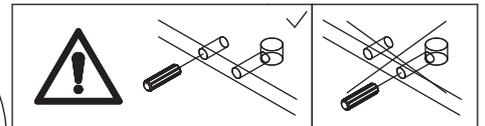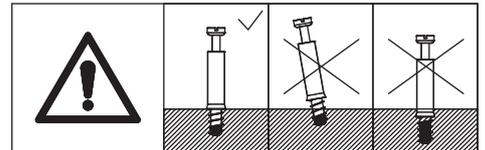



7

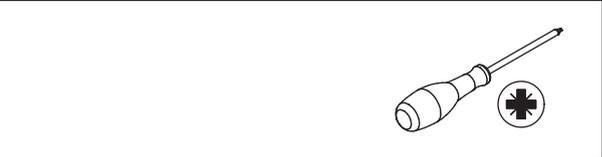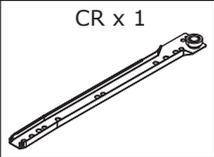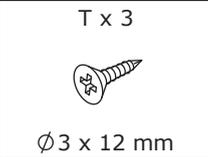

Screw eccentric rod(A) into board 4 with a screwdriver as shown. Insert wooden dowel(B) into board 4 as shown. Fix rail(CR) to board 4 with screw(T) as shown.

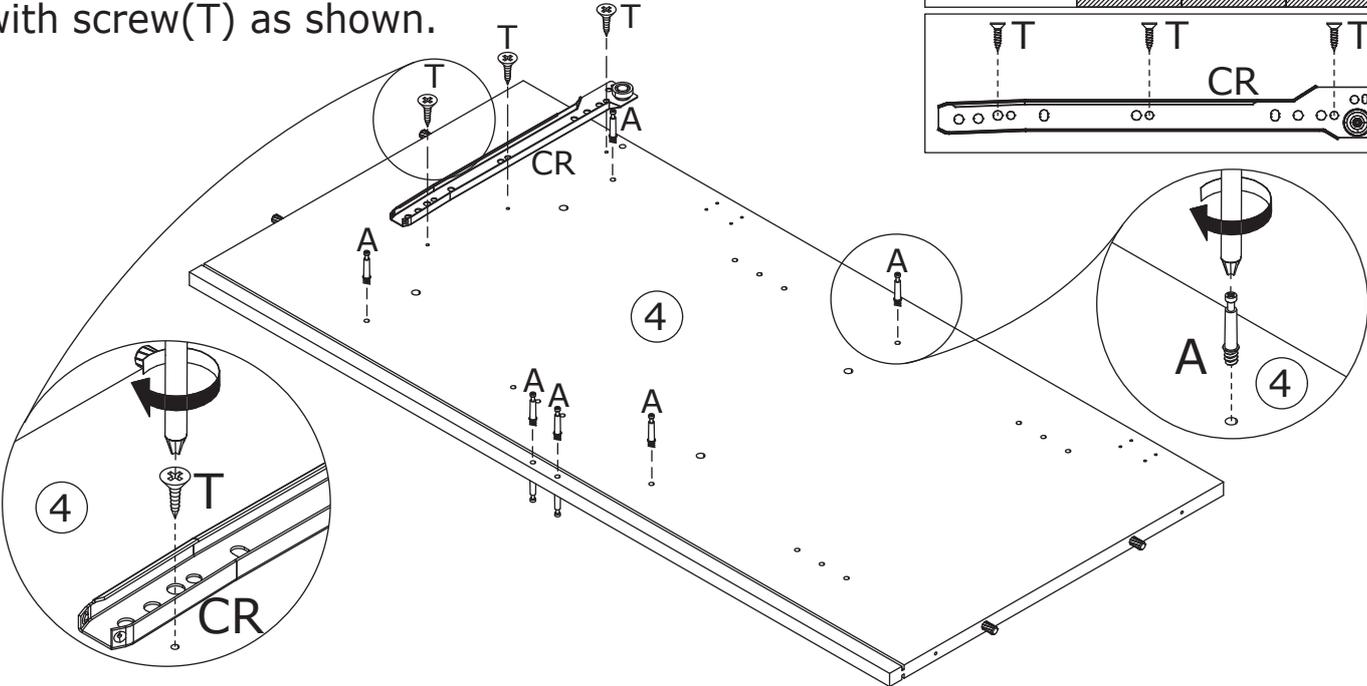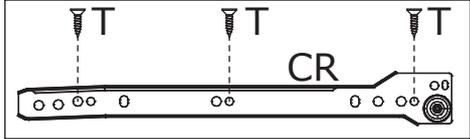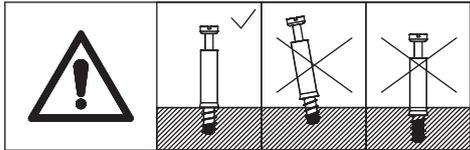


8

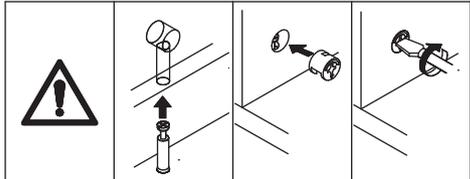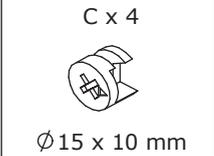


Connect board 4 to board 1 and 3, add cam lock(C) into board 1 and 3, then turn clockwise to tighten as shown.

When assembling, keep Back Side of the Cabinet upwords.



When assembling, keep Front Side of the Cabinet faces floor.

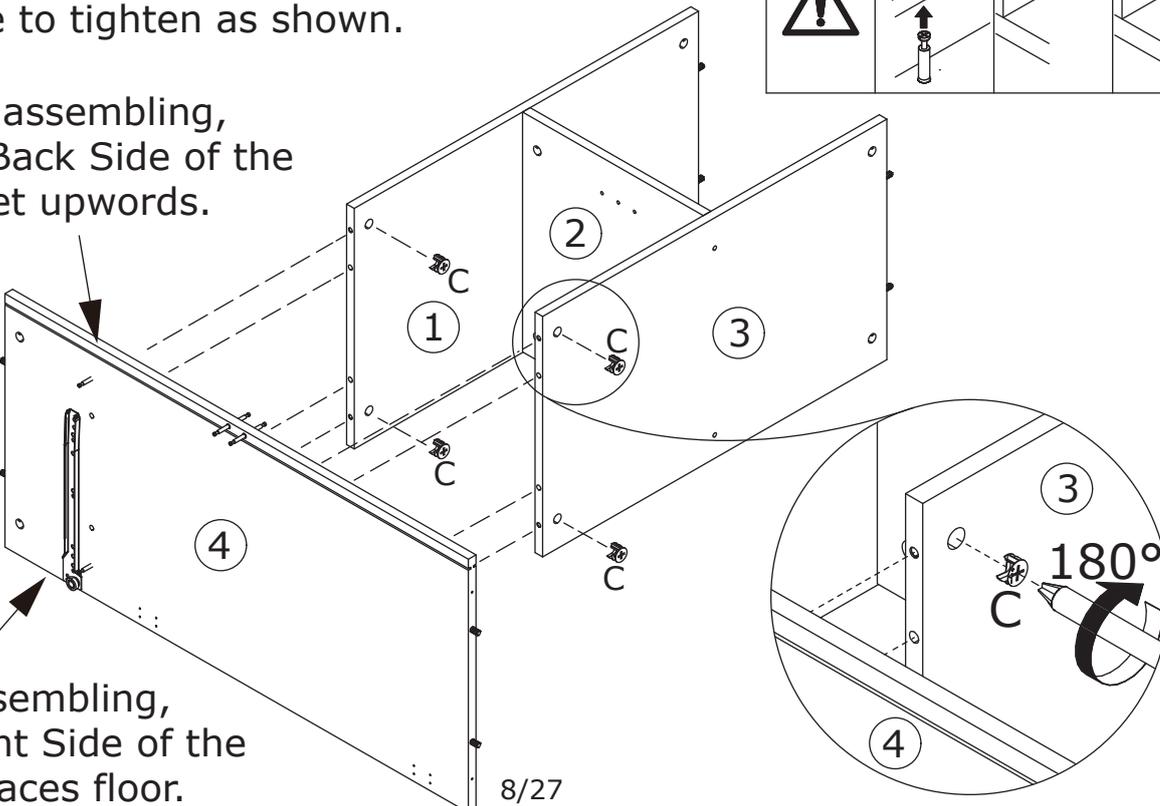



9

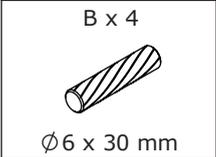


Insert wooden dowel(B) into board 5 as shown.

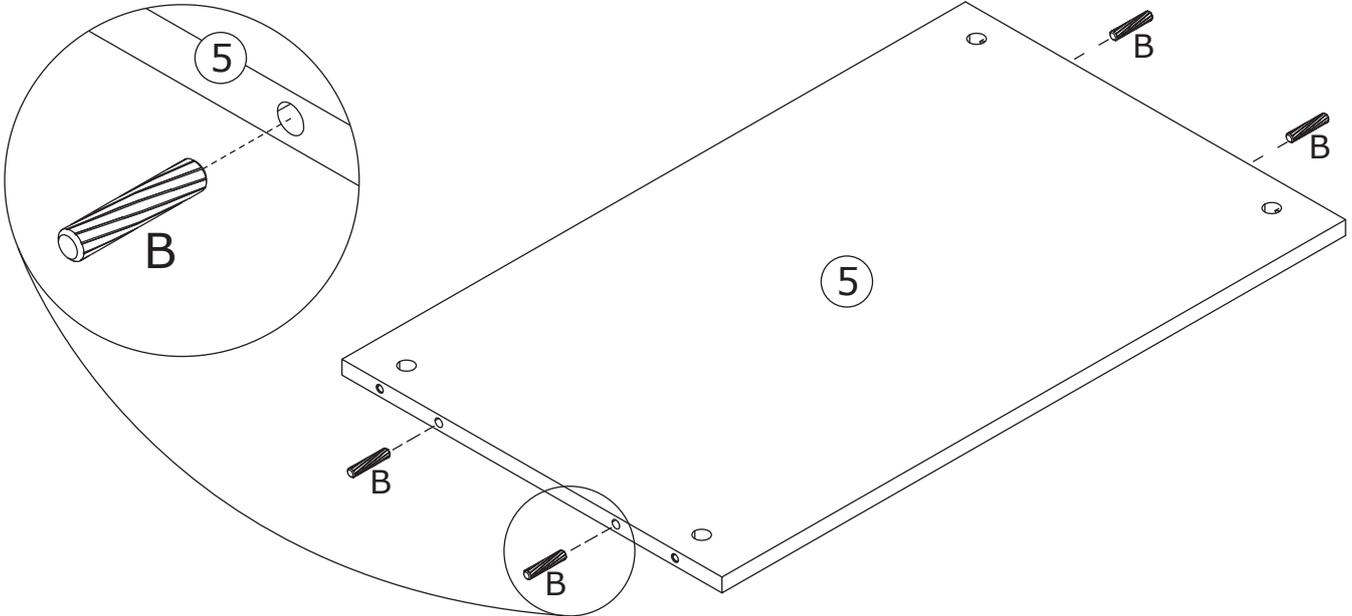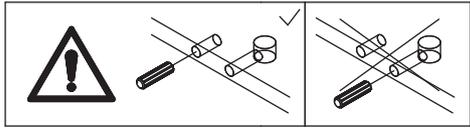


10

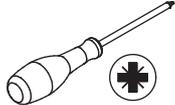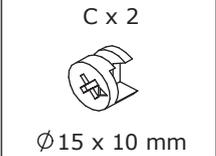

Attach board 5 to board 4 using wooden dowel(B), add cam lock(C) into board 5, then turn clockwise to tighten as shown.

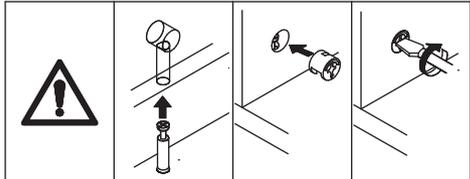

When assembling, keep Back Side of the Cabinet upwards.

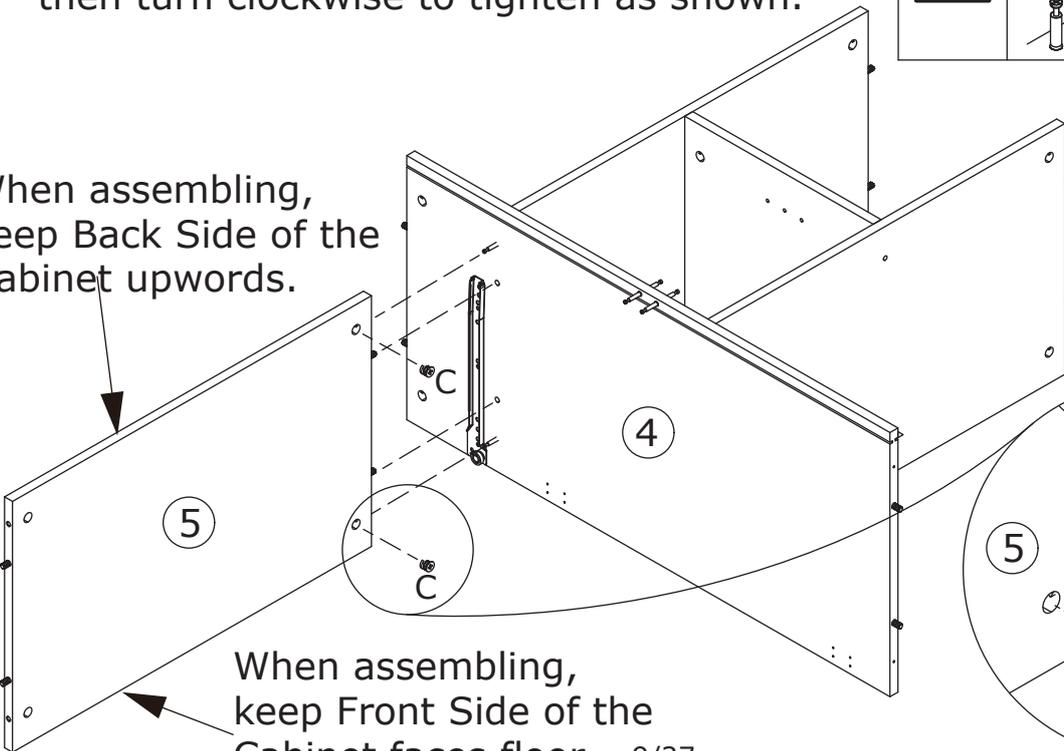


When assembling, keep Front Side of the Cabinet faces floor.

11

F x 1



Assembly the middle wooden foot with foot pad(F) as shown.

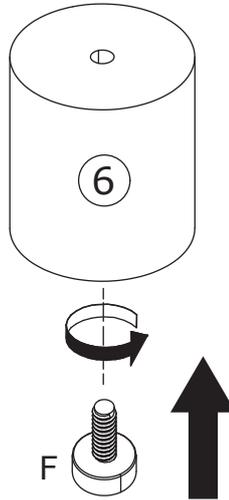



12

B x 4



Ø6 x 30 mm


Insert wooden dowel(B) into board 7 as shown.

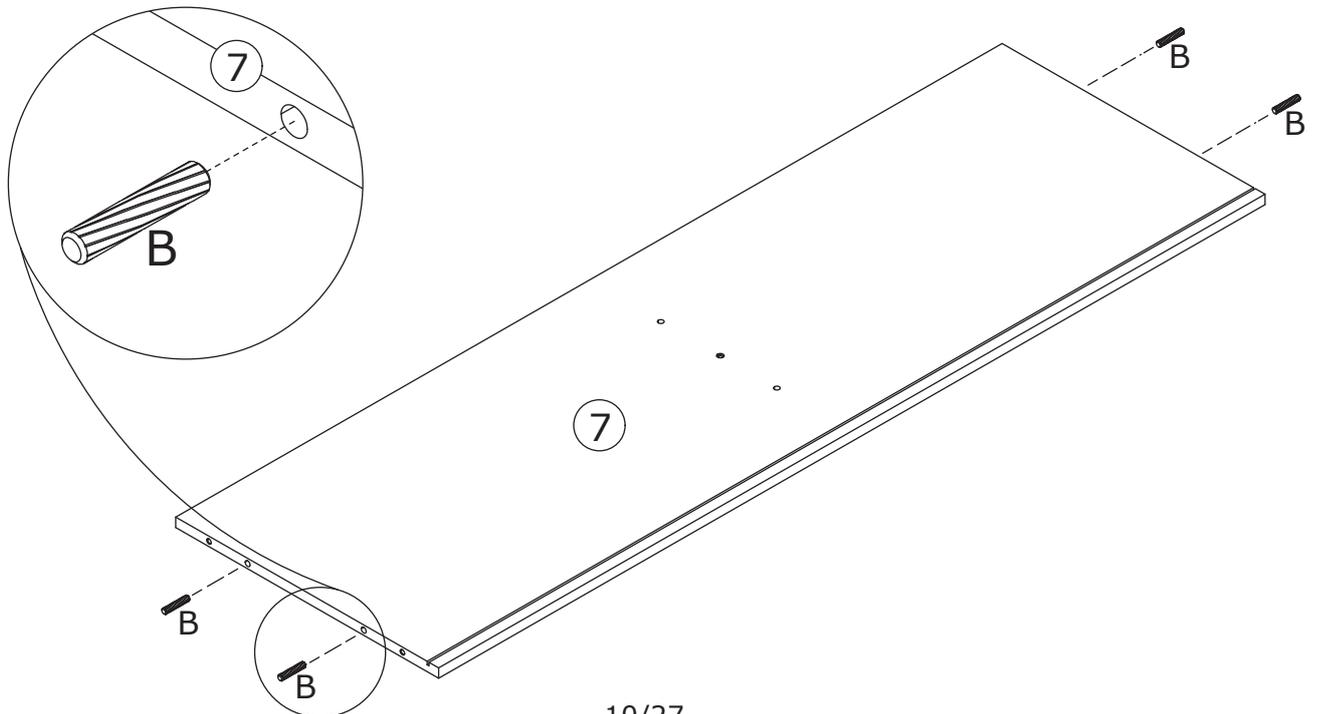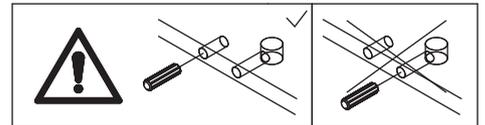

13




Fix the middle wooden foot to board 7 with screw(D) as shown.

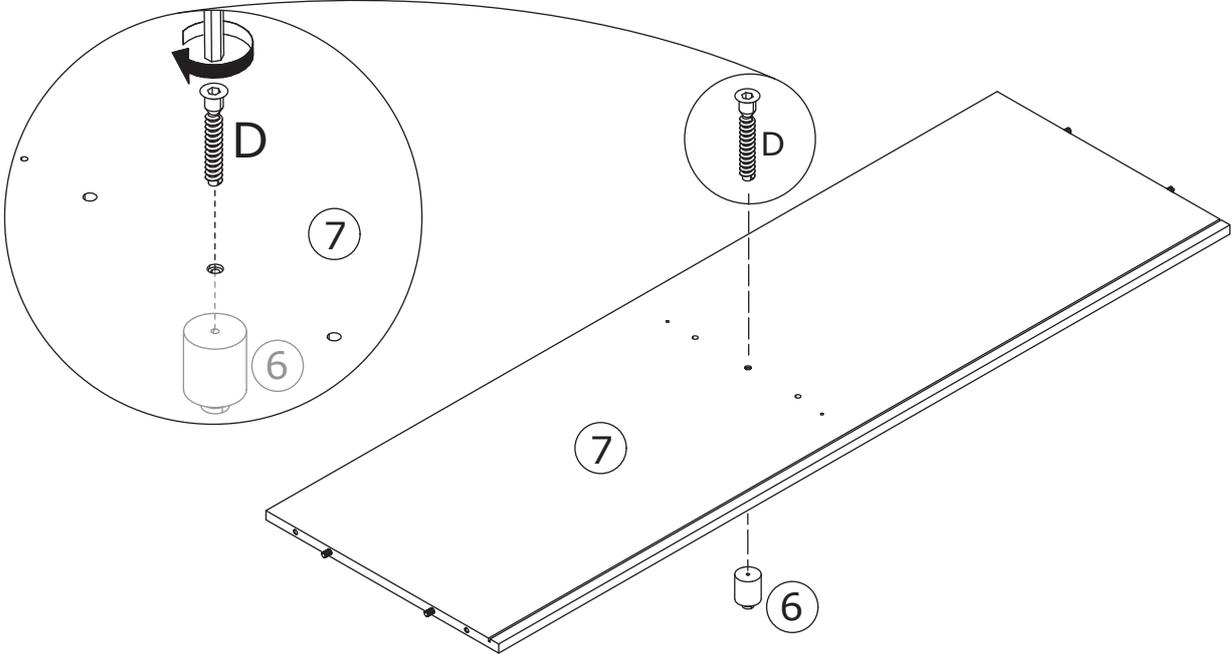


14





Connect board 7 to board 4, and fix with screw(D) as shown.

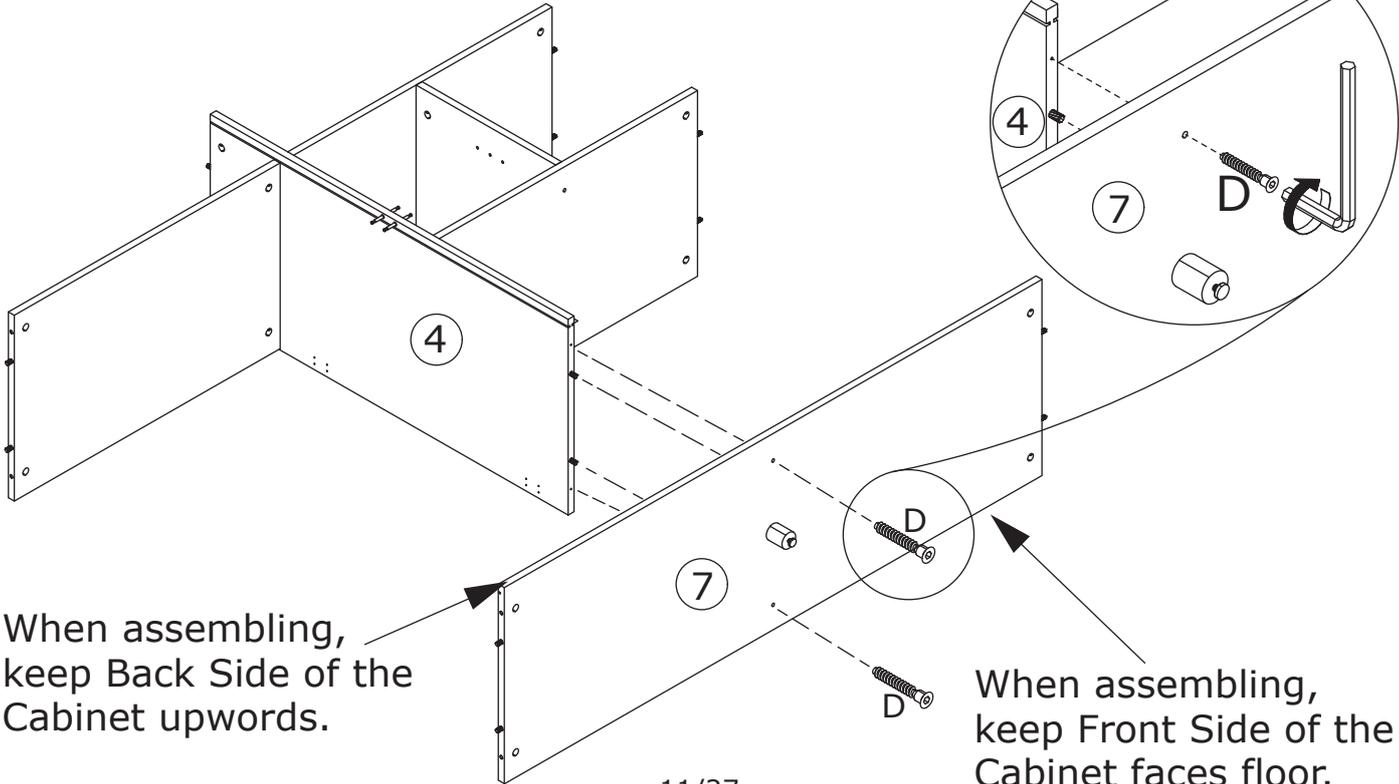

15


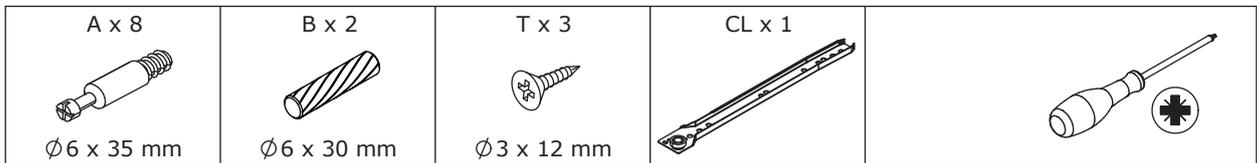


Screw eccentric rod(A) into board 8 as shown.  
Insert wooden dowel(B) into board 8 as shown.  
Fix rail(CL) to board 8 with screw(T) as shown.

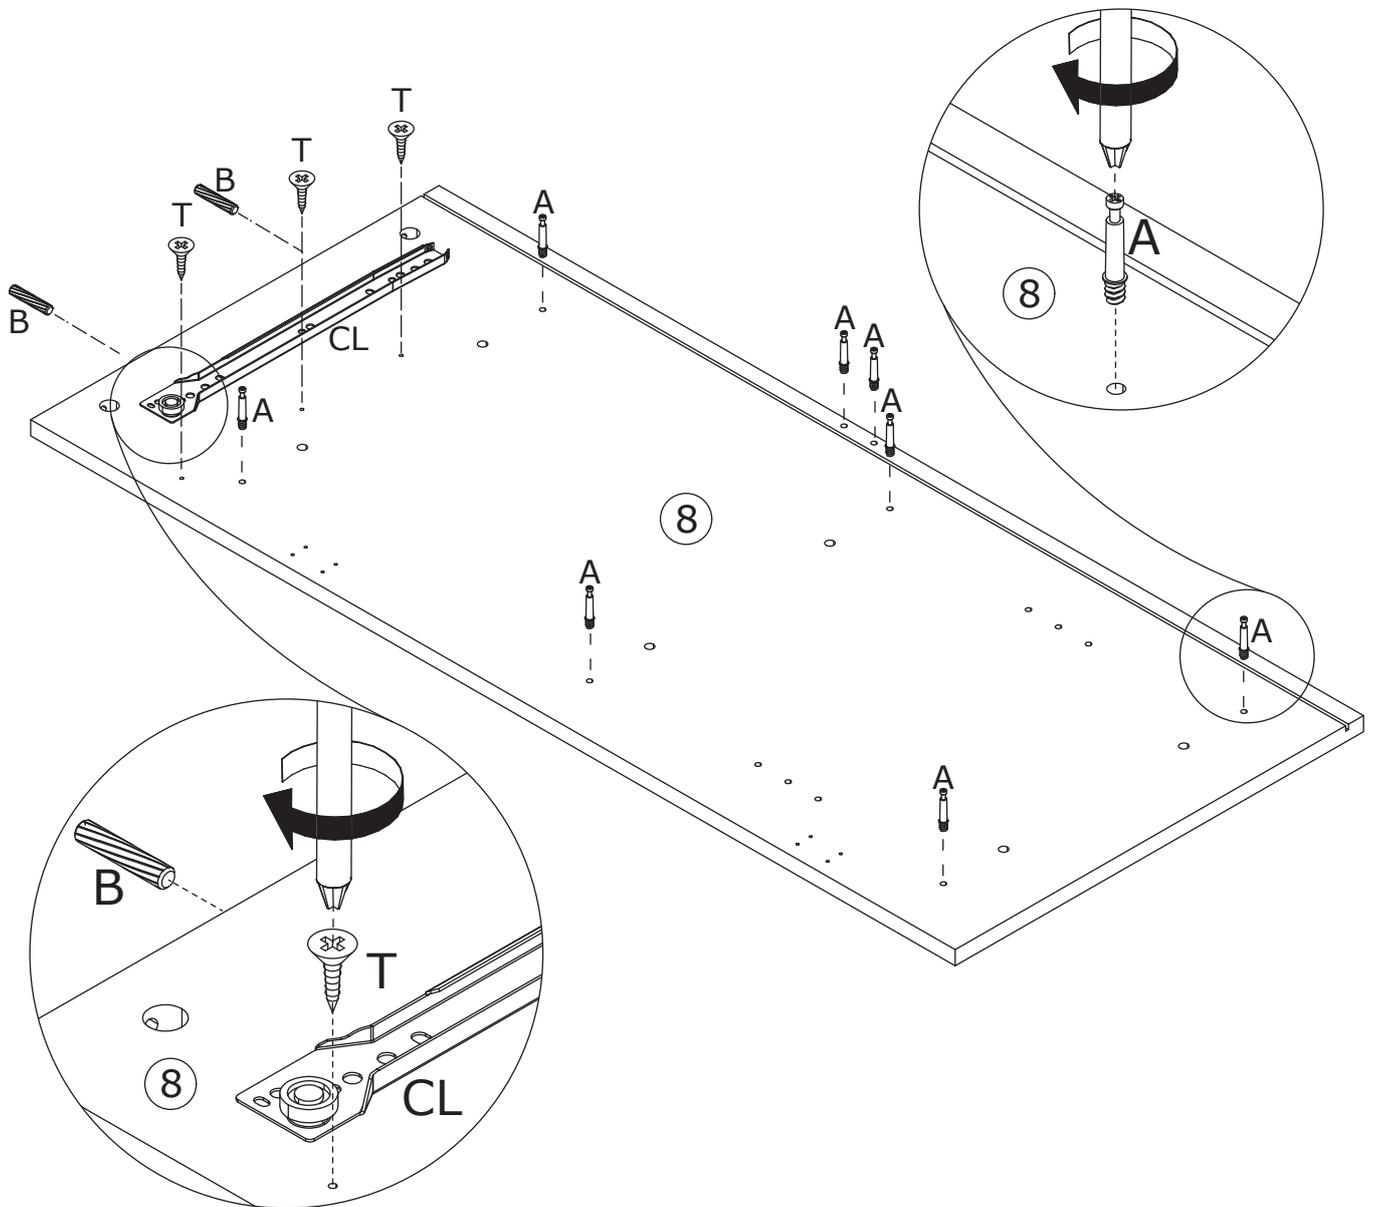
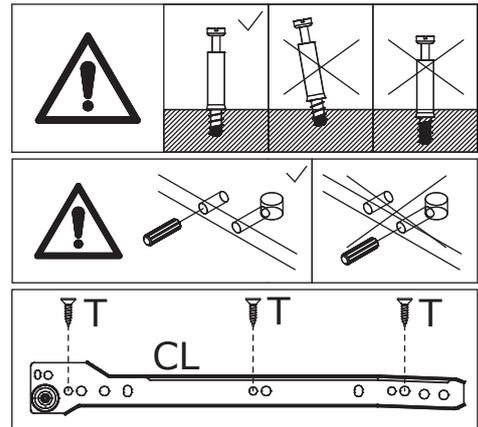






17

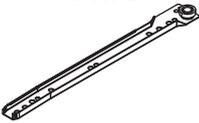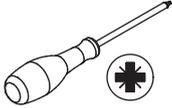A x 6  Ø6 x 35 mm	B x 2  Ø6 x 30 mm	T x 3  Ø3 x 12 mm	CR x 1 	
--	--	--	--	---

Screw eccentric rod(A) into board 10 as shown.  
Insert wooden dowel(B) into board 10 as shown.  
Fix rail(CR) to board 10 with screw(T) as shown.

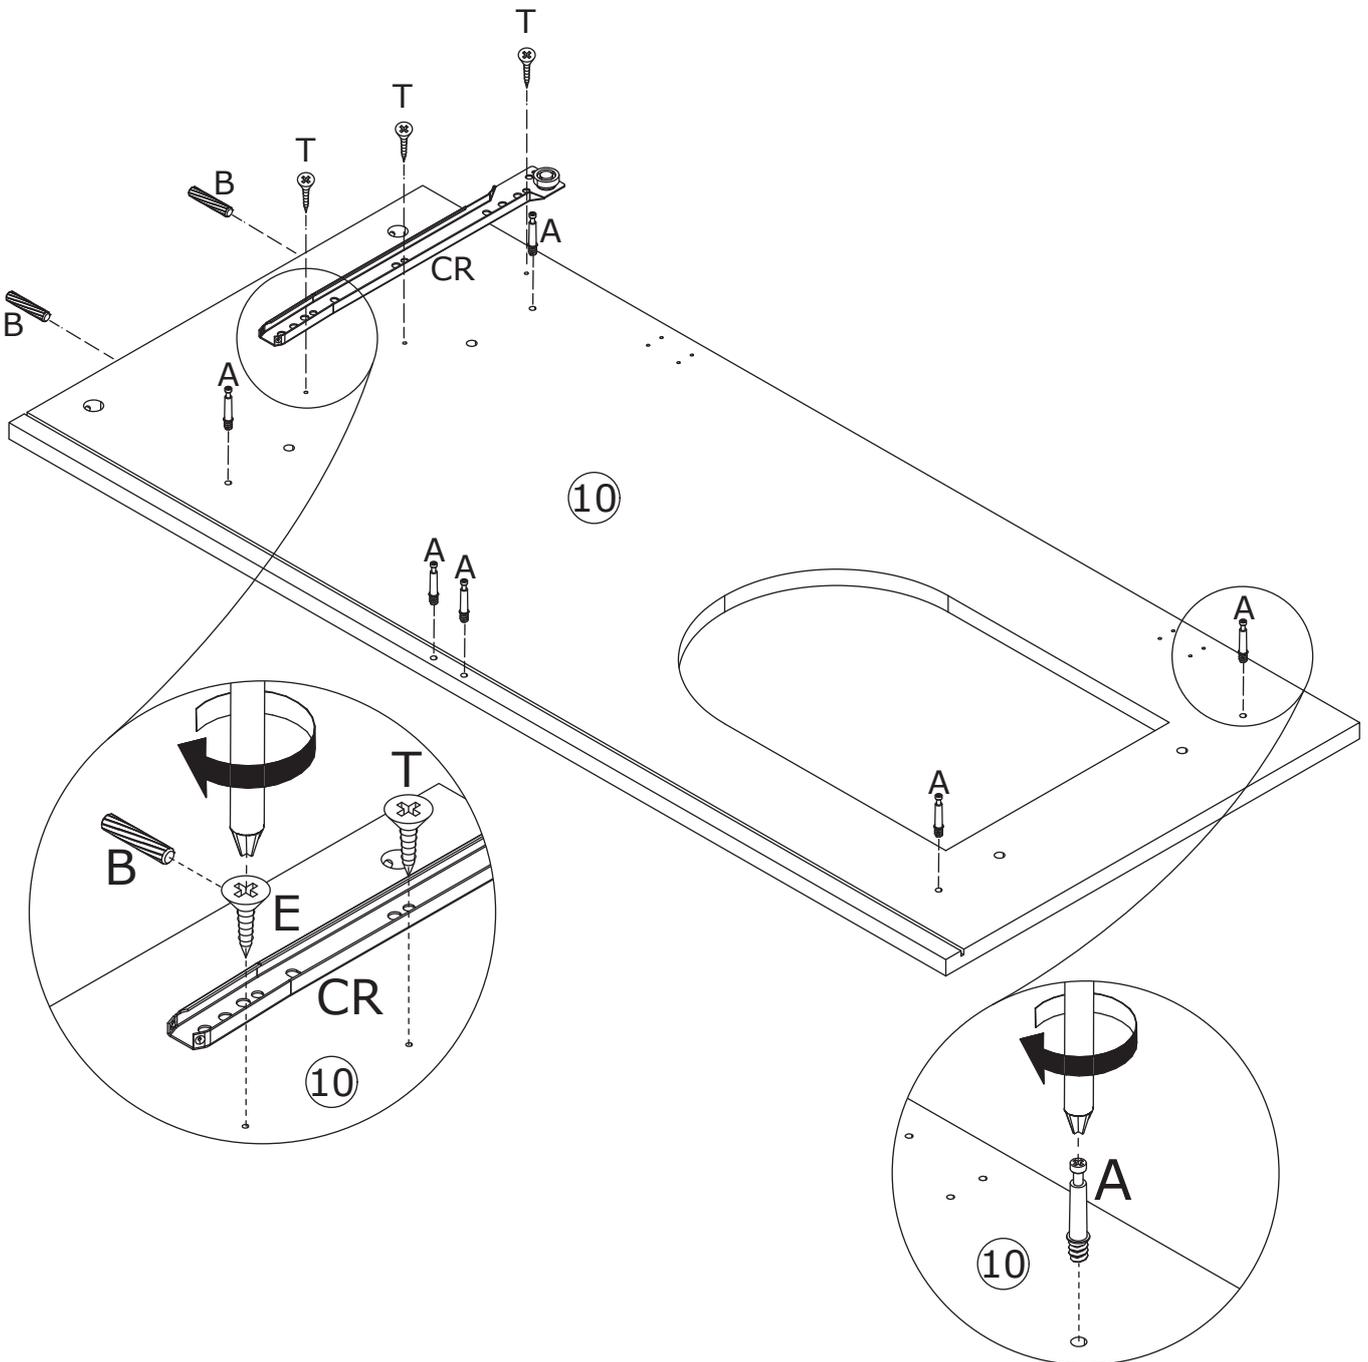
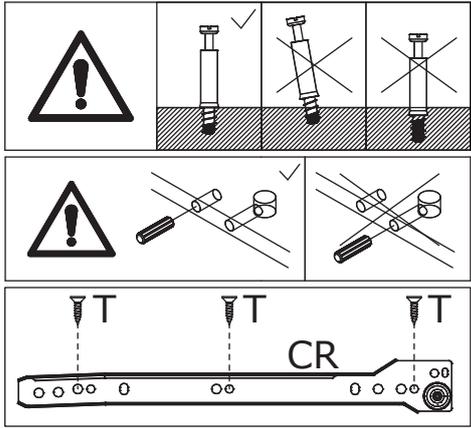


18

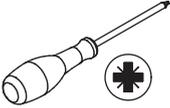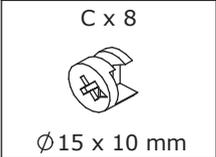


Connect board 9 to board 4, add cam lock(C) into board 9, then turn clockwise to tighten as shown.


Attach board 10 to board 5, 7 and 9, add cam lock(C) into, then turn clockwise to tighten as shown.

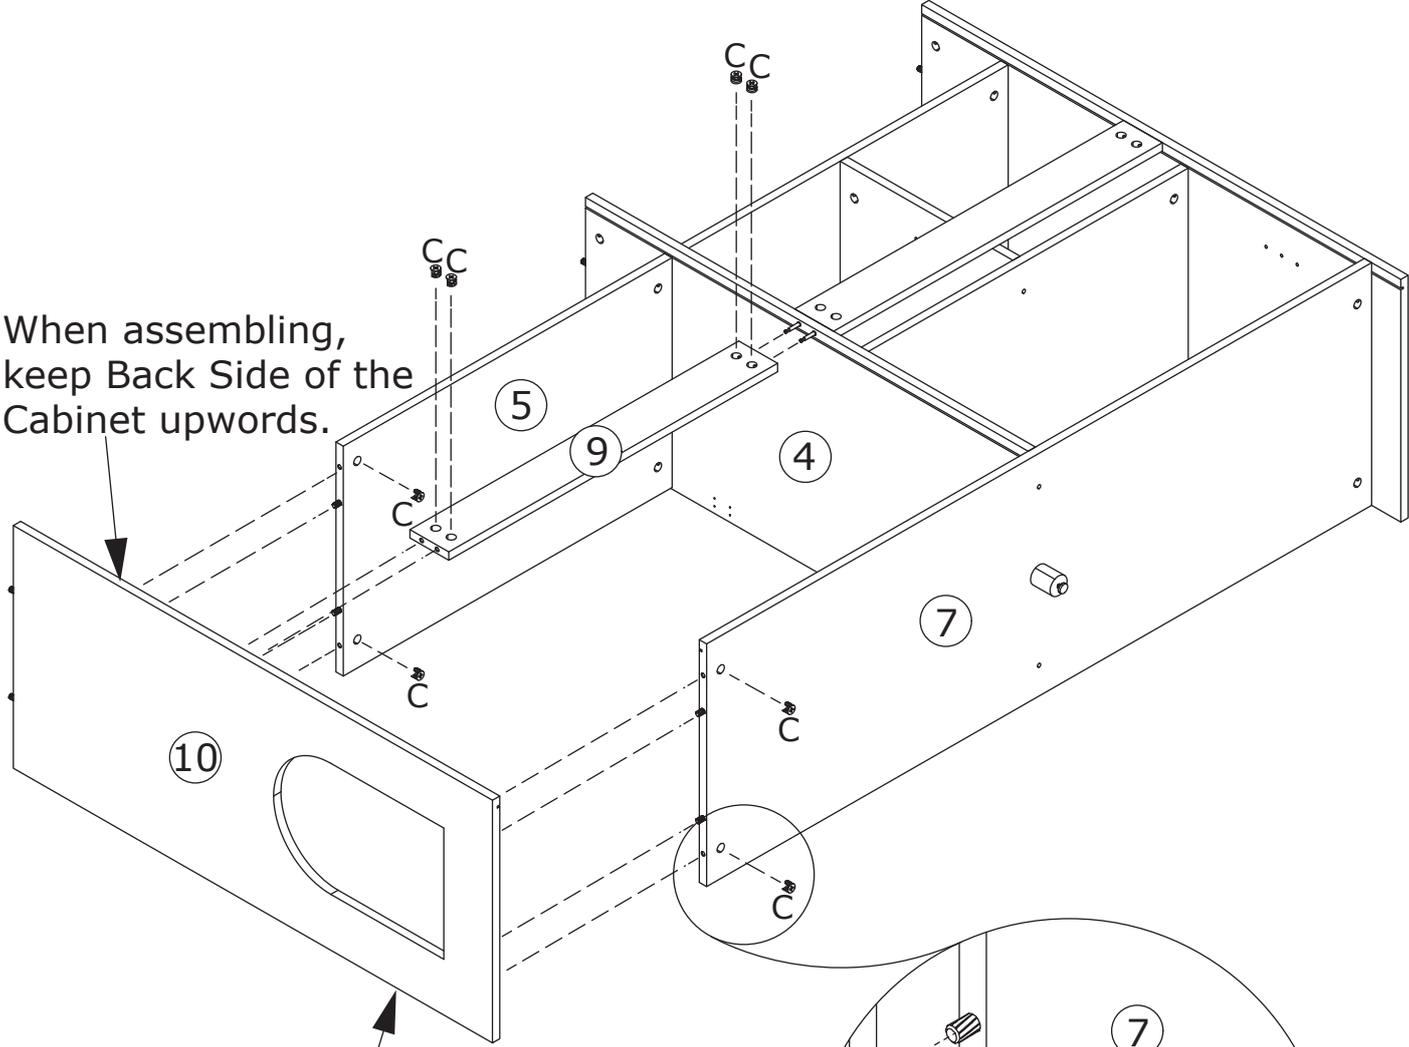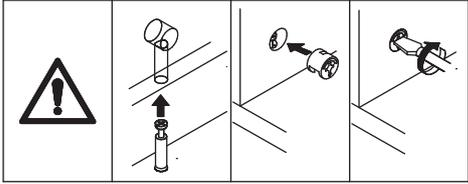


When assembling, keep Front Side of the Cabinet faces floor.

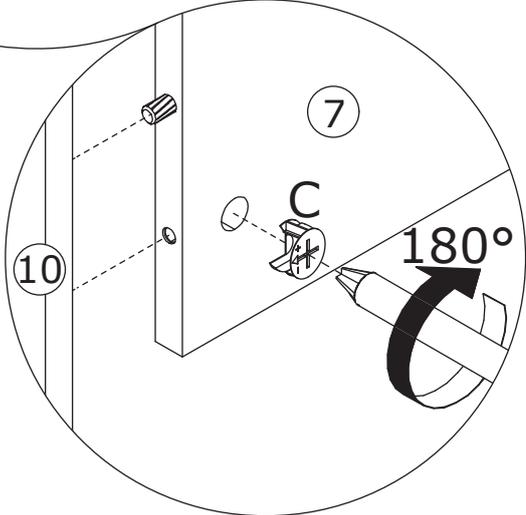


19

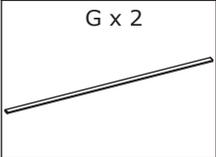



Insert back board 11 along available grooves as shown.

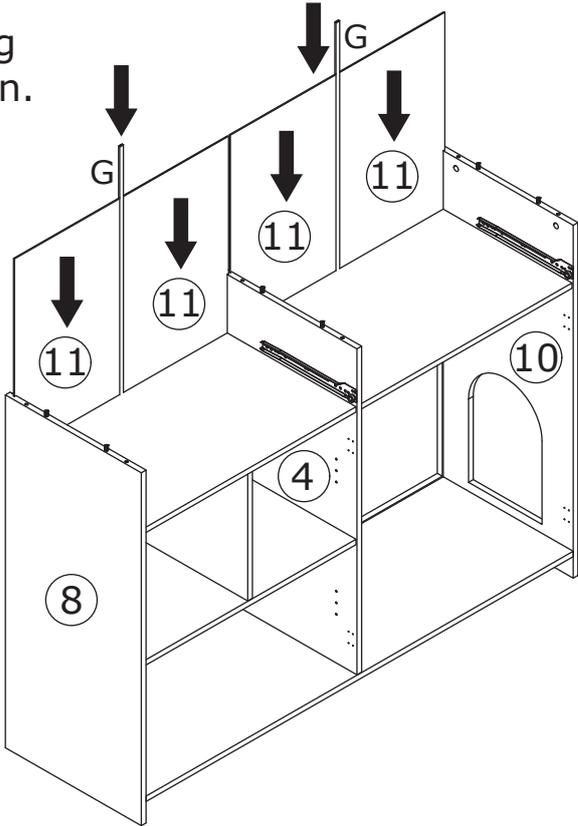



20

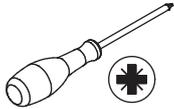




Screw eccentric rod(A) into board 12 with a screwdriver as shown.

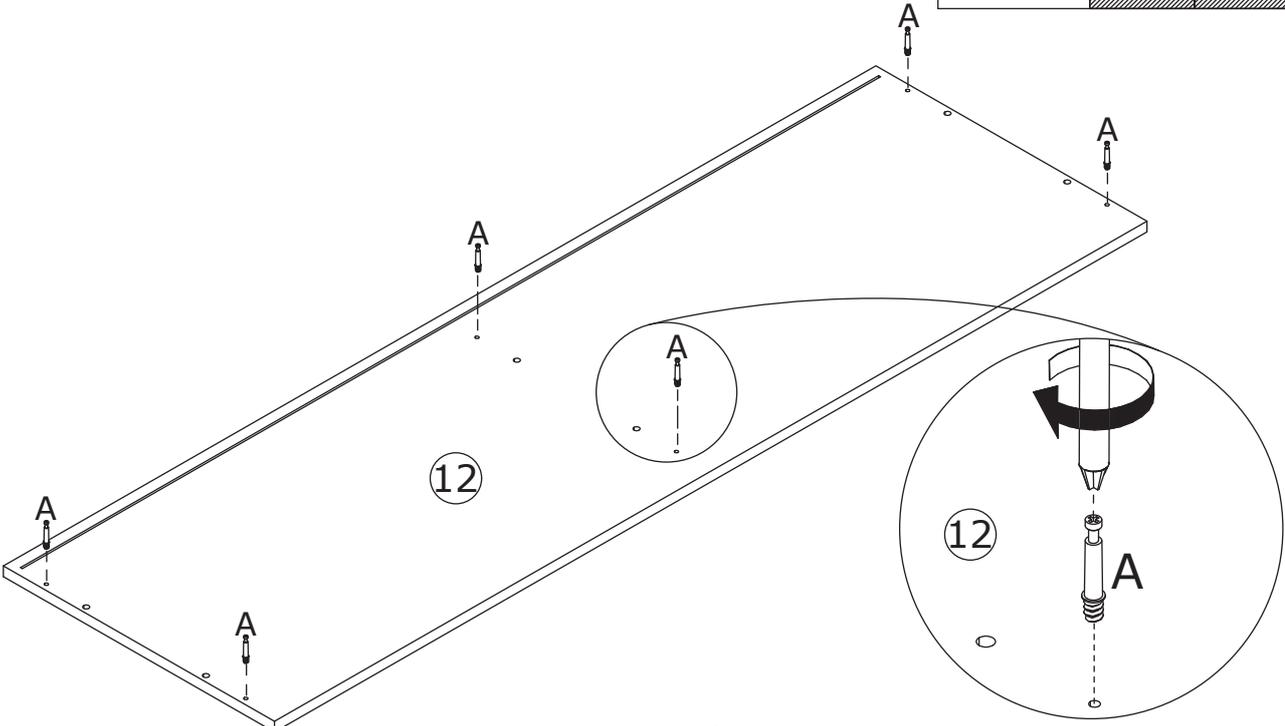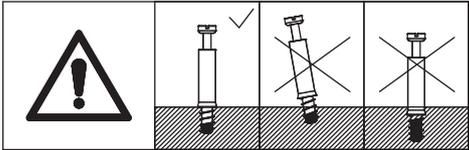




# 21

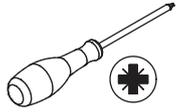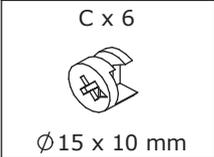




Connect board 12 to the top, add cam lock(C) into board 8,4 and 10, then turn clockwise to tighten as shown.

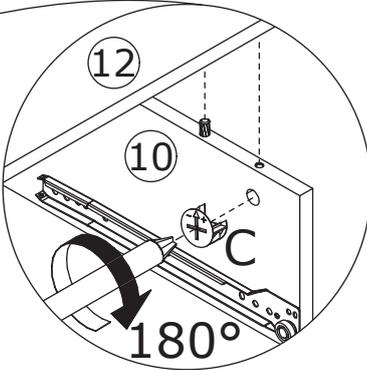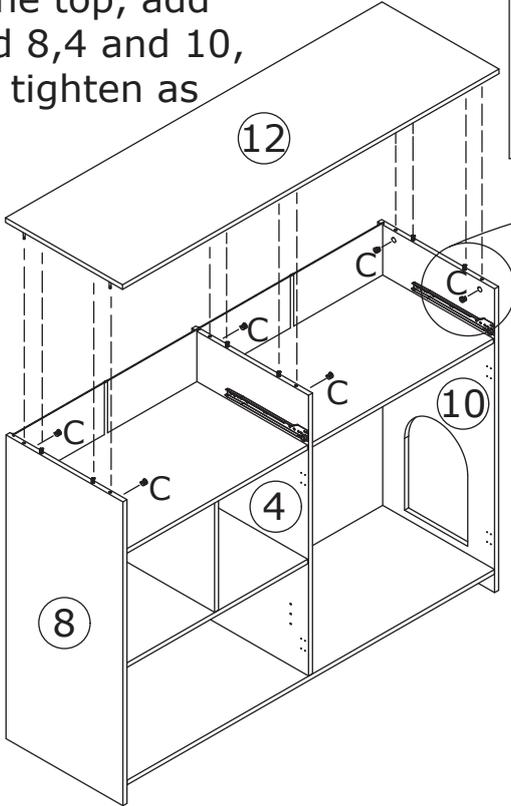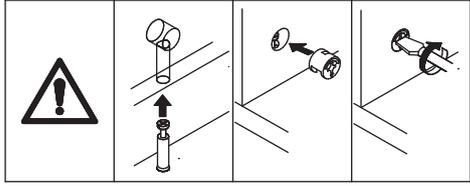


# 22

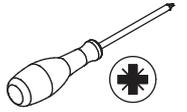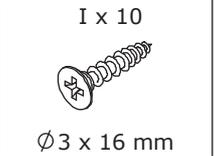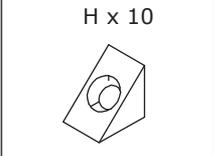


Insert buckle(H) into back slots and fix with screw(I) as shown.

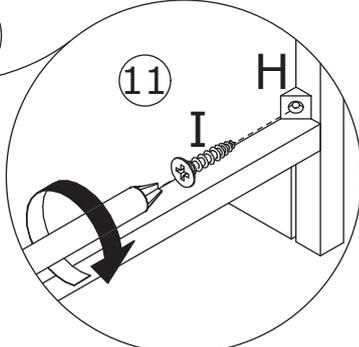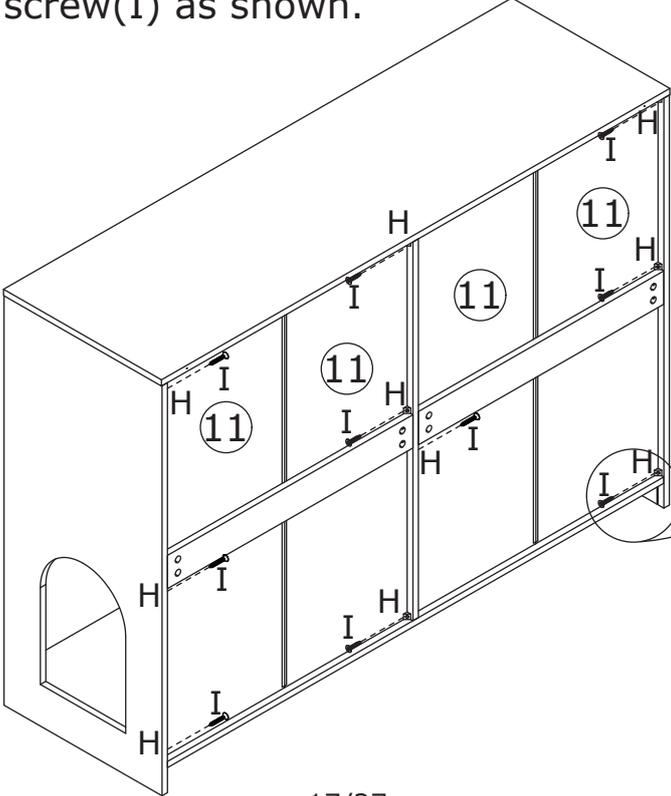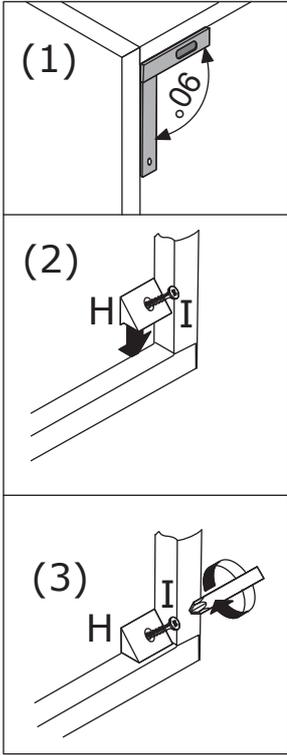


23

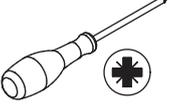E x 8  Ø4 x 14 mm	J x 4 	K x 2 	L x 2  Ø4 x 12 mm	
--	--	--	---	---


Fix hinge(J) to door 13 with screw(E) as shown.  
Fix knob(K) to door 13 with screw(L) as shown.

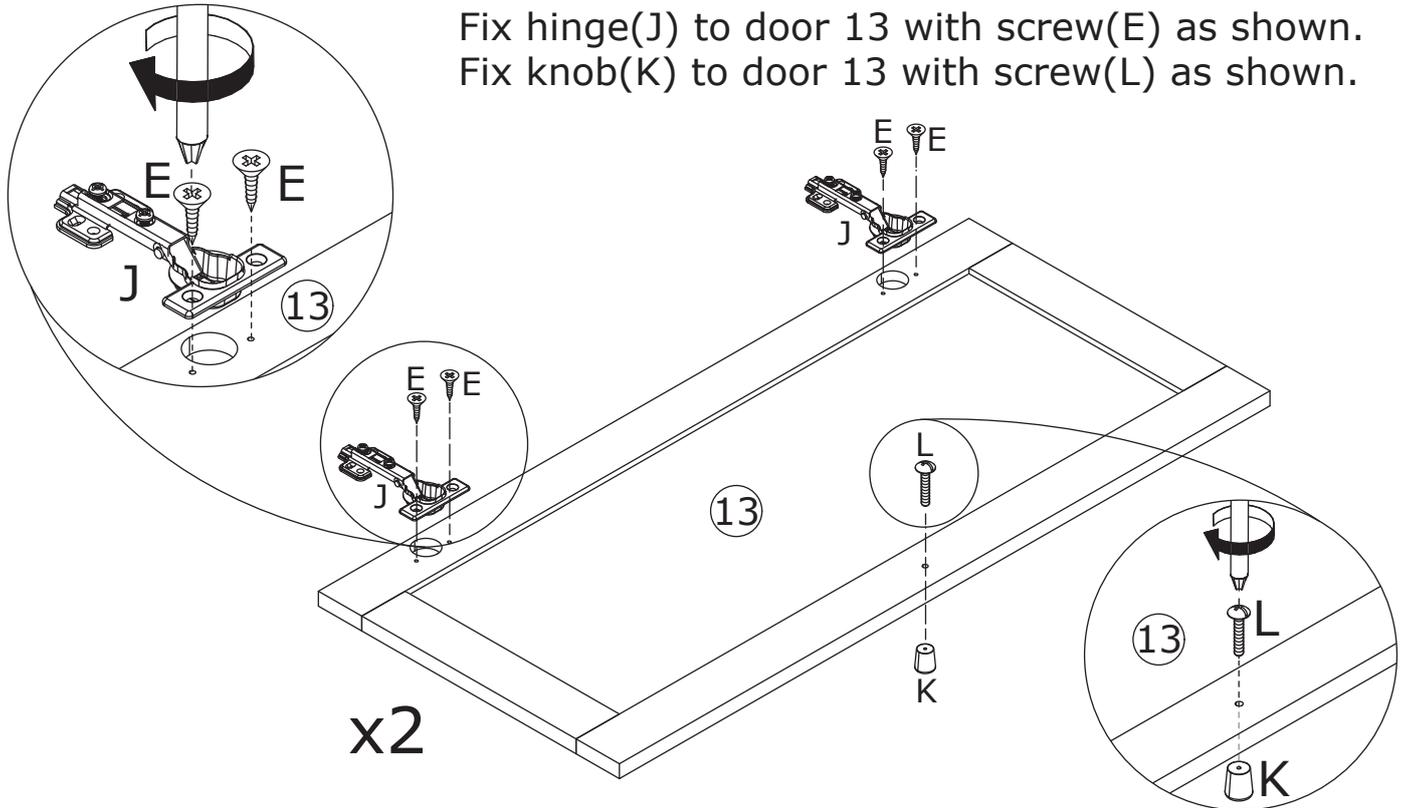


24

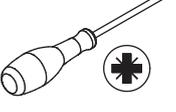E x 16  Ø4 x 14 mm	
---	---


Assemble door 13 to board 8, and 10 by fixing hinge with screw(E) as shown.

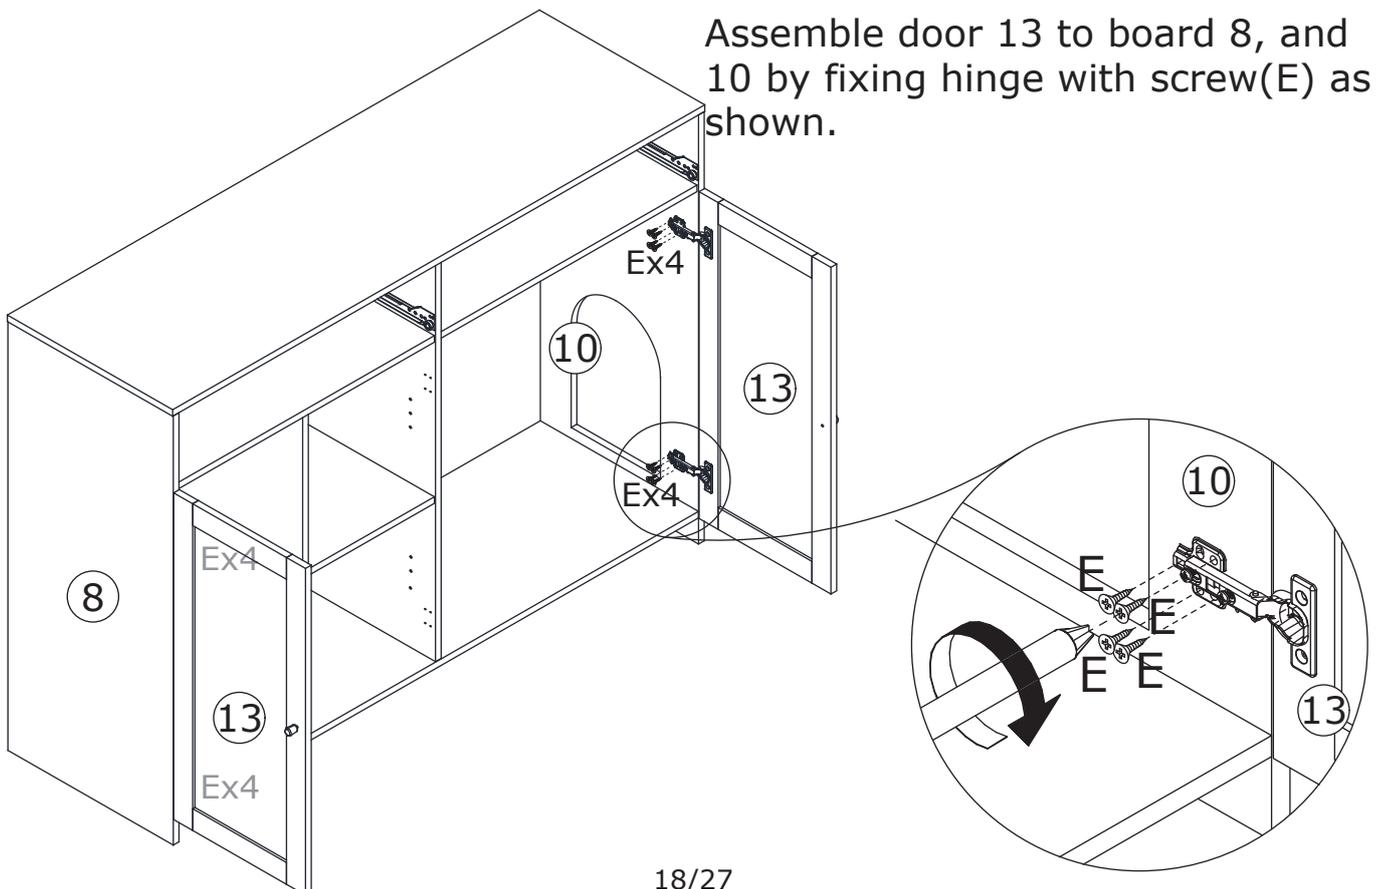


25
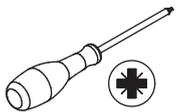
<p>E x 8</p>  <p>Ø 4 x 14 mm</p>	<p>U x 4</p> 	<p>K x 2</p> 	<p>L x 2</p>  <p>Ø 4 x 12 mm</p>	
---	--	--	--	---


Fix hinge(U) to door 13 with screw(E) as shown.  
Fix knob(K) to door 13 with screw(L) as shown.

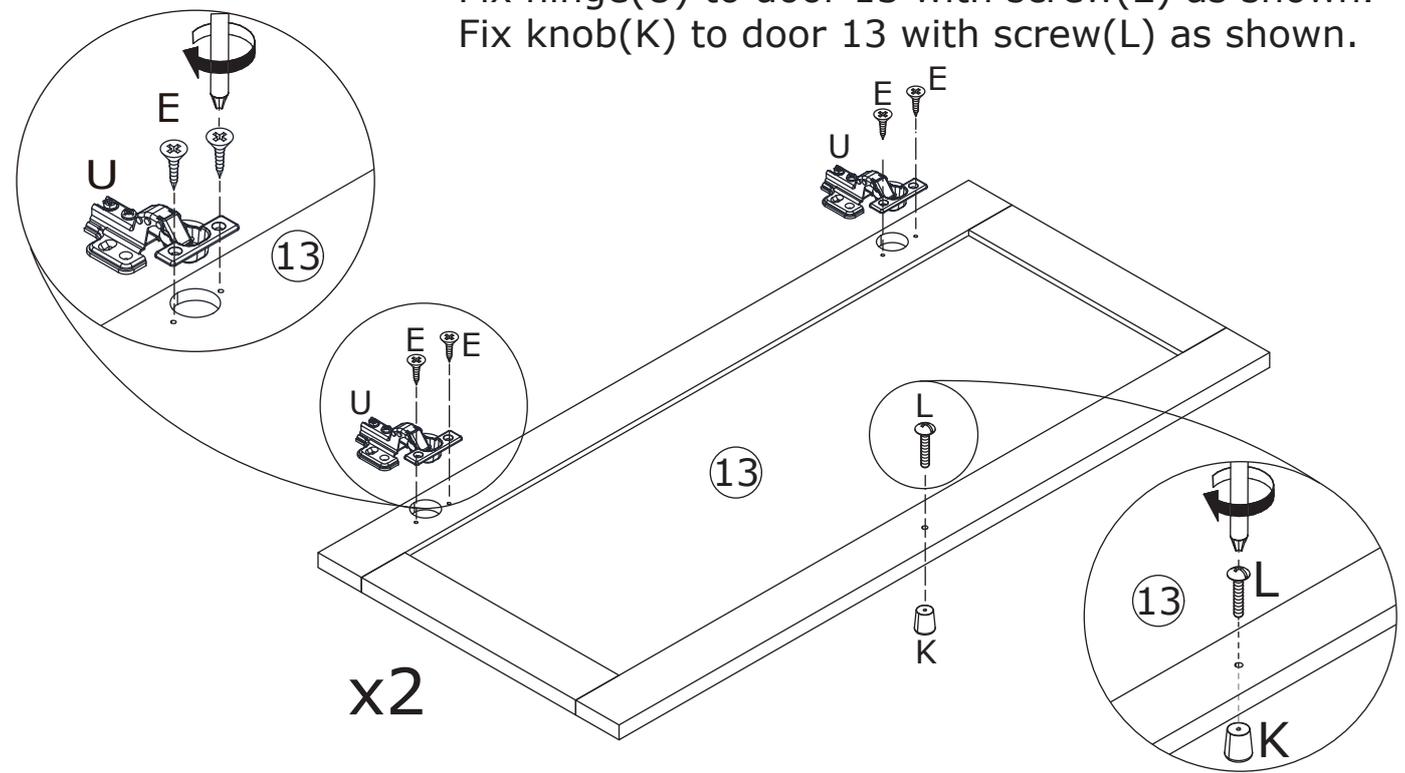

26
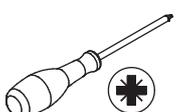
<p>E x 16</p>  <p>Ø 4 x 14 mm</p>	
--	---

Assemble door 13 to board 4 by fixing hinge with screw(E) as shown.

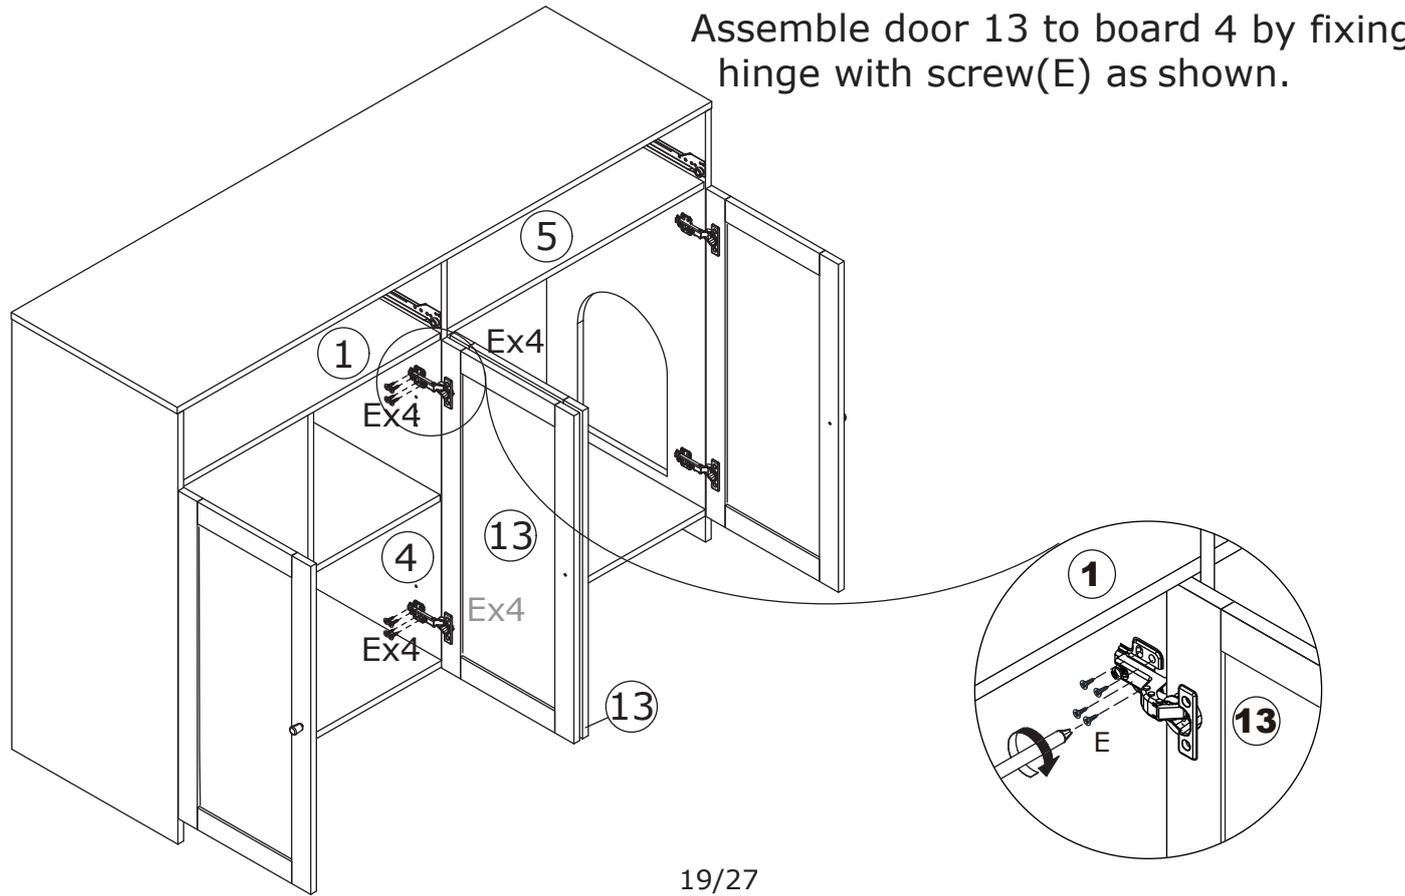


27

M x 8



Insert the metal board support(M)  
into board 8 and 4 as shown.

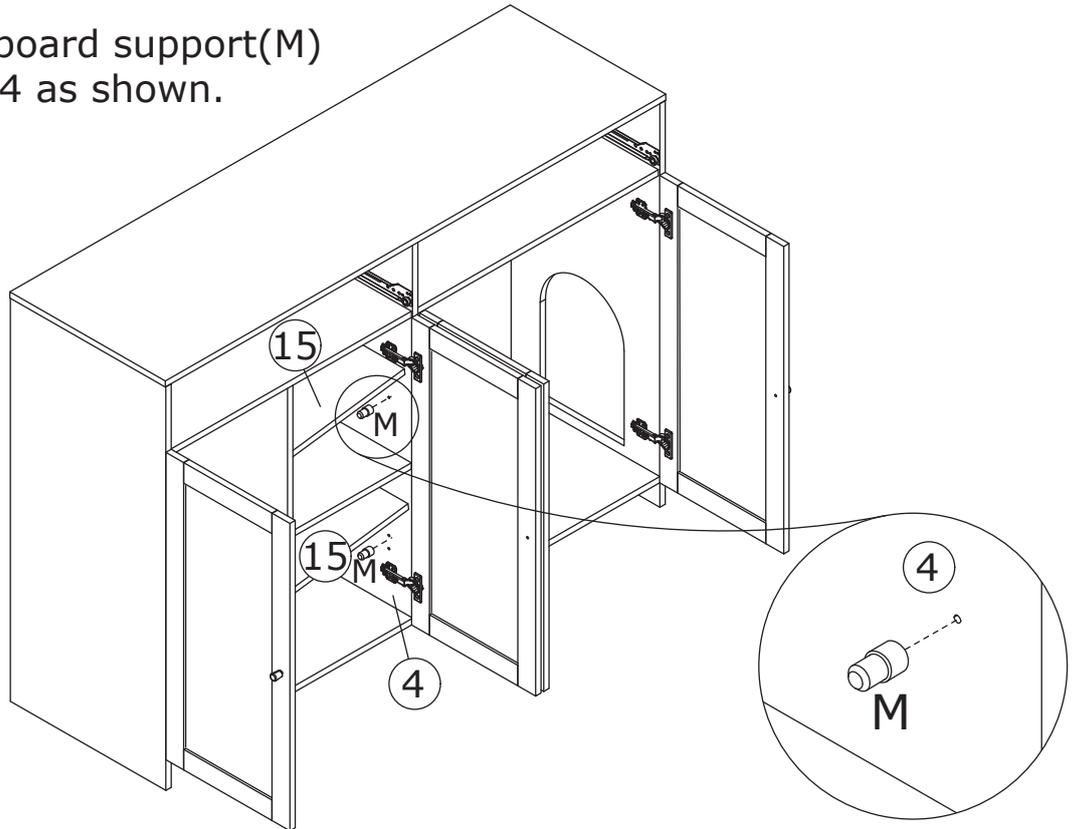



28

B x 2




Ø 6 x 30 mm

Insert wooden dowel(B)  
into board 16 as shown.

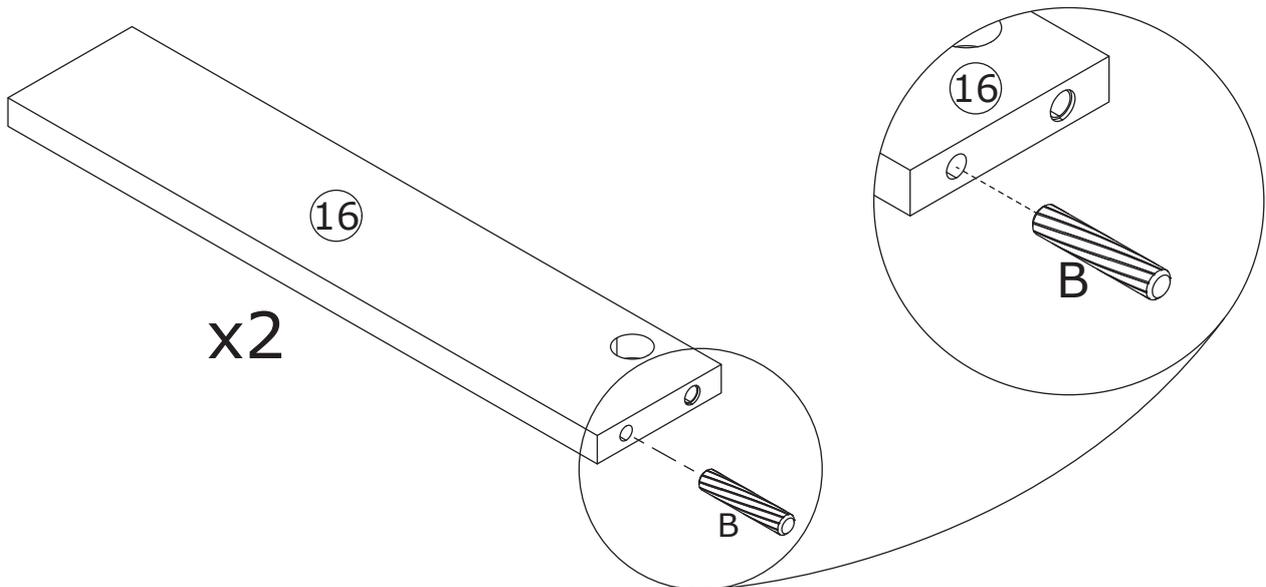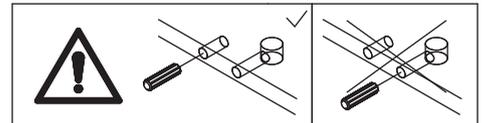


29

N x 12  
Ø4 x 35 mm

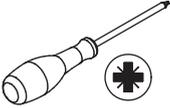


Fix board 16,17,18 to board 19 with screw(N) as shown.



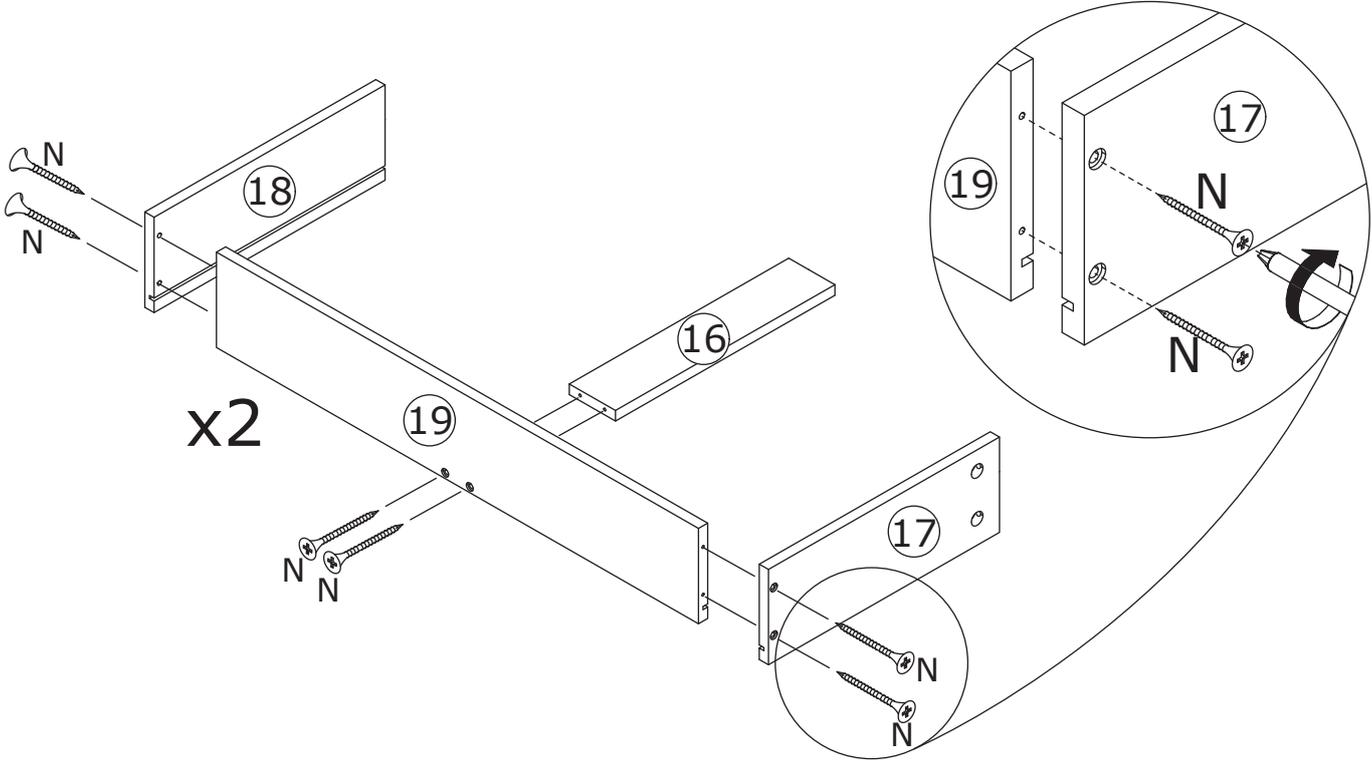


30



Insert drawer back board 20 along available grooves as shown.

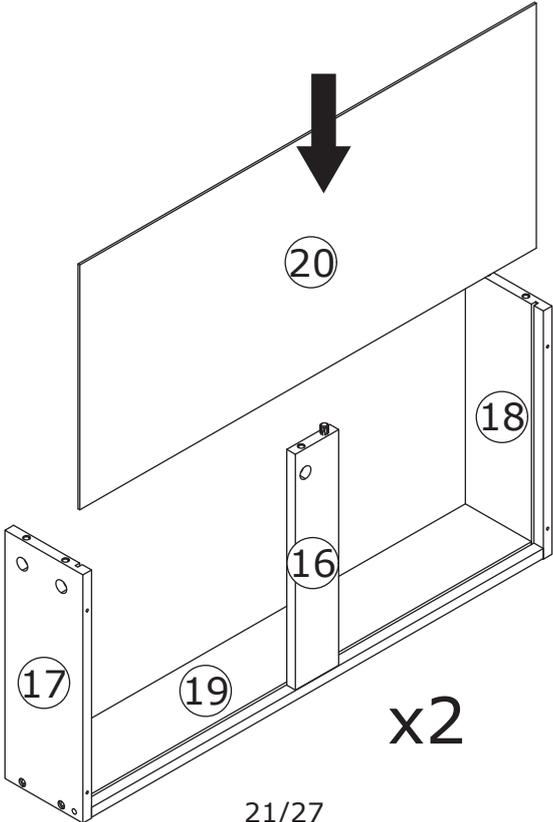


# 31

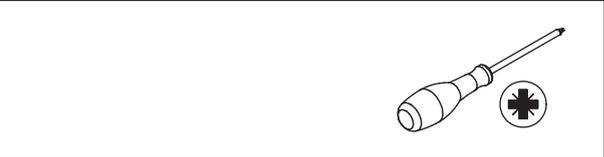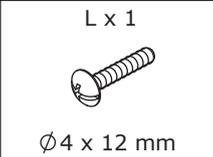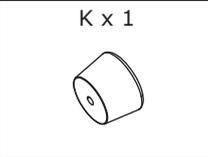



Screw eccentric rod(A) into board 21 with a screwdriver as shown.  
Fix knob(K) to board 21 with screw(L) as shown.

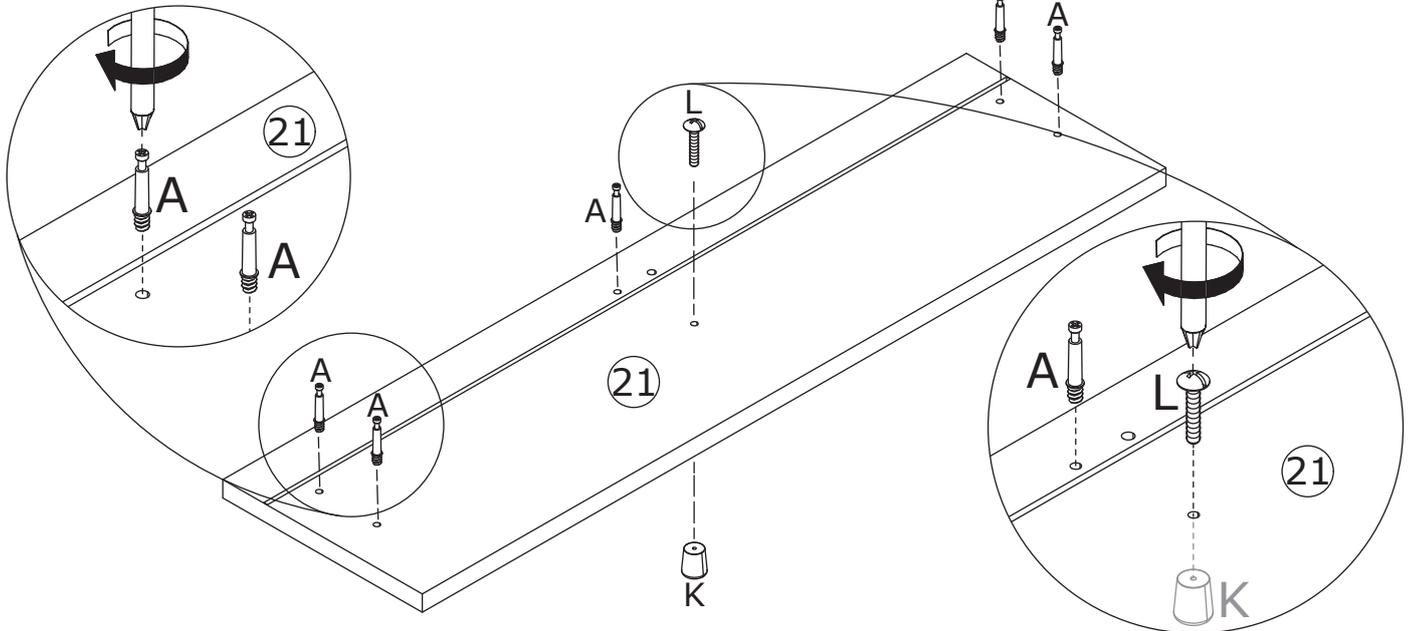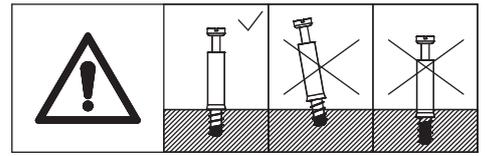


# 32

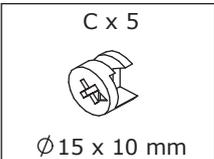


Connect board 21 to the component, add cam lock(C) into board 16,17 and 18, then turn clockwise to tighten as shown.

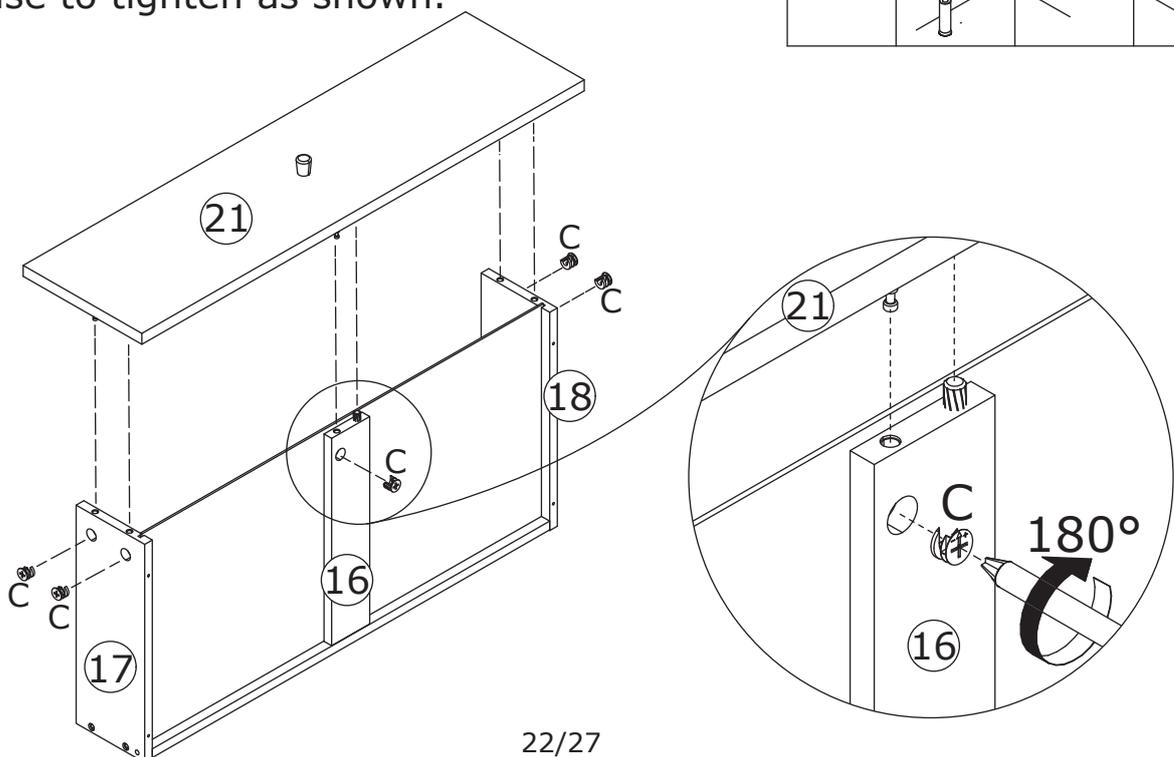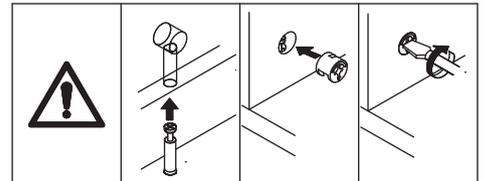


# 33

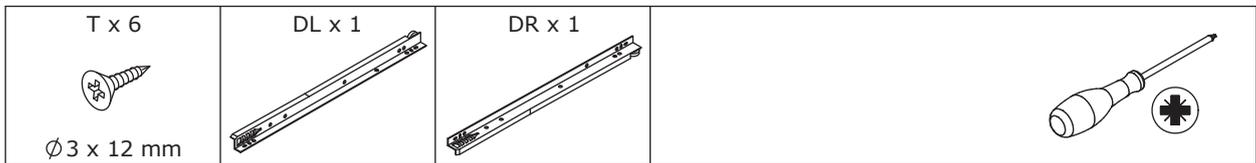



Fix runner(DL) and (DR) to board 17 and 18 with screw(T) as shown.

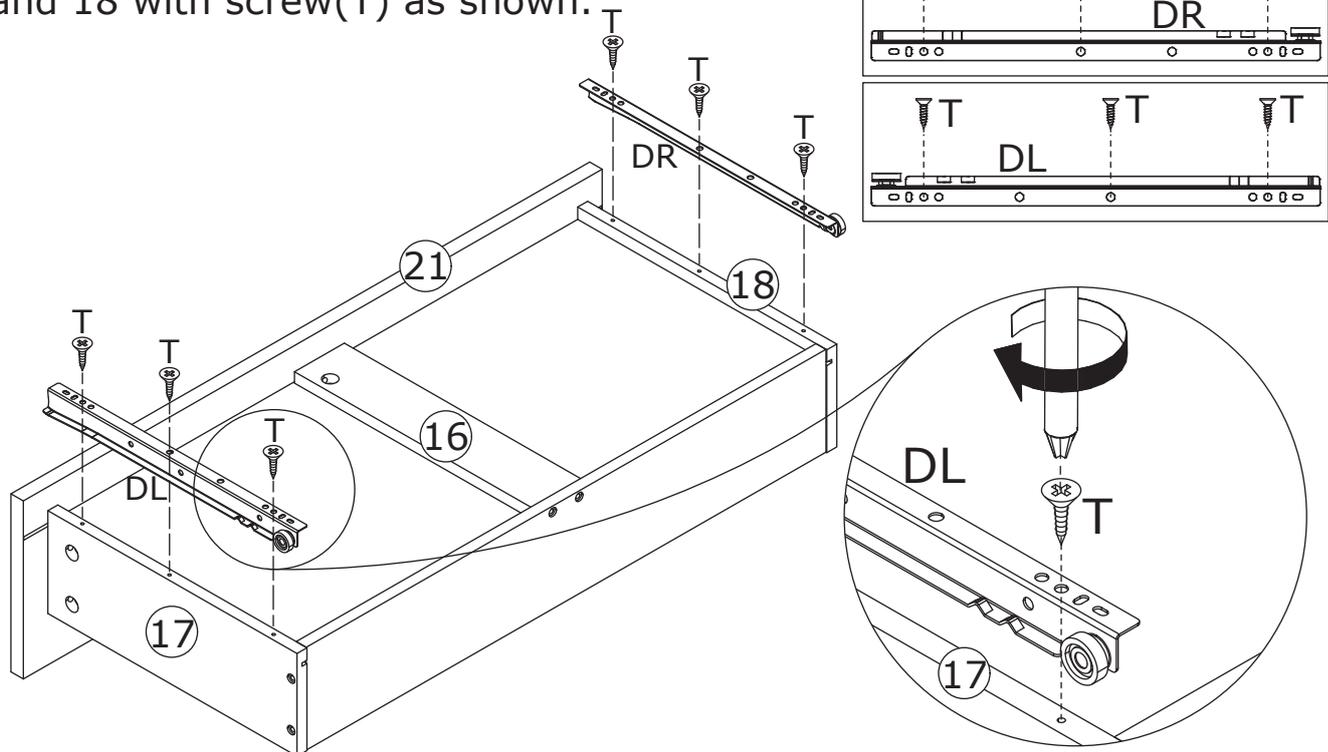



# 34

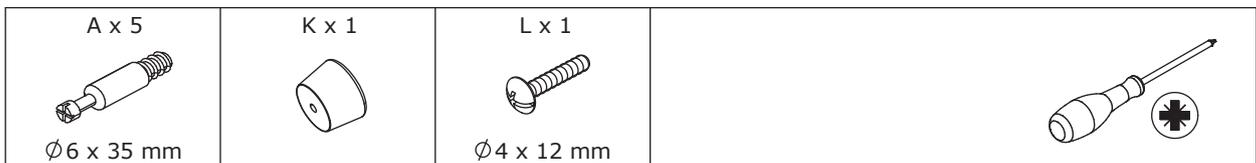




Screw eccentric rod(A) into board 22 with a screwdriver as shown.  
Fix knob(K) to board 22 with screw(L) as shown.

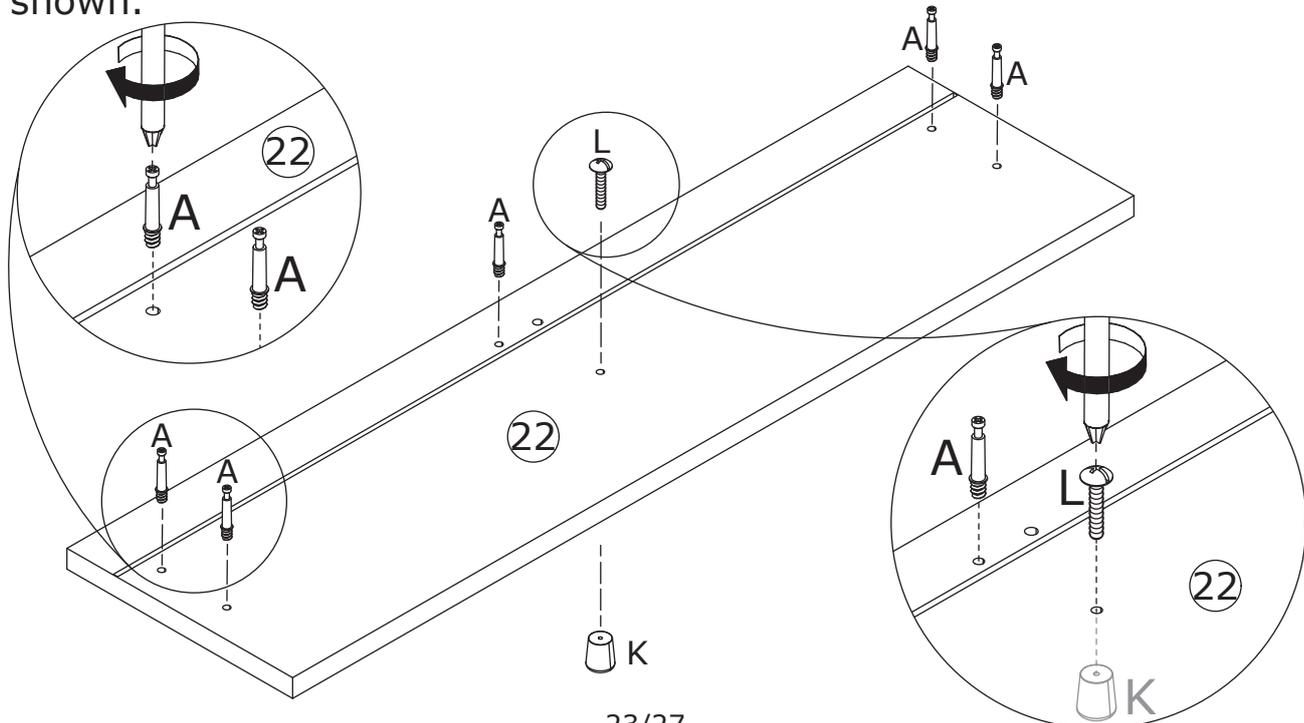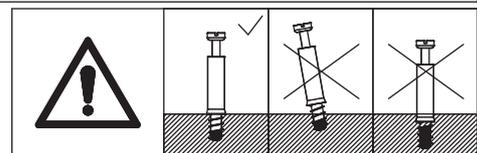





# 35

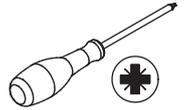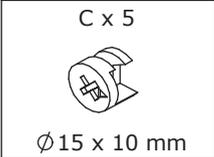




Connect board 21 to the component, add cam lock(C) into board 16,17 and 18, then turn clockwise to tighten as shown.

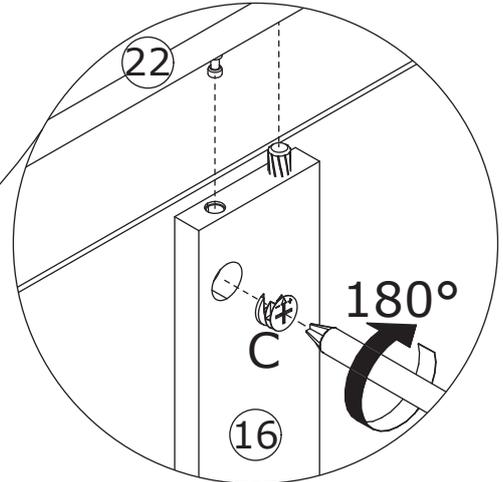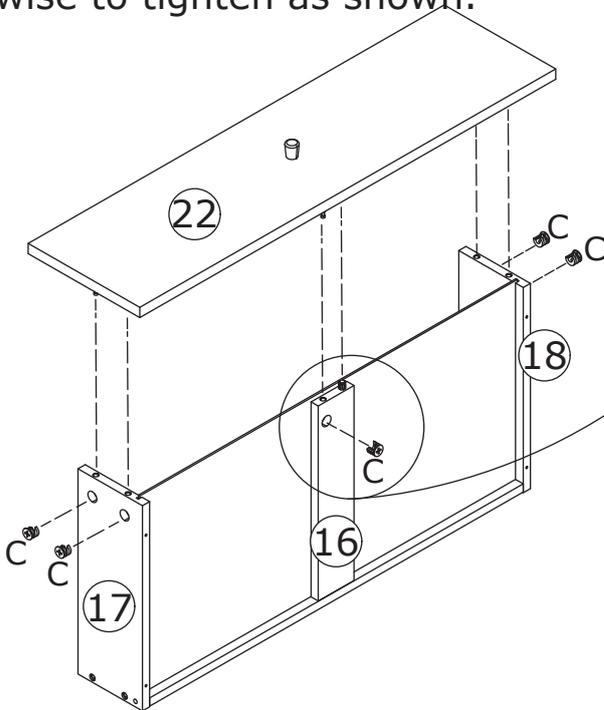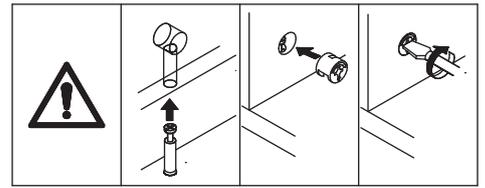


# 36

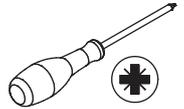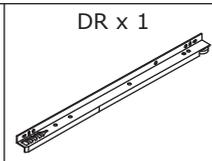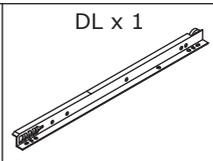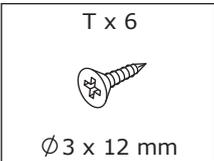


Fix runner(DL) and (DR) to board 17 and 18 with screw(T) as shown.

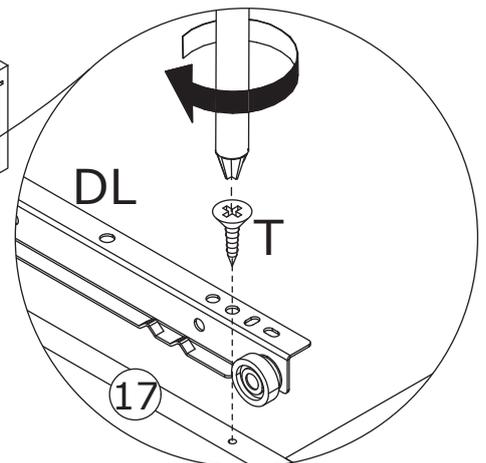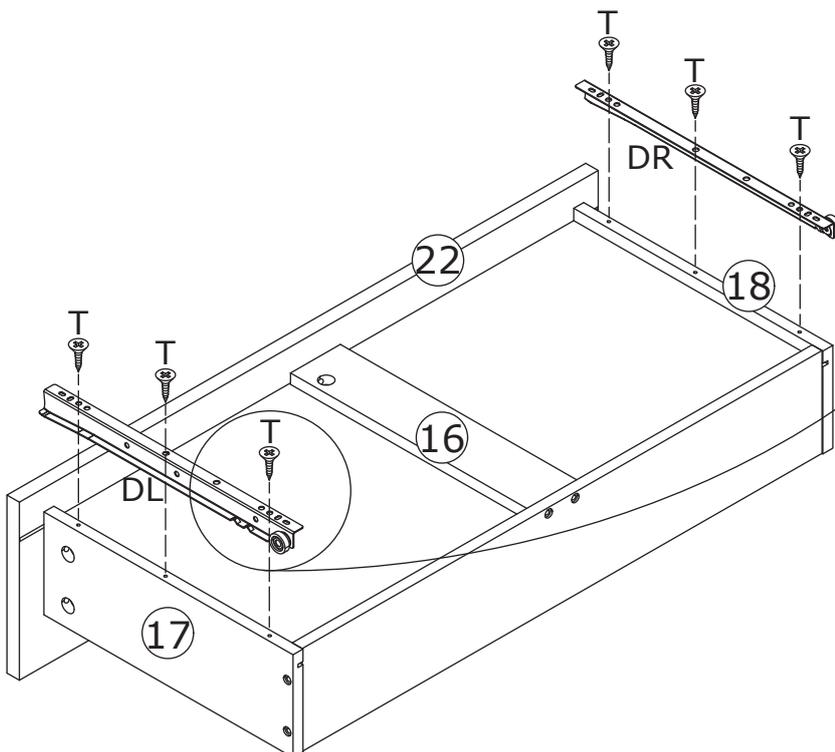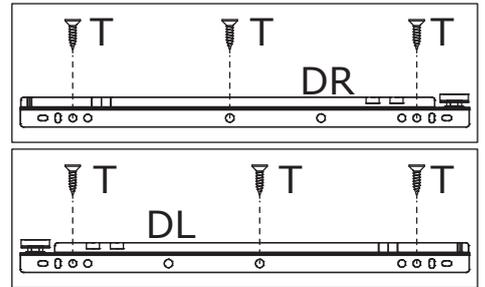





37

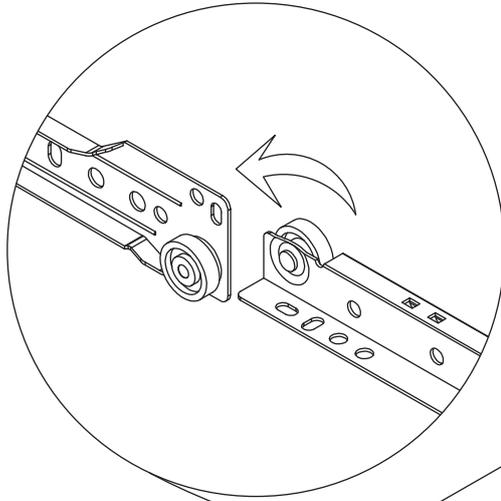


Align rails, insert all drawers in.

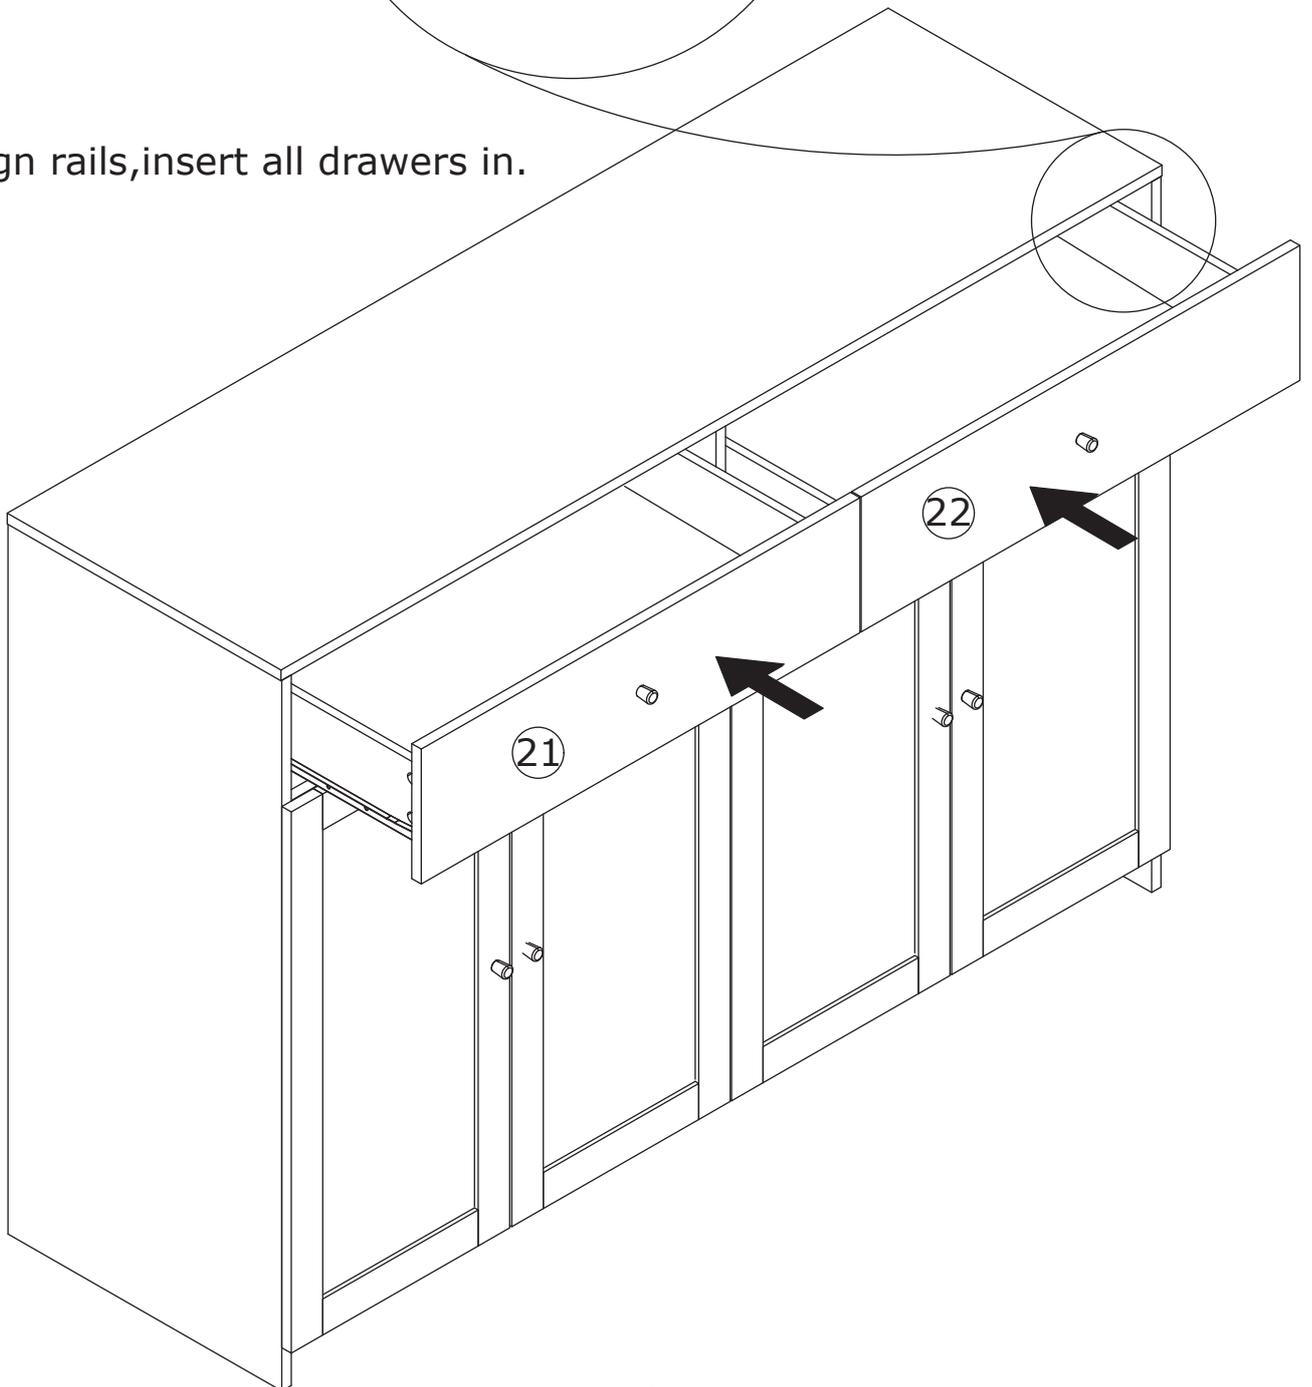


38
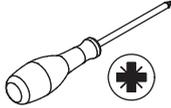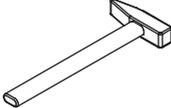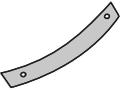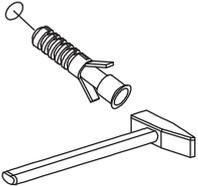
<p>N x 2</p>  <p>Ø 4 x 35 mm</p>	<p>P x 2</p> 				
<p>Q x 2</p> 	<p>R x 2</p>  <p>Ø 3.5 x 12 mm</p>	<p>S x 4</p> 	 		

- A) Fix Anti-tipover strap(Q) to the back side of board 12 with metal plate(S) and screw(R) as shown.
- B) Select the location to place the Cabinet.
- C) Mark location on the wall where the Safety Strap(Q) will be anchored(position for Wall Anchor[P]).
- D) On the marked location,drill a hole in wall that will fit (P).
- E) Fit (P) into the drilled hole. Ensure that the wall anchor fits securely in the wall.
- F) Use Screw(N) to affix the free end of Strap(Q) and metal plate(S) to the wall anchor.












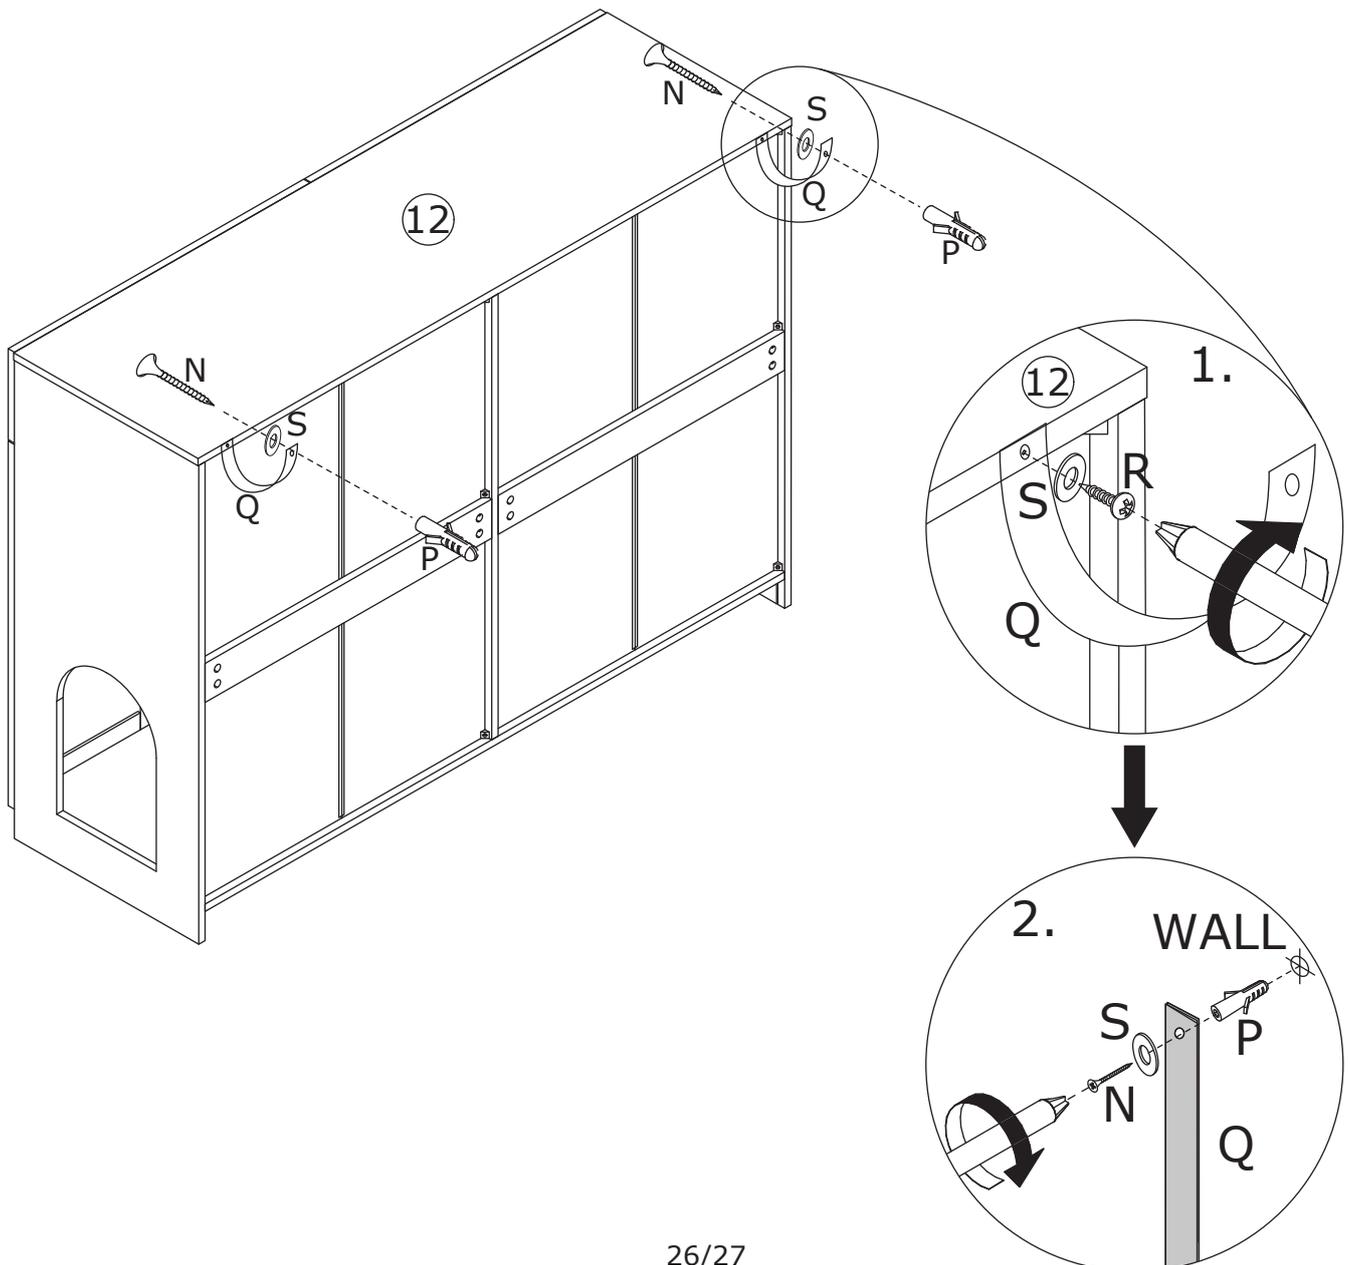


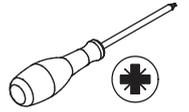

If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

If there is misalignment after you install, adjust the screw to the best condition

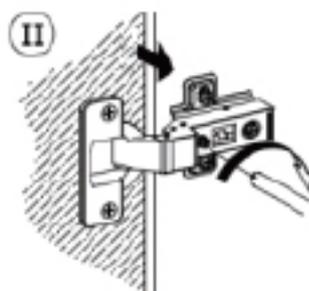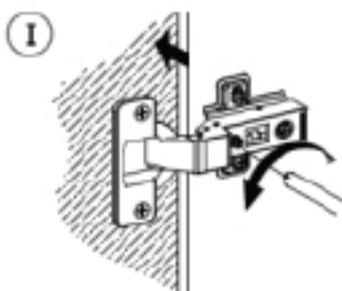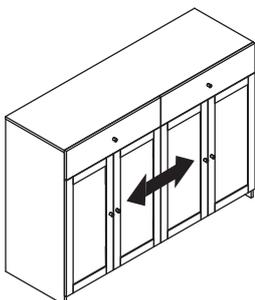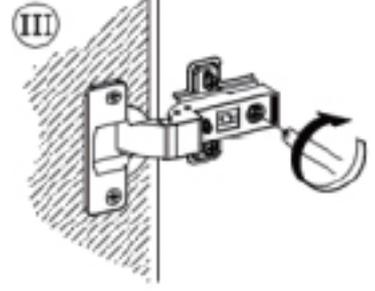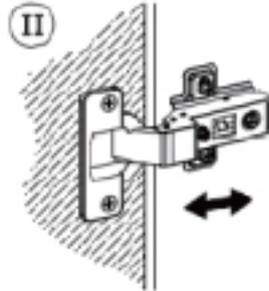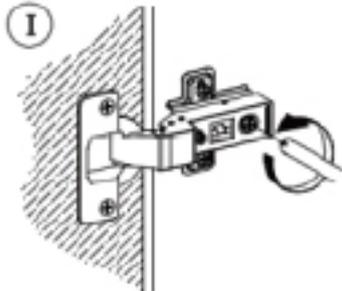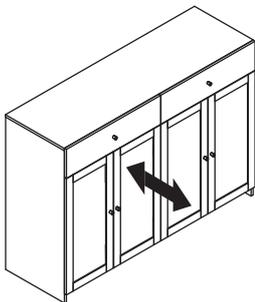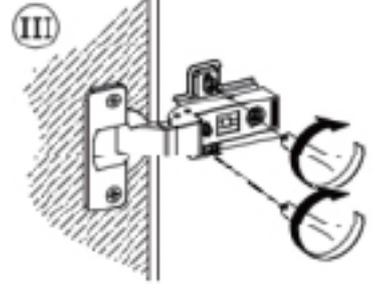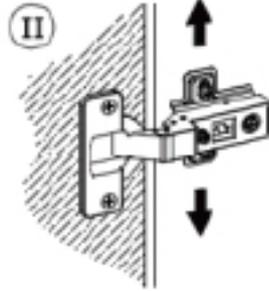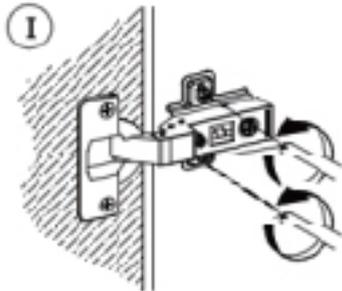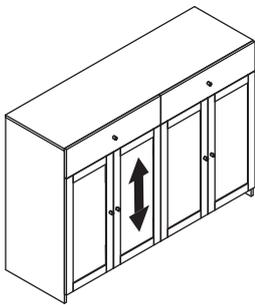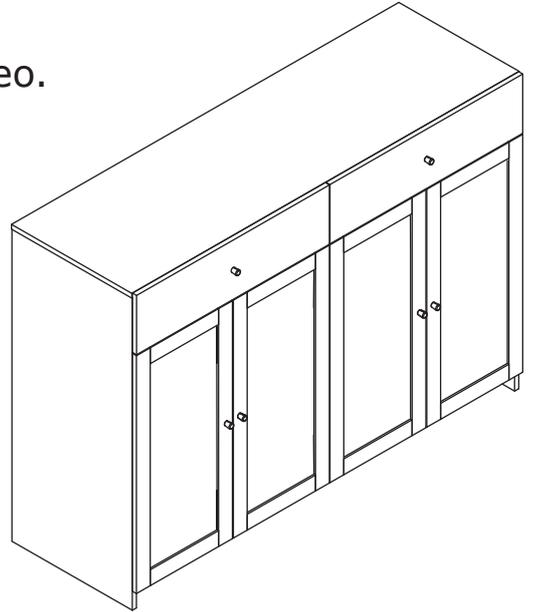

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

### AFTER-SALES CONTACT



[feedbackstation@163.com](mailto:feedbackstation@163.com)



(303)800-6387