




Wardrobe

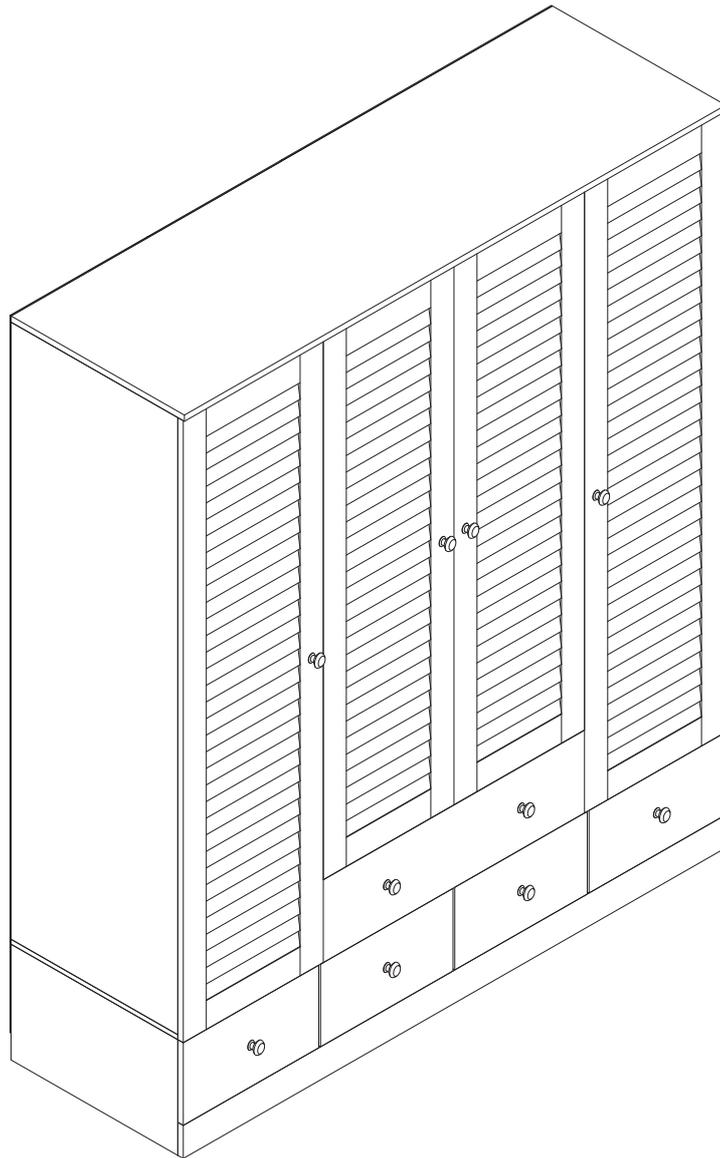

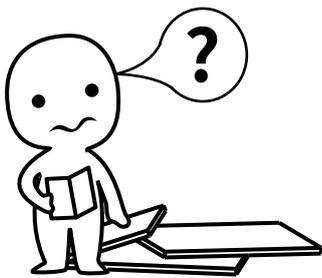


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

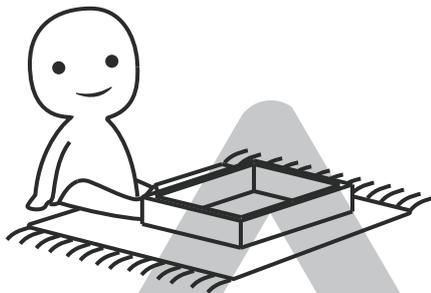


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

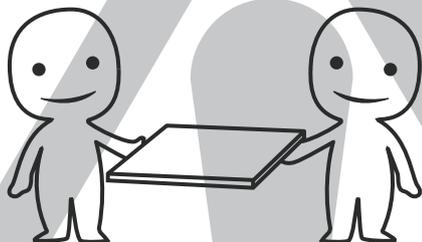

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

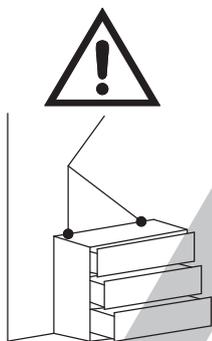

ANTI-TOPPLE WARNING !


Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.













Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

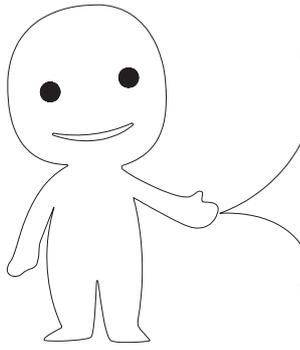


Please prepare the following tools

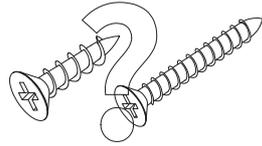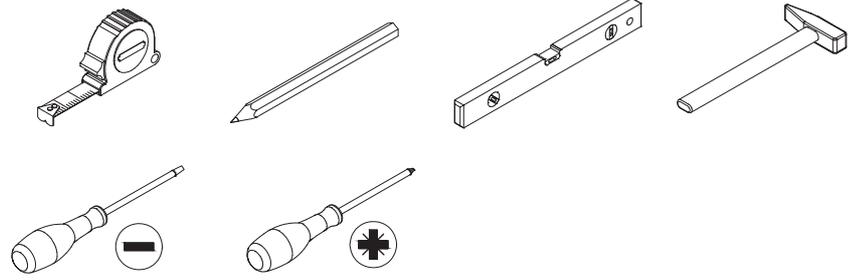

     
When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size
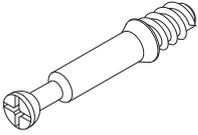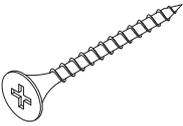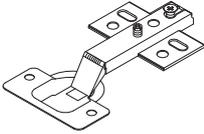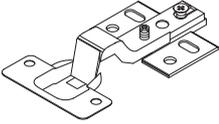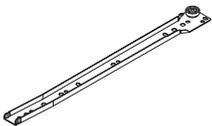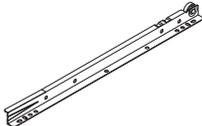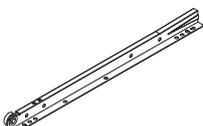
<p>Ax58</p>  <p>Ø6x35mm</p>	<p>Bx58</p>  <p>Ø15x9.5mm</p>	<p>Cx42</p>  <p>Ø4x35mm</p>	<p>Dx56</p>  <p>Ø6x30mm</p>	
<p>Ex50</p>  <p>Ø3.5x12mm</p>	<p>Fx84</p>  <p>Ø4x12mm</p>	<p>Gx8</p> 	<p>Hx10</p>  <p>Ø4x25mm</p>	
<p>Ix10</p> 	<p>Jx4</p> 	<p>Kx42</p>  <p>Ø2.5x14mm</p>	<p>Lx14</p> 	
<p>Mx2</p> 	<p>Nx4</p>  <p>Ø4x12mm</p>	<p>Ox2</p> 	<p>Px6</p> 	
<p>Qx1</p> 	<p>CLx5</p> 	<p>CRx5</p> 	<p>DLx5</p> 	<p>DRx5</p> 

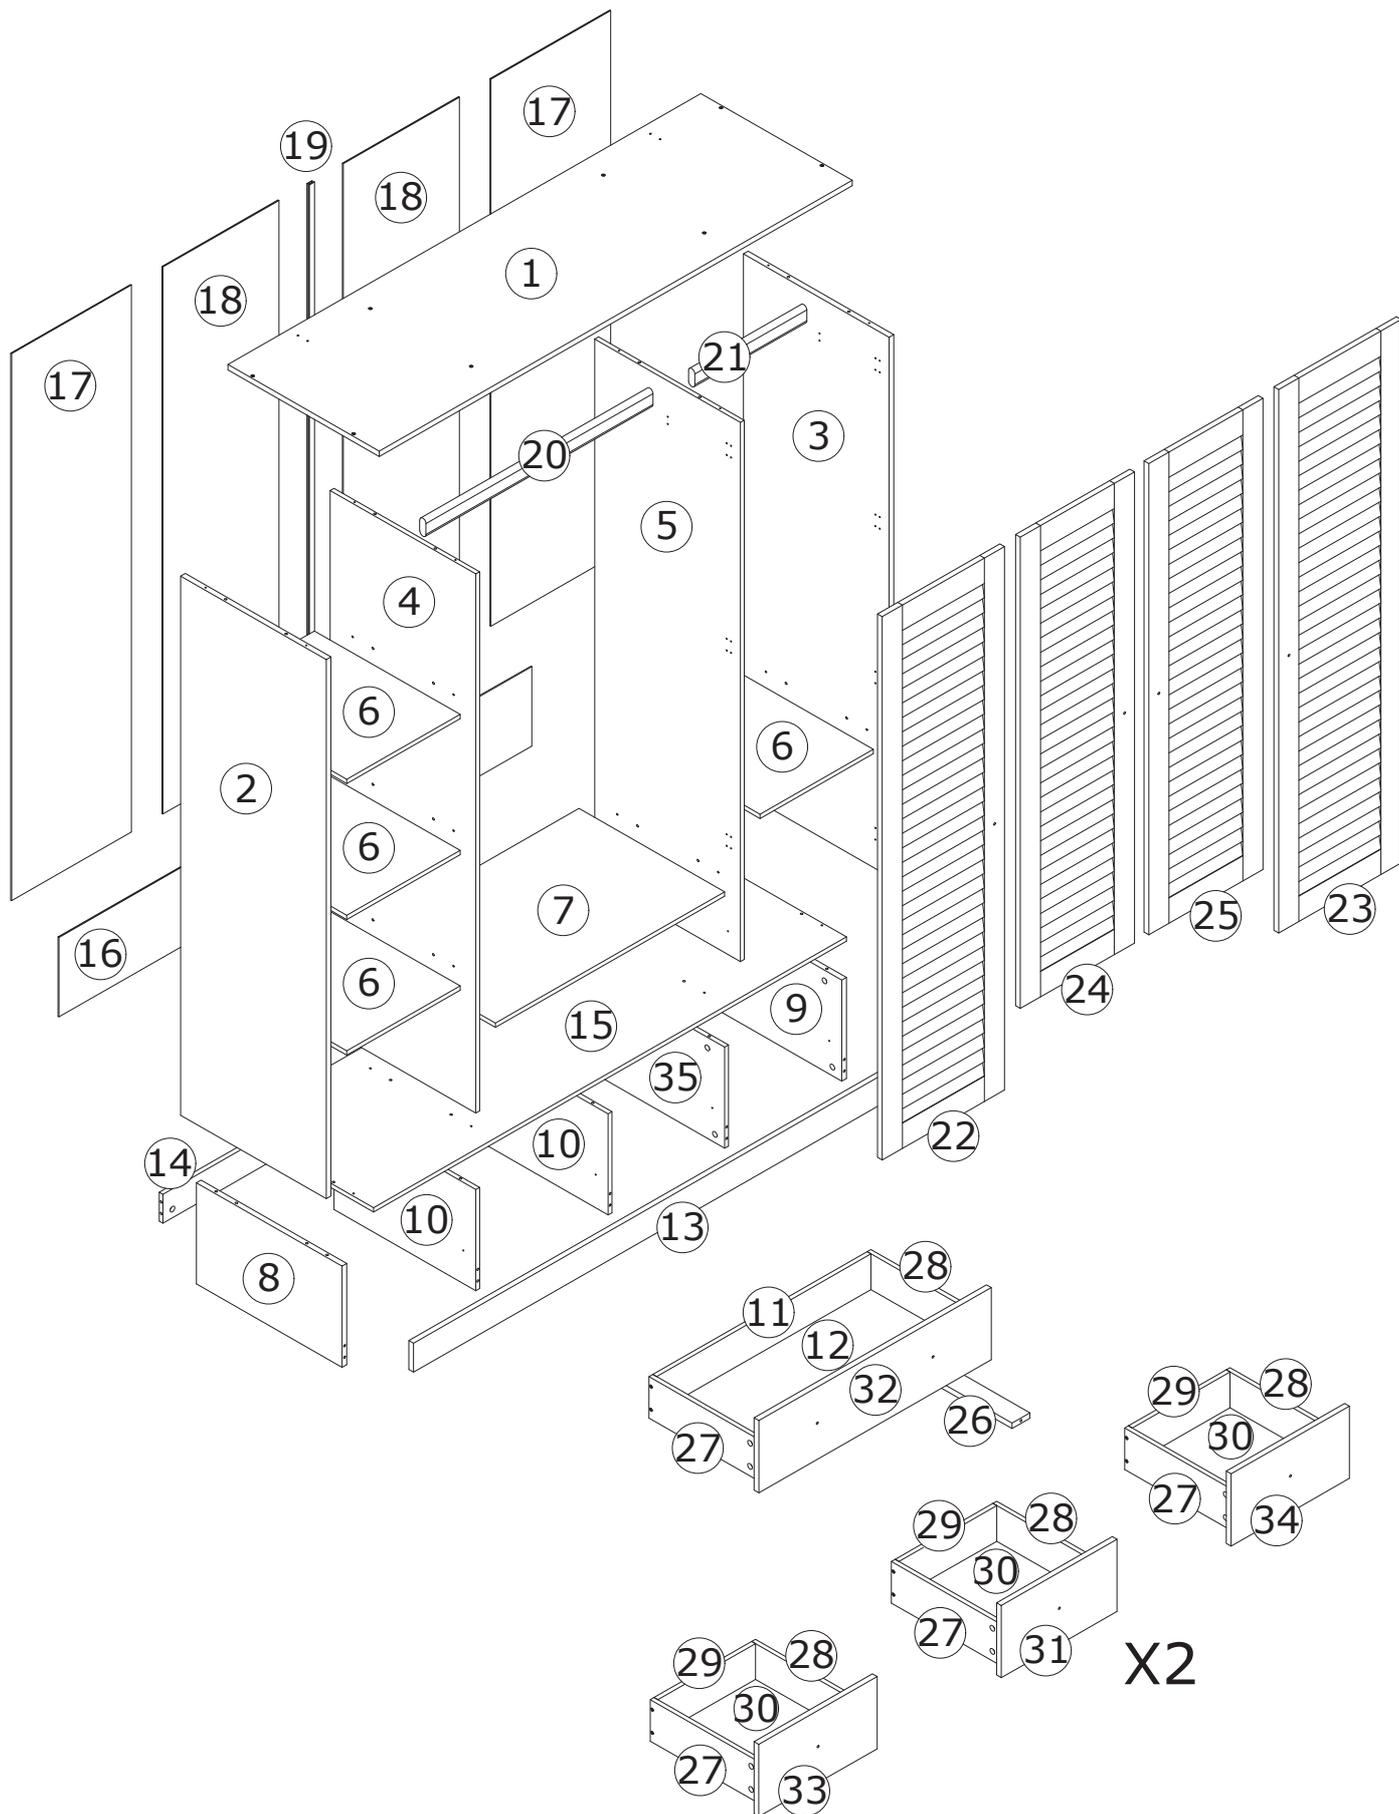


X2

1

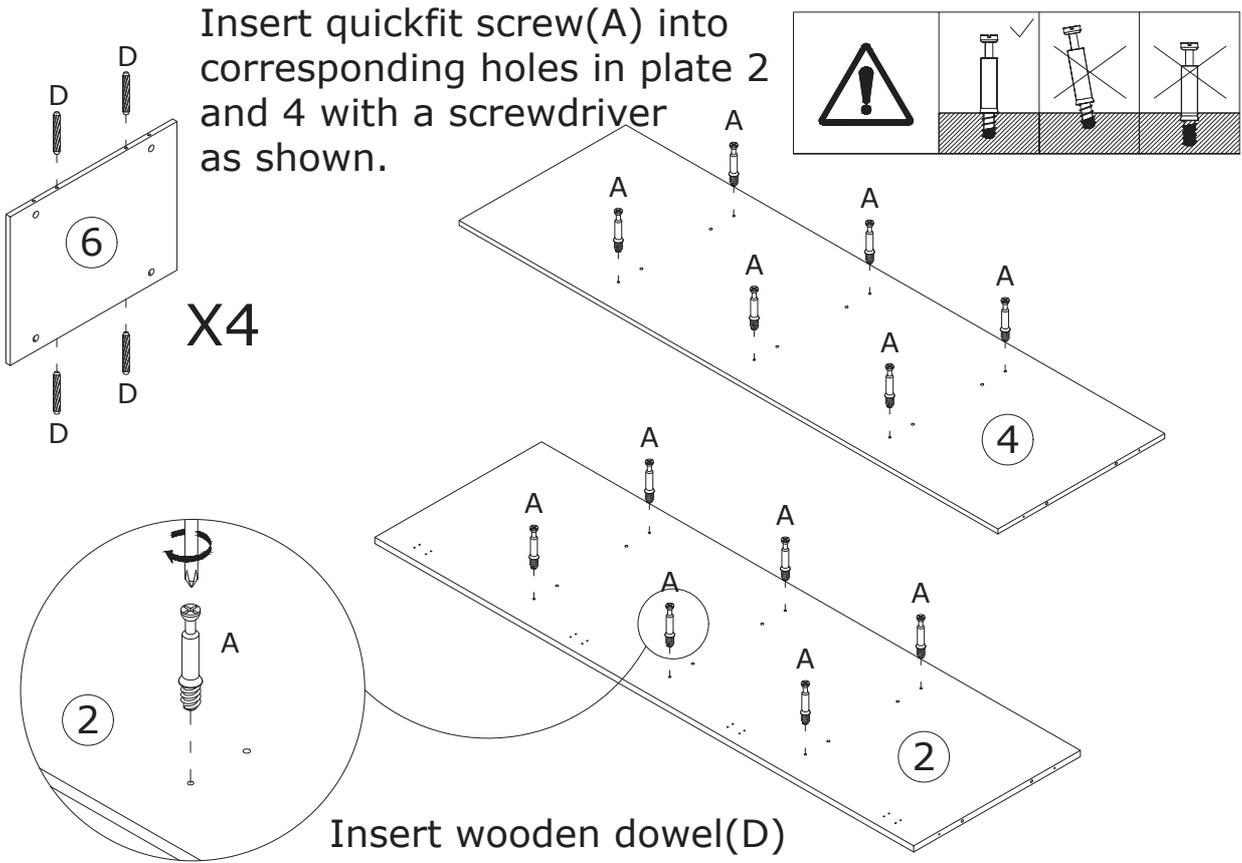


Insert wooden dowel(D) into plate 6 as shown.



2

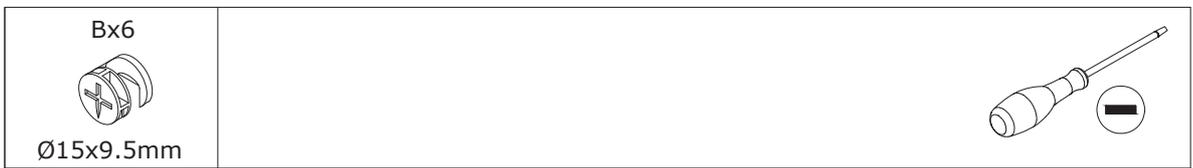



Attach plate 6 to plate 2, put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

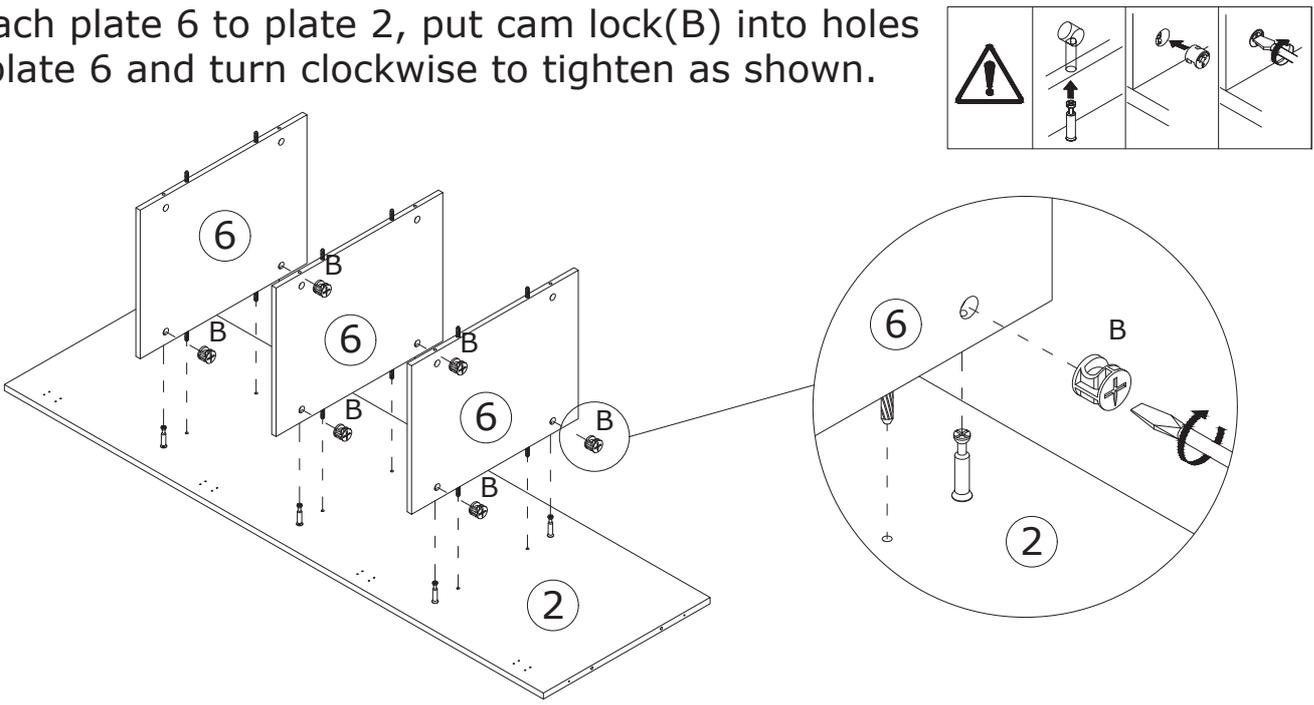


3

 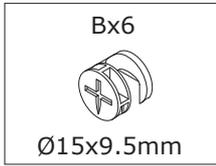



Attach plate 4 to plate 6, put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

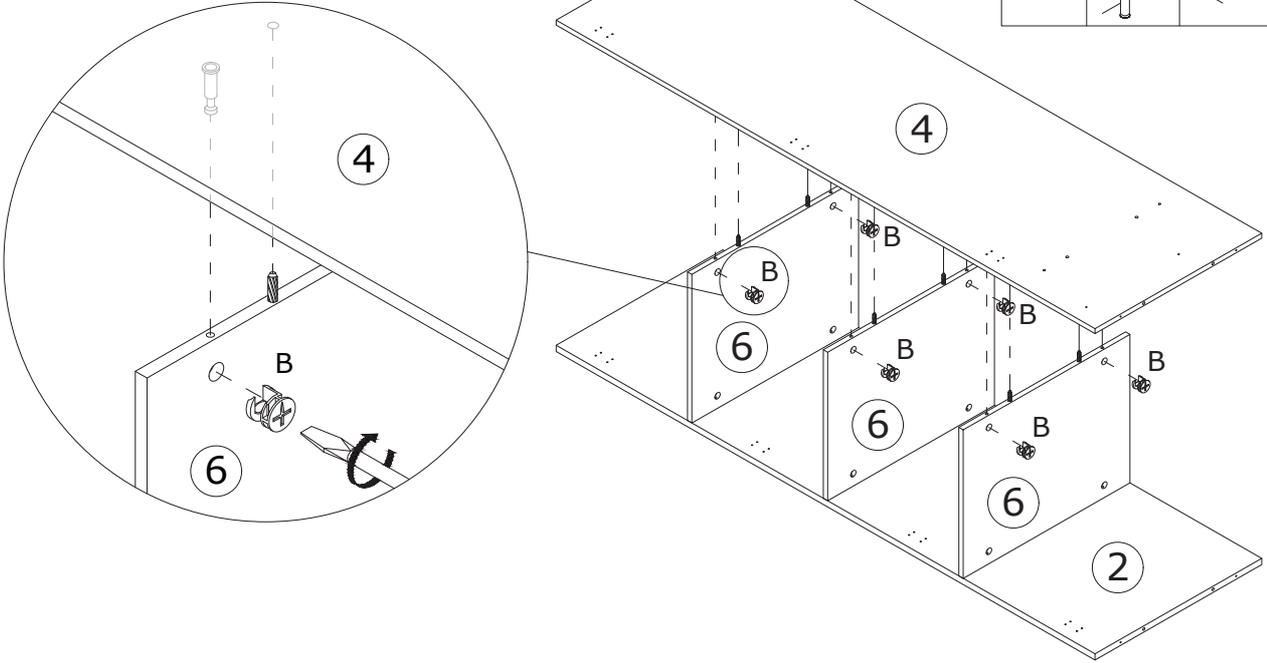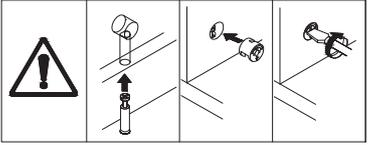

4

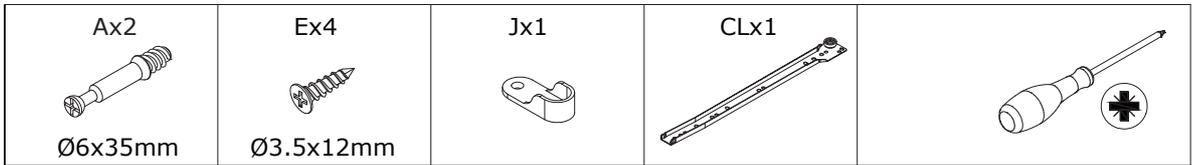

Fix slide rail(CL) to plate 4 using screw(E) as shown. Insert quickfit screw(A) into plate 4 as shown. Fix part(J) to plate 4 using screw(E) as shown.

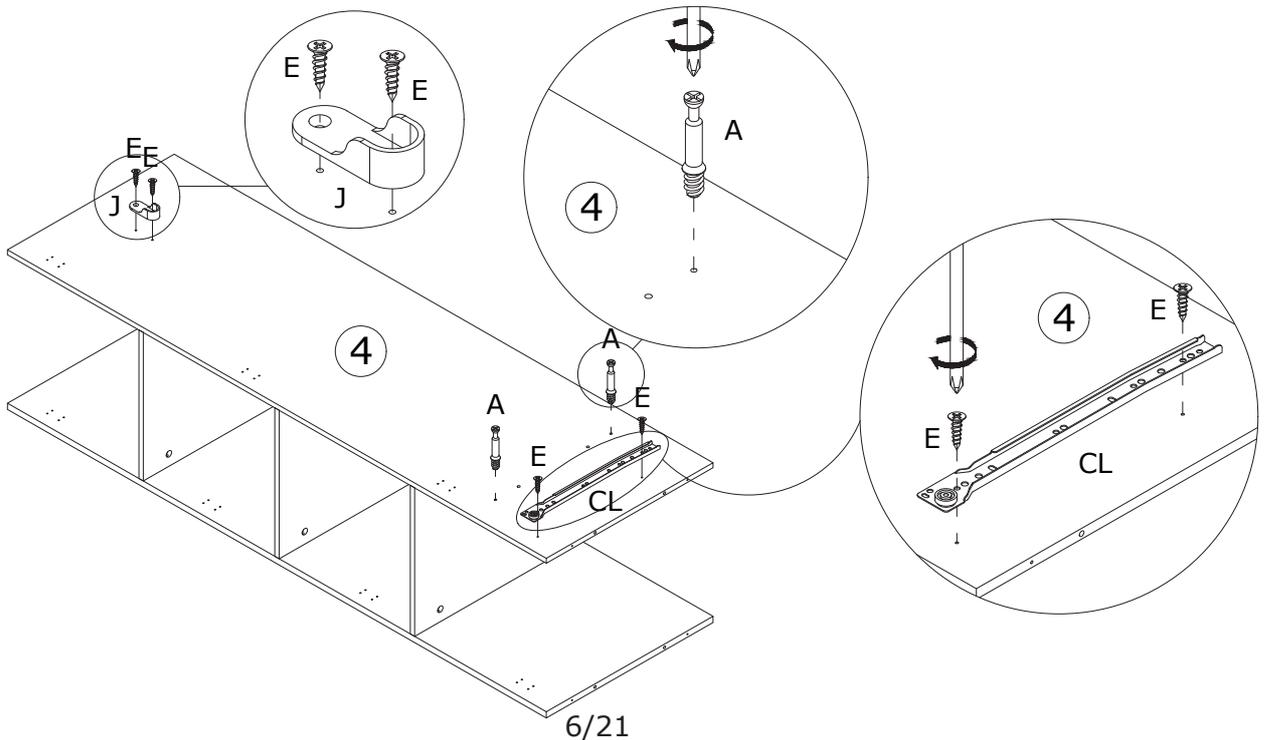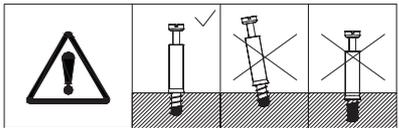

5

Ax6



Ø6x35mm

Ex8









Ø3.5x12mm

Jx3



 CRx1

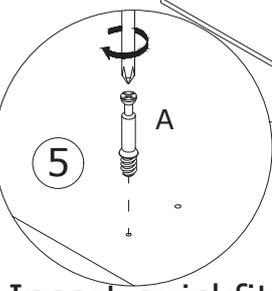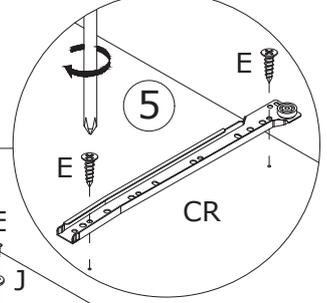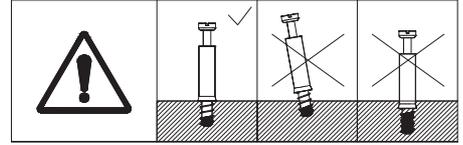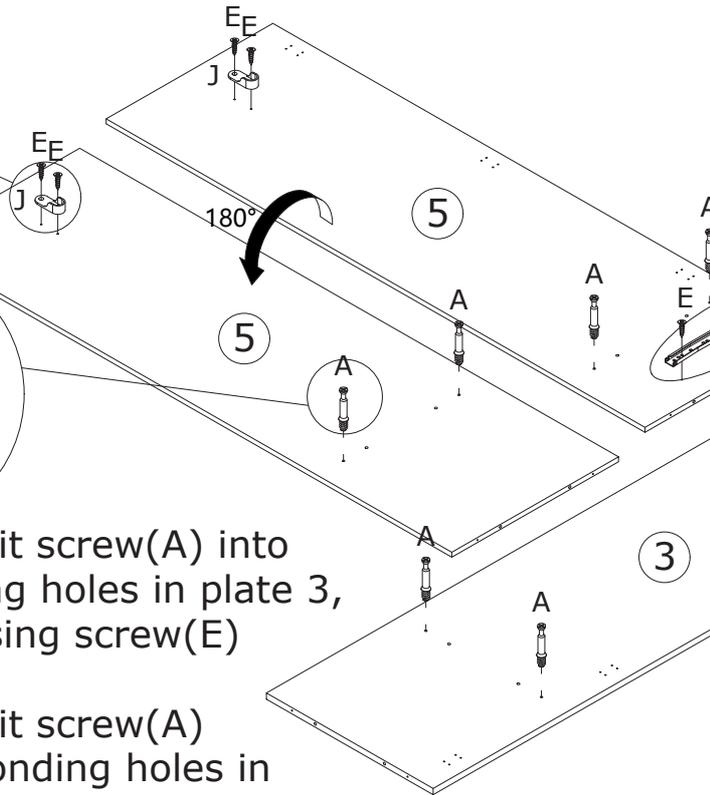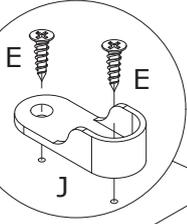

Insert quickfit screw(A) into corresponding holes in plate 3, fix part(J) using screw(E) as shown.

Insert quickfit screw(A) into corresponding holes in plate 5, fix part(J) using screw(E) as shown.

Then flip the plate, insert quickfit screw(A) and fix part(J) as well, fix slide rail(CR) using screw(E) as shown.

6

Bx4





Ø15x9.5mm




Dx4



  Ø6x30mm





Connect plate 4 and 5 with plate 7 using wooden dowel(D), put cam lock(B) into holes in plate 7 and turn clockwise to tighten as shown.

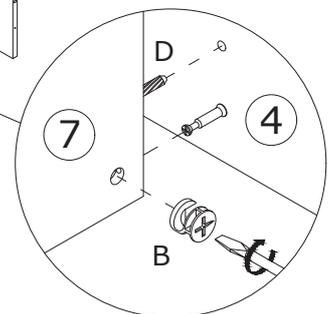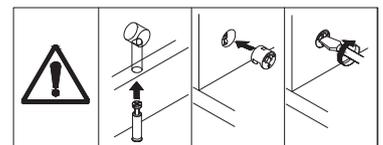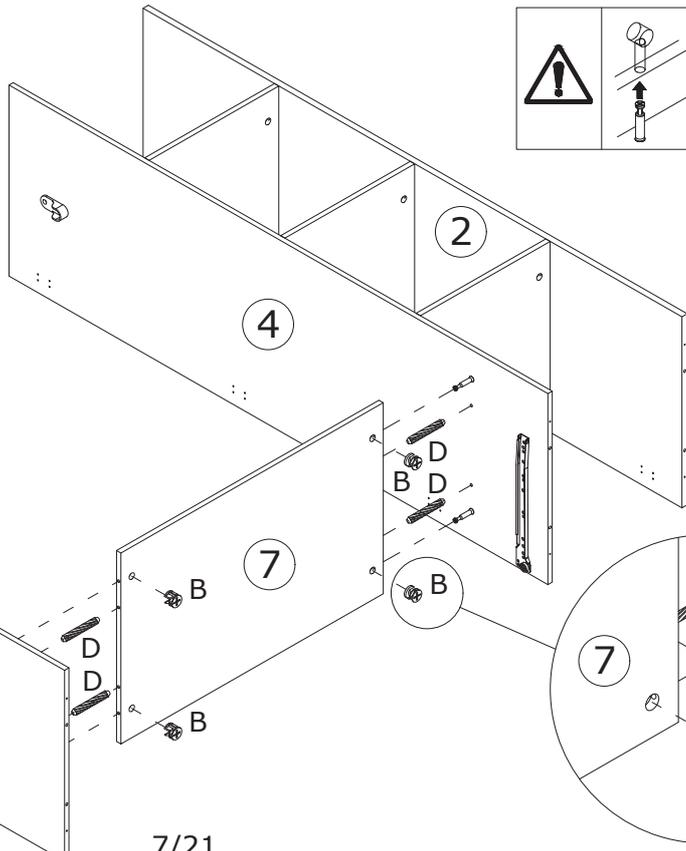

7




Connect plate 3 and 5 with plate 6, put cam lock(B) into holes in plate 6 and turn clockwise to tighten as shown.

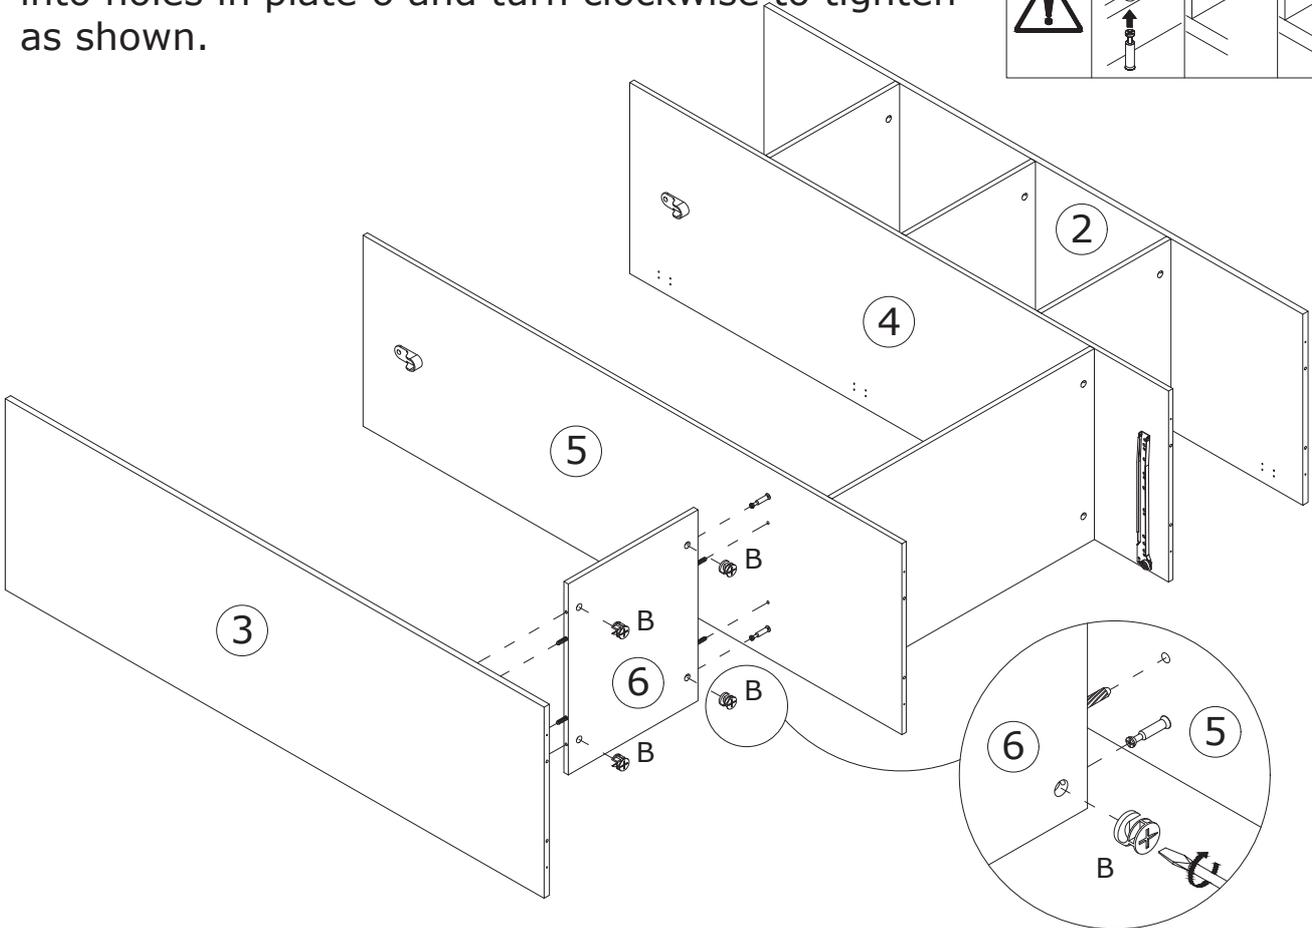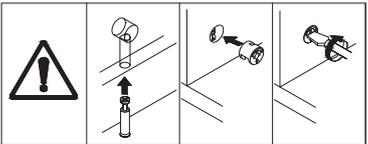


8




Fix part(M) to plate 1 using screw(N) as shown.

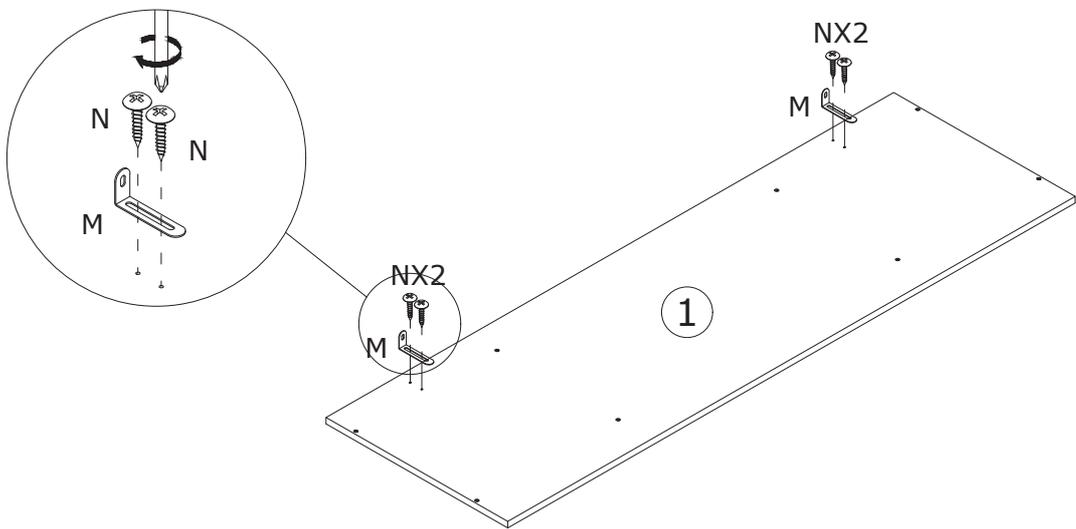


9

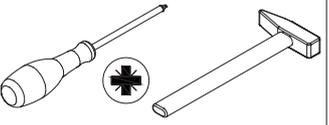Ex2  Ø3.5x12mm	Cx8  Ø4x35mm	Dx8  Ø6x30mm	Qx1 	
---	---	---	--	---

Attach plate 1 to plate 3,5,4 and 2 with wooden dowel(D), then fix using screw(C) as shown.
Fix part(Q) to plate 1 using screw(E) as shown.

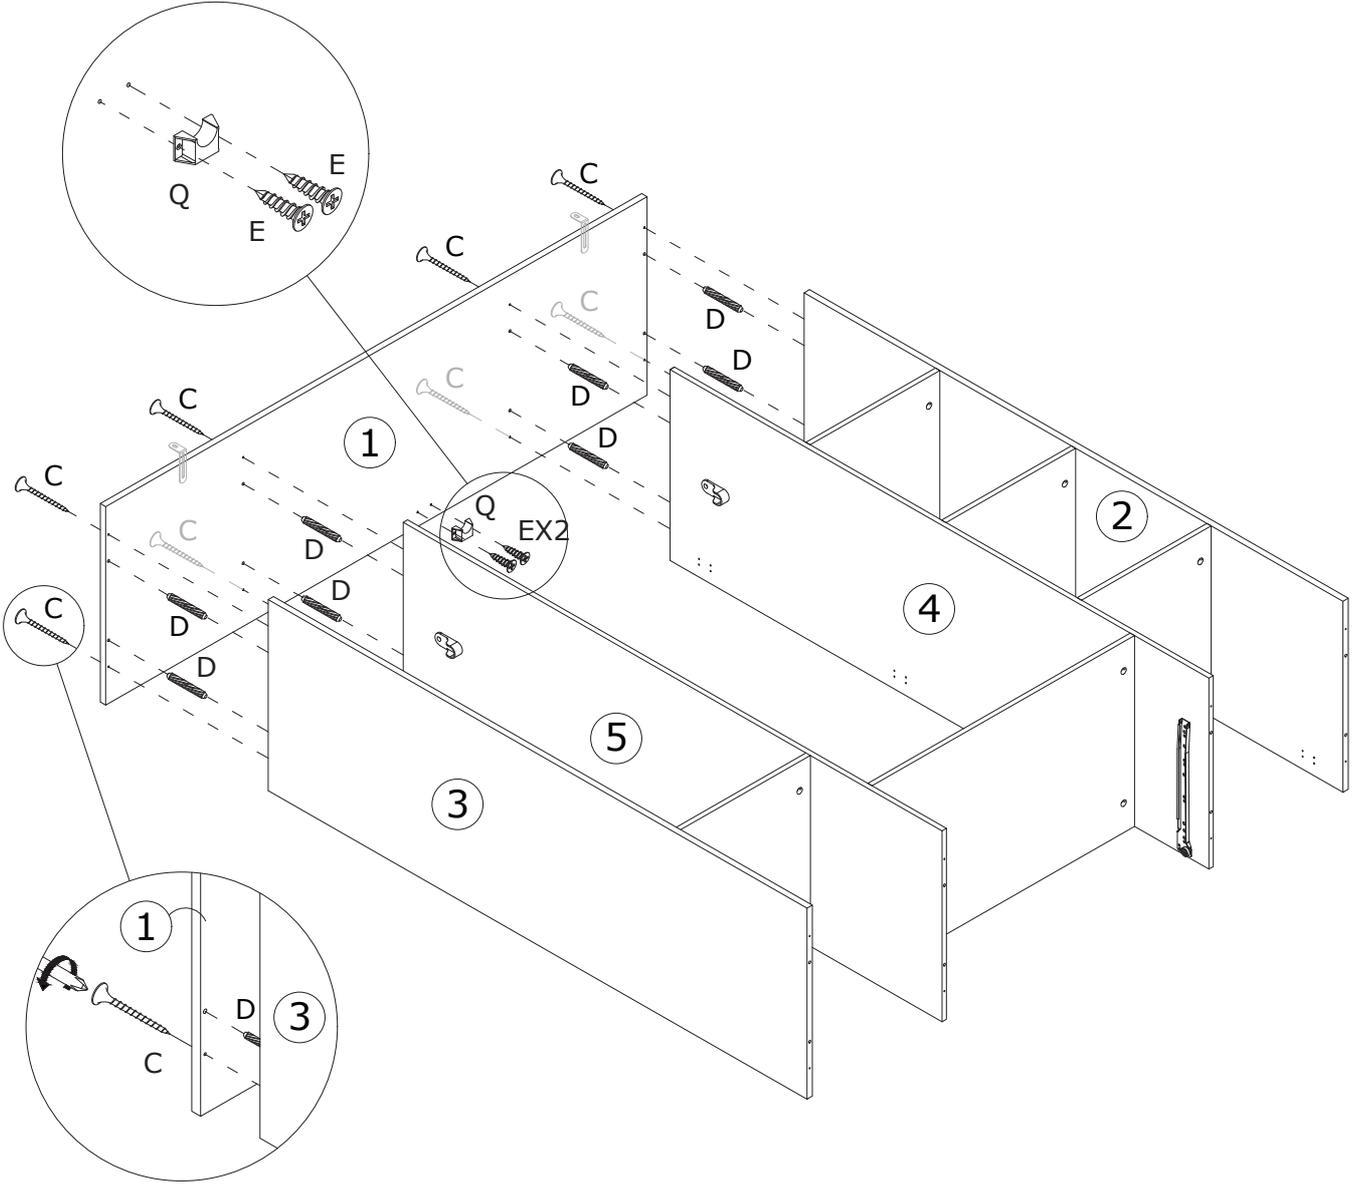



10

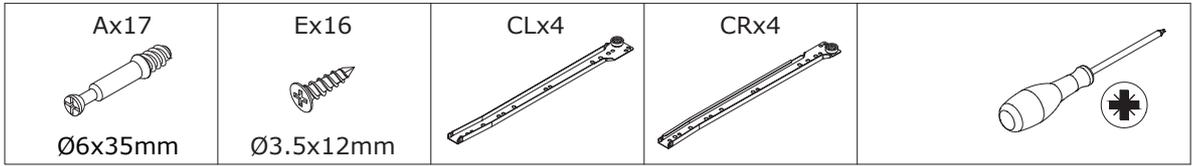

Insert quickfit screw(A) into corresponding holes in plate 15,13,8 and 9 as shown.

Fix slide rail(CL) and (CR) to plate 8 and 9 using screw(E) as shown.


Fix slide rail(CL) to plate 10 and 35 respectively using screw(E) at first, then flip the two plates, fix slide rail(CR) as shown.

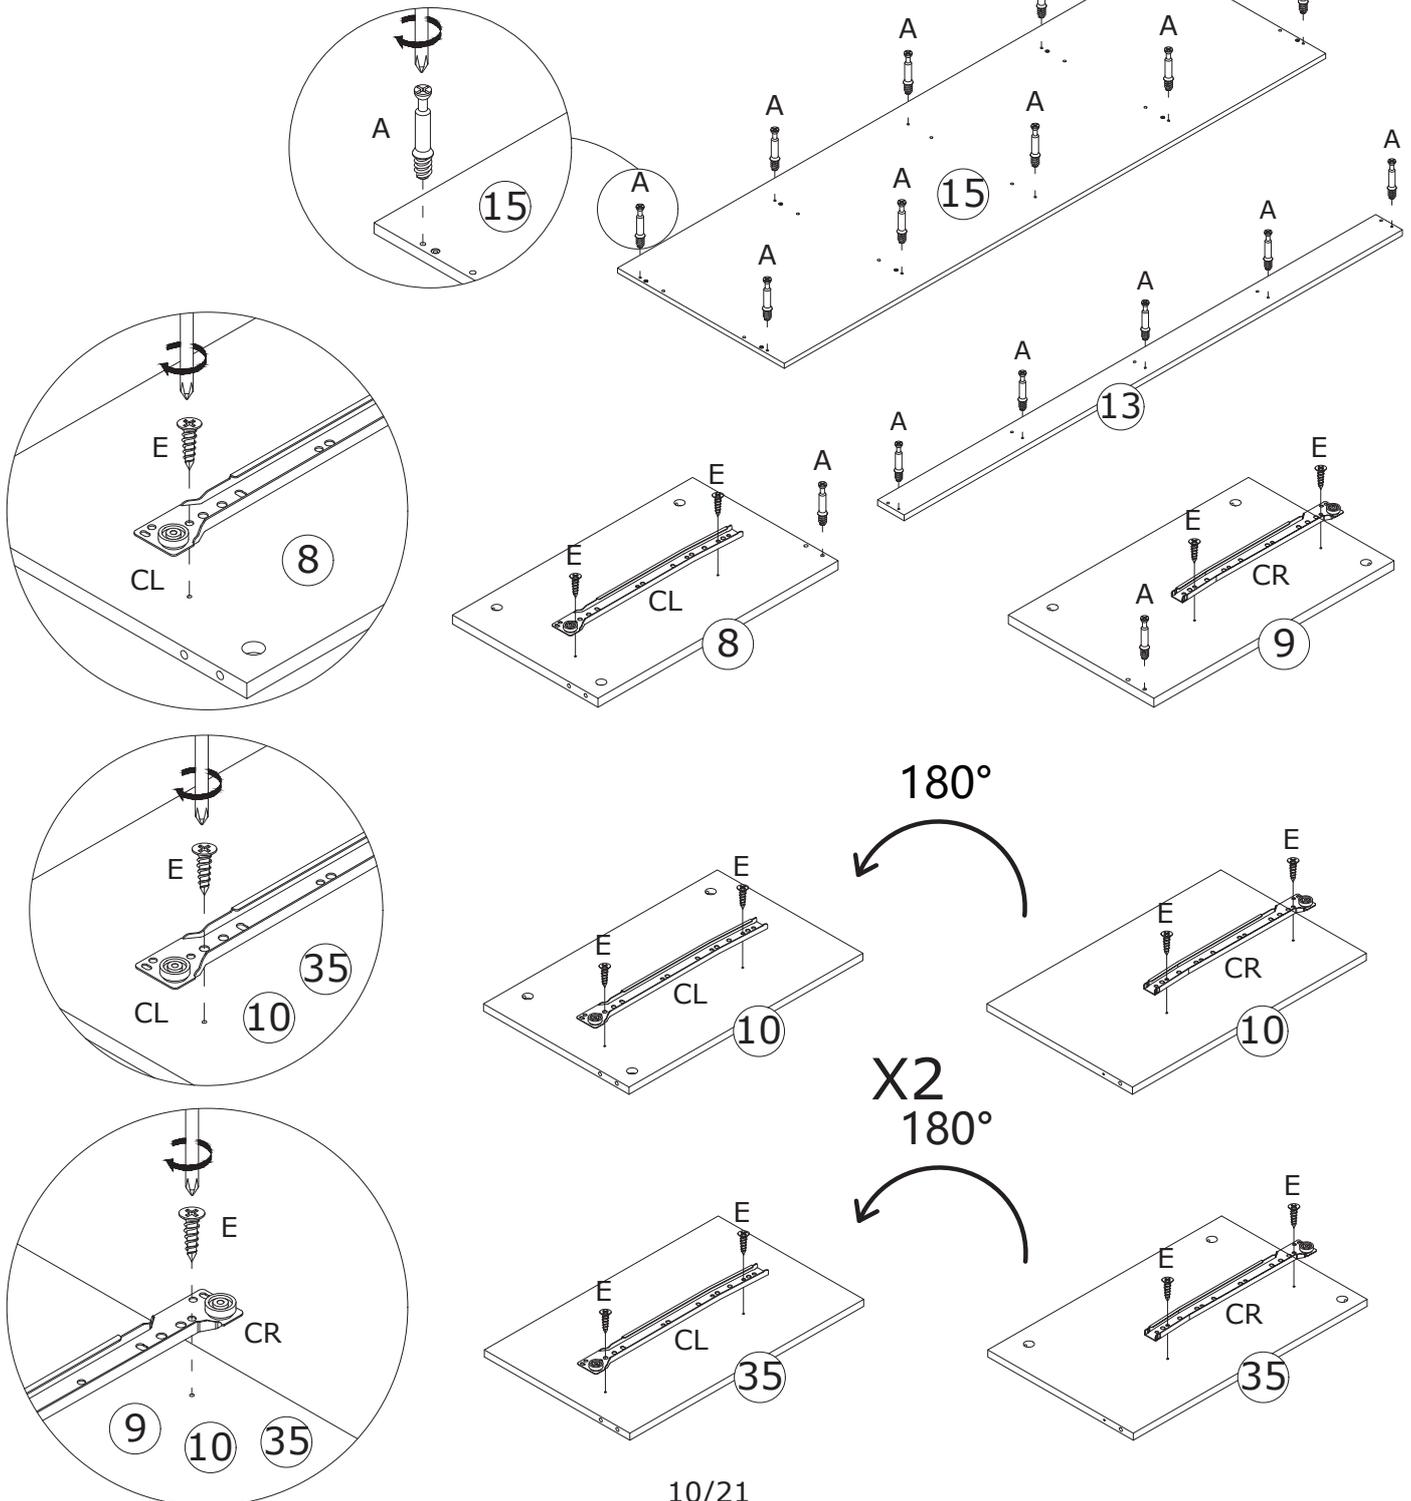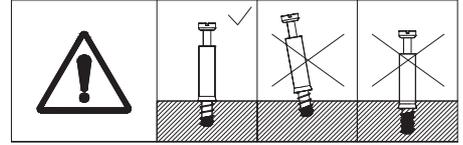

11




Attach plate 15 to plate 3,5,4 and 2 with wooden dowel(D), then fix using screw(C) as shown.

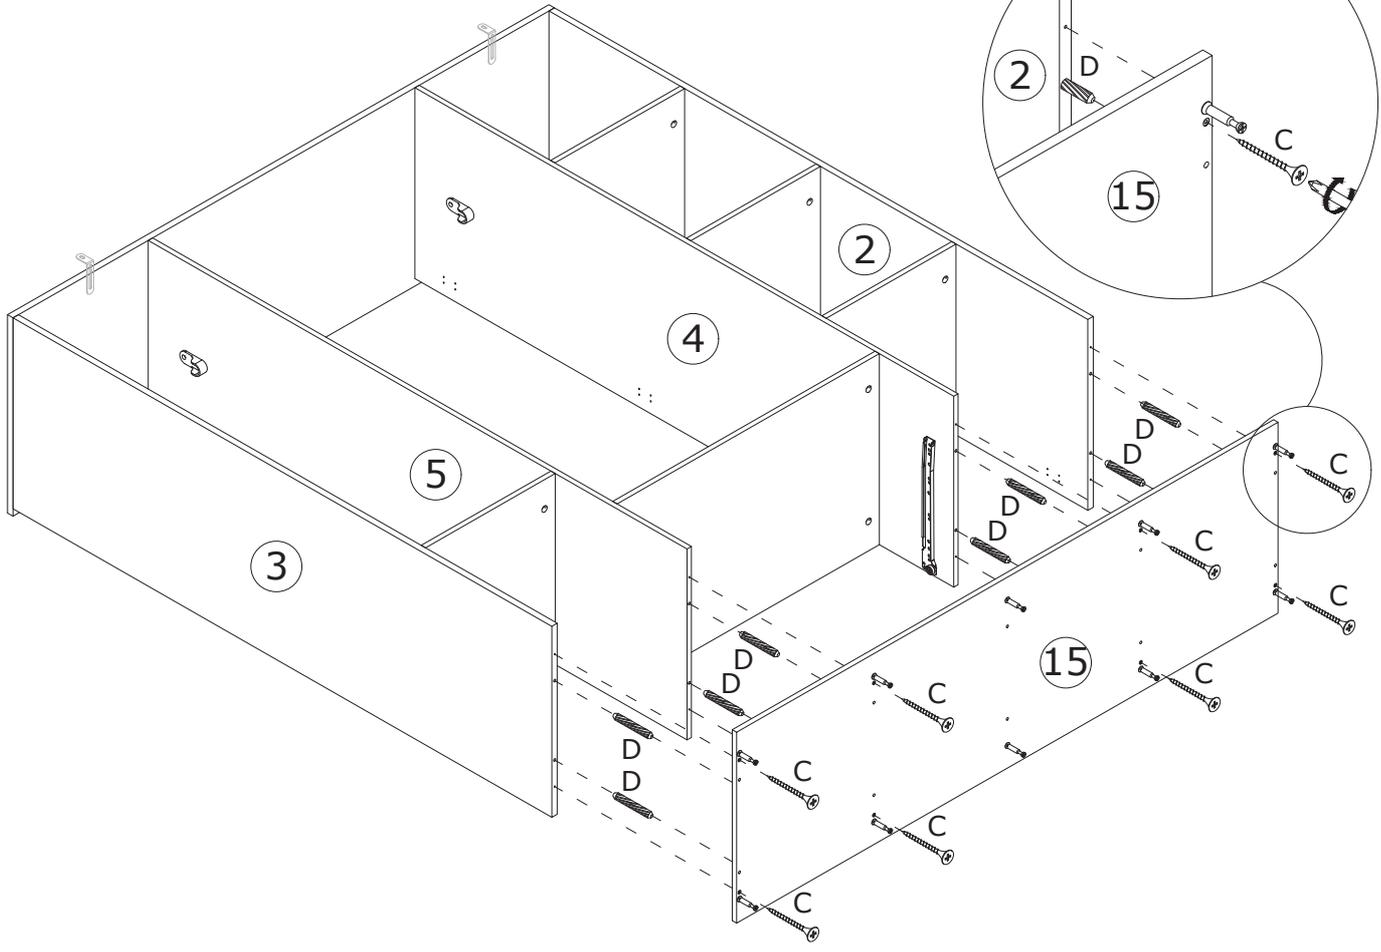

12



Attach plate 10 and 35 to plate 14 with wooden dowel(D), then fix using screw(C) as shown.

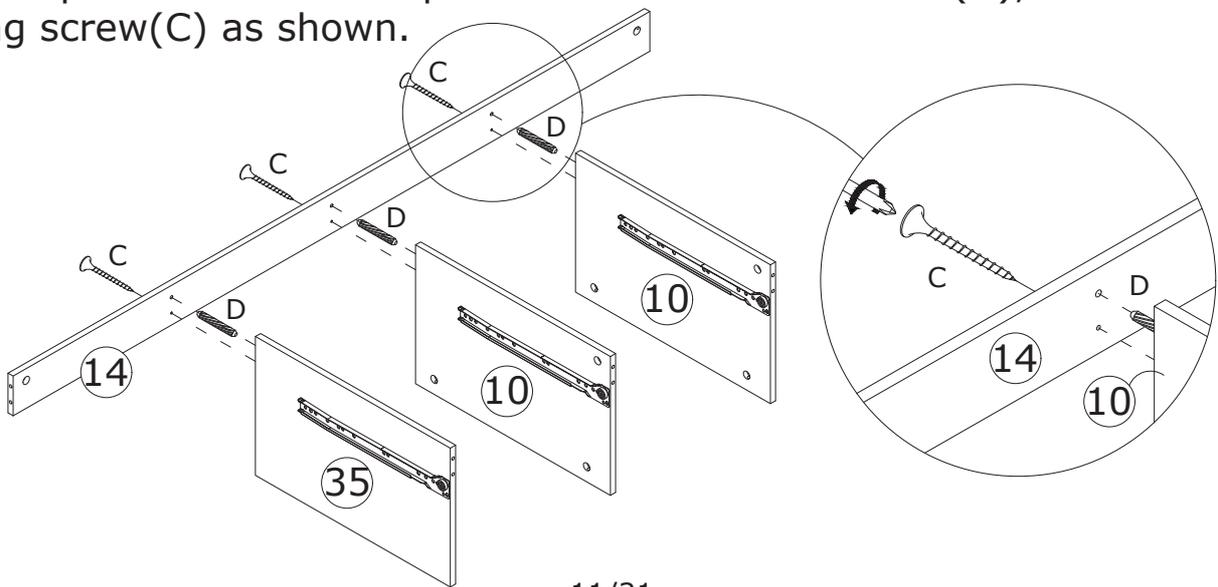

13

Bx2






Ø15x9.5mm

Dx2



  Ø6x30mm

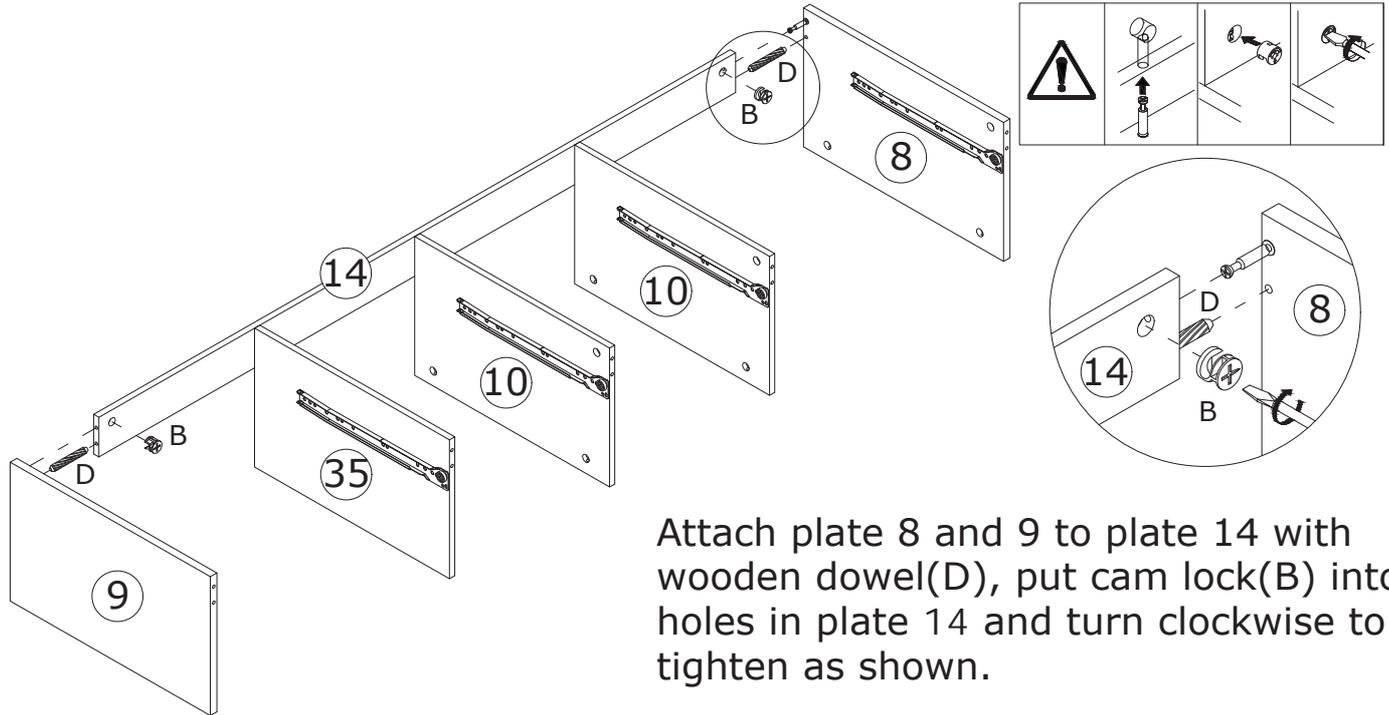

14

Bx10






Ø15x9.5mm



Dx10



  
Ø6x30mm

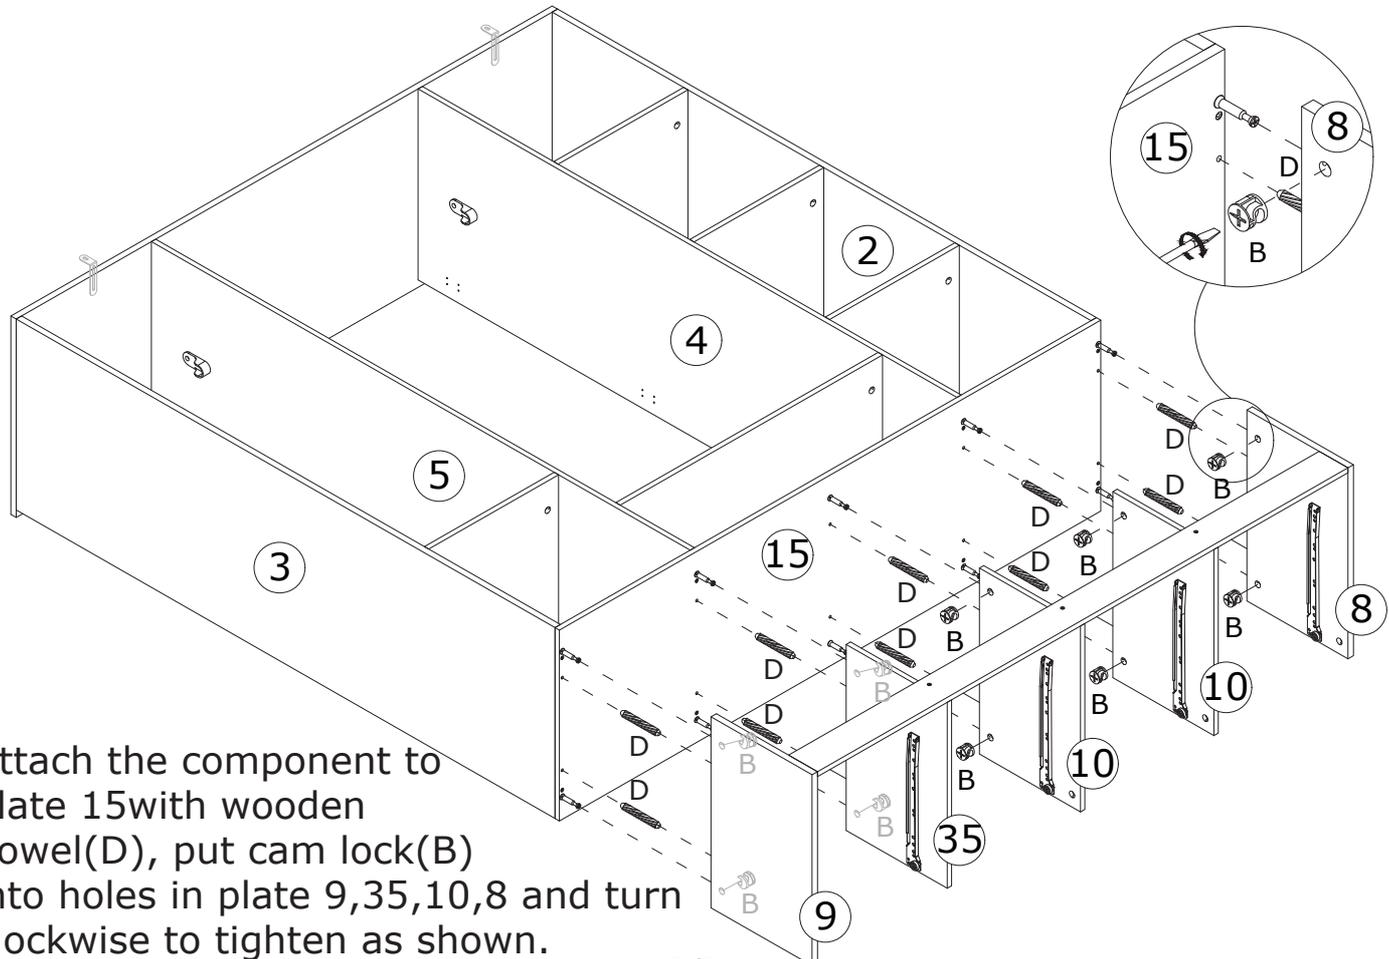


15
  
<p>Kx42</p>  <p>Ø2.5x14mm</p>	<p>Lx14</p> 	
--	---	---


Fix back plate 16,17 and 18 using screw(K) at first.
 Fix each plate 17,18 and 16 together using part(L)
 with screw(K) as shown.

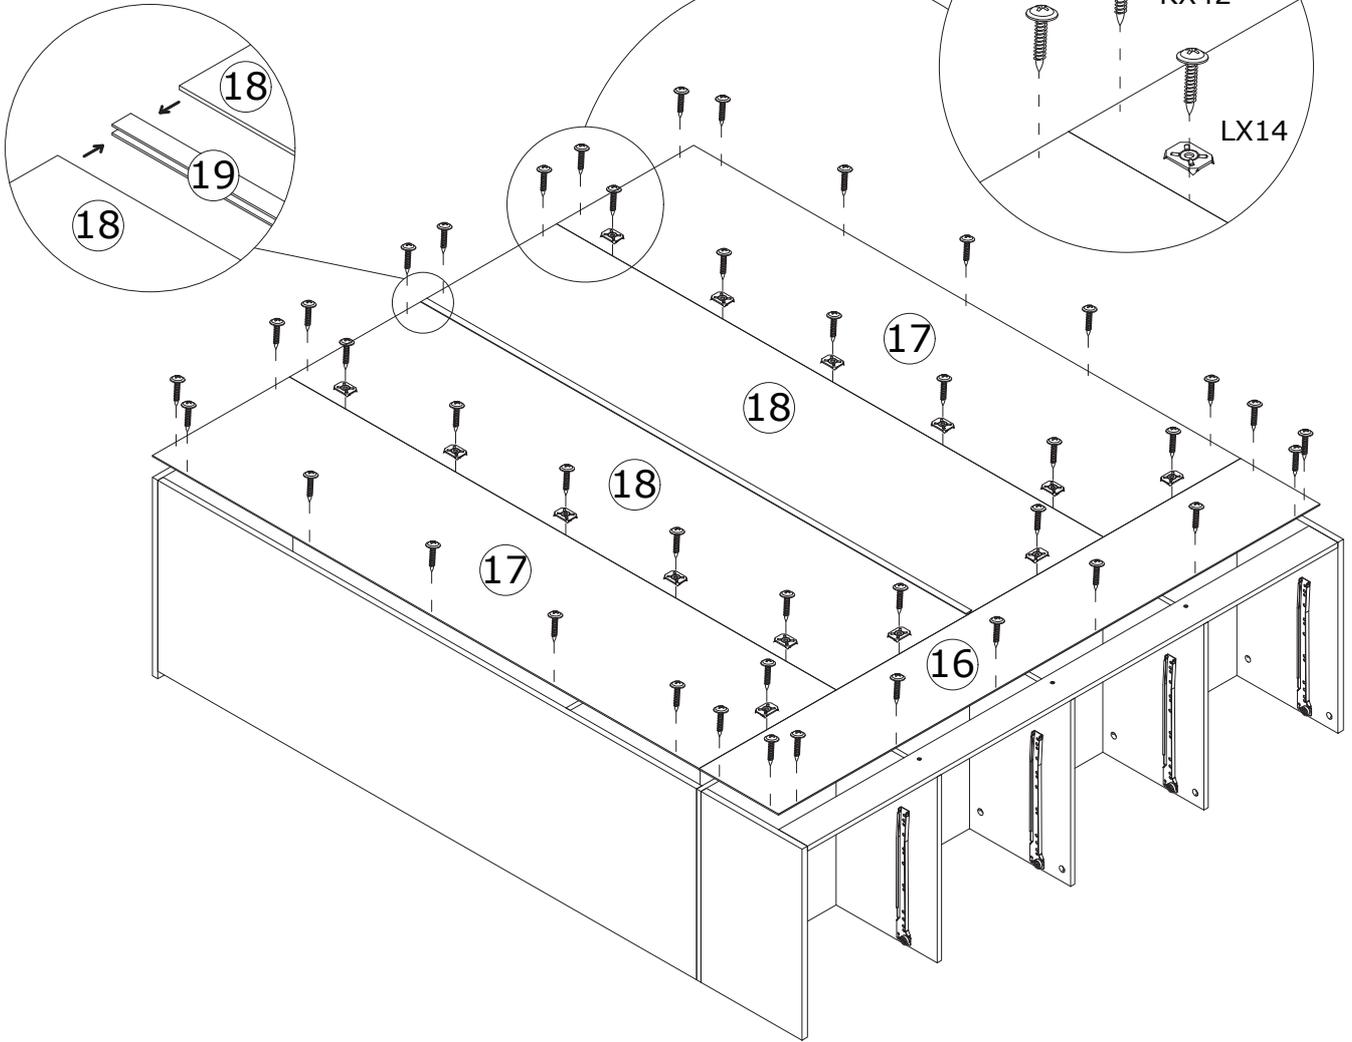

16
 
<p>Cx21</p>  <p>Ø4x35mm</p>	
--	---


Fix plate 27 and 28 with plate 29 using screw(C)
 as shown.

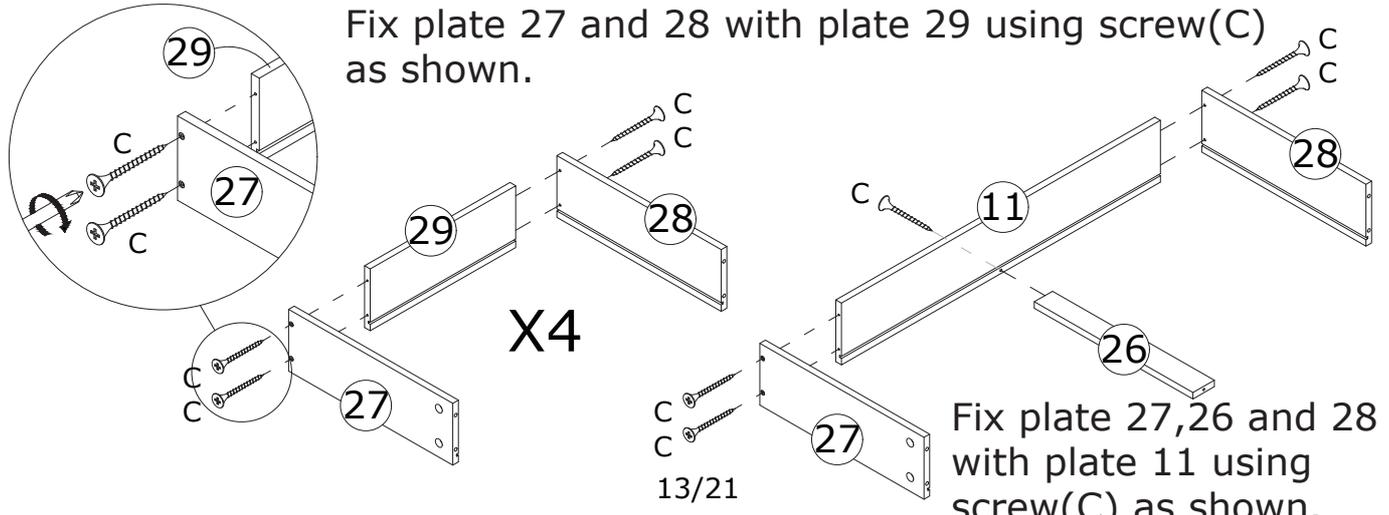




Fix plate 27,26 and 28
 with plate 11 using
 screw(C) as shown.

17

Slide plate 30 and 12 along grooves as shown.


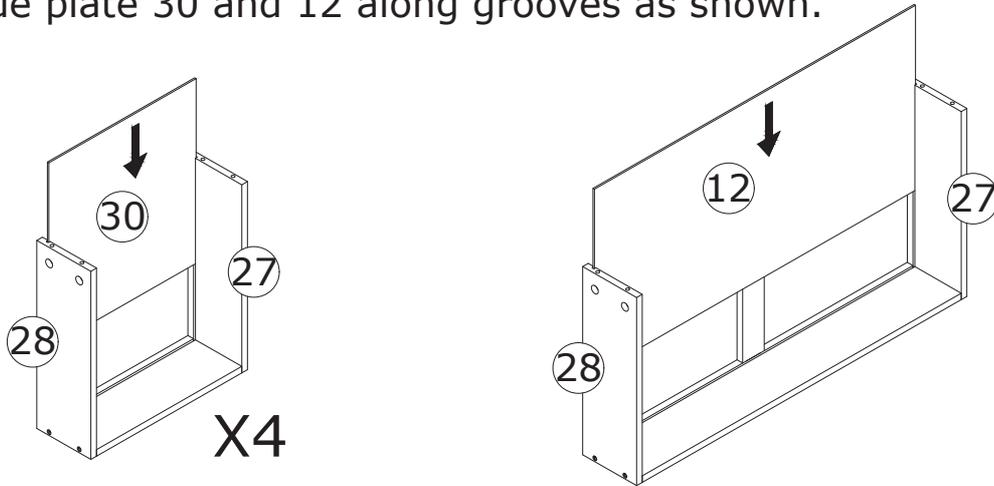


18


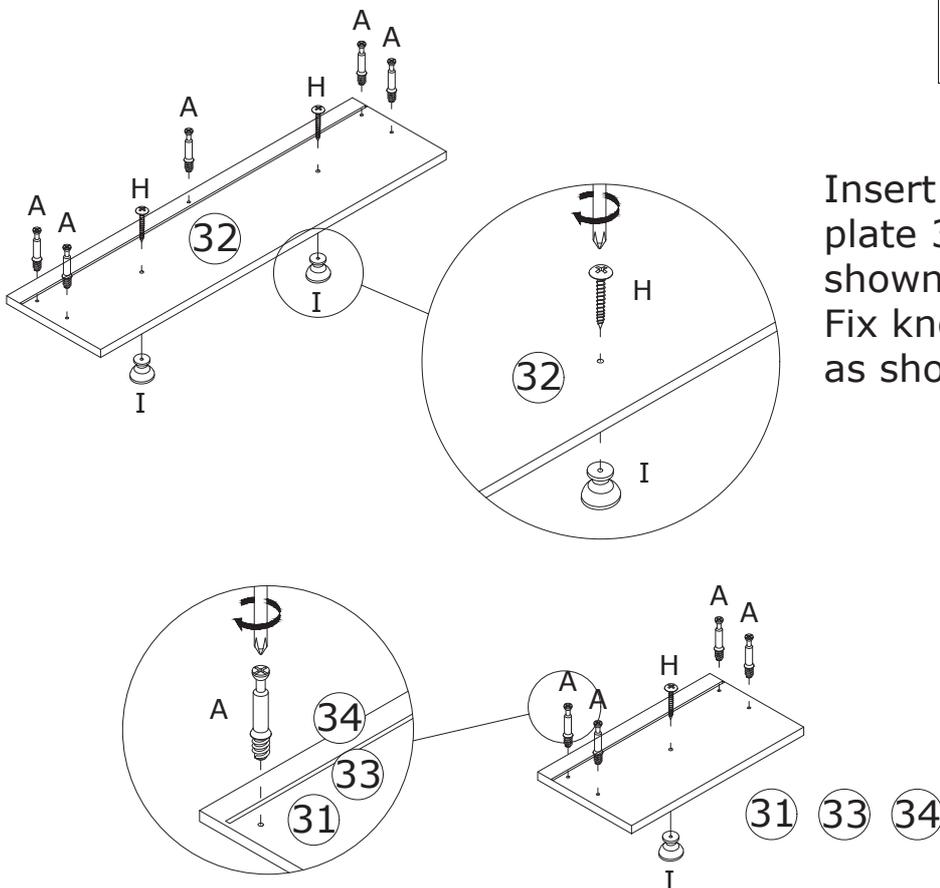
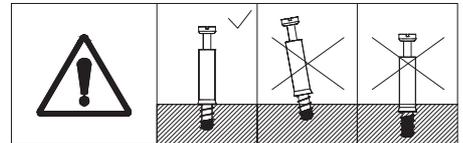
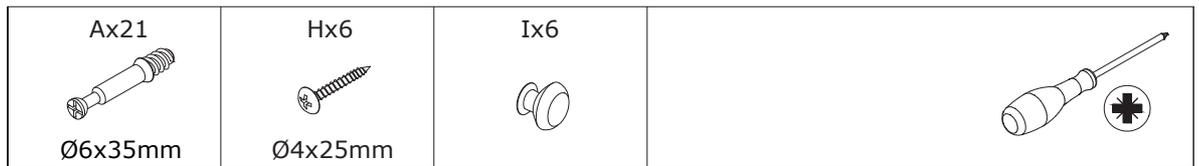


Insert quickfit screw(A) into plate 32,31,33 and 34 as shown.
Fix knob(I) using screw(H) as shown.

 19


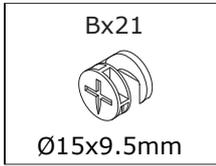


Attach plate 32 to big drawer, put cam lock(B) into holes in plate 28,26,27 and turn clockwise to tighten as shown.

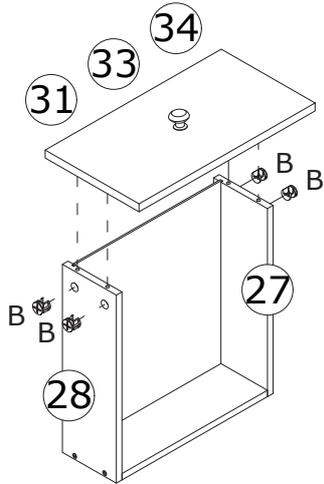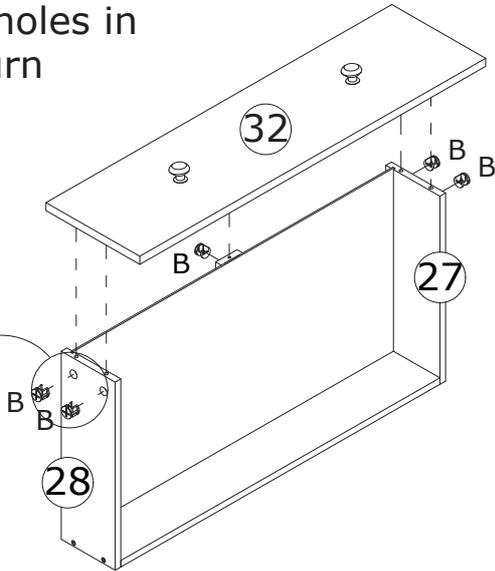
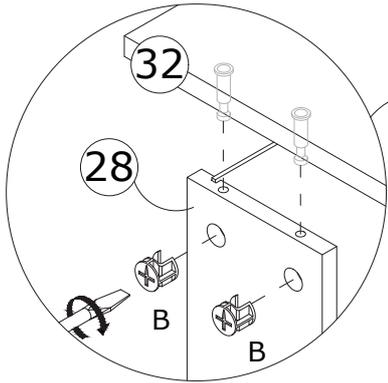
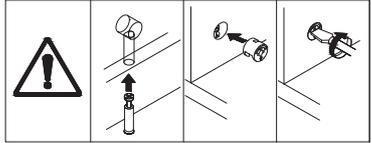


Attach plate 31/33/34 to small drawer, put cam lock(B) into holes in plate 28,27 and turn clockwise to tighten as shown.

 20

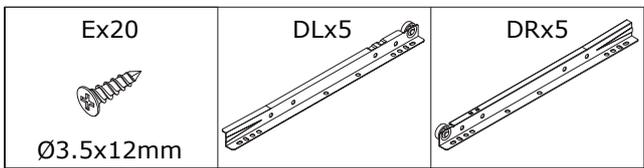

Fix runner(DL) and (DR) to plate 27 and 28 respectively using screw(E) as shown.

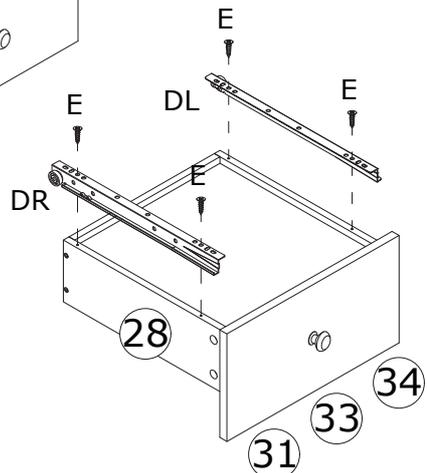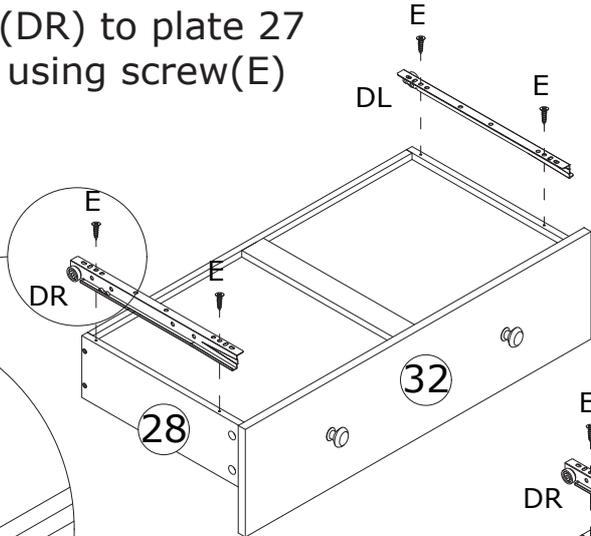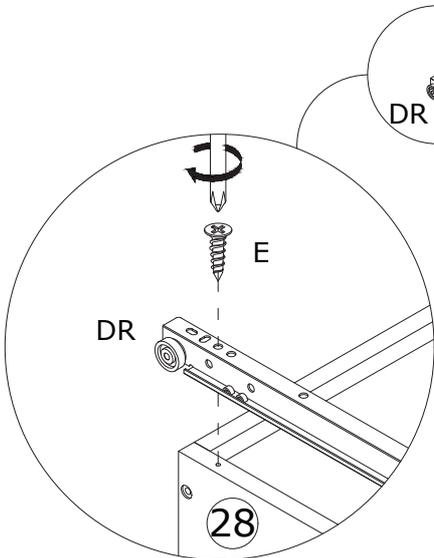

21

Bx5





Ø15x9.5mm



Dx5



  Ø6x30mm




Attach plate 13 to the base of the unit with wooden dowel(D), put cam lock(B) into holes in plate 8,10, 35,9 and turn clockwise to tighten as shown.

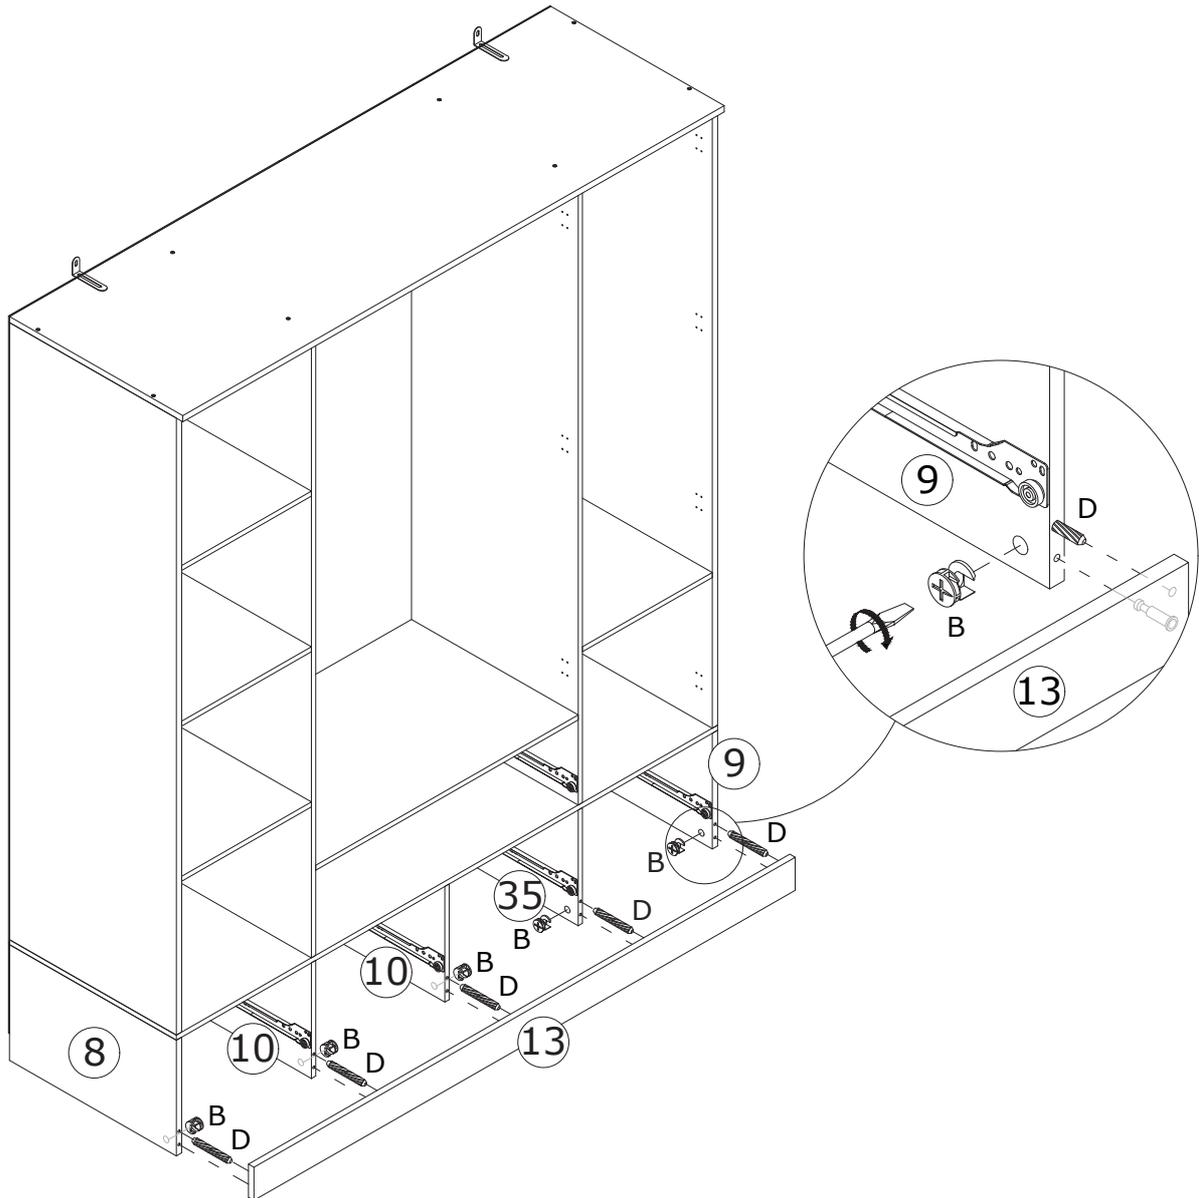
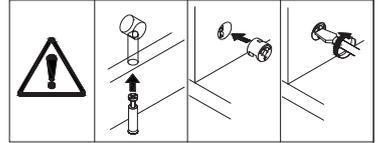


22

Align rails, slide the drawers.
Place clothing rod 20 and 21 in.

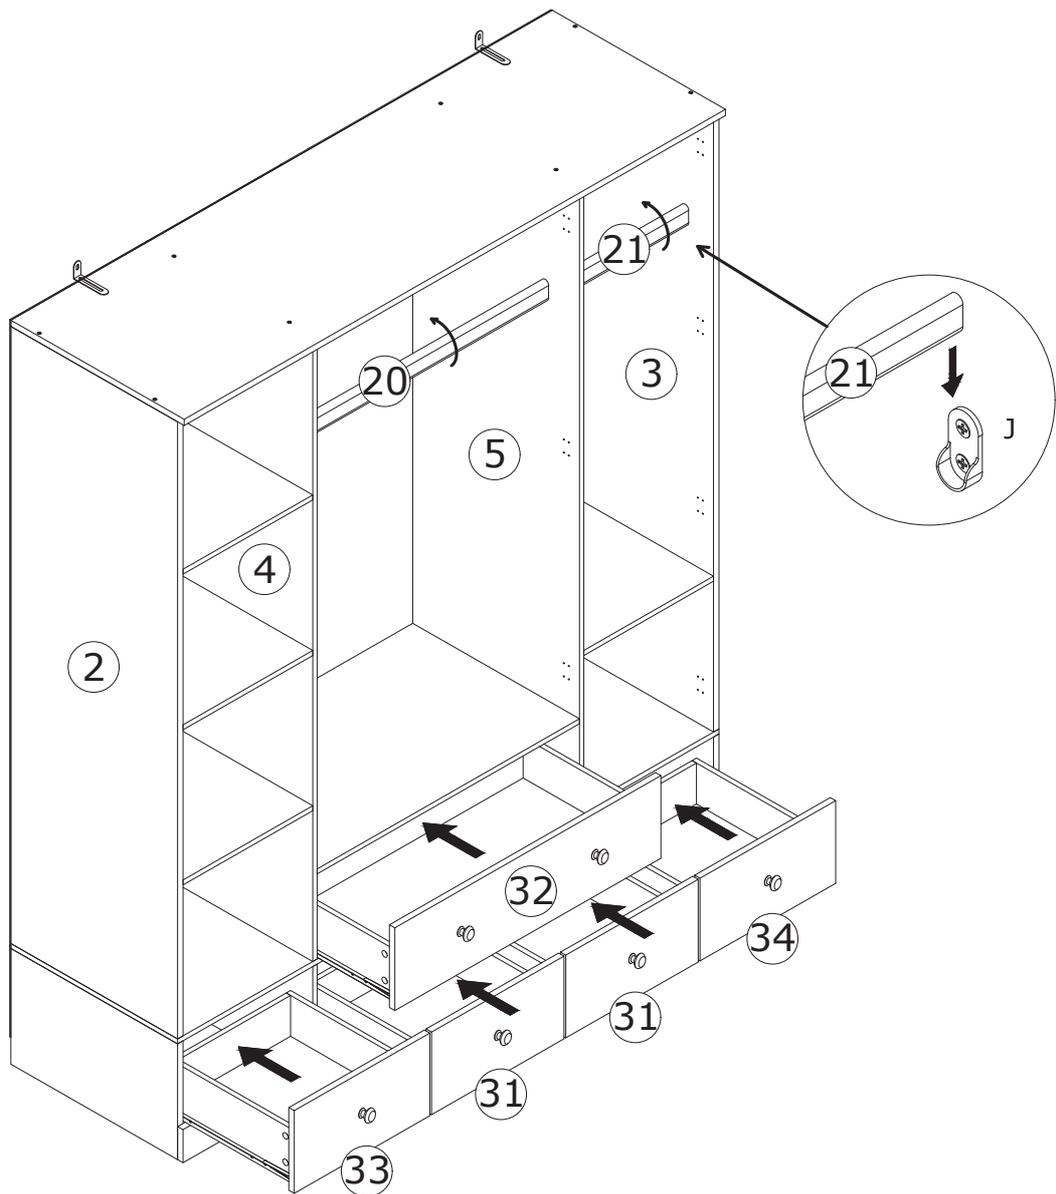


23

   Fx28 Ø4x12mm	 Gx8	 Hx4 Ø4x25mm	 Ix4	 Px6	
--	--	---	---	--	---

Fix hinge(G) to plate 22 and 23 using screw(F) as shown.

Fix hinge(P) to plate 24 and 25 using screw(F) as shown.

Fix knob(I) to these plates using screw(H) as shown.

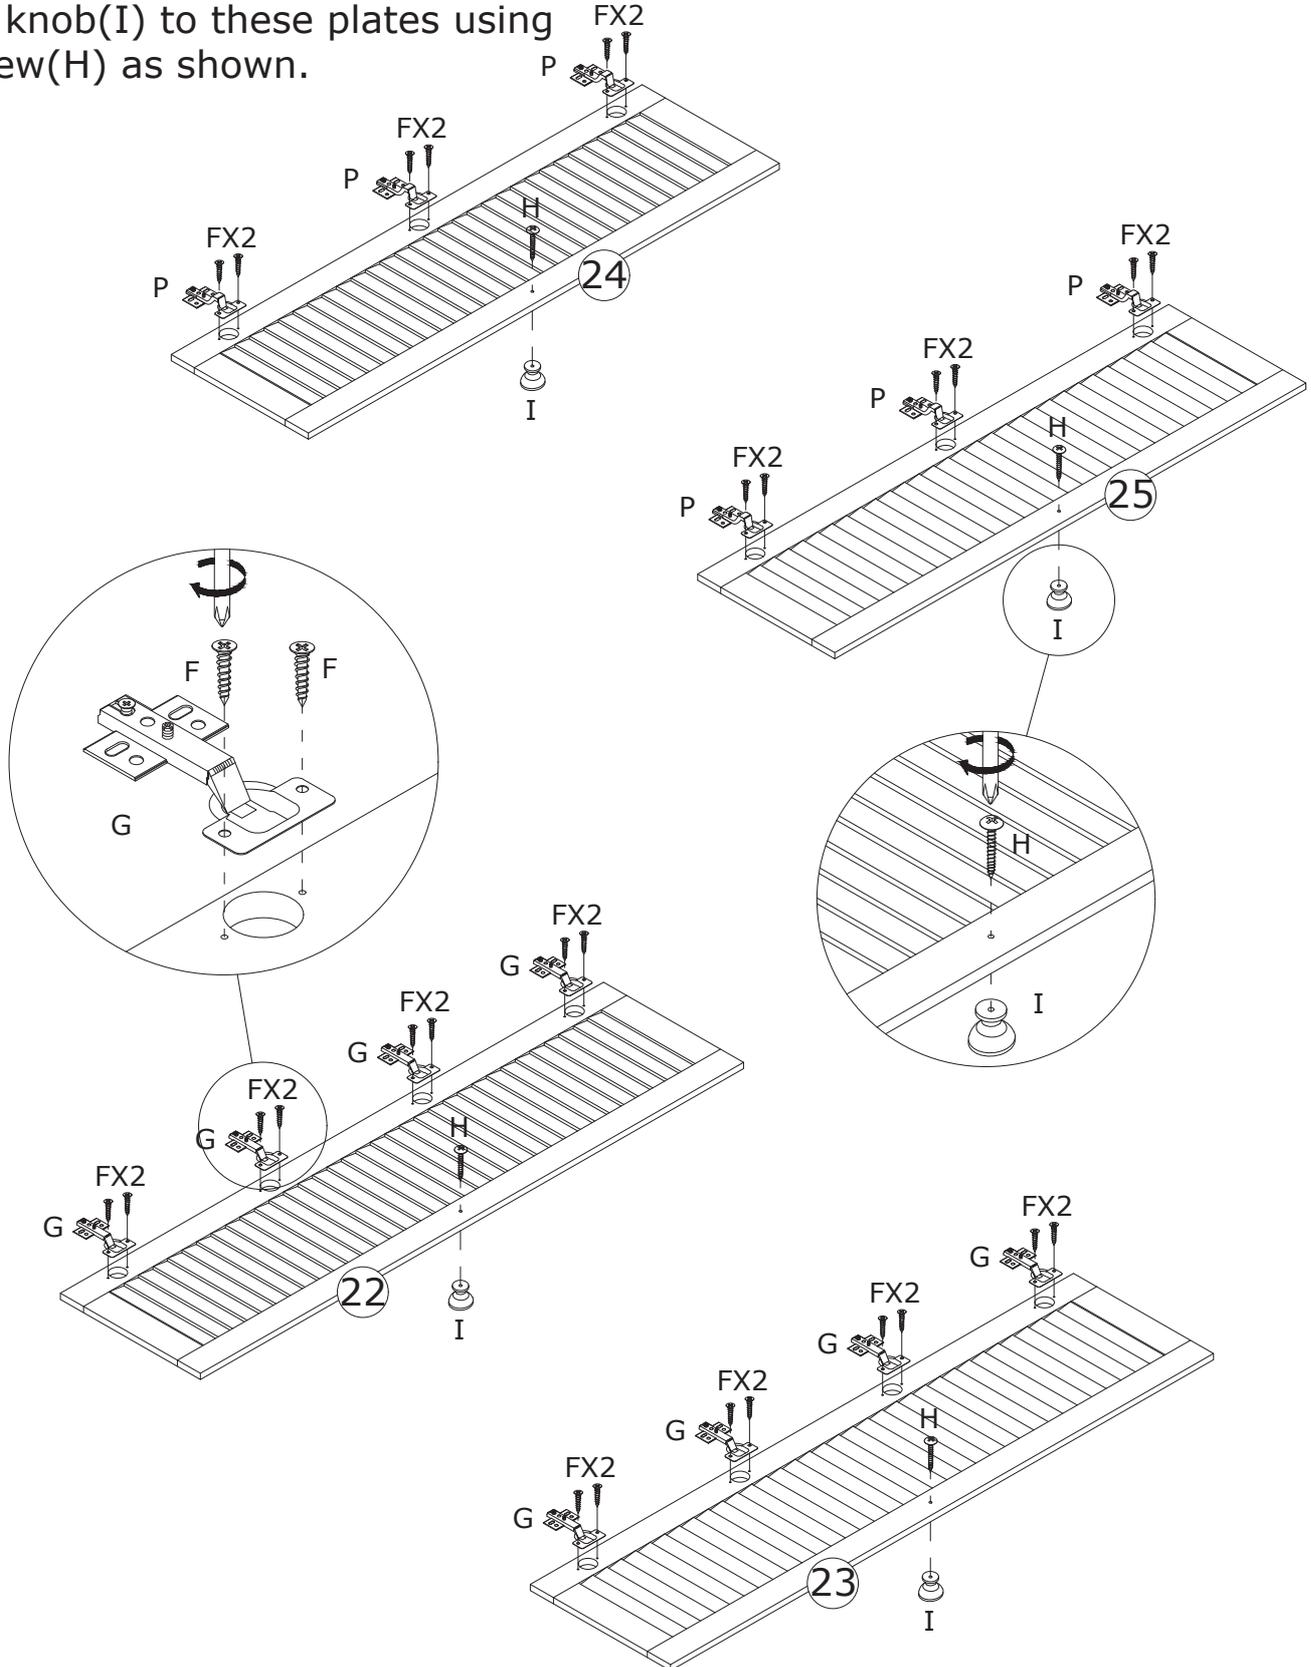


24


Fx56




 
Ø4x12mm














Attach door plate 22 to plate 2; door plate 24 to plate 4;
door plate 25 to plate 5; door plate 23 to plate 3 by fixing
hinge using screw(F) as shown.

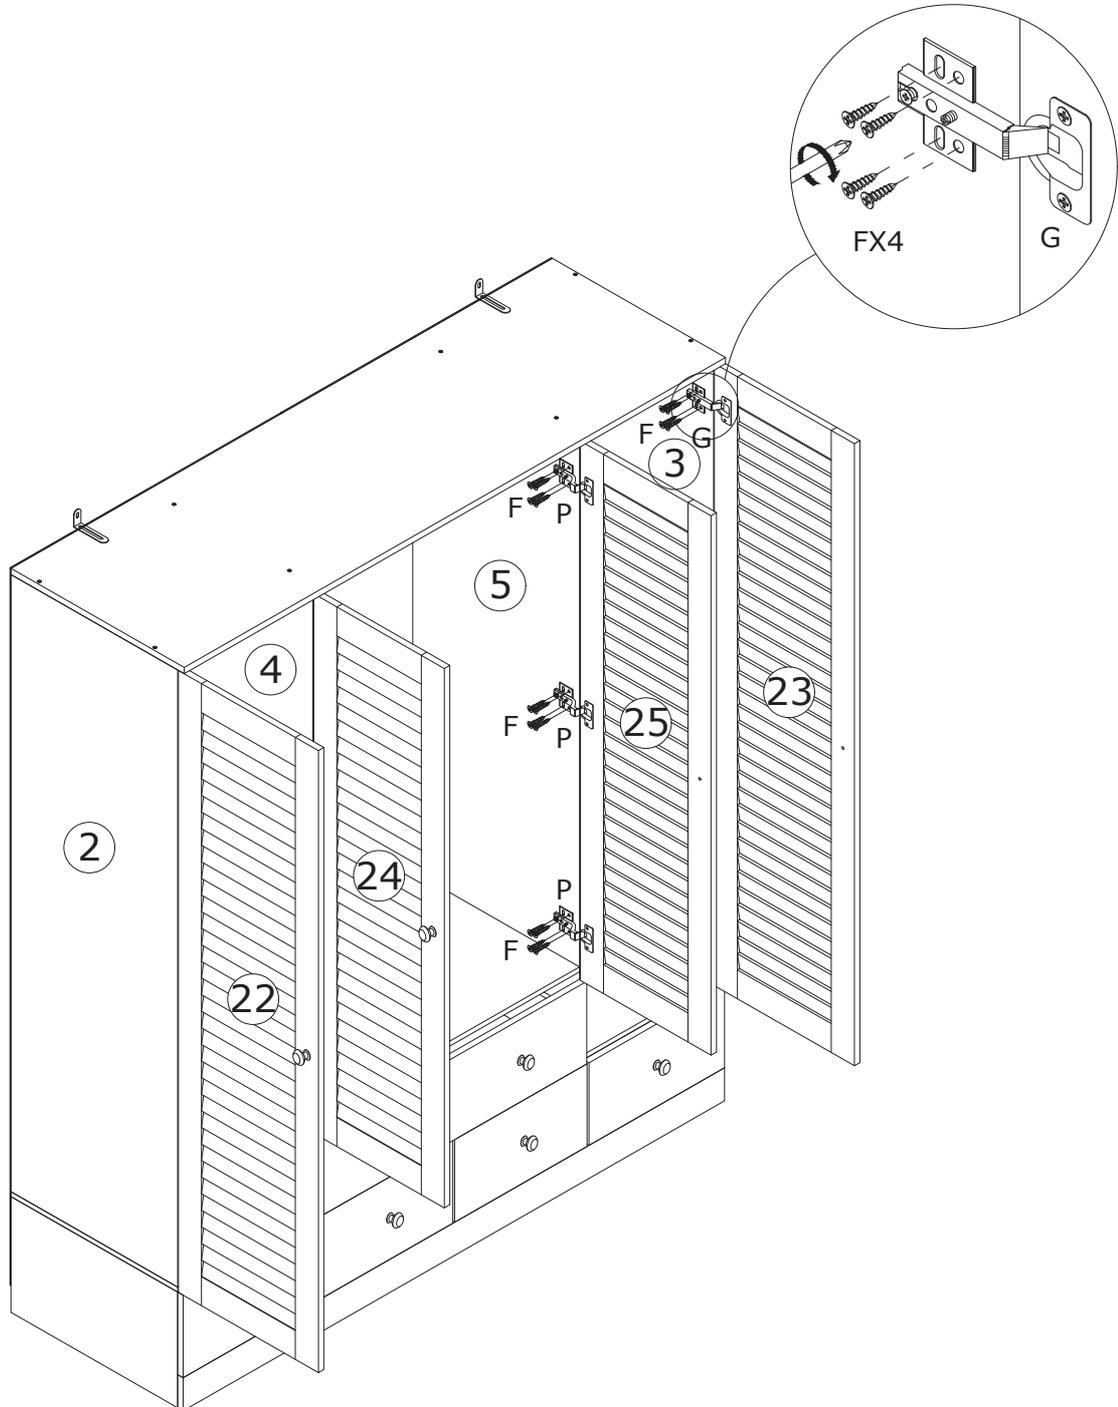



25

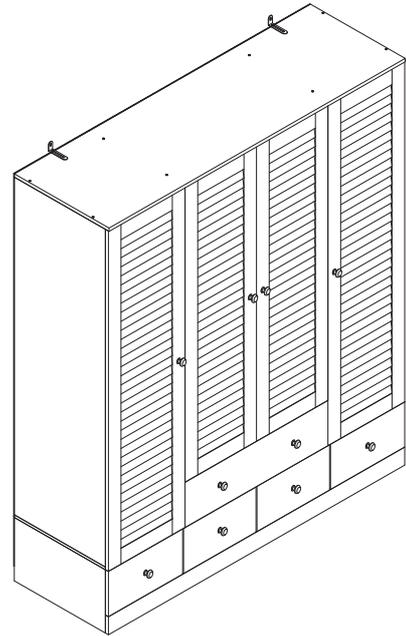 

Adjust hinge to make door alignment.

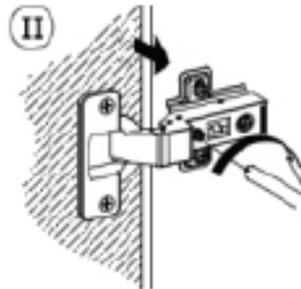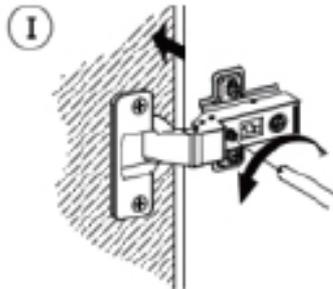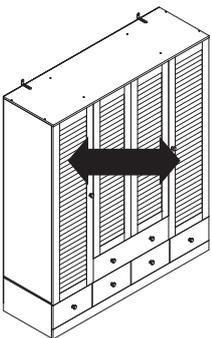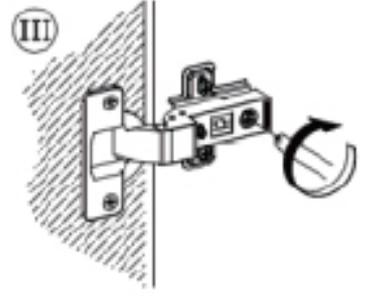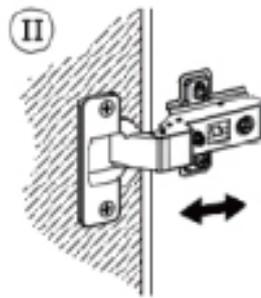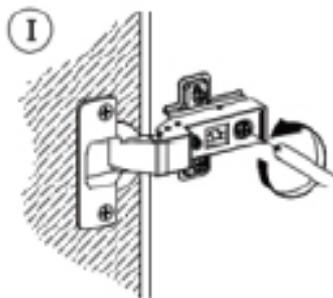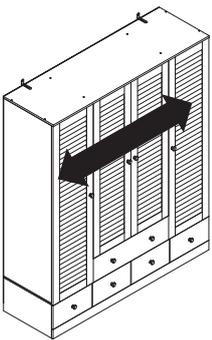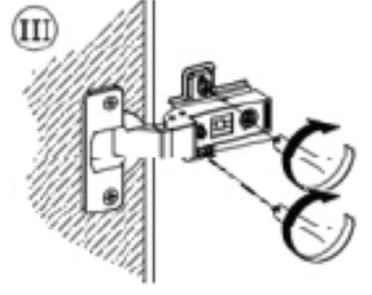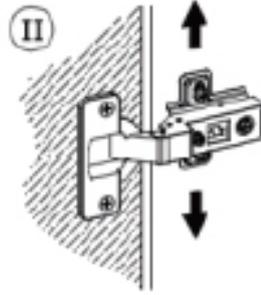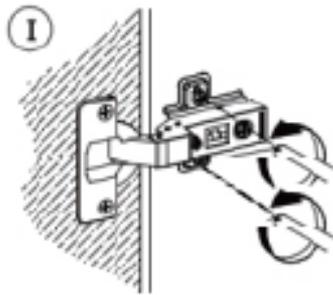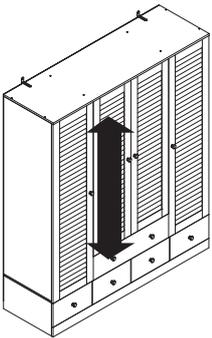


26

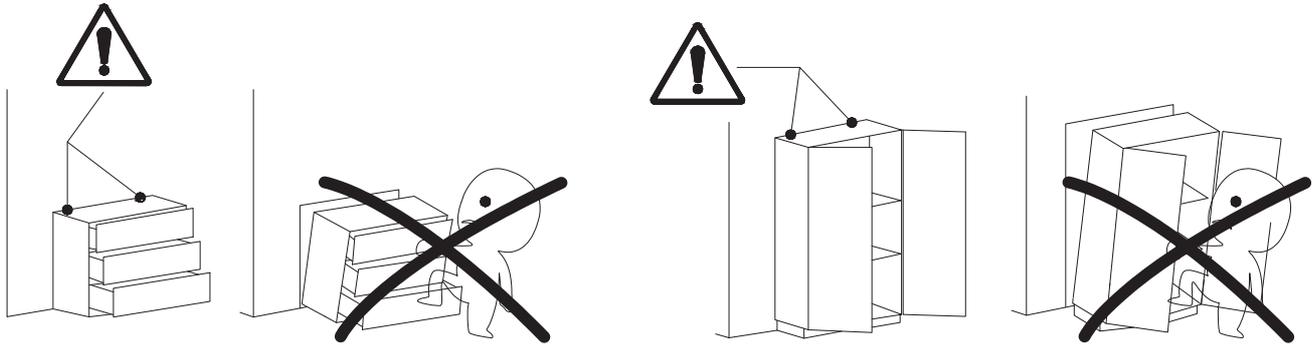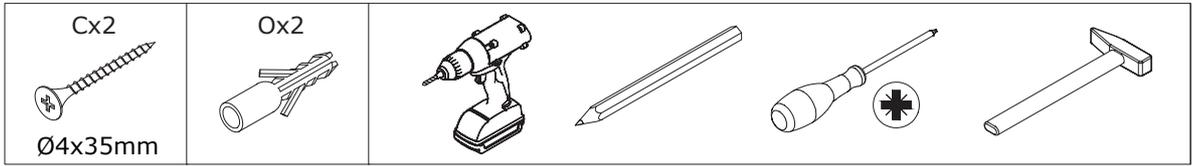

Install anti-tipping device as shown.

Once assembled lift furniture into place, do not drag. Use a drill to create a small hole lining up with the top of the safety strap (M). Fasten to wall using wall anchor (O), wall screw (C). Ensure the unit is balanced and steady before use. You're done, enjoy

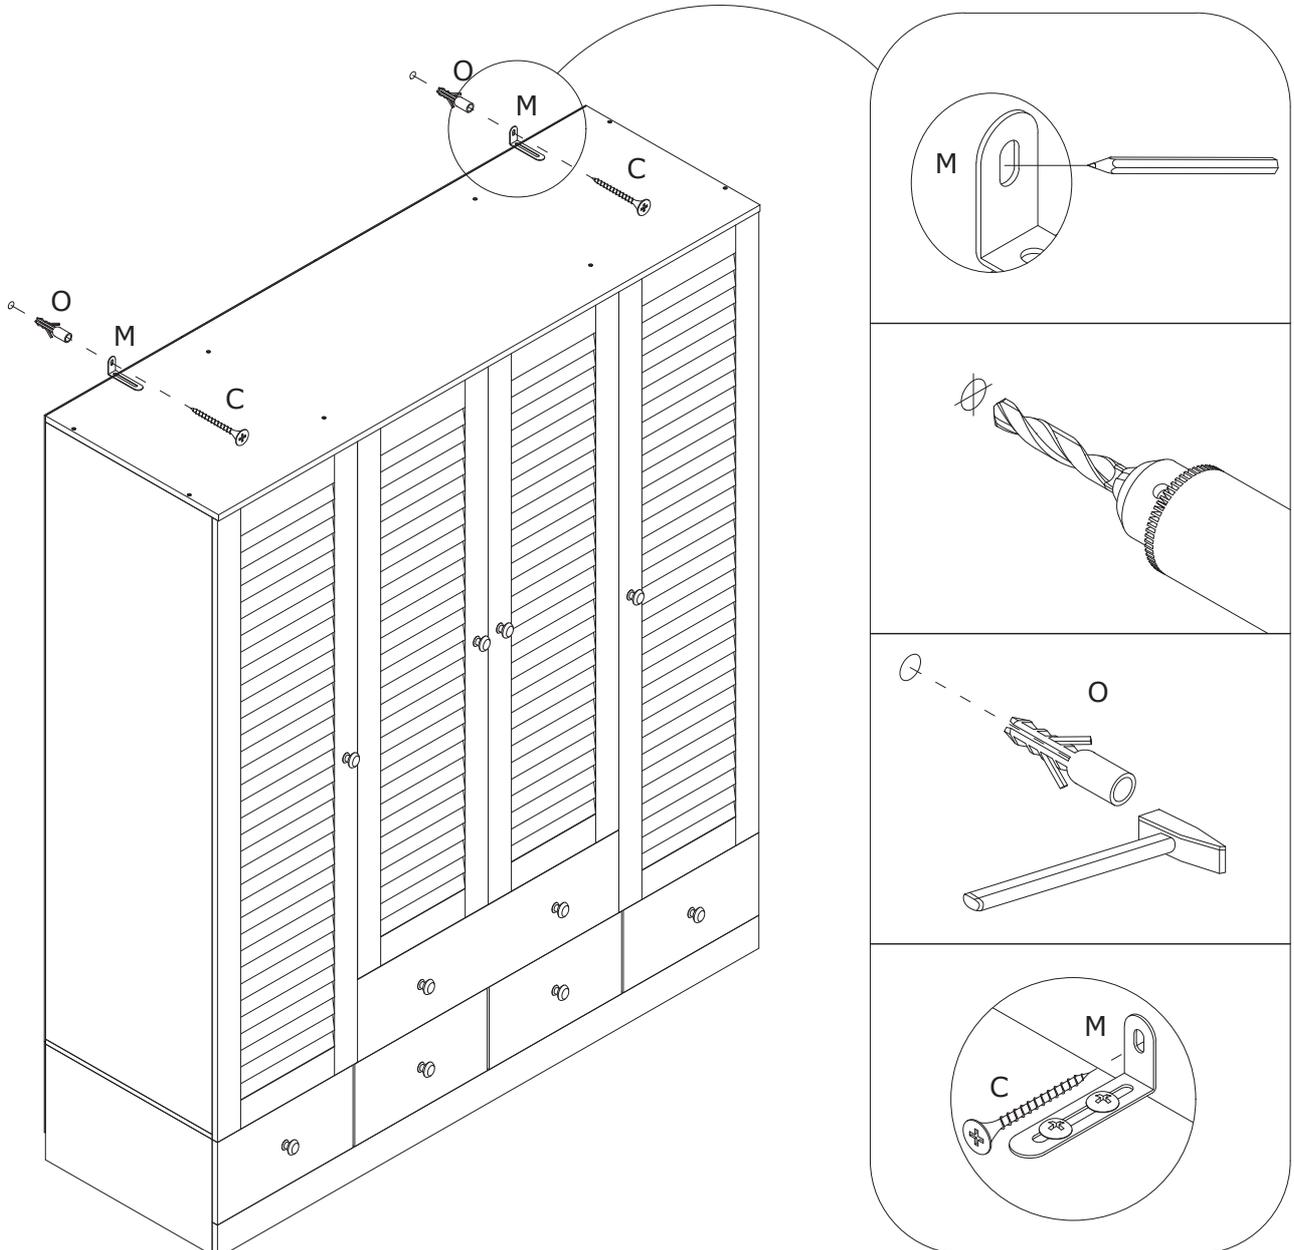

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.