



Measurement Guide – GenTent XL Inverter Kit

- This model can fit fully encased inverter generators with perimeters between 104" - 140".
- Perimeter = (Length x 2) + (Width x 2) (not including handles or wheels)

How to measure your fully incased inverter perimeter for a GenTent?

Measure the length of your inverter as well as your width:

Example Inverter: (Length) 23.2" (Width) 17.7"

(Length) 23.2" x 2 = 46.4" (Width) 17.7" x 2 = 35.4"

Perimeter total: 46.4" + 35.4" = 81.8"



Questions fitting your GenTent Running Cover?

Do not hesitate to contact us; we are here to help!

e. customercare@gentent.com

p. 781.334.8368