


CLASSIC PRE-LIT STAIRCASE SWAG Item # HDC1844



Instructions:

- 1) Place the staircase swag on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another. Slip fingers into the loop molding the loop into a rounded shape.
- 2) From back of the staircase swag, find the battery box and open it. Insert 3 AA cell batteries into the battery box then close it (see Figure A, B, C, D & E).
- 3) Each battery box is featured with a 3-position switch: Timer On Off (see Figure F: 1-Timer, 2- continuous on, 3-Off). The timer enables the LED lights to remain on for 6 hours, then off for the next 18 hours. This will repeat daily.

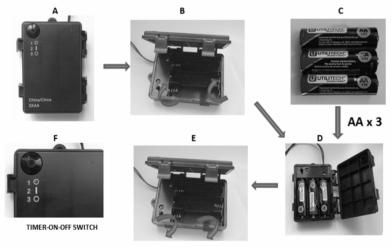

4) Locate the two sets of brown ties on the back of the swag. Separate the ties so that each set of ties looks like a V. Place the staircase swag on the baluster and wrap each set of ties tightly around it. Suitable for indoor or outdoor use.

Battery Warning:

- 1. Adult supervision is necessary when changing and disposing of batteries.
- 2. Slide switch to "OFF" position when changing batteries.
- 3. Confirm proper polarity when inserting batteries.
- 4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
- 5. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 6. Replace batteries when the light is faint.
- 7. Replace all batteries at the same time.
- 8. Remove exhausted/dead batteries from unit.
- 9. Do not short circuit terminals under any circumstances.
- 10. Do not allow the bottom of the unit to come in contact with heat.
- 11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
- 12. Remove all batteries from unit before storage.
- 13. Batteries are harmful if swallowed. Keep away from young children.

THANK YOU FOR YOUR PURCHASE

Comments or questions?

Call us at 1-877-359-0115 or

Contact us at customerservice@haute-decor.com

Haute Decor PO Box 1594 Allen, TX 75013

