


### **AC200MAX Portable Power Station**

Please read this manual before use and follow its guidance. Keep this manual for future reference.

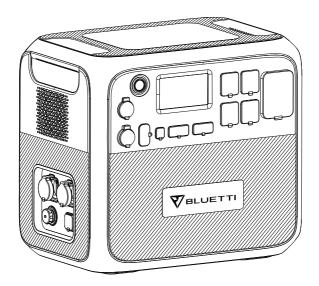

# **User Manual**

Please read this manual before use and follow its guidance. Keep this manual for future reference.

# Contents

01.	BRIEF INTRODUCTION	01
02.	ABBREVIATION	01
03.	SAFETY INSTRUCTION	01
04.	BLUETTI APP	02
05.	IN THE BOX	03
06.	FEATURES	07
07.	LET`S GET STARTED	08
08.	TOUCHSCREEN	08
09.	TOUCHSCREEN OPERATION	09
10.	CHARGING	11
11.	DISCHARGING	14
12.	APPLICATION SCENARIO	14
13.	EXAMPLES OF LOADS	15
14.	AC200MAX + B230 CONNECTION	15
15.	ESTIMATION OF OPERRTING TIME	18
16.	TECHNICAL SPECIFICATIONS	18
17.	TROUBLE SHOOTINGS	21
18.	FAQ (Frequently Asked Questions)	23
19.	DECLARATION	23
20.	FCC WARNING	24

# **1.BRIEF INTRODUCTION**

For I/O capability, the AC200MAX features higher continuous output power at 2,200W from its pure sine wave inverter, a 100W PD3.0 USB-C port, an upgraded MPPT controller which now handles up to 900W of solar input and a built-in 30A NEMA TT-30 outlet designed especially for the RV crowds. And most importantly of all after feedback and listening to our customers, finally, the BLUETTI AC200MAX supports Bluetooth connection and can be controlled by the new BLUETTI Smartphone App (iOS & Android). And it too, also supports expandable battery packs.

The AC200MAX supports up to two additional battery packs, using either the BLUETTI B230 or B300. With two BLUETTI B300 you can easily expand your AC200MAX to a massive 8192Wh of capacity to run all of your essential needs at home or on-the-go for hours, days, or even more than a week!

## **2.ABBREVIATION**

- BMS: Battery Management System
- MPPT: Maximum Power Point Tracking
- SOC: State of Charge
- AC: Alternating Current
- DC: Direct Current
- PV: Solar Panel(s) Charging (Photovoltaic)
- Grid: Home Power Supplied by Utility
- T500: 500W Adapter
- DOD: Depth of Discharge
- ECO: A power-saving setting for the AC200MAX. While it's on, the AC output ports will be automatically turned off if the load on it is less than 50W over a span of 4 hours.

## **3.SAFETY INSTRUCTION**

• DO NOT place the power station near heat sources. It is prohibited to place the equipment in an environment with flammable, explosive gas, or smoke. It is also prohibited to operate the equipment in this environment.

• DO NOT attempt to replace the internal battery or any other component of

the equipment by anyone other than authorized personnel.

• DO NOT operate in wet conditions. If the equipment becomes wet, please let the unit dry completely before using.

• Please ensure proper ventilation while in use and do not obstruct fan openings. Inadequate ventilation may cause permanent damage to the equipment.

• DO NOT move the unit while operating as vibrations and sudden impacts may lead to poor connections to the hardware inside.

• Warning: DO NOT insert foreign objects into any ports of the AC200MAX (both AC & DC & ventilation holes). The power station generates the same potentially lethal AC power as a household wall outlet. Please use it carefully and keep children away from it.

• In the case of fire, only a dry powder fire extinguisher is suitable for the product.

• For safety purposes, please use only the original charger and cables designed for the equipment. We are not liable for damage caused by third-party equipment and may render your warranty invalid.

## **4.BLUETTI APP**

Search for "BLUETTI" in the App Store (for iOS devices) or Google Play (for Android devices) to download the BLUETTI App to remotely control your AC200MAX.

The AC200MAX can be controlled via Bluetooth. In order to access the AC200MAX, please launch the BLUETTI App once downloaded and installed, and tap the "Bluetooth CONNECT" icon to register your BLUETTI AC200MAX.



The basic information of your AC200MAX can be viewed after the unit has

connected with the App successfully. Press the "gear icon" to customize the current working mode and parameters of your AC200MAX under "Settings".

TT 28 AM	2001000001943	107400	< T1.54.444	SETTINGS	æ
(***)~~		ord Ow (PR)		M2001000001943 &	
Ţ.			Screen Time	Always Dg	4
	0		Firmware Upgrade		
	36%				
	AC200M	+			
Ť	AC200M	1			
		AC CO			
		AC CO			
00		AC 😌			
ON O	, U	AC CO			
ON O	, U	AC CO			
ON O	, U	AC CO			

NOTE: Please keep your phone within 5m/16.4ft of the AC200MAX in order to reduce connectivity issues during update.

## **5.IN THE BOX**

No. Category Qu					
1	AC200MAX Power Station	1			
2	T500 500W Adapter For AC charging	1			

Standard Accessories

3	PV Charging Cable (XT90 - MC4) For solar charging, up to 15A,900W.	1
4	Car Charging Cable (XT90 - Cigarette Lighter Port) Charge AC200MAX by car.	1
5	Multi-functional Aviation Cable (XT90 - Aviation) Expand the charging methods via PV input port.	1
6	User Manual Please read the manual before use and follow its guidance, keep this manual for future reference.	1
7	Warranty Card Please keep this Warranty Card properly.	1


8 Certificate of QC PASS	1
--------------------------	---

#### **Optional Accessories**

No.	Category	Туре
9	Lead-acid Battery Charging Clamp Charging AC200MAX through lead-acid battery only. DO NOT charge the lead-acid battery via this cable.	Optional
10	Multi-functional Input Cable (XT90 - DC7909) Expand the charging methods via AC input port.	Input Cable
11	12V/30A Output Bundle (Aviation - XT60, XT60 - SPC45) Perfect for RV.	Optional Output Accessories
12	D300S PV Step Down Module Step down the voltage of solar panels(especially rigid panels) to adapt to AC200MAX solar input limit range.	Optional Accessories

13	B230 Battery Module Extra 2048Wh capacity, up to * 2 B230 can be connected to AC200MAX.	Optional Accessories
14	B300 Battery Module Extra 3072Wh capacity, up to * 2 B300 can be connected to AC200MAX.	Optional Accessories

# **6.FEATURES**

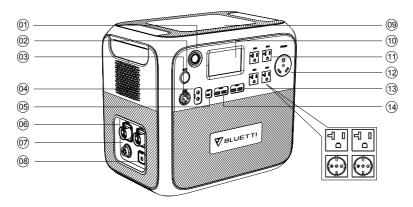

#### Power Button

Lone/Short press to turn ON/OFF the AC200MAX.

#### DC 12V/30A output

Special 30A output port can be adapted to appliances widely, perfect for RV.

#### DC 12V/10A cigarette lighter port

Output port for devices with corresponding plug such as vehicle-use vacuum, refrigerator.

#### M DC 5521 12V/10A output x 2pcs

Traditional ports for routers/cameras, old laptop etc.

#### USB-C 100W output

Can be used via USB-C to USB-C cable to charge most devices in the market such as Pixel Phone, Macbook Pro at 100W Max.

#### Battery extension port x 2pcs

The port to connect AC200MAX with B230 or B300 battery pack.

#### DC input port

Can be connected to solar panels, or achieving car charging, lead-acid battery, extra T500 adapter by extra cables.

#### AC input port

Charging via T500 adapter.

#### Wireless charging 15W x 2pcs

Place your phone(if wireless charging supported) on the top of the AC200Max vertically, and turn on the DC in mainpage on screen.

#### Touchable interaction LCD display

Can be pressed/tapped to control the unit by nails.

#### US AC output x 5 pcs(EU/UK AC

#### output x 4pcs)

Standard AC receptacle: wildly used in 100-120V areas, generates the almost same AC power as a household wall outlet. Highvoltage area uses special sockets.

#### US AC TT-30P

NEMA TT-30: connector which is the 120V/30 A recreational vehicle standard, also known as RV 30. The TT-30R receptacle is commonly available in nearly all RV parks in the United States and Canada.

 
#### USB-A 5V/3A output x 2pcs

Classic USB-A ports.

#### USB-A 18W output x 2pcs

Quick charge USB-A ports.

# 7.LET`S GET STARTED



(1) Startup: short press the power button to turn it on, the indicator light is on.

(2) Shutdown: press and hold the power button for more than 1 seconds, and the indicator light will be off.

The LED indicator lamp status			
BMS Over-current or short circuit protection	Turn off after the indicator light flashes		
BMS Startup timeout	The indicator light flashes and does not shut down		
Normal startup	The indicator light on		
Normal shutdown	The indicator light off		

(3) DC power switch and AC power switch are integrated into the interaction LCD screen(Homepage), press "DC ON/OFF" button and "AC ON/OFF" button on the screen to turn on/off the DC /AC output.

## **8.TOUCHSCREEN**

Interaction LCD screen(Information Vision) supports below functions:

(1) Real-time display of voltage, current, power, temperature and state of charge and discharge.

(2) The user can adjust the output voltage, frequency, charging mode, power consumption mode, and time information according to the setting column.

(3) Resistive touchscreen supports operate with fingernail.

(4) Support users to view fault information, BMS, DSP, ARM, HMI hardware version.

## 9.TOUCHSCREEN OPERATION


NEXT

#### Warm tip:

• The touchable LCD screen is a resistance screen. we recommend tapping the touch the touchscreen by fingernail lightly until it "beeps".

 $\bullet\,$  To maximize the lifespan of the LCD screen, please avoid direct sunlight on it.

(1) When press the power button, the mainpage will display as (Homepage).

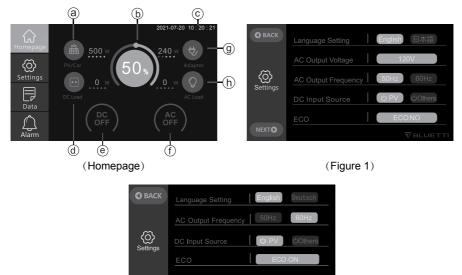

(220-240V Version)

a.PV/Car charging Info b.BMS Info

c.Date/Time

d.DC load Info

e.DC ON/OFF Switch f. AC ON/OFF Switch g.Adapter charging Info h.AC load Info (2) Tap the settings icon in the main interface (Homepage) to enter the setting interface as (Figure 1) :

Warm tip: Please enter the setting interface to set the date and time according to the local time zone, and check the output voltage, frequency and other parameters for the first time startup.


Voltage and Frequency Reference: JP: 100V/50Hz US: 120V/60Hz EU: 230V/50Hz UK: 230V/50Hz

DC Input Source: Select the right method you choose to charge AC200MAX.

ECO Mode: While it's on, the AC output ports will be automatically turned off if the load on it is less than 50W over 4 hours.

Press "Next" icon to enter date setting as (Figure 3):

Backlight and Sleep time: set the proper value as your need for power saving. Date and time: 2000-00-00, 00 : 00 : 00, tap the number to set it right.

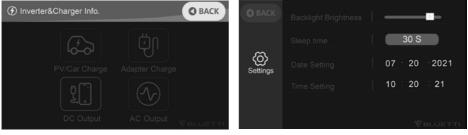

(Figure 2)

(Figure 3)

(3)Return to the mainpage, tap the "Data" icon to enter the Data page (Figure 4) :

• Tap the "Product Info" icon, you can view the product model, software version, BMS version etc;

• Tap the "Inverter & Charger Info" icon, you can view input and output information, which can also be accessed directly from the shortcut icon on the Homepage;

• Tap the "BMS Maintenance" icon to view the status of battery, and it can also be

accessed directly from the shortcut icon in the Homepage;

• Tap the "Fault History" icon, all the fault information generated by the AC200MAX in daily use.

C BACK	Product Info.	Inverter&Charger Info.
Data	BMS Maintenance	Alarm History


(Figure 4)

(4) Tap Alarm Icon (Homepage) to view the current error information: the fault indicator will display orange if there is a fault occurs.

## **10.CHARGING**

 (1) From AC wall outlet

• Turn AC200MAX ON and connect the plug of adapter to the wall outlet, the other side to AC input port. Charging will automatically stop when it reaches 100%(4.6-5.1Hrs).




(2) From the solar panels

• Connect the solar panels(in series or parallel) with Open Circuit Voltage range 10V-145V.

• Connect the solar panel to AC200MAX via solar charging cable. (Standard Accessories 5 to Accessories 3)

• Plug and play charging: AC200MAX will be activated when solar charging system built up successfully.

 
• Max input current of the solar charging:  $15.2A \pm 0.3$ .



(3) Car Charging

• Press the power button and connect it to the cigarette lighter port through the car charging cable.

 • Enter the setting interface as shown in (Figure1) through the display screen to set DC input source to car mode; The product can be charged with 8.2A maximum current.



(4) Generator Charging(gasoline, propane or diesel)

• Connect the AC adapter input to the generator and the output port to the AC charging port of the machine.

• Press the power button, the product will be charged, the charging will automatically stop when it reaches 100%.



 
(5) Lead-acid Battery Charging

• Connect to the positive and negative poles of the battery through the Charging Clamp (Accessories 9)

Note: pay attention to distinguish the positive and negative poles of the battery, the red side indicates positive pole.

• Enter the setting interface in (Figure 1) through the screen to set DC input source to "car mode" to achieve 12V/24V car charging mode, with the maximum current of 8.2A.

Note: DO NOT charge the battery through this accessory.



(6) Dual Charging


• Set the DC input source to PV to achieve AC + PV Dual Charging

• Set the DC input source to others to achieve AC + T500/Lead-Acid Battery Charging.

• ВАСК	Language Setting	• ВАСК	English Deutsch
	AC Output Voltage 120V		50Hz 60Hz
Settings	AC Output Frequency 50Hz 60Hz	Settings	එ PV එOthers
	DC Input Source UPV Others		ECO ON
	ECONO	NEVTO	ON
NEXTO	<b>V</b> BLUETTI	NEXTO	

(100-120V Version)

(220-240V Version)

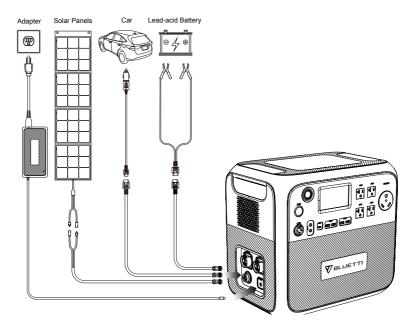

(AC200MAX Dual Charging System)

## **11.DISCHARGING**

(1) Turn on 12V/30A, 12V/10A, cigarette lighter port, USB and USB-C output: press the power button, then enter the main interface through the touch screen, tap the DC ON/OFF button and confirm.

(2) Turn off DC Output, tap the DC ON/OFF button and confirm.

(3) Turn on AC Output: press the power button, then enter the homepage through the touchscreen, tap the AC ON/OFF button and confirm.

(4) Turn off AC Output: tap the AC ON/OFF button and confirm.

## **12.APPLICATION SCENARIO**

#### (1) Outdoor

Car equipment: car fridge, car vacuum cleaner and other car equipment; Camping equipment: garden electric tools (power tools such as blowers, lawn mowers, electric drills, electric saws), BBQ grills, LED lights, etc.

#### (2) Indoor

Refrigerator, kitchen devices such as kettle, toaster, blender, coffee maker, rice cooker, laptops, phones, lighting, etc.

## **13.EXAMPLES OF LOADS**

(1) 12V/30A, 12V/10A, cigarette lighter port, USB-A and USB-C output port are suitable for most products in the market, but some products may trigger overcurrent protection if there is a large current impact at the moment of starting.

(2) The power of electrical products used for AC output should be less than 2200W. According to the different electrical products, when the rated power is less than 2200W, some air conditioners, motors and other devices that need instantaneous high current when starting may trigger overcurrent when the ratio of peak value of rated current exceeds 3:1. At this time, we recommend that you select the electrical appliances with lower power rate.

(3) When the output is overload, over-current or short circuit, the product will turn off the corresponding output port, and then it will automatically start twice (at an interval of 20s). If there is still an overload, over-current or short circuit alarm, the output port will be locked, and need to be manually troubleshooting and then restart. If the output stops repeatedly after restart, please stop using it immediately (only after troubleshooting) or contact the vendor or maintenance agent for help.

(4) When the battery power is discharged to 0%, the DC and AC output will automatically turn off. Only when the battery power is charged to more than 5%, the DC and AC output can be turned on, which is to protect the battery and enhance its cycle life.


(5) This machine supports charging and discharging simultaneously.

## 14.AC200MAX + B230 CONNECTION

#### **Capacity Expansion**


• AC200MAX can expand the capacity by 1-2 B230 battery pack to 4096 -6144Wh.

• AC200MAX can expand the capacity by 1-2 B300 battery pack to 5120-8192Wh.

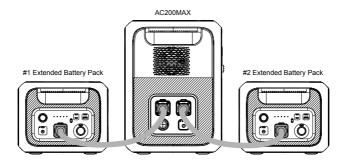


• Battery Expansion Instruction

Hotswap Expansion Battery Module B230/B300 designed to achieve capacity backup with easy plug-on P090A Battery Expansion Cabel.

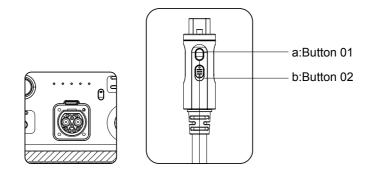

- a: Press to turn ON/OFF the Expansion Battery Function.
- b: Switch to LOCK/UNLOCK the cable with AC200MAX.
- c: Turn On B230 or B300 battery module.

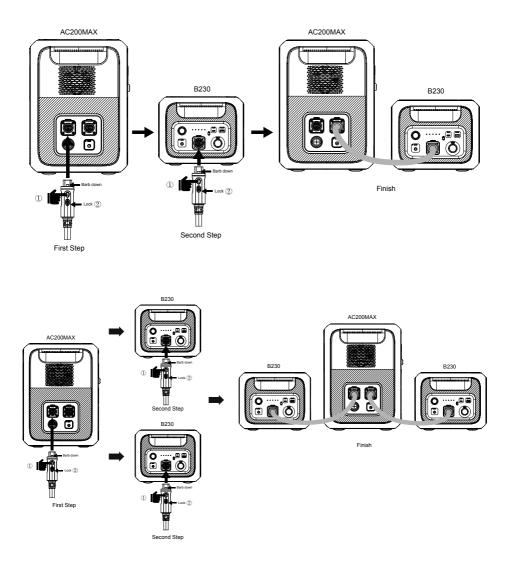

AC200MAX Capacity Extended Mode

# **15.ESTIMATION OF OPERATING TIME**



 $\label{eq:2048Wh} \begin{array}{l} \times \text{DOD} \times \eta \div (\text{load W}) = \text{charging time (unit : h)} \\ \text{Note : DOD is the battery discharge depth, } \eta \text{ is the local inverter efficiency,} \\ \text{DOD=90\%, } \eta = 88\% \text{.} \end{array}$ 

## **16.TECHNICAL SPECIFICATIONS**

Model No.	AC200MAX		
Net Weight	28.1kg (61.9lbs)		
Dimensions	420*280*386.5mm	n (16.5*11.0*15.2in)	
Charge Temperature	0-40°C (3	32-104 °F)	
Discharge	-20-40°C	(-4-104 °F )	
Temperature	-20-40 C	(	
Working Environment	t 10-90%		
Humidity	10-	-90 %	
Capacity	2048W	'h (40Ah)	
Battery Type	LiFePO4		
Standard Battery			
Voltage	51.2VDC		
Category	Rated Note		
AC Output			

	100V	2000W	
Power of	110V	2200W	JP
Output	120V	2200W	US
	220-240V	2200W	UK,EU
	100V	2000W <load<2500w,2min ;<br="">2500W<load,8~10s< td=""><td>Error Range : ± 30W ;</td></load,8~10s<></load<2500w,2min>	Error Range : ± 30W ;
Over-load	110V 120V 220-240V	2200W <load<2750w,2min ;<br="">2750W<load,8~10s< td=""><td>Clear the alarm history and reboot the unit.</td></load,8~10s<></load<2750w,2min>	Clear the alarm history and reboot the unit.
Surge		4800W	100ms
Frequency Inverter		50/60Hz ± 0.5Hz Default @60Hz	Frequency can be tweaked to 50 or 60Hz
Efficiency		88%	/
Short-circu Protection	uit	Yes	/
Over-temp Protection	erature	80℃± 2	Recover Temp: 75℃± 2(for hardware)
	AC & D	C will be turned off when SO	DC reaches 0%
		DC Output	
	Voltage	12V	Share 10A current with *2
Cinemette	Current	10A	DC5521 ports
Cigarette Lighter	Over-load Power	145W	2s, Turn off output function
Port *1	Short- circuit Protection	Yes	Turn Off all DC output ports.
	Voltage	12V	Share 10A current with *2
	Current	10A	DC5521 ports
DC5521 *2	Over-load Power	145W	2s, Turn off output function
2	Short- circuit Protection	Yes	Turn Off all DC output ports.

RV *1	Voltage	12V	1
	Current	30A	/
	Over-load	400W	2s, Turn off output function
	Power		
	Short-		
	circuit	Yes	Turn Off all DC output ports.
	Protection		

Note:

a: 30A Max. current for all DC output port

b: The cigarette lighter port will be shut off once overload.

c: 12V/30A port will be shut off when overload again.

C. 12 7/ 50/		c shut on when overload ag	
	Voltage	5V	
	Current	3.0A	3A for both
USB-A *2	Short- circuit Protection	Yes	Recover automatically
USB-A	Voltage	5-12VDC	Support QC3.0
Quick	Current	3A * 2	18W * 2, MAX
*2	Short-circuit Protection	Yes	/
	Standard	Support PD3.0(Max.100W)	
Type-C *1	Specs	5VDC,3A,15W Total	
	Short-circuit Protection	Yes	/
Wireless	Standard	Support QI protocol	Please place the
Charging *2	Power 5/7.5/10/15W * 2		wireless device vertically.
		Solar Input	
Power of Input		900W	/
Over-voltage Protection		145VDC	/
MPPT Voltage Range		10-145VDC	
Current		15A	/
MPPT Quantity		1/1	/

T500 Adapter	500W	/
charging (On PV input port)	8A	/
	11.5-14.5V	Set DC input source on
Car Charging	23-29V	screen : Others
Car Charging	8A	12V Lead-acid Battery: 11.5V $\pm$ 0.2V ; 24V Lead- acid Battery: 23V $\pm$ 0.2V

Note : PV Input, Car Charging and additional T500 shares the same Aviation Port.

T500 AC Adapter		
Input Voltage	100-240VAC	/
Voltage Range	58.8V	/
Max. Charging Power	500W	/

Note:

a: AC200MAX can be automatically activated(turn the unit ON without pressing the power button from POWER OFF) via solar power. Please unplug the DC input cable if you want to enable the auto activation.

b: AC200MAX is not able to activate via adapter.

c: Simultaneous charging&discharging supported.

#### **BLUETTI APP(Bluetooth)**

Firmware Update	5m/16.4ft	/
Wireless Connect	10m/32.8ft	/

## **17.TROUBLE SHOOTINGS**

Error Code	Description
001	PV Over Voltage
004	DC Output Short Circuit
005	Adapter Over Voltage
006	Adapter Low Voltage
007	Adapter Relay Error
008	Adapter Over Current
010	USB/TYPE-C/PD Over Current

01112V/10A Over Current01212V/30A Over Current014DC Start Failure015DC Output Relay Error016Bus Start Failure017Inverter Start Failure018Bus Low Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter High Voltage023Inverter High Frequency025Battery High Voltage027Battery Low Voltage028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
014DC Start Failure015DC Output Relay Error016Bus Start Failure017Inverter Start Failure018Bus Low Voltage019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter High Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
015DC Output Relay Error016Bus Start Failure017Inverter Start Failure018Bus Low Voltage019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter How Frequency023Inverter High Frequency025Battery High Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
016Bus Start Failure017Inverter Start Failure018Bus Low Voltage019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter High Voltage023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
017Inverter Start Failure018Bus Low Voltage019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter High Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load033DSP Communication Error
018Bus Low Voltage019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter Low Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
019Bus High Voltage020Inverter Low Voltage021Inverter High Voltage022Inverter Low Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Short Circuit033DSP Communication Error
020Inverter Low Voltage021Inverter High Voltage022Inverter Low Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load033DSP Communication Error
022Inverter Low Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
022Inverter Low Frequency023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
023Inverter High Frequency025Battery High Voltage026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
026Battery Low Voltage027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
027Battery Unconnected028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
028Fan Error029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
029NTC Error030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
030Calibration Error031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
031Inverter Over Load032Inverter Short Circuit033DSP Communication Error
032Inverter Short Circuit033DSP Communication Error
033 DSP Communication Error
034 BMS Communication Error
035 EEPROM Read_write Error
036 Parameters of Control Module Error
041 BMS Temperature Error
042 BMS Over Voltage
043 BMS Low Voltage
044 BMS Over Current
045 BMS Pre-charge Failure
046 BMS Output Short Circuit
051 AC Output Locked
053 USB/TYPE-C/PD Locked
054 12V10A Locked
055 12V30A Locked

# 18. FAQ (Frequently Asked Questions)

• How to claim the warranty?

Please place your after-sale requirement as the warranty card written to the vendor where you order the product.

• Can the unit be upgraded?

When AC200MAX connected with BLUETTI App via bluetooth, the firmware including ARM, DSP, IoT and BMS can be upgraded online through OTA.

• Can it be charged and discharged at the same time? Yes.

• How to store the AC200MAX ?

We recommend charging the unit to 60-80% SOC every 3 months to extend the battery life.

## **19. DECLARATION**

• Some changes may occur without notice such as external appearance or specifications due to availability of material supplies or hardware improvements of the product and APP over time.

• Our company shall not be liable for any damage caused by force majeure such as fires, typhoons, floods, earthquakes or the user's intentional negligence, misuse or other abnormal conditions.

• No compensation for damages shall be made for utilizing non-standard adapters and accessories.

•This unit is not suitable for use on the relevant equipment or machines involving:

Personal safety, such as atomic energy devices, Hi-Fi player devices, emergency medical devices, etc., or any equipment or machines that require extremely highly reliable power sources. We are not responsible for accidents, fires, wrongful or negligent actions caused by such equipment or machines which results in damage.

# **20. FCC WARNING**

This device complies with Part 15 of the FCC Rules.

Operation on the product is subject to the following conditions:

(1) this device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.65ft between the radiator and your body.

#### EU REP

Company: POWEROAK GmbH Address: Lindwurmstr. 114, 80337 München Germany Mail: logi@bluetti.de

Company: POWEROAK ENERGY UK CO.,LTD Address: Suite 108 Chase Business Center 39-41 Chase Side London United Kingdom N14 5BP Mail:poweroak.eu@bluetti.com

UK REP

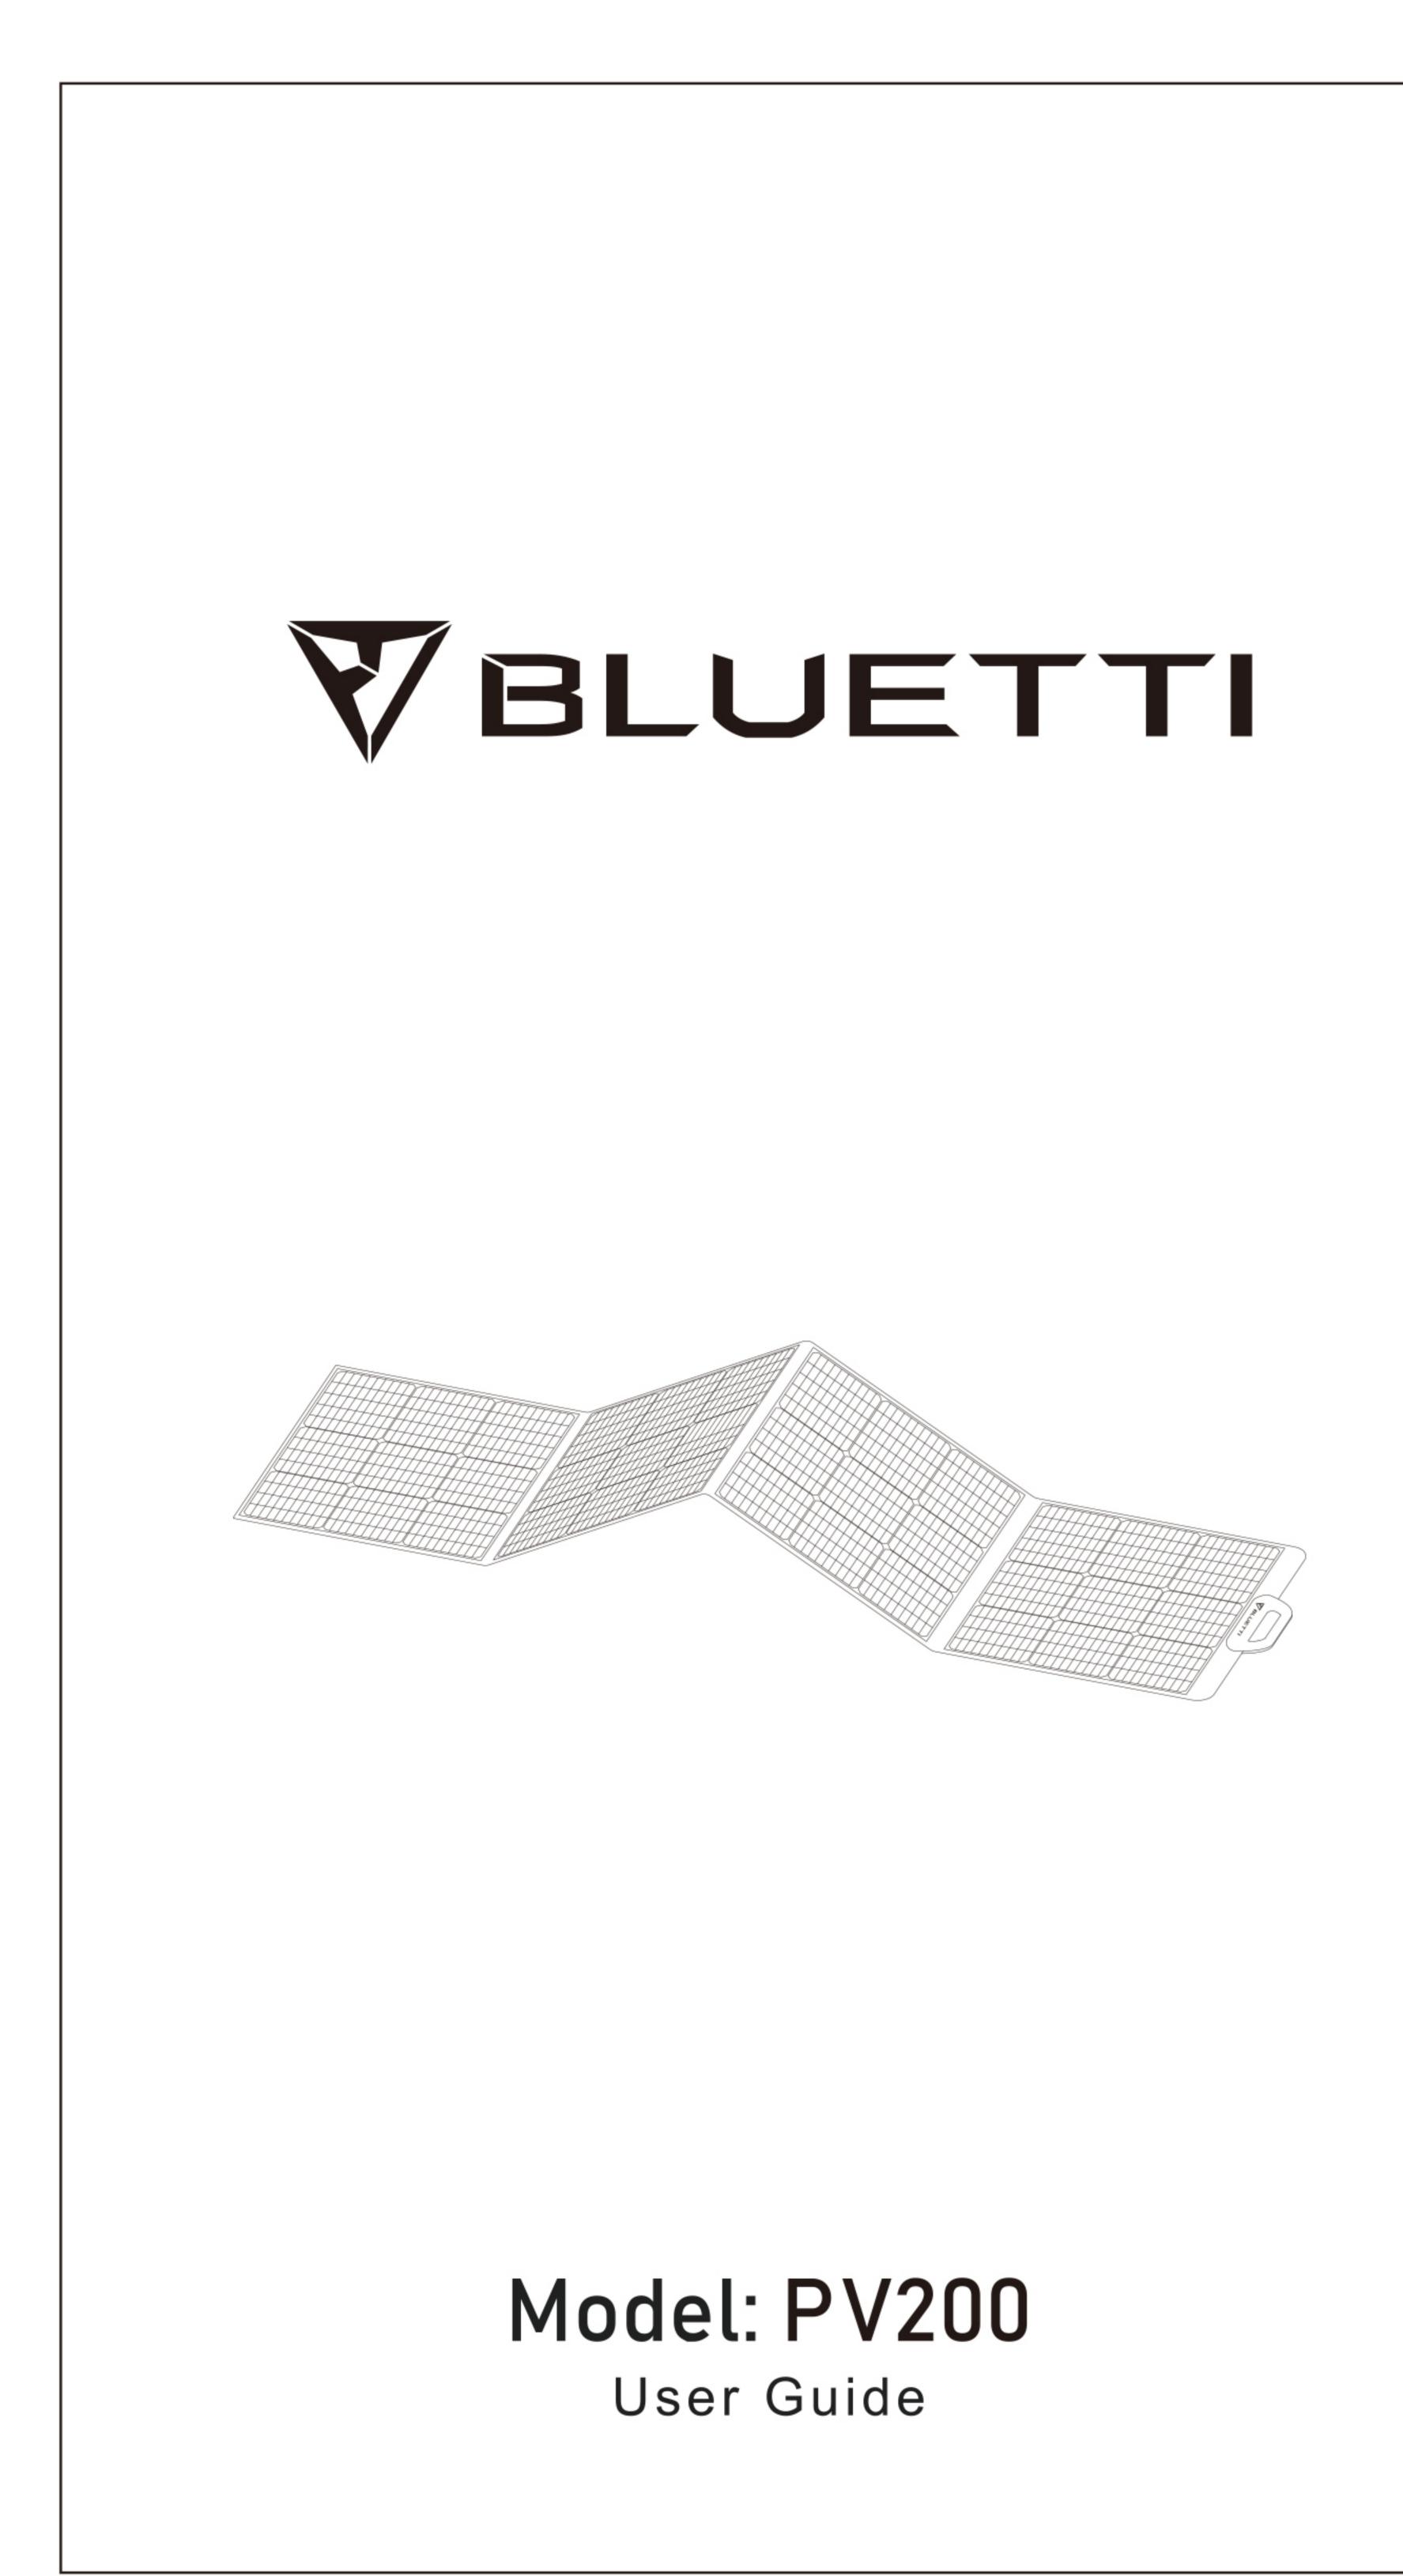

Technical Details:	
Model:	PV200
Peak Power(Pm):	200W
Solar Cell Lamination:	ETFE
Cell Efficiency:	Up to 23.4%
Voltage at Max Power(Vmp):	20.5V
Current at Max Power(Imp):	9.7A
Open Circuit Voltage(voc):	26.1V
Short Circuit Current(Isc):	10.3A
Operating Temperature:	-10°C∼+65°C
Best Working Temperature:	+25°C
Folding Number:	4
Dimension(unfolded):	590*2265mm/23.2*89.2inch
Dimension(folded):	590*630mm/23.2*24.8inch
Weight:	7.3kg/16.1lbs
Warranty:	24 months

# Safety Tips:

- Do not bend the solar panel.
- Do not soak the solar panel into water or any other liquid.
- Do not use or store this solar panel near fire or heater.
- Do not scratch the solar panel with sharp objects.
- Do not dissemble the solar panel by yourself.
- Do not put corrosive substance on this solar panel.
- Ensure shade from trees, buildings, and any other obstructions do not block sunlight while using the panels.
- Do not use this product as a children's toy.
- Please note that the solar panel may be damaged by falling or impact.
- During recharging, keep your portable power station away from heat and direct sunlight to extend its life span.



# Warranty:

24 months warranty and lifetime technical support.

# FAQ(Frequently Asked Questions) Q: The compatibility of the solar panel.

Currently compatible with below models but not limit to:

- AC30S(300Wh)
- AC50S(500Wh)
- EB55(537Wh)
- EB70(716Wh)
- EB150(1500Wh)
- EB240(2400Wh)
- AC200/AC200P/AC200Max/AC300

 $\stackrel{ imes}{\to}$  Tips: To confirm the solar panel's compatibility with 3rd-party devices, please consult the seller.

# Q: What factors may affect the solar conversion rate?

- 1. The weather condition.
- 2. Working environment temperature.
- 3. The length of solar panels.
- 4. The angle from the panels to sunlight.

# How to decide the number of panels required to recharge?

- 1. The output power of solar panels should fit the recommended voltage.
- The max open circuit voltage is not able to exceed in the max input voltage of power station.
- The gross output current of solar panels should be between the recommended working voltage.

When using multiple solar panels in series or parallel, please make sure that the accumulated maximum voltage and current of the solar panels does not exceed in the maximum voltage and current of the power station.

# Q: ls it waterproof?


In order to maximize the lifespan of the solar panel, please try not to get it wet or soak the solar panel into water.

# Contact us

If you have any questions, request a replacement or refund for defective product, please email us. We will get you back as soon as possible.

# For more information, please visit our website or E-mail:

www.bluettipower.com service@bluettipower.com

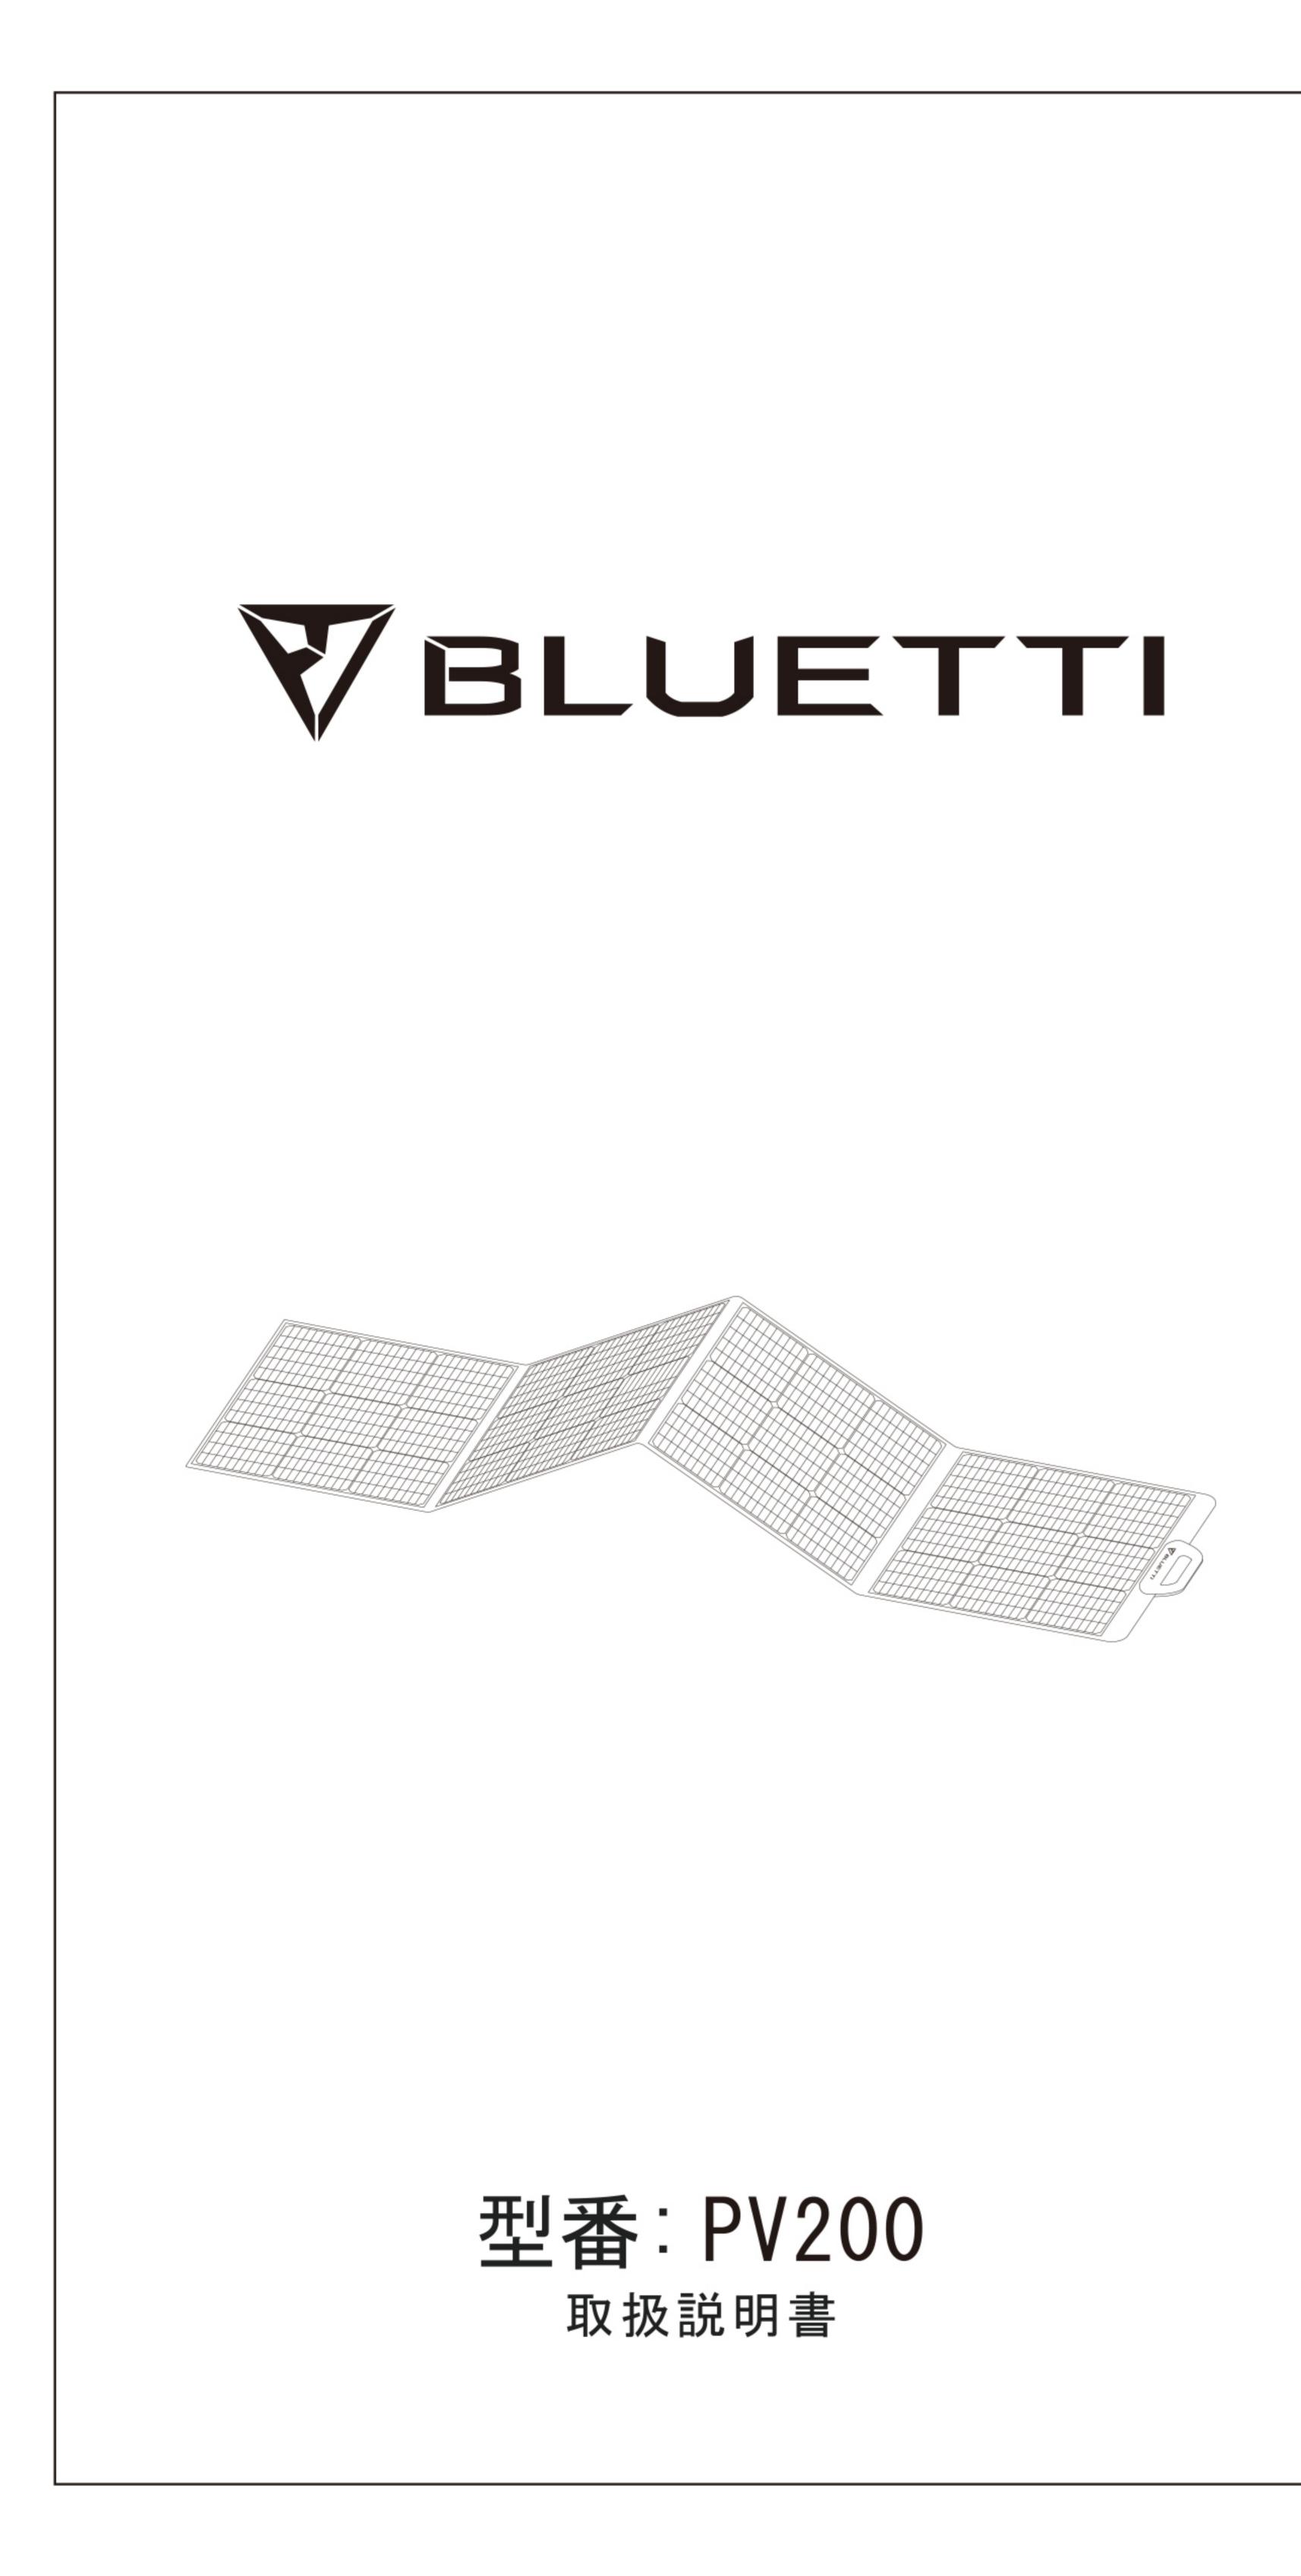

仕様:	
型番:	PV200
最大出力(Pm):	200W
太陽電池積層方式:	ETFE
セール変換効率:	Up to 23.4%
出力電圧(Max.):	20. 5V
出力電流(Max.):	9. 7A
開路電圧(Voc):	26. 1V
短絡電流(Isc):	10. 3A
作業環境温度:	−10°C~+65°C
ベストワーキング温度:	+25°C
折り畳み枚数:	4枚
サイズ(展開時):	590*2265mm/23.2*89.2inch
サイズ(収納時):	590*630mm/23.2*24.8inch
重さ:	7.3kg/16.11bs
保証期間:	24ヶ月

# 使用上のご注意:

- 本体を折らないでください。
- 本体の内部に水が入らないようにしてください。
- ヒーターや火などの熱源の近くに本製品を設置しないでください。
- 本体に鋭いもので触らないでください。
- 分解や改造は行わないでください。
- 清掃には洗剤·薬品類を使用しないでください。
- ソーラーパネルを日陰にならない場所に設置してください。
- 幼児、子供の手の届く範囲に放置しないでください。
- 落下や衝突などの衝撃などにより、けが・故障の原因になるおそれがあります。
- ポータブル電源に充電する場合、ポータブル電源に日射が直接あたらないように設置してください。また、ポータブル電源を火気の近くや高温になる場所に設置しないでください。



# 保証規定:

当社は、購入日から24ヶ月の保証をお客様に提供します。

# FAQ(よくあるご質問) Q:本製品に使えるBLUETTIのポータブル電源を教えてください。

A:下記BLUETTIポータブル電源が含まれますが、これらに限定されません。

- EB55
- EB70
- EB150
- EB240
- AC200/AC200P/AC200MAX/AC300

☆ご注意:他社製品のポータブル電源に充電したい場合、該当ポータブル 電源の販売先へお問い合わせください。

# Q:ソーラーパネルの転換率に影響がある要因は何ですか?

1.太陽光の強さ

- 2.設置環境の温度
- 3.ソーラーパネルの設置角度
- 4.ソーラーパネル電線の長さ

# Q:ポータブル電源に何枚のソーラーパネルを並列で使えますか?

1.ポータブル電源の最大入力電力を確認 2.ポータブル電源の最大入力電流を確認 3.ソーラーパネルの最大出力を確認

☆ 複数のソーラーパネルを直列接続あるいは並列接続する時に、 最大値は上記の仕様基準値を超えないでください。

# Q:本製品は防水ですか?

ソーラーパネルの寿命長持ちするため、使用時湿気及び水を避け て、濡れないようにご注意ください。

# お問い合わせ:

本製品に関するお問い合わせ、ご質問などがありましたら、当社のサイトまでにご 連絡ください。万一不具合のあった場合、大変申し訳ございませんが、(返品か、 交換か)迅速に対応させていただきます。 製品についてもっと詳しい情報を知りたい方は 当社オフィシャルサイトをご利用ください: www.bluetti.jp お問い合わせ先: bluetti.jp@bluetti.com