

 
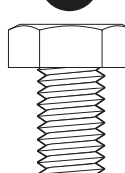
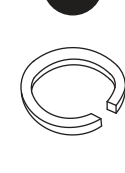
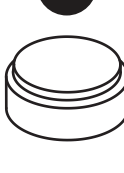
PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Rim	1
B	Leg	4

PART	DESCRIPTION	QUANTITY
C	Center frame	1
D	Top panel	4

Lowes.com/allen+roth **allen + roth**

HARDWARE CONTENTS (not shown actual size)

				
M6 x 32 mm Bolt Qty. 8	M6 x 18 mm Nut Qty. 8	M6 Washer Qty. 16	M6 Lock Washer Qty. 16	M6 Bolt Cap Qty. 16

M6 x 32 mm
Bolt
Qty. 8

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble or install the product.

- Do not allow children to climb or play in or around this product.
- Do not drag table on any surface to avoid damage to table finish and/or floors.

PREPARATION

Before beginning assembly, remove all parts from carton. Compare parts with package contents list and hardware contents list. Remove all protective material carefully. DO NOT use a knife to avoid cutting the surface of the furniture. If any part is missing or damaged, do not attempt to assemble or use the product.

Estimated Assembly Time: 15-20 minutes

Tools Required for Assembly (not included): Adjustable Wrench

Lowes.com/allenandron **allen + roth**

3

ASSEMBLY INSTRUCTIONS

1. Turn the rim (A) upside down on a soft, clean surface. Attach legs (B) to rim (A) with washers (CC), lock washers (DD) and M6 x 18 mm bolts (BB). Hand tighten only.

Hardware Used

BB	M6 x 18 mm Bolt		x 8
CC	M6 Washer		x 8
DD	M6 Lock Washer		x 8

2. Attach center frame (C) to legs (B) with washers (CC), lock washers (DD) and M6 x 32 mm bolts (AA). Hand tighten only.

Hardware Used

AA	M6 x 32 mm Bolt		x 8
CC	M6 Washer		x 8
DD	M6 Lock Washer		x 8

3. Check alignment of all connections and make any necessary corrections. Then, tighten all bolts with adjustable wrench (not included) and cover with bolt caps (EE).

Hardware Used

EE	M6 Washer		x 16
-----------	-----------	---	------

Lowes.com/allenandrohr **allen + roth**

ASSEMBLY INSTRUCTIONS

4. Turn the table over and use the preassembled adjustable feet as needed to level the table.

5. Place the top panels (D) onto the rim (A).

Lowes.com/allenandron **allen + roth**

5

CARE AND MAINTENANCE

• Use mild soap and warm water. Do not use abrasive materials, cleansers or bleach products. Rinse with clean water and dry thoroughly.

• Periodically clean table and dry thoroughly. Drain any water accumulated inside the frames. To thoroughly clean frames, remove prefinished tops and lids.

WARNING: Water allowed to accumulate inside the frames that is then exposed to freezing temperatures can cause damage to the frames. Such damage is not covered under warranty.

• Always clean drain and dry thoroughly before storing. For the winter, maintain frost-free temperatures can cause damage to the frames. Do not use wax on textured or matte finishes.

• Apply a coat of quality auto wax after cleaning. Do not use wax on textured or matte finishes.

For best results, always store or cover the furniture with outdoor furniture covers when not in use.

5-YEAR LIMITED WARRANTY

Limited Warranty: This warranty is extended to the original purchaser and applies to defects in materials and workmanship of the patio furniture, provided the furniture is maintained with care and used in accordance with the care and maintenance instructions.

Frame and Welds: Frames and welds are warranted to be free from defects in material and workmanship for five years.

Obtaining Warranty Service: To obtain warranty service, contact the manufacturer's customer service center within the relevant warranty period and provide a copy of your dated register receipt as proof of purchase. The manufacturer reserves the right to request photographic evidence or return of the defective item for verification and quality control purposes. Contact manufacturer's customer service center for details on obtaining warranty claim details and procedure.

Limitations: This warranty is made by the manufacturer to the original purchaser only and is effective only when the item is purchased from an authorized dealer. This warranty is not transferable. Should the item be purchased from a non-authorized dealer, the manufacturer reserves the right to void the warranty. In the case of discontinued models, the manufacturer reserves the right to replace the item with a similar model. This warranty does not cover damage to the item based on warranty claims submitted within the first year of purchase. The manufacturer will pay all shipping and handling charges within the continental United States. After the first year, shipping and handling charges will be the responsibility of the customer. Neither manufacturer nor dealer shall be responsible for charges associated with shipments outside the continental United States at any time.

Exclusions: This warranty coverage excludes the following: any items used for commercial, contract or other non-residential purposes; clearance items, display models or items purchased at "as is," freight or delivery charges; damage caused by misuse, abuse, neglect, improper use, normal wear and tear, damage caused by acts of nature, force majeure, vandalism, fire or other casualty; damaged or missing parts; and accessories.

Also excluded is loss of use or time, inconvenience, money, travel, packaging, incidental, special or consequential damages of any kind. Replacement of defective item or parts shall constitute sole and exclusive remedy for any item which is in the warranty. In no event shall manufacturer's responsibility exceed the cost of the purchase price of the item found to be other than as warranted.

This warranty is the exclusive statement of your rights with respect to the defects in the items you have purchased and is the only other express warranty or statement, written or oral, made in connection with the purchase and sale of such item. When used herein, the term "item" when used in connection with the purchase and sale of such item. When used herein, the term "item" when used in connection with the purchase and sale of such item. When used herein, the term "item" when used in connection with the purchase and sale of such item. Some states do not allow exclusion or limitation of incidental or consequential damages, so that the above limitation may not apply to all warranties given by specific legal rights, and you may have other rights which vary from state to state.

Loveson.com/alenandorh allen + roth

[illegible]

welcoming • sophisticated • inspiring

allen + roth®

allen + roth® est une marque de commerce déposée de L.F. LLC. Tous droits réservés.

ARTICLE #0030411

TABLE BASSE RONDE

MODÈLE #HJ-968-1ARA

JOIGNEZ VOTRE REÇU ICI _____

Número de série _____ Date d'achat _____

Des questions, des problèmes, des pièces manquantes? Avant de retourner l'article au détaillant, appelez notre service à la clientèle au 1 866 439-9800, entre 8 h et 20 h (PNE), du lundi au vendredi.

Lowes.com/allenandroth **allen + roth®**

CONTENU DE L'EMBALLAGE

The diagram illustrates the components of the 'Le Jardin' garden stool. It consists of a central circular base (A) with four curved legs (B) attached via a central ring (C). The legs are connected to the base by four curved braces (D). The entire assembly is shown in a perspective view at the top and a top-down view at the bottom.

PIÈCE	DESCRIPTION	QUANTITÉ
A	Bordure	1
B	Pied	4

PIÈCE	DESCRIPTION	QUANTITÉ
C	Cadre central	1
D	Panneau supérieur	4

Lowes.com/allenandroth **allen + roth**

QUINCAILLERIE INCLUSE (non illustrée à la grande échelle)

The diagram illustrates five types of hardware components used for assembly:

- AA**: A long bolt with a hexagonal head. Label: **Boulon M6 de 32 mm**, Qté : 8.
- AB**: A shorter bolt with a hexagonal head. Label: **Boulon M6 de 16 mm**, Qté : 8.
- CC**: A flat washer. Label: **Rondelle C16**, Qté : 16.
- DD**: A lock washer with a hexagonal head. Label: **Rondelle de blocage M6**, Qté : 16.
- EE**: A hexagonal cap nut. Label: **Cache-boulon M6**, Qté : 16.

⚠️ CONSIGNES DE SÉCURITÉ

Assurez-vous de lire et de comprendre l'intégralité de ce manuel avant de tenter d'assembler ou d'installer l'article.

- Ne laissez pas les enfants grimper ou jouer sur l'article ni autour de celui-ci.
- Ne tirez pas sur le sol pour éviter d'endommager le fini de la table ou le plancher.

PRÉPARATION

Avant de commencer l'assemblage de l'article, retirez toutes les pièces de l'emballage. Comparez le contenu de l'emballage avec la liste des pièces et celle de la quincaillerie incluse. Retirez délicatement tous les matériaux protecteurs. Ne vous servez PAS d'un couteau pour les retirer afin d'éviter d'égratigner la surface du meuble. S'il y a des pièces manquantes ou endommagées, ne tentez pas d'assembler ni d'utiliser l'article.

Temps de préparation approximatif : de 15 à 20 minutes.

Outils nécessaires pour l'assemblage (non inclus) : clé à molette.

Lowes.com/aliendroth **allen + roth**

10

INSTRUCTIONS POUR L'ASSEMBLAGE

 
1. Placez la bordure (A) à l'extérieur sur une surface souple et propre. Fixez les pieds (B) à la bordure (A) à l'aide de rondelles (CC), de rondelles de blocage (DD) et de boulons M6 de 18 mm (BB). Serrez le tout à la main seulement.

Quincaillerie utilisée

BB	Boulon M6 de 18 mm		x 8
CC	Rondelle M6		x 8
DD	Rondelle de blocage M6		x 8

2. Fixez le cadre central (C) aux pieds (B) à l'aide de rondelles (CC), de rondelles de blocage (DD) et de boulons M6 de 32 mm (AA). Serrez le tout à la main seulement.

Quincaillerie utilisée

AA	Boulon M6 de 32 mm		x 8
CC	Rondelle M6		x 8
DD	Rondelle de blocage M6		x 8

3. Assurez-vous que tous les raccords sont bien alignés et apportez des corrections au besoin. Puis, serrez tous les boulons à l'aide d'une clé à molette (non inclus) et recouvrez-les avec des cache-boulons (EE).

Quincaillerie utilisée

EE	Rondelle M6		x 16
-----------	-------------	---	------

Loves.com/allenandrohr **allen + roth**

11

INSTRUCTIONS POUR L'ASSEMBLAGE

4. Remettez la table à l'endroit et nivelez-la à l'aide des patins réglables installés sur les pieds.

5. Placez les panneaux supérieurs (D) sur la bordure (A).

Lowes.com/allenandronth **allen + roth**

12

[illegible]

LISTE DES PIÈCES DE RECHANGE

Pour obtenir des pièces de rechange, communiquez avec notre service à la clientèle au 1 866 439-9800, entre 8 h et 20 h (HNE), du lundi au vendredi.

PIÈCE	DESCRIPTION	N° DE PIÈCE
A	Bordure	HJ-968-1ARA-A
B	Pied	HJ-968-1ARA-B
C	Cadre central	HJ-968-1ARA-C
D	Panneau supérieur	HJ-968-1ARA-D
FF	Trousse de quincaillerie	HJ-968-1ARA-HW

FF

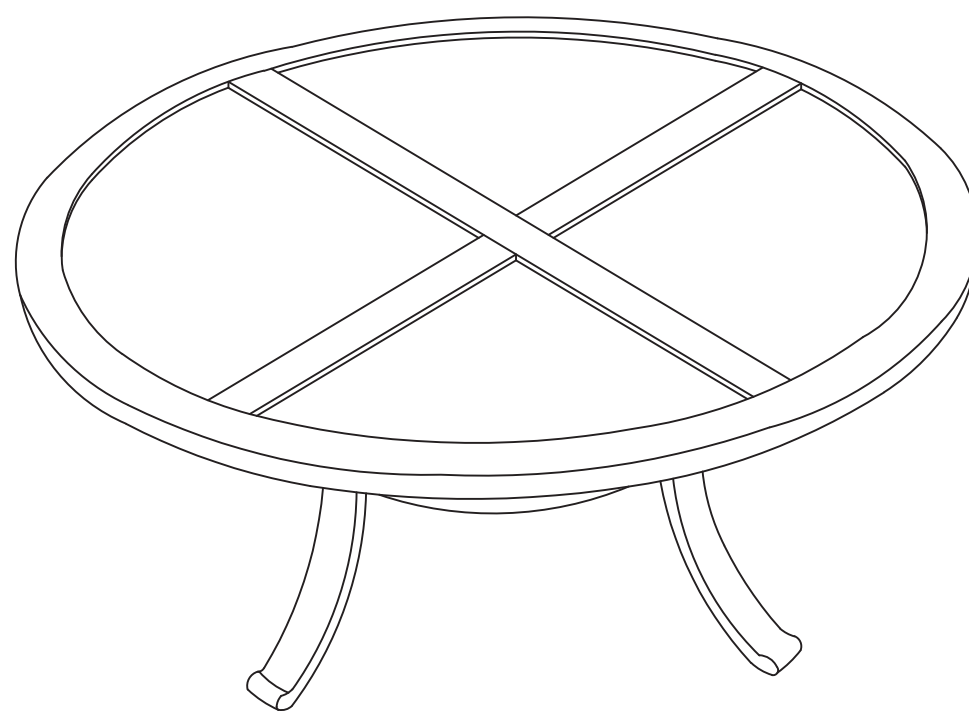
Imprimé en Chine
 allen + roth® est une marque de commerce
 déposée de LF, LLC. Tous droits réservés.

Loves.com|allenandroth allen + roth

14

• welcoming • sophisticated • inspiring

allen + roth



allen + roth® es una marca registrada de L.F. LLC. Todos los derechos reservados.

ARTÍCULO #0503411

MESA DE CENTRO REDONDA

MODELO #HJ-958-1ARA

ADJUNTE SU RECIBO AQUI

Número de serie _____ Fecha de compra _____

• Preguntas, problemas, piezas faltantes? Antes de volver a la tienda, llame a nuestro Departamento de Servicio al Cliente al 1-866-439-9800, de lunes a viernes de 8 a.m. a 8 p.m., hora estándar del Este.

Lowes.com/allenandroth **allen + roth**

CONTENIDO DEL PAQUETE

El diagrama ilustra los componentes del kit de montaje de la cabaña de la tienda de campaña. Las piezas están etiquetadas con letras circunscritas: A) Base ovalada con refuerzos cruzados; B) Patas curvas; C) Estructura central circular; D) Paneles superiores triangulares.

PIEZA	DESCRIPCIÓN	CANTIDAD
A	Borde	1
B	Pata	4

PIEZA	DESCRIPCIÓN	CANTIDAD
C	Estructura central	1
D	Panel superior	4

Lowes.com/allenandroth **allen + roth**

ADITAMENTOS (no se muestran en tamaño real)

AA
Perno
M6 x 18 mm
Cant. 8

BB
Perno
M6 x 18 mm
Cant. 8

CC
Arandela M6
Cant. 16

DD
Arandela de seguridad M6
Cant. 16

EE
Tapa para perno M6
Cant. 16

Perno
M6 x 32 mm
Cant. 8

! INFORMACIÓN DE SEGURIDAD

Lea y comprenda completamente este manual antes de intentar ensamblar o instalar el producto.

- No permita que los niños se suban al producto o que jueguen cerca de él.
- No arrastre la mesa en ninguna superficie para evitar daños al acabado de la mesa y/o a los pisos.

PREPARACIÓN

Antes de comenzar a ensamblar el producto, retire todas las piezas de la caja. Compare las piezas con la lista del contenido del paquete y la lista de aditamentos. Retire con cuidado todo el material de protección. No utilice un cuchillo para evitar cortar la superficie del mueble. No intente ensamblar ni usar el producto si falta alguna pieza o si estas están dañadas.

Tiempo estimado de ensamblaje: 15 a 20 minutos.

Herramientas necesarias para el ensamblaje (no se incluyen): Llave ajustable

Lowes.com/allenandfroth **allen + roth**

INSTRUCCIONES DE ENSAMBLAJE

 
1. Coloque el borde (A) hacia abajo sobre una superficie limpia y suave. Coloque las patas (B) al borde (A) con las arandelas (CC), las arandelas de seguridad (DD) y los pernos M6 x 18 mm (BB). Apriete a mano solamente.

Aditamentos utilizados

BB	Perno M6 x 18 mm		x 8
CC	Arandela M6		x 8
DD	Arandela de seguridad M6		x 8

2. Fije la estructura central (C) a las patas (B) con las arandelas (CC), las arandelas de seguridad (DD) y los pernos M6 x 32 mm (AA). Apriete a mano solamente.

Aditamentos utilizados

AA	Perno M6 x 32 mm		x 8
CC	Arandela M6		x 8
DD	Arandela de seguridad M6		x 8

3. Verifique la alineación de todas las conexiones y corrijá según sea necesario. A continuación, apriete todos los pernos con la llave ajustable (no se incluye) y cubralos con las tapas para pernos (EE).

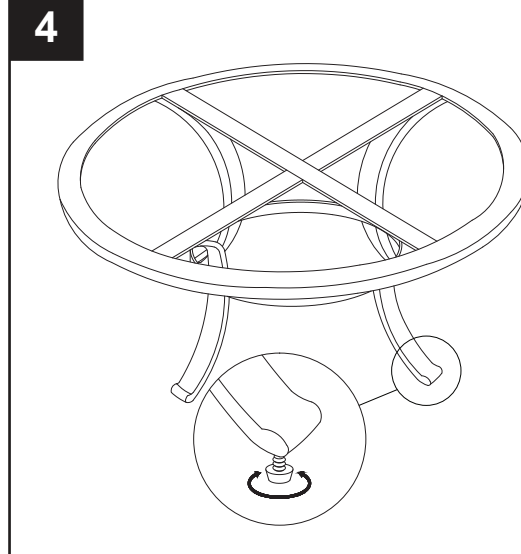
Aditamentos utilizados

EE	Arandela M6		x 16
-----------	-------------	---	------

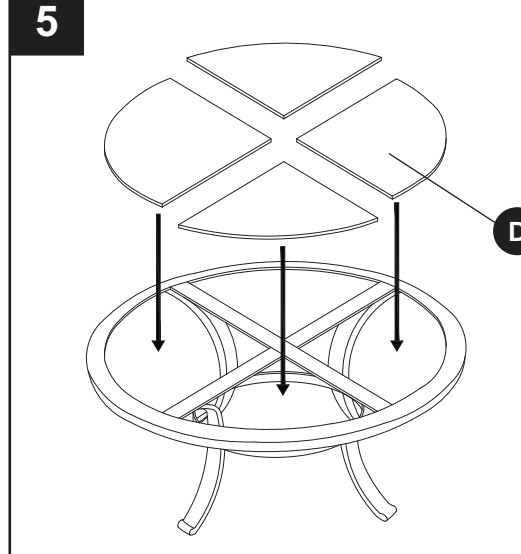
Lowes.com/allenandrohr **allen + roth**

INSTRUCCIONES DE ENSAMBLAJE

4. Dé vuelta la mesa y utilice las patas ajustables preensambladas según sea necesario para nivelarla.



5. Coloque los paneles superiores (D) sobre el borde (A).



Lowes.com/allenandronth **allen + roth**

[illegible][illegible]