





USE AND CARE GUIDE

GA023 SERIES



Questions, problems, missing parts? Before returning to the store please contact our Customer Service

• service@alphamarts.com •

1-877-606-2818



Questions, problems, missing parts? Before returning to the store please contact our Customer Service

service@alphamarts.com

THANK YOU

We appreciate the trust and confidence you have placed in us through the purchase of our product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing us!

Table of Contents

| Table of Contents 2 | Introduction |
|-------------------------|----------------|
| Safety Information 2 | Pre-assembly 4 |
| Warranty 2 | Assembly 6- |
| Troubleshooting Guide 3 | Maintenance |

Safety Information

- . This recreational item is not intended for use as a permanent structure.
- . This tent/shelter has been developed and is intended to provide protection from sun and light rain. This product is NOT WATERPROOF.
- . DO Not use any gas or flame sources under or near this product.
- . Excess water build-up can cause the frame system to became unstable, and collapse, causing injury.
- Any personal accessories or modifications to product should be removed before the onset of inclement weather such as heavy rain, wind, lightning, hail, snow, etc.
- This product should be completely dismantled to avoid permanent damage to product components and avoid any possibility of personal injury.
- This product is not a toy, this product is not designed for use by children without adult supervision. Under no circumstances should this
 product be used as a permanent or temporary storage facility for children's toys, garden tools, personal belonging or similar valuables.



This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Warranty

LIMITED WARRANTY

This warranty is a limited warranty, and applies to the original purchase is required. This is a residential warranty and does not apply to commercial use. This collection carries a (1) year limited warranty and is valid from original date of purchase to the original owner (proof of purchase required).

WHAT IS COVERED

We warrant the frame to be free of Manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive.

In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production

Troubleshooting Guide

| Problem | Solution |
|---|---|
| 1.Condensation | This is caused by lower temperatures on outside of product combined with body heat on inside of product. when this occurs, avoid touching walls to reduce contact leakage. Leaving doors and windows open will reduce condensation. |
| 2.Mildew | To avoid mildew, never store your product wet or damp. However, if mildew occurs, use a soft bristle brush or sponge with mild soap to clean. Let dry in the sunlight and apply seam sealer compound on inside seams. |
| 3.Repairing a Tear | For small tears use a self-adhesive patch kit. We recommend a repair shop for larger tears. |
| 4.Faulty Zipper | All of our tents come with self-repairing nylon coil zippers. If the zipper separates, you can move the slider to the beginning of the zipper tape and rework the zipper. Local awning and upholstery repair shops may be able to assist you. |
| 5.Floor Condensation (Only applicable on products with floor) | To prevent floor condensation use a ground cloth. Placing a ground cloth under your product will prolong its life. Ground cloth size should be slightly than product floor size. |

Introduction

- We advise you to assemble this product at least once at home before going on a trip. Obtaining a familiarity with the assembly and
 disassembly processes will help ensure your satisfaction and ease concerns you may have should you find yourself up setting up in
 the dark and adverse weather conditions.
- Get the most enjoyment from your product by reading this owner's manual thoroughly; then follow our camping suggestions outlined below. Note the symbols we use and why.

3

Pre-assembly (continued)

Assemble the item on a soft, non-abrasive surface, such as carpet or cardboard to avoid damaging the item. Seek assistance to assemble bulky or heavy items.

 


 
NOTE: Identify all parts packed in the carton against the parts list.

 
Remove all the protective material carefully and DO NOT use a knife to prevent scratching the canopy.

PACKAGE CONTENTS










Pre-assembly (continued)



 



NOTE: Hardware not shown to actual size.

Assembly

Setup

1



Stand the instant canopy frame upright in the center desired set-up location.

Gently pull the outer frame legs partially extended with a second person assisting.

2

Lift frame into position by expanding the truss bars until the frame is fully extended. Be careful not pinch fingers or hands as you lift and step backwards slowly. Now that the frame is fully extended, lock the top bracket sliders into place at each corner by holding the frame with one hand and pulling the slider in place until it locks.



3



Place the canopy fabric top over the entire extended canopy frame.

4

At each corner of the canopy frame, secure the canopy fabric top adhesive (velcro) strip (underneath the inside of the fabric) to the upper canopy frame adhesive (velcro) strip. Then pull fabric over to secure in place.







Adjust the frame legs to your desired height by lifting up each leg and slowly pulling out the inner leg into place until the leg pops into place. Placing one foot on each corner footpad and slowly extending each let into place can also extend the frame legs.

Assembly



Attach adhesive strips (velcro) to ceiling truss bars of the canopy frame to secure canopy top.

Stake (D) down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.



Measure out from the leg to a proper distance and secure the four big anchors to ground at a 45 degree angle. Tie up one end of each guy (D) rope to the triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.

9



The use method of adjusting buckle (F).









Your instant canopy is now complete!

10

6

Maintenance

Not complying with these warning will void your instant canopy warranty!

- Do not set-up or leave your instant canopy assembled in rain, hail, sleet, snow, drizzle, lighting, strong winds or any harsh weather conditions.
- Do not allow water of any kind to accumulate on the canopy top.
- Use tie-downs, stakes or weight bags to secure your instant canopy in windy conditions. Commercial stake kits and weight bags to needs to be purchased as accessories separately.
- Always follow directions when setting-up your instant canopy. Be aware of hands and fingers when expanding or collapsing frame.
- It is recommended to remove canopy top from frame after take-down. Storing top on frame may result in fabric tears or other damage requiring repair or re-purchase.
- Never clean the canopy top in a washing machine-serious damage will result. If cleaning is required, while set-up on the frame, use a light detergent on a cloth and gently clean top by hand, then rinse off with a garden hose.
- Do not use detergent by hand cleaner if top has custom silk-screened graphics.
- · Allow top to dry completely before storing.
- Keep your canopy off of steep slopes and inclines.
- Do not use your instant canopy as a permanent shelter. It is designed for temporary use only!
- Never leave your instant canopy unattended.