
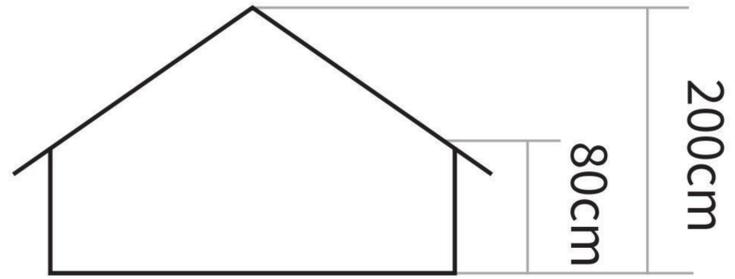



INSTRUCTIONS

6.3M² PVC INFLATABLE TENT

SIZE

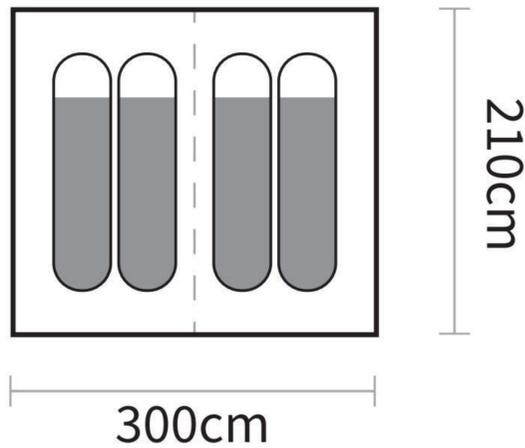


ACCESSORY

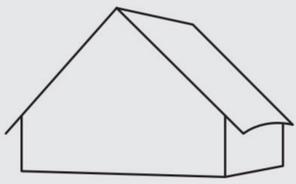

Tent*1



 
Storage bag * 1



Steel Nail*14



 
Wind rope*7



Pressure limiting pump*1


INSTALLATION STEPS

01

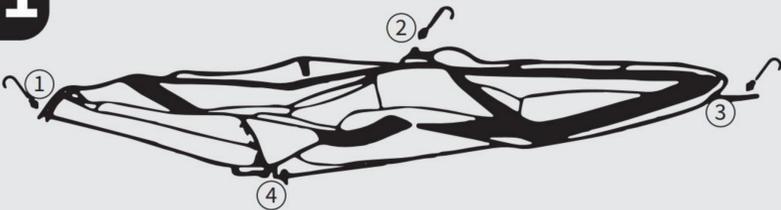


Take out the tent and spread it flat on the ground. Secure the four corners with four ground nails.

02

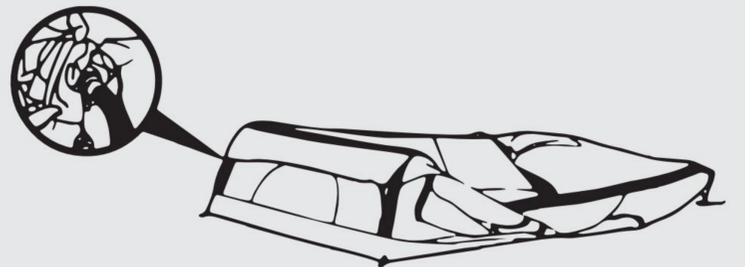


Adjust the inflatable valve to the closed state, connect the pump to the air valve, and inflate the first air column to 80%.

03

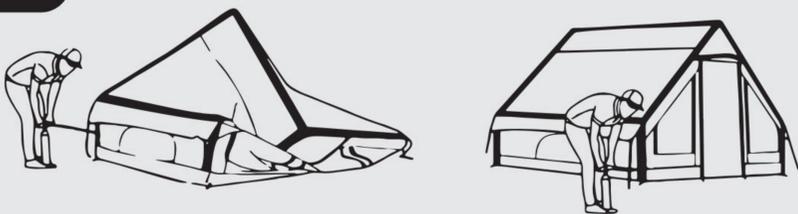

Inflate the other column to saturation, then fill the first column to 100%.

04

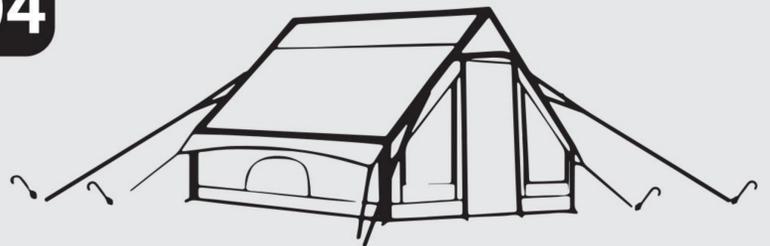

Secure the tent with ground nails and windbreak ropes.