
Before Installation:

- a) Please do not install any dimmer switch, but it is available to use a simple "on/off" wall switch with the remote.
- b) If you purchased the dimmable ceiling fan and are willing to install a dimmer switch, please do not install this remote. It does not acknowledge installing both controls at the same time.

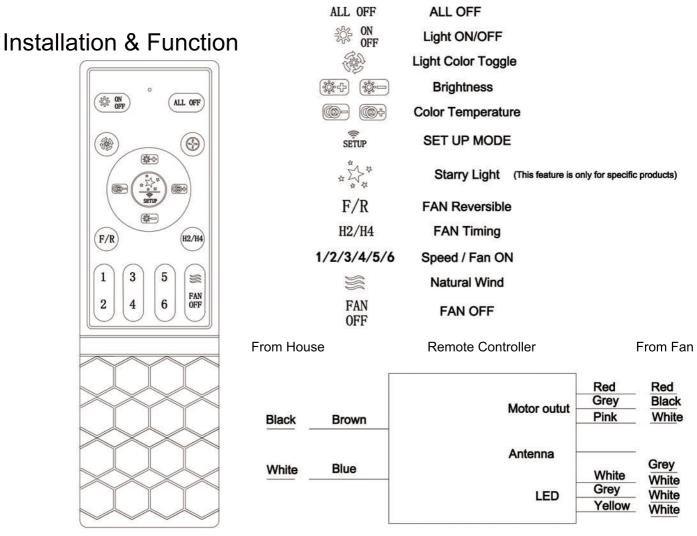

Note: The battery for the remote controller is not included under the safety concern in transit, please use model# "AAA" battery.

Re-Program:

Use the wall switch to turn on the light, the long-press SETUP button will automatically correct the code within 10 seconds when the power is on.

Then please try the remote again.

If you have any further questions, please contact us directly for professional help with your oder number Official Email Address: Support@BellaDepot.com

^{*}For several ceiling fans, please press the the turn off/on button quickly, the light tone will change immediately.