



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Product Specifications:

SIZE (AT BASE): 10 x 20 ft /3 x 6 m

SIZE (AT Canopy Top): 10 x 20 ft /3 x 6 m

SHADED AREA: 200 sq.ft. /18 m²

TENT FRAME: Powder-Coated Metal

TOP CLOTH FABRIC: Oxford polyester fiber with an upgraded silver-plated PU lining

TARPAULIN MATERIAL: Oxford Cloth

CARRY BAG SIZE: 47.2" x 11" x 15.8" (120 x 28 x 40 cm)

OUTER BOX SIZE: 46.8" x 10.2" x 15" (120 x 28 x 38 cm)

PACKAGE WEIGHT: 73 lbs (33 kg)

PACKING LIST:

1. Canopy top tarpaulin x 1
2. Canopy sidewalls with curtains x 4
3. Canopy sidewalls with zippers x 2
4. Tent frame x 1
5. Portable bag x 1
6. Tent stakes x 12 & ropes x 6
7. Instruction manual x 1
8. Sandbag x 6

THE LATEST TECHNOLOGY IN THE INDUSTRY:

1. Double-line sewing and reinforced stress sewing prevent water penetration from seams, making it 100% waterproof.
2. The tent includes waterproof sealing tape to prevent water from pooling in wet conditions.
3. Roof raising design to prevent water accumulation.

CAUTION:

01. When adjusting the height, please place your fingers above the button to avoid getting stuck during setup and takedown.
02. Do not set up the canopy in rainy or windy weather.
03. In unattended situations and in bad weather, the tent should be taken down. This product is not intended to withstand extreme/high winds or bad weather.
04. Do not use fire near the gazebo or place it near a heat source.
05. Do not install the gazebo on uneven ground.
06. When installing the gazebo, you need to ensure that the frame is locked and that the tent is properly secured with a heavy object.
07. There are 6 wind rope buckles for binding wind ropes and wind rope nails to fix the tent and increase stability.
08. Foot pads with ground nail holes: ensure that it is firmly fixed on the ground when in use.
09. Rope and ground stakes add stability.
10. Attach the canopy top cloth and sidewalls to the legs with Velcro straps. Each wall has hook and loop fasteners or straps with buckles to fix the wall to the leg, making it tight and secure enough.

TIPS:



STORAGE: Before storing the canopy, make sure that the parts are not wet or damp to prevent mold.



CLEANING: Clean the canopy with mild detergent and water.



INSTALLATION: Do not open the gazebo roughly. Improper force may result in damage to the parts or connectors.



MAINTENANCE: When not in use, this product should be kept closed and stored away to avoid potential damage.

 
HOW TO SET UP:

It is recommended that two or more people complete the installation of the canopy tent.

Follow these instructions and be careful to avoid getting your fingers caught in any moving parts when opening and closing the frame.

1

Pull out the canopy frame:

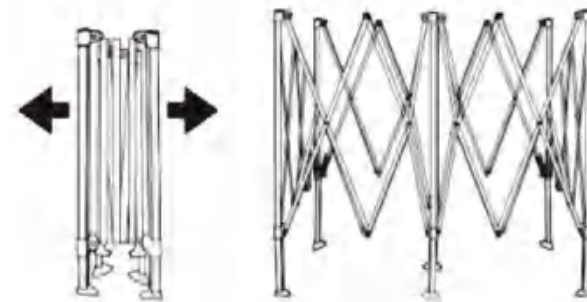


A. Place the canopy frame in the center of the area that needs shade.

B. With your partner on the other side of the frame, grab both outer legs and lift the frame slightly off the ground. Then pull the frame back so that it opens to 3/4 of its full opening size. Finally, place the frame back on the ground.

NOTE: Do not open the frame violently; improper force may cause damage to the brackets or connectors.

2

 Attach the canopy top:

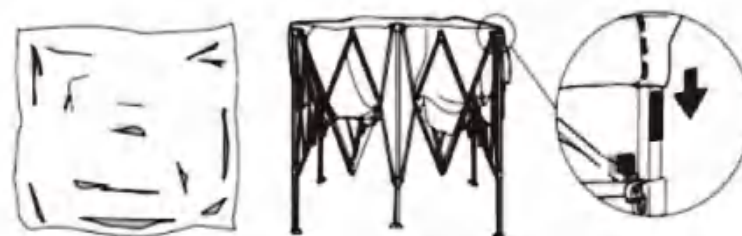


- A. Unfold the canopy top and place it on top of the canopy frame.
- B. Secure the canopy top to the corners of the canopy frame using the hook and loop fasteners.

If the cloth does not seem to fit, you need to adjust the degree of opening of the tent frame.

3

 Lock the frame:

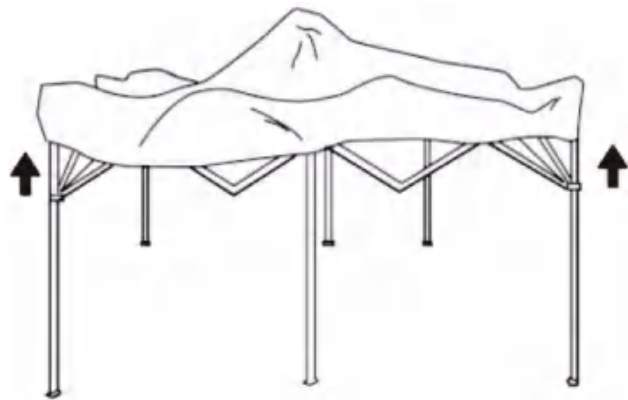

- A. At this point, stand with a partner on the opposite side of the frame and grab the outside bar. Pull it back until the shelter is fully open.
- B. Then push upward with one hand while holding the top of the leg with the other hand to engage the slider at each corner. Repeat this procedure on the other legs.

Lift all the corners upward until they click, and the snap goes into the positioning hole.

4

 
Adjust the canopy height:



Press the red button on each leg and push the leg up or down to adjust the height of the gazebo (3 heights available).

5

Secure the canopy in place:

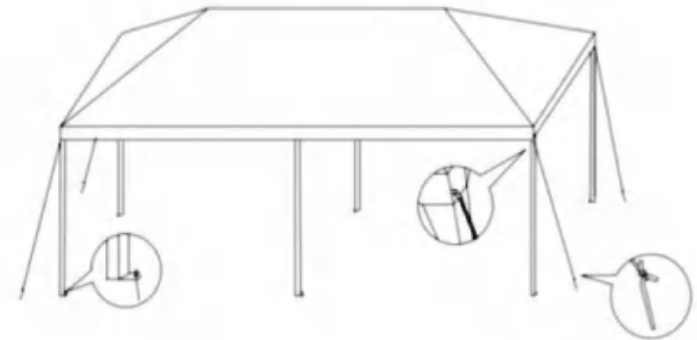

- A. There are 6 rope loops at the corners of the roof for tying weatherproof ropes to secure the tent. Tie the ropes to the rings, straighten the ropes, tie a stake to the other end of the rope, and then insert the stake into the ground.

B. Insert ground stakes through the footings with stake holes into the soil/ground to hold the canopy in place.

C. Ropes and ground nails provide added stability.

 
6



Sandbags can be tied to the legs of the tent to increase the weight to make the tent more stable.

7

Hang the sidewalls (sidewalls or no sidewalls, open on one side, covered on all 6 sides, or the front open - the choice is yours)

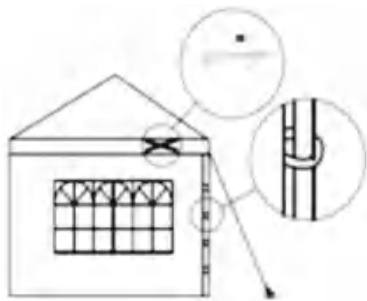

A. Attach the removable sidewalls by wrapping the hook and loop fasteners around the leg frames.

B. Sidewalls with Transparent Windows*4: Elegant church windows ensure lights come in as well as keeping rain out. Through the windows, you can clearly see the scenery outside.

C. Sidewalls with zipper door *2: Door sidewalls with zippers for easy opening and closing.

How To Take Down

1

Unfasten the hook and loop fasteners and detach the sidewalls and the canopy top tarpaulin. Fold the canopy top tarpaulin neatly.

2

Remove the stakes and lower the tent height.

3

Unlock the frame.

4

Fold the frame.

5

Place the frame and the canopy back into the portable bags.

TIPS: Before storing the canopy, ensure that the parts are dry to prevent mold. Place all the parts in the roller bags for storage.



Return / Damage Claim Instructions

 DO NOT discard the box / original packaging.

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

 Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

 Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

 Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.