

072225

Remington®

MODELS | SAR5944-BG, SAR5952-BG, SAR6268-BG, SAR6584-BG

Contents

2	Welcome to Remington®	14	Security Code Setup
3	Important Information	17	Manager Code Functions
4	Registration	18	Using Your Backup Key
5	Unboxing & Inspection	20	Lockout Mode & Interior Lighting
5	Keeping Your Safe Dry	21	Low Battery Warning
6	Proper Placement	22	Securing Your Safe
7	Moving Your Safe	24	Locked Out of Safe
8	Understanding Your Safe	24	Maintenance
9	Shipping Skid Removal	24	Loading Your Safe
10	Initial Entry	25	Lifetime Warranty



Contact Customer Service at
cs@saproducts.com or +1 888 792.4264

Thank you for choosing a Remington® Safe to protect your valuables. We are committed to securing, organizing, and protecting your most important documents, valuables, and keepsakes.

Your safe is built to last a lifetime. However, please understand that the locking mechanism has precision parts. If you experience ANY difficulty opening or closing your safe, **DO NOT FORCE THE SAFE OPEN**. Doing so may jam the components in the lock, which will require a safe technician to unlock your safe. This causes an inconvenience to you and may lead to a claim denial.

If you experience problems or challenges with your safe, please contact us. Many issues can be quickly resolved without the product being returned.

Important Information

Safety

Safe bodies and doors are extremely heavy, thus **SA Consumer Products requires a minimum of two people to ensure stability of the safe during installation.** Always ensure proper installation, as laid out in this manual, and do not open the door with the safe on an uneven or unstable floor. Ignoring this could result in serious injury or death.

DISCLAIMER: Please read this information carefully before operating your Remington® safe. Do not lock this manual or the backup keys in your safe.

Firearm Storage

If you choose to utilize this safe to store a firearm, always follow proper firearm and local laws. SA Consumer Products strongly recommends that you do not store loaded firearms. Always follow the firearm safety rules set out by the firearm's manufacturer.

A Remington® Safe or any other firearm storage device cannot take the place of other safety procedures including advising children of the dangers of firearms.

SA Consumer Products and its distributors of the Remington® Safes do not recommend, suggest, advise, promote, or otherwise condone the ownership or use of firearms. We believe the decision to own or use a firearm is a serious decision that should only be made by an adult who has carefully considered the risks and benefits of such a decision.

Registration

Registering your safe is important to ensure we can help you with any challenges you may have.

By registering your Remington® Safe, we will be able to expedite and address any problems or challenges you may have which would otherwise require a notary letter and proof of payment.

The information you record on this page will be required in the event you cannot access the contents of your Remington® Safe.

Please register your safe by visiting our website. Select “register your safe” from the menu in the upper right hand corner.

1

www.saproduts.com

2

Register Your Safe 



Please have this information ready prior to calling for assistance at: cs@saproduts.com or +1 888 792.4264

Purchase Date

Purchase Price (before tax)

Model Number

Serial Number

Retailer Name

Key Number (if applicable)

Unboxing & Inspection

Before discarding the package material, be sure to locate the Getting Started Box in the front of the honeycomb corrugate protection panel.

Remove the packaging. If your safe is still on shipping feet you can simply lift the box up and off the safe once the strapping has been removed. You will want to have someone stabilize the safe when removing the cardboard and other packing material from underneath the safe.

Make sure to inspect your safe for shipping damage before accepting delivery. If you find any damage, please contact the delivery company (or carrier) immediately.

Any damage not noted upon delivery must be reported within fifteen (15) days or there will be no recourse. Any noted damage at the time of delivery must be resolved with the delivery company and/or retailer. Shipping damage is not warrantable by SA Consumer Products.

Keeping Your Safe Dry



We strongly encourage the use of an internal dehumidifier and/or desiccants to protect your contents from rust or mildew. Internal dehumidifiers should not be in direct contact with the side or back walls.



In areas of high humidity or frequent temperature fluctuations (like garages), take the proper precautions to ward against any moisture damage.



Installing your safe in a place with climate control (heat in the winter and cooling in the summer) is highly recommended.

Proper Placement of Safe

The location of the safe is very important and the utmost care should be taken during this consideration.



To maximize fire protection of **your safe**, we recommend you place the safe in lower levels in your home where fire temperatures are lower and away from highly combustible materials.



We recommend that you store your **safe** in a closet, office, basement, bedroom, or any other location that is convenient for you but out of direct line of sight from prying eyes.



To maximize burglary protection and stability, securing the safe to the floor is recommended.



We require the **safe to be secured to the floor** to ensure the safe does not tip over in case of a flood. Failure to secure your safe properly to the floor will void the warranty.



HELPFUL HINT: To determine whether your safe will fit through doorways, stairs, or corners, take the empty safe box through to its final location.

Moving Your Safe


Safes are heavy and can be unstable on uneven ground. Please ensure extra caution when moving unsecured safes.

- **Using a dolly** capable of supporting the size and weight of your safe, move the safe to your desired location. Please take all necessary precautions to protect and prevent any damage to your flooring.
- **The safe should be installed adjacent** to a side wall with minimal space on either side of the safe.
- **Wherever possible, the safe should be flat against the wall and floor.** Remove the baseboard and/or wall trim if necessary.
- **Always ensure the safe is in an isolated and dry area.** Never place the safe in direct contact with a wet floor.
- **When installing your safe on a concrete floor,** use of a moisture/protective barrier is highly recommended. Failure to do so, or exposing the safe to chemicals or other adverse environments, may void the warranty.
- **If your safe seems unlevel, you may need to shim the bottom of the safe** to prevent the door from swinging open too quickly, or closing on itself.

CAUTION: The safe is designed with a non-removable door. Any attempt to tamper with or remove the door will void the warranty.


Understanding Your Safe*

WARNING: Safes are heavy and can be unstable on uneven ground. Please ensure extra caution when dealing with or moving unsecured safes. While unboxing be sure to have a second person hold and stabilize the safe to keep it from tipping, causing injury, and/or damage to the safe and surrounding structures.

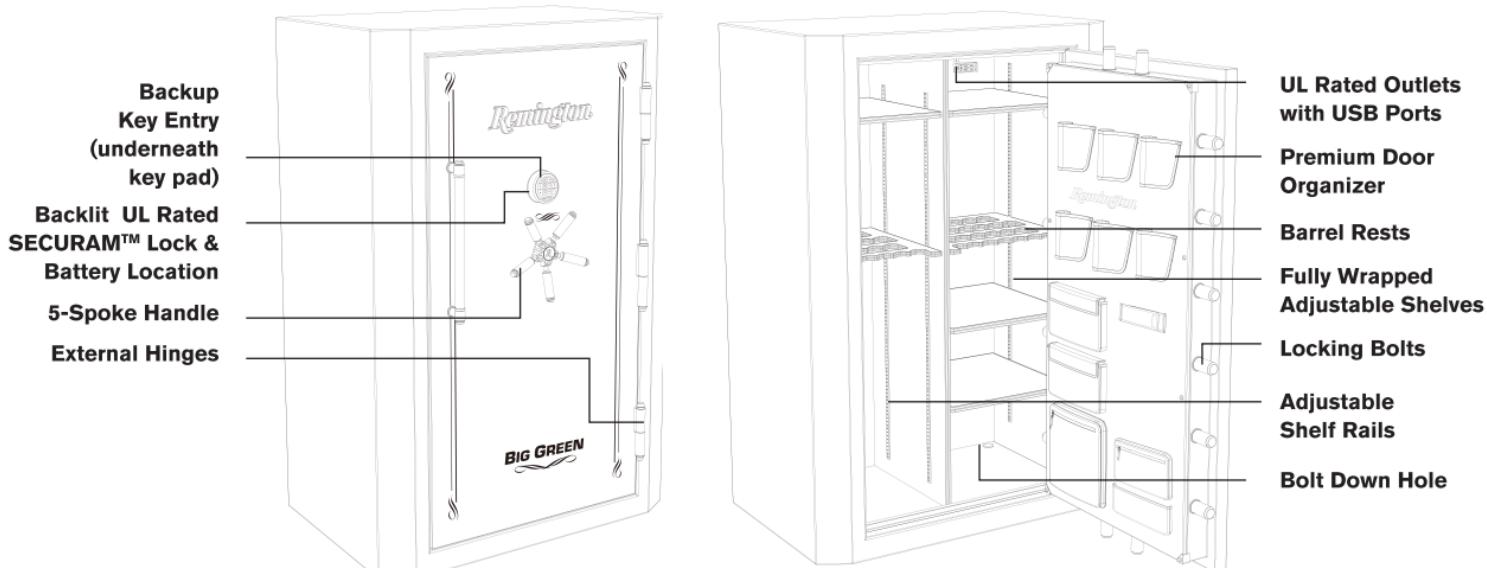

*Interior setup will vary based on your safe model.


Shipping Skid Removal

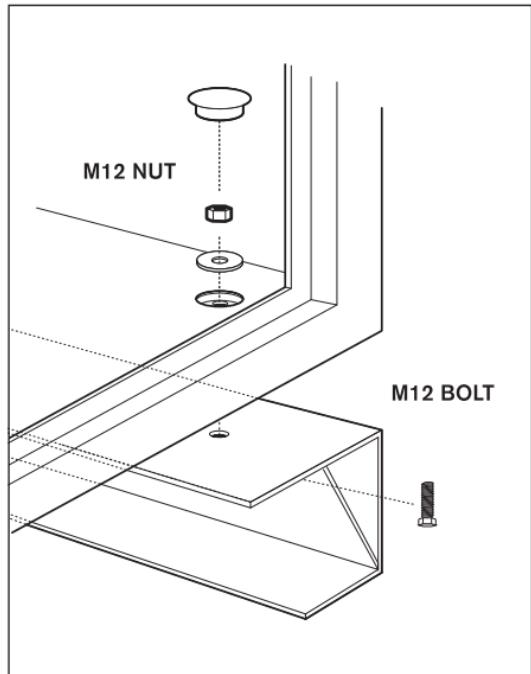

WARNING: Before removing the shipping skids, make sure the door is closed and locked. The door of your safe is heavy and presents a safety hazard until the safe is bolted down or secured properly.


- 1 Upon receiving your safe, you may find it attached to a shipping skid. The skid is secured from the underside of the safe by four bolts. Remove the four bolts that secure the safe to the skids using a wrench or 3/4" (19 mm) socket.
WARNING: While removing the bolts from the skids, be sure to have a person hold and stabilize the safe to keep it from tipping, causing injury, and/or damage to the safe and surrounding structures.
- 2 With a person stabilizing the safe, carefully tilt the safe to the left and pull the shipping skid on the right side away from the bottom of the safe.
- 3 With the shipping skid removed from one side of the safe, carefully lower the safe to the floor.
- 4 Follow the same procedure to remove the remaining shipping skid.

Initial Entry

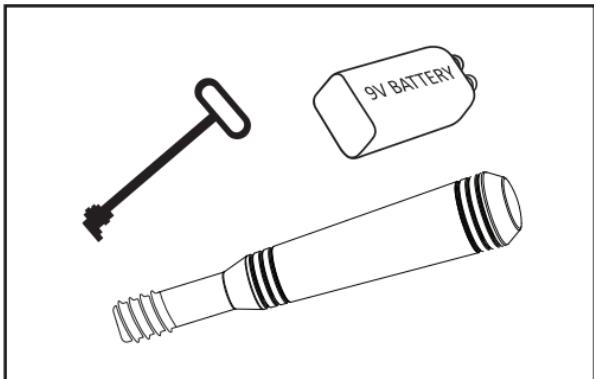


- 1 **Locate the quick start guide, backup key, battery, and spoke** inside the Getting Started box.

Note: Do not store your backup keys inside of your safe.

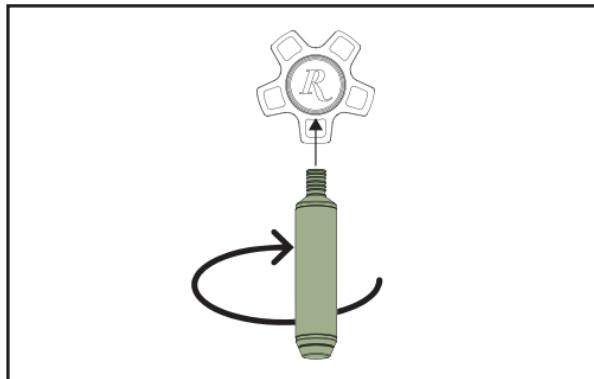


- 2 **Install the single handle spoke** by inserting into one of the threaded openings and twisting clockwise until you feel the spoke fully lock into place.

Initial Entry ctd.

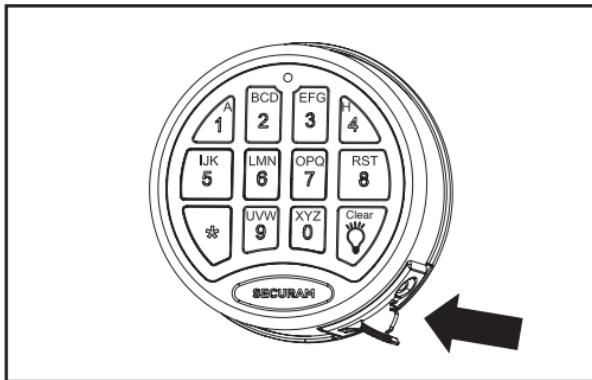


3 Locate the **battery compartment** at the bottom right side of the lock face.

WARNING: The batteries must be inserted with the correct polarity. Exhausted batteries must be removed from the product and discarded safely. Do not mix old and new batteries. Do not mix alkaline or standard (carbon-zinc) batteries. Do not use rechargeable (nickel – cadmium) batteries.

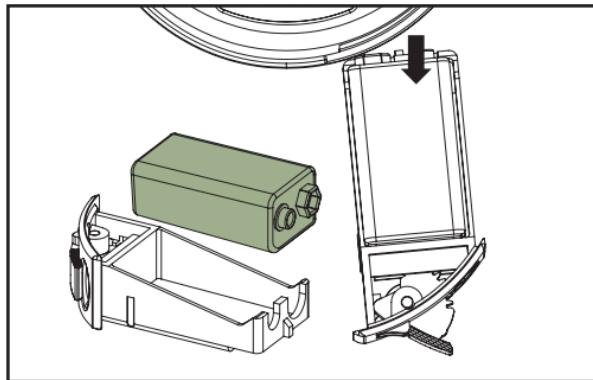


4 Release the **latch tab of the battery compartment** by gently pulling it down, then pull down the battery compartment to insert the 9V battery.

Initial Entry ctd.

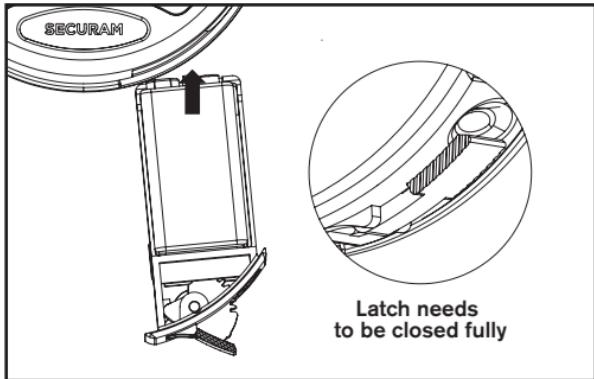


5 Put battery compartment back into the **lock face**, inserting in an upward motion until it is in line with the cover. Push up the latch of the battery compartment until it is tight and secure.

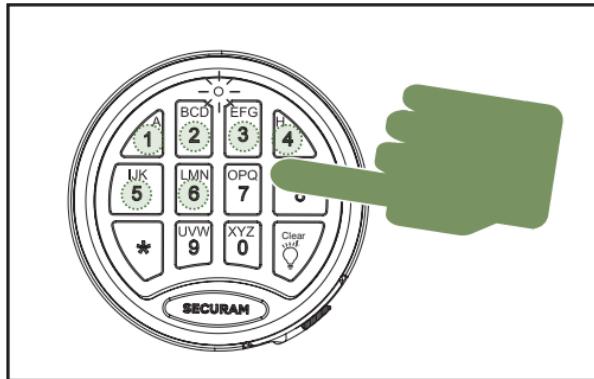


6 Enter the default User Code **[1-2-3-4-5-6]** on the keypad. The light at the top of the keypad will flash twice to indicate the code was entered correctly.

Initial Entry ctd.

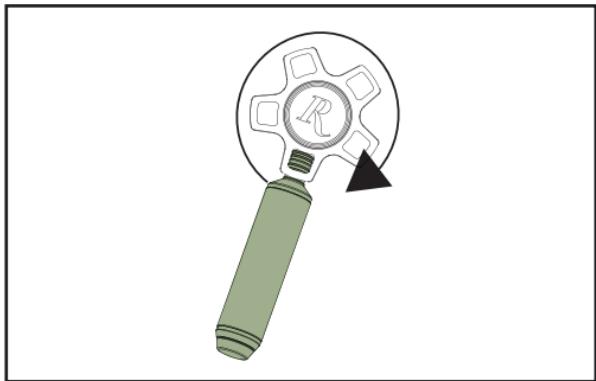

7 Rotate the handle clockwise until the safe door opens.

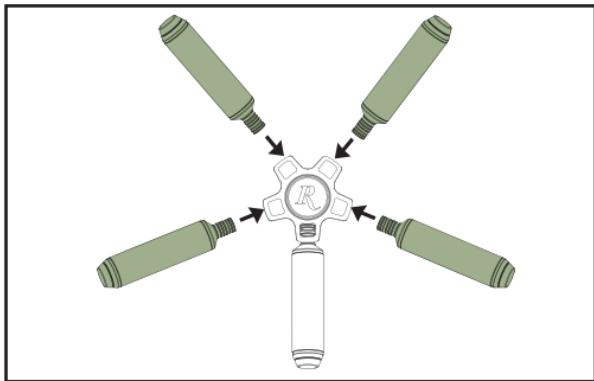

8 Now that your safe is open, you will find a Welcome Box inside your safe that contains the 4 remaining spokes. Insert each spoke into a threaded opening and turn clockwise.

Security Code Setup

This unit comes in Default Mode. Your safe comes with 2 pre-programmed entry codes that can open the lock.

MANAGER CODE

1-1-1-1-1-1

USER CODE

1-2-3-4-5-6

NOTE: Verify your new code at least 3 times before closing the door to ensure the code has been programmed correctly.

You must reprogram your safe with a new security code that you have personally selected to provide maximum household security. It is required that the user change both the User and Manager Codes of your safe. Failure to do so is a potential security risk.

Your safe is equipped with the ability to store two 6 digit codes, a Manager Code and a User Code. The Manager Code has the ability to delete the User Code and create a new User Code.




The Manager Code can also be used to change the Manager Code to a new 6-digit number. The User Code does not have any abilities other than opening the safe.

Please note that the system will not allow your new code to be six zeros. Choose a security code you can enter quickly without error.

NOTE: The Safe Lock system automatically relocks after 6 seconds of being opened by a valid code. After 6 seconds, a valid code will have to be re-entered.




STEP 1: CHANGING THE USER CODE

- 1 With your safe door still open, press [0] **six times** on your lock face, you will hear 1 beep and the light will flash 2 times.
- 2 Enter the existing default code [1-2-3-4-5-6]. You will hear 1 beep and the light will flash 2 times.
- 3 Enter your new personal 6-digit code. You will hear 1 beep and the light will flash 1 time.
- 4 Re-enter your new 6-digit code to **confirm**. You will hear 2 beeps and the light will flash 1 time.
If 3 beeps sound, programming was NOT successful and you must repeat these steps.

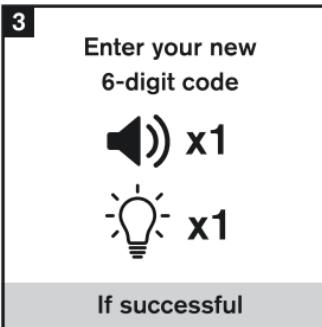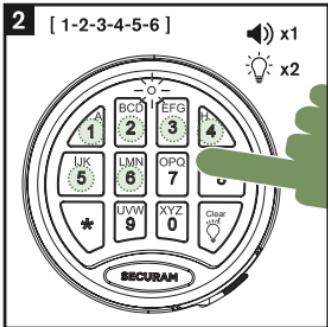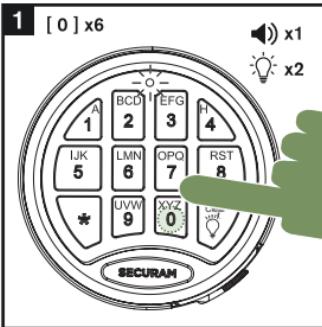

STEP 2: CHANGING THE MANAGER CODE

- 1 With your safe door open, press [0] six times to enter Manager Code Edit Mode. You will hear 1 beep and the light will flash 2 times.
- 2 Enter your current Manager Code, or the default Manager Code [1-1-1-1-1-1]. If successful, you will hear 1 beep and the light will flash 2 times.
- 3 Enter your desired new 6-digit Manager Code. You will hear 1 beep and the light will flash 1 time.
- 4 Re-enter your new 6-digit Manager Code. This will confirm your new Manager Code. If the code has been successfully accepted, you will hear 2 beeps and the light will flash 1 time.
If 3 beeps sound, programming was NOT successful and you must repeat these steps.

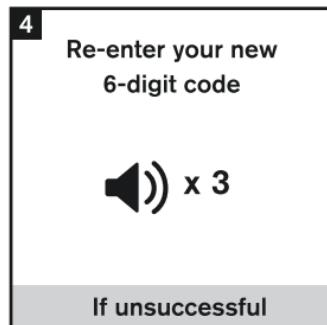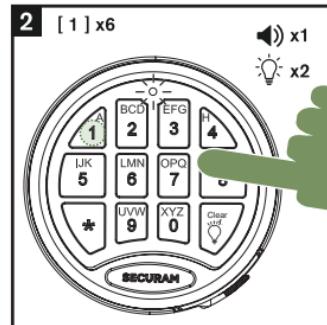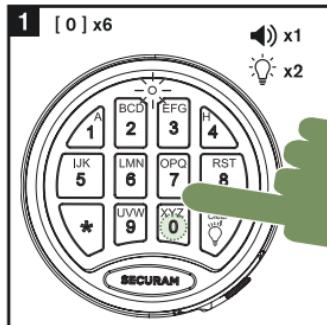

NOTE: The Safe Lock system automatically relocks after 6 seconds of being opened by a valid code. After 6 seconds, a valid code will have to be re-entered.

Manager Code Functions

DELETE A USER CODE

- 1 Enter your 6-digit Manager Code and hold down the last digit until you hear 1 beep and the light flashes 2 times. Continue to hold down until you hear 2 additional beeps.
- 2 Press [3]. You will hear 1 beep and the light will flash 2 times.

CREATE A USER CODE

- 1 Enter your 6-digit Manager Code and hold down the last digit until you hear 1 beep and the light flashes 2 times. Continue to hold down until you hear 2 additional beeps.
- 2 Press [1]. You will hear 1 beep and the light will flash 2 times.
- 3 Enter a new 6-digit code. You will hear 1 beep and the light will flash 1 time.

- 4 Re-enter the new 6-digit code. You will hear 1 beep and the light will flash 1 time.


DISABLE A USER CODE

- 1 Enter your 6-digit Manager Code and hold down the last digit until you hear 1 beep and the light flashes 2 times. Continue to hold down until you hear 2 additional beeps.
- 2 Press [2]. You will hear 1 beep and the light will flash 2 times.


ENABLE A USER CODE

- 1 Enter your 6-digit Manager Code and hold down the last digit until you hear 1 beep and the light flashes 2 times. Continue to hold down until you hear 2 additional beeps.
- 2 Press [1]. You will hear 1 beep and the light will flash 2 times.

Using Your Backup Key

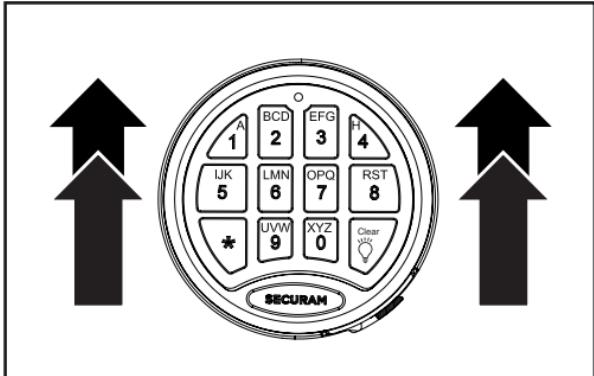


- 1 Lift the lock face off the two screws to expose the keyhole.

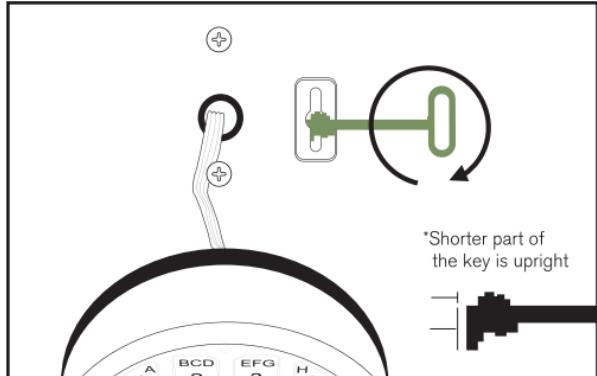

- 2 Use the backup key to open the safe by inserting the key and turning clockwise.

Note: The shorter part of the key should be upright when inserted.

Using Your Backup Key ctd.

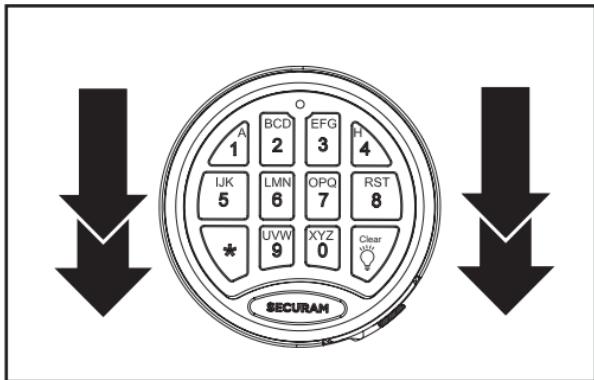

- 3 Push the exposed lock face wire back into the safe as far as possible. Replace the lock face on the safe by aligning the guide holes to the screws.

Need extra help? Contact our customer service team!

cs@saproducts.com

+1 888 792.4264

Lockout Mode & Interior Lighting



Lockout Mode

After 4 consecutive rejected invalid code entries, your safe will enter lockout mode. The keypad will be deactivated for 5 minutes. You will hear a beep in 5 second intervals during the lockout period.



Interior Lighting


This safe comes with proximity based interior lighting installed. When the USB powered internal lighting is plugged into the USB power source, the lighting will function automatically when the door is open.

Low Battery Warning

This lock face is equipped to alert you when the batteries are low.

The battery needs to be replaced if you hear 8 beeps as you unlock your safe. Please replace batteries immediately when receiving this warning.

It is recommended you replace your battery annually. Do not mix old and new batteries or use rechargeable batteries.

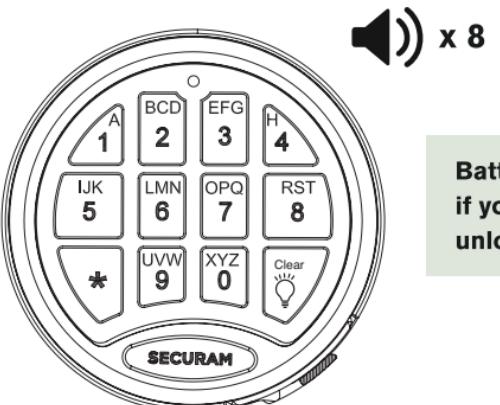


Battery needs replaced if you hear 8 beeps while unlocking your safe.

Securing Your Safe

Failing to secure your safe will void the lifetime warranty.

Tools needed to bolt safe to a concrete surface:

- Drill/Hammer Drill
- Drill Bit - 5/16" (8 mm)
- Wrench - 1/2" (13 mm)
- Safety Glasses
- Hammer
- Gloves

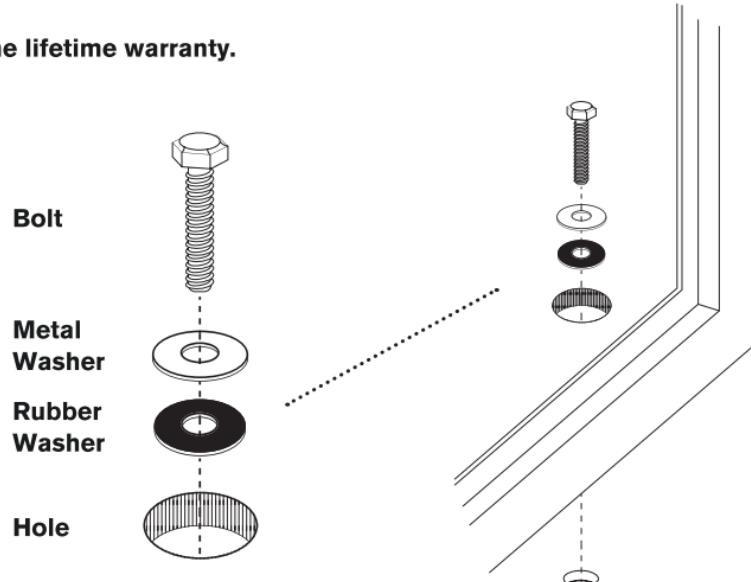

WARNING: Your safe is designed to support itself when the door is opened. However, caution should be used to avoid tipping. While securing your safe be sure to have a second person hold and stabilize the safe to keep it from tipping, causing injury, and/or damage to the safe and surrounding structures. Failure to do so will compromise the safety, security, and warranty of the safe.

Instructions for Securing Your Safe

- 1 Use the hardware provided or consult your hardware retailer** for fastening hardware for your particular mounting surface.
- 2 Open your safe door and remove the four black caps on the safe floor.** This will provide access to the factory drilled bolt down holes.
- 3 To secure your safe to the floor it will first be necessary to drill pilot holes in the floor surface.** These should be aligned with/through the factory drilled boltdown holes.
- 4 Drill the appropriate diameter and depth of pilot holes based on the type of hardware being used and the floor surface.** For the hardware provided (concrete floor installation) we recommend using a hammer drill and 5/16" concrete drill bit to drill the four (4) corresponding holes in the concrete floor.
- 5 Secure the safe by threading all 4 anchor bolts through the factory drilled bolt down holes** in the bottom of the safe and ratcheting down tight.
Ensure the metal washer sits on top of the rubber washer. Tighten the bolt to compress the rubber washer between the safe and metal washer. Failure to do so will allow water to enter the safe in the event of a flood. Failing to secure your safe properly to the floor per instructions will void the Warranty of the Safe.
- 6 Replace the four black caps onto the floor of the safe.**

Locked Out of Your Safe

Locked out of your safe? Don't panic!

- 1** In the event you have forgotten the security code, use your backup keys in order to gain access to your safe and follow the Security Code Setup instructions.
- 2** If you have lost your backup keys, you will need to contact customer service at the number below. Proof of purchase is required to obtain keys.

Contact Customer Service at: cs@saproducts.com or
+1 888 792.4264

Maintenance

The hinges and internal locking mechanism are permanently lubricated, thus needing no maintenance. Opening the door panel of your safe may void your warranty. Always consult our customer service experts prior to doing so.

CAUTION: The safe is designed with a non-removable door. Any attempt to tamper with or remove the door will void the warranty.

Loading Your Safe



Store documents or heat sensitive items in the bottom of the safe for greatest protection against fire damage. Store ammunition separately from your firearms.



Do not put anything in your safe that will put pressure against the door when it is closed. As a good safety precaution, store heavier items either on the floor of the safe, or away from the middle of the shelves.



When placing firearms into your safe, make sure they rest securely against the cutouts provided in the barrel rests to prevent accidental tipping when the door is closed.

Lifetime Warranty

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Remington® Safe damaged by fire, forced entry, forced attack, or natural flood for the lifetime of the original owner. Lifetime warranty only applies to the original owner of the safe.

SA Consumer Products, Inc. will repair or replace, at their sole discretion, any Remington® Safe with defective parts, paint, or lock for the lifetime or the original owner.

If SA Consumer Products, Inc. deems a replacement safe is to be sent, they will pay the freight costs to ship the replacement safe to the original owner.

This lifetime warranty is limited to the safe and expressly excludes any loss associated with the contents of the safe.

SA Consumer Products, Inc. reserves the right to receive full evidence of your misfortune, such as a police report and/or homeowners statement of coverage. This warranty is not valid outside of the United States and Canada.

Proof of registration and copy of sales receipt must be on file at the time of claim. Visit our website at

www.saproducts.com to register your safe.

SA Consumer Products, Inc. shall only be responsible and liable when the safe is used in compliance with the directions specified in your new Remington® Safe User's Manual. Failing to secure your safe properly to the floor per instructions will void the Lifetime Warranty.

SA Consumer Products, Inc. requires that specific guidelines be followed for repair. The safe will be repaired in-home if possible (to include parts and labor); however, if factory replacement is necessary (at SA Consumer Products, Inc.'s sole discretion), the replacement will be shipped freight prepaid, curbside delivery.

This warranty is exclusive and is in lieu of any and all other warranties, express or implied. Specifically excluded are the warranties of merchantability and fitness for a particular purpose. This warranty is limited to the safe itself and/or its value and does not include consequential damages of any kind including, but not limited to, the contents in and of the safe.



Remington®



@remington_safes



saproducts.com



cs@saproducts.com



+1 888 792.4264

