 


MANUAL INSTRUCTION

Outdoor Fire Pits
G31010

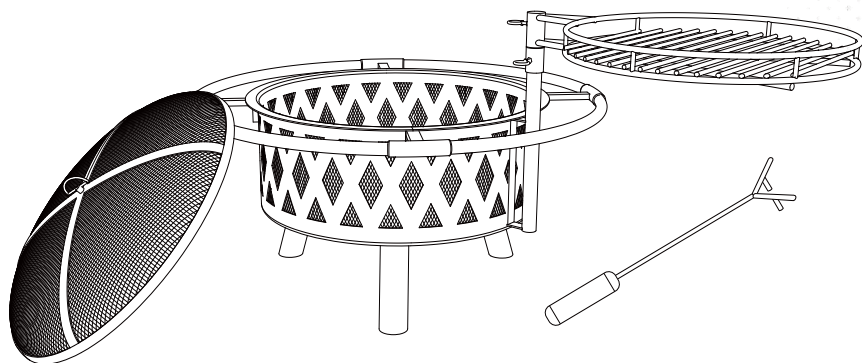

Outdoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Our mission is to provide consumers with new lifestyles. By collecting consumer feedback, we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

1. Do not use this product directly on a wood deck or near a side wall.
2. It is forbidden to put inflammable and explosive items such as cans in the stove.
3. During the use of the wood-fired furnace body, do not touch the furnace body to avoid burns and scalds.
4. The wood-fired stoves are mainly made of steel plates, and care should be taken to avoid bumps during loading, unloading and handling.
5. For the sake of safety, after the furnace fuel is used up, the burned out ash should be taken out in time.
6. Please make sure that the fire is out after using. Do not touch the fire pit before it cools down. It is recommended to store the fire pit under a roof top to extend the usage life.

! NOTICE PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

- 1.This fireplace table is for outdoor use only. This fireplace table produces carbon monoxide and has no odor, Do not use this product in garages, indoors or other enclosed spaces
- 2.Use this equipment only on hard and flat surfaces that do not burn easily, such as concrete or rock,Do not use on plastic laminate floors or artificial wood floors.
- 3.It is forbidden to put inflammable and explosive items such as cans in the stove.
4. Children are not allowed to operate the fireplace table, only adults are allowed to operate it.
- 5.Do not allow children and pets around the fire pit when using this product.
- 6.Do not stand on any part of this product or use it as a step ladder.
- 7.Please do not tighten the screws during the initial installation process until the installation is complete and then tighten the screws.
8. Please refer to the manual for installation, wrong installation steps may bring unnecessary losses.
- 9.Please review the precautions before use. Failure to follow warnings and instructions may result in death, serious injury or property damage.
- 10.If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
- 11.Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
- 12.Do not use this fire pit under a tree or near any other unprotected combustible area.
- 13.Do not connect to a distant gas supply.
14. Do not burn anything other than what is provided.
- 15.Do not place clothing or flammable materials near a fire pit.
16. When in use keep a safe distance from the fire pit table, Do not sit on the fireplace table or put your hands/feet on it.
17. To avoid burns, do not touch or move any part of the fireplace table while it is in use and wait until it is completely cool.
- 18.Do not inhale smoke from the fireplace table to avoid smoke entering your lungs.
- 19.Do not alter this equipment. Any alteration will create a safety hazard.
- 20.Do not use any attachments or accessories other than the original factory attachments and accessories.

! CALIFORNIA PROPOSITION 65

WARNING: This product can expose you to Carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

TOOLS REQUIRED



Allen Wrench
(with the product)



Small Wrench

 
 
 
 
 
 
 
 
 
 


1 Persons Assembly











Up to 30 Minutes For Assembly

PARTS

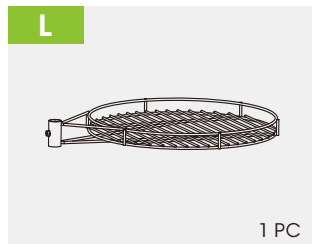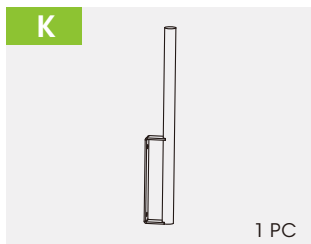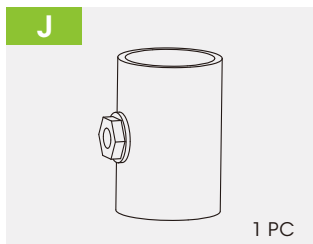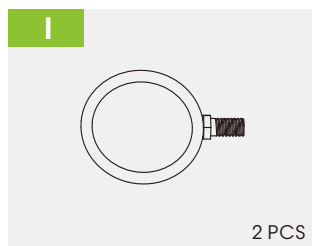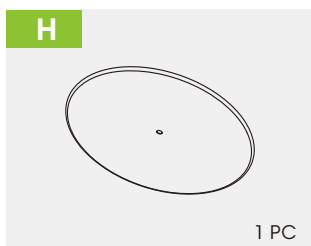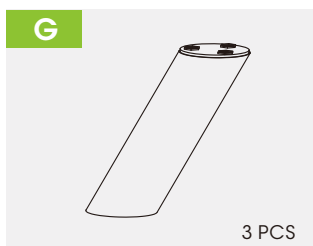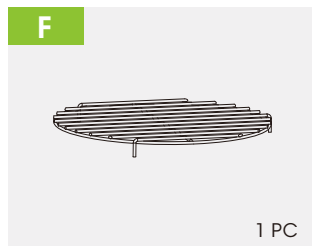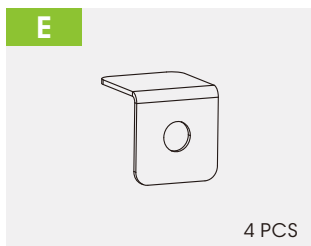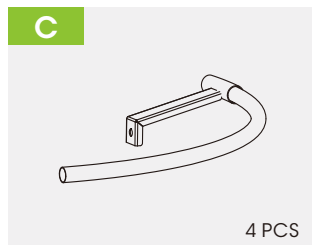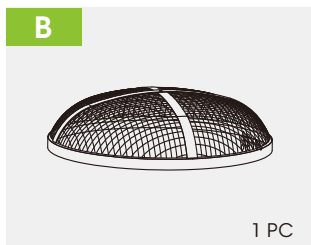


HARDWARE

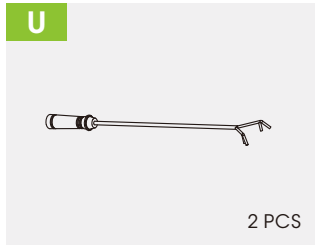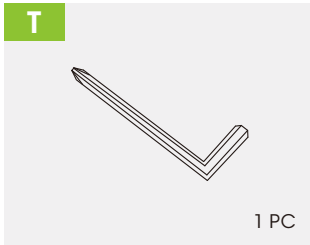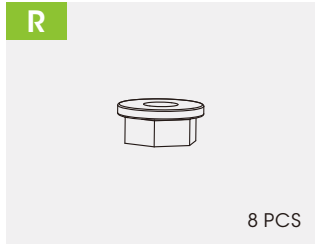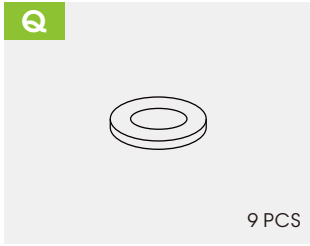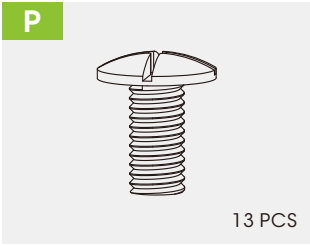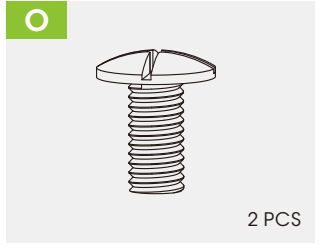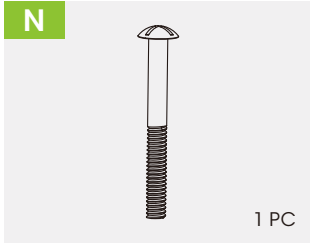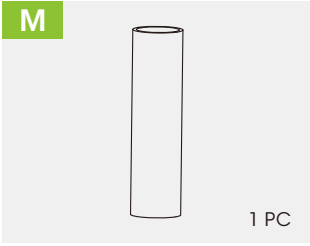        


PRODUCT ASSEMBLY

 - 1** Assemble the three legs (G) to the fire bowl (D) using nine M6x12 bolts (P) and nine washer (Q), Tighten securely.

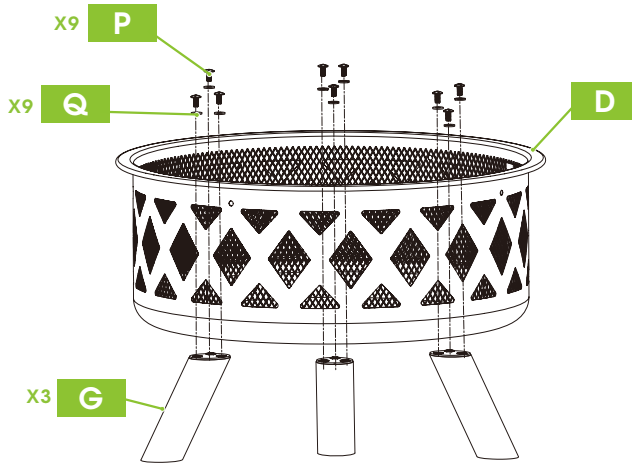


 - 2** Attach the heat shield (H) to the bottom of the fire bowl (D) by inserting the bolt (N) into the bottom of the fire bowl (D) and through the sleeve (M) and the heat shield (H) as illustrated in figure 2. Tighten securely using the nut (R).

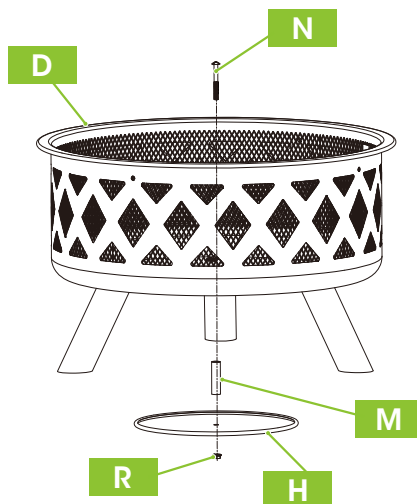


PRODUCT ASSEMBLY

 - 3** Assemble each of the four outer ring sections (C) to the fire bowl (D) using one bolt (P) and one nut (R) , For each ring section (C) ,assemble one mesh cover rest (E) as shown between the bolt and the fire bowl , Space the mesh cover rests evenly .Tighten bolts securely.

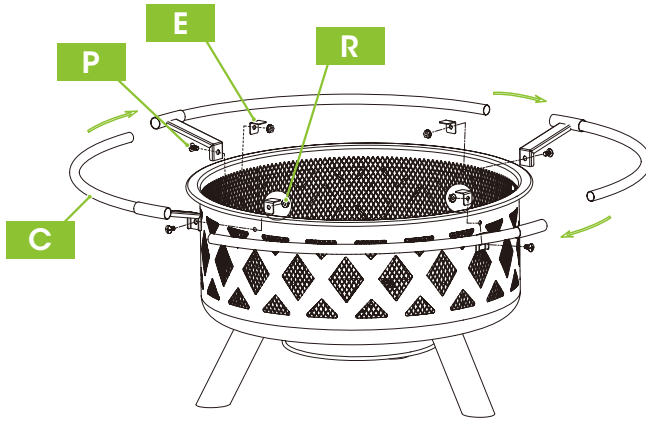


 - 4** Assemble the cooking grate support (K) to the fire bowl (D) using two bolts (O) and two nuts (R) .Tighten bolts securely.

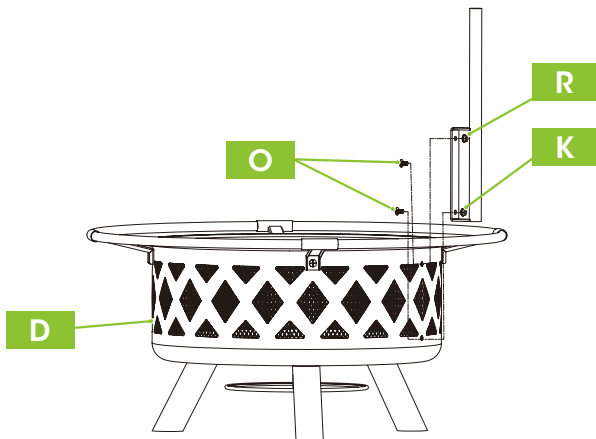


PRODUCT ASSEMBLY

 5 Insert (J) and (L) into (K) and fix with (I)

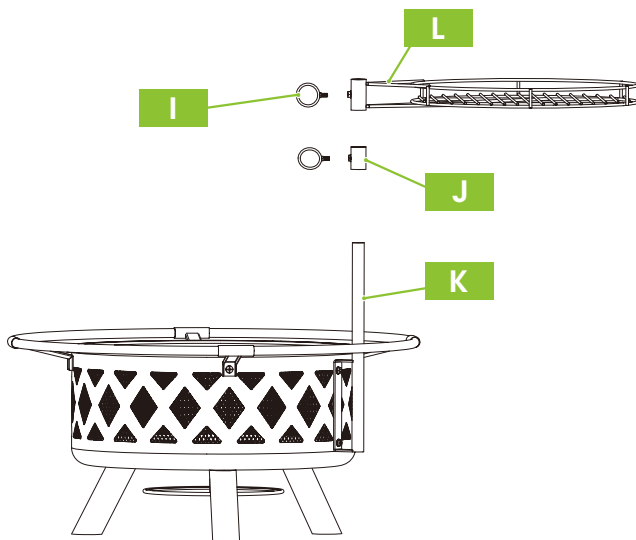


6 Put "F" into "D"

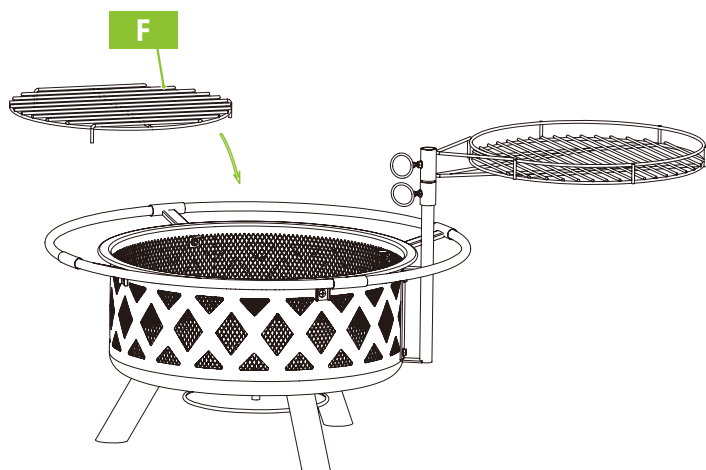 

PRODUCT ASSEMBLY

 - 7** Assemble the mesh cover bracket (A) to the mesh cover (B) using nut (R). Then place the poker (U) next to the fire pit to use as needed.

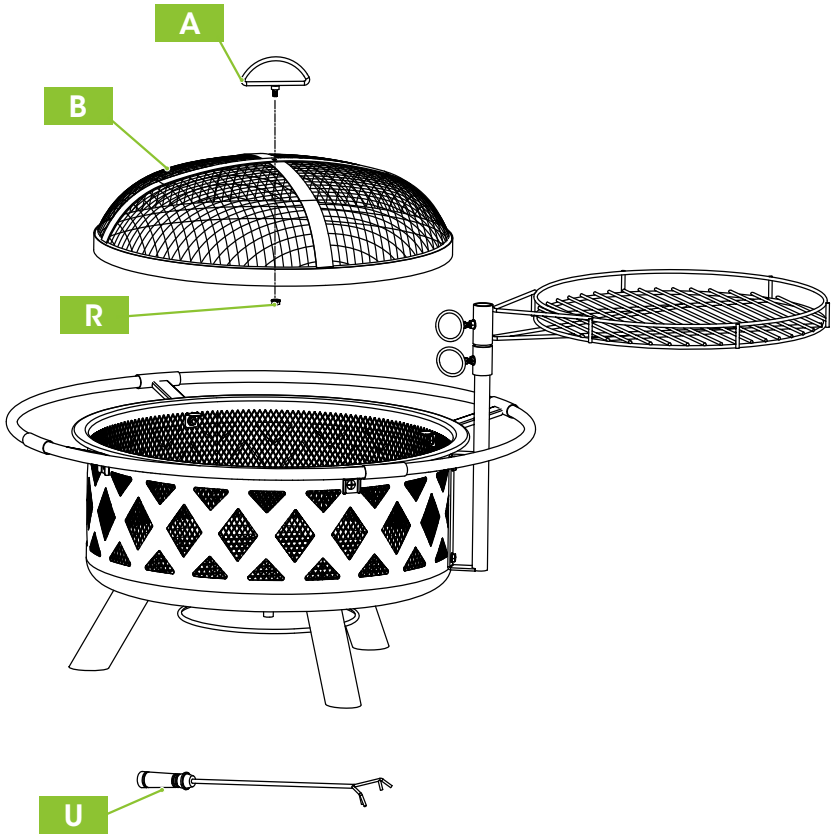


TROUBLESHOOTING


PROBLEM	REASON	SOLUTION
Product Defect	Logistics damage	Contact customer service to replace damaged parts
	The holes do not match	Contact customer service to replace damaged parts
	Missing parts	Contact customer service to replace damaged parts
	Product deformation	Contact customer service to replace damaged parts
Product is rusted	Outdoor storage when not in use	Place it under the eaves or in the warehouse when not in use
	Drenched by rain	Try not to get wet and keep dry
	Use splash water to put out fire	Take out the unburned firewood and grass ash and wait for it to cool down naturally
Burn out decks and grass	Durn out the deck	Do not use it on the deck , it is easy to burn the wood and cause a fire
	Durn down the lawn	Do not use it on the lawn , it is easy to burn the grass and cause a fire
Scalded	Hand scalded by high temperature	After extinguishing the fire , the surface is still very hot . Please do not move the product directly by hand until the product is completely cooled.
	Small pet is scalded by high temperature	Keep pets away when the product is in use or when it has just been extinguished and has not cooled down to avoid burns
	Child scalded by heat	Keep pets away when the product is in use or when it has just been extinguished and has not cooled down to avoid burns

HELP CENTER

 
Question about your product? We're here to help. Visit us at:



Chat Support

 

Product Inquiry

 

Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with.

Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

*However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging. If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.