




OPERATION INSTRUCTIONS

18" Wall-mounted fan

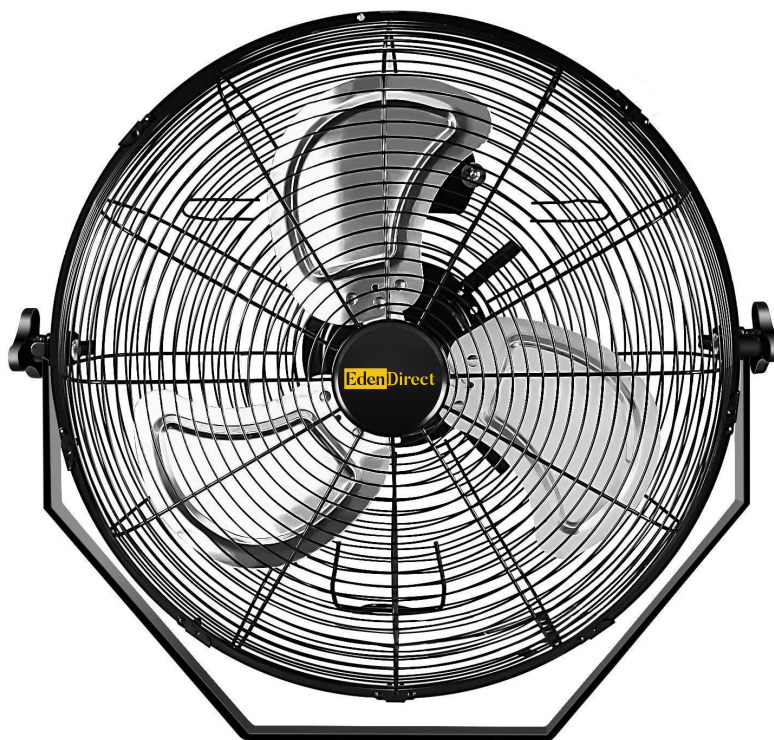

ITEM NO: HJ-18WFM

120V/60Hz 0.91A

Questions, problems, missing parts? Before returning the product, please e-mail our customer service by service@edendirect-brand.com

Intended Use

This product is intended for indoor residential, office, industrial, and other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions about whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word "WARNING" to indicate the level of hazard: WARNING indicates a hazard which, if not avoided, could result in injury or death.

IMPORTANT INSTRUCTIONS

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons, including the following precautions:

- Read all the instructions before using this fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
- Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
- Use extreme caution when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
- Do not place the fan on a small, unlevel, uneven or any surface which might allow the fan to tip or fall.
- For proper operation, fan should be placed on a smooth, non-combustible, level surface.
- Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
- The use of attachments not recommended or sold by the manufacturer may cause hazards.
- Do not use outdoors.
- Do not use fan in window. Rain may cause electrical hazard (for non-window models).
- Do not operate the fan with blade guards or any safety device removed.
- Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be a minimum of 14 AWG and rated not less than 1875 watts.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
- Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

READ & SAVE THESE INSTRUCTIONS

WARNING: Shock Hazard

Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate fan where it may fall into a bathtub or other water receptacle. Do not use in damp environments such as flooded basements.

WARNING: Hot Surfaces

Do not touch fan motor when in use. This motor is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.

WARNING: Fire Hazard

Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat.

DO NOT USE in areas where gasoline, paint or flammable materials are used or stored.

To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the fan.

WARNING: Electrical Shock Hazard

DO NOT use with damaged cord or plug. Use with an adequate electrical system that is up to code.

CAUTION: To prevent electric shock, this product has a three-prong grounded plug that must be inserted into a matching properly grounded outlet to reduce the risk of electrical shock. Do not attempt to defeat this safety feature.

WARNING: To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.

DO NOT operate any fan with a damaged cord or plug or after the fan malfunctions, has been dropped or damaged in any manner.

DO NOT operate fan with a broken blade, safety cage or any visual imperfections. Disconnect power before servicing. For repairs covered under warranty, see warranty statement. For all other repairs contact Comfort Zone Customer Service by telephone or mail for information and assistance.

DO NOT run power cord under carpeting. DO NOT cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.

Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be a minimum of 14 AWG and rated not less than 1875 watts.

Do not use an extension cord unless the plug can be completely inserted into its receptacle. Unplug the fan when not in use. Do not operate fan with its ventilation obstructed.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

1. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
2. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.

Installation Instructions

Use the following information as a guideline only. It is the user's responsibility to be sure the location and the wall surface can handle the weight of this fan (14.6 lbs).

The wall fan must be mounted on a 12 inch (300mm) thick dry and cement-grouted firm wall or on 4 by 5 inch wood studs / joists.

- Use wall bracket as a template for locating the holes to be drilled.
- After determining the hole locations, use an appropriately sized drill bit to drill holes through the mounting surface.
- It is recommended that a minimum of grade 5 fasteners be used.

The following are acceptable surfaces for mounting wall mount assembly:

STEEL SURFACE

When mounting to a steel surface, such as vertical I-beam, drill through holes at pre-marked locations, using a 9/32" drill bit. Attach wall mount assembly to mounting surface using 1/4"-20 hex screw, in combination with 1/4" flat washers, 1/4" lock washers, and 1/4"-20 hex nuts.

MASONRY SURFACE

When mounting to a masonry surface, use a 1/4" expansion type bolt or 1/4" masonry lag with a shield designed to handle the weight of this fan. Drill holes at pre-marked locations using an appropriately sized drill bit as recommended for the fastener.

Fig 1



Fig 2



Fig 3



Fig 4



Usage

Fan operation: Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

- Fan location: Place the fan in the area of the room that will provide proper fan cooling.
- Fan connection: Plug fan directly into a 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or fan.
- Note: To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.
- Speed control: To operate the fan, each pull of the string will cycle through the following settings:
 - OFF
 - LOW
 - MED
 - HIGH
 - OFF

Specifications Care and Maintenance

Cleaning:

- CAUTION - Before cleaning the fan, be sure to disconnect power cord from the plug.
- Clean the grille surface with a clean, damp cloth. Do not use harsh chemical or abrasive cleaners.
- DO NOT IMMERSE THE FAN OR ANY WIRES IN WATER.
- Replace front grille before fan use.
- Allow fan to dry completely before use.
- Periodic grille cleaning with a vacuum will prevent dust build-up.
- The motor is sealed and does not require any interior maintenance, cleaning or lubrication.

Maintenance:

- The internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

Repair:

- DO NOT OPERATE THE FAN WITHOUT THE GRILLE IN PLACE.
- DO NOT USE THE FAN IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANY WAY.

Storage:

- Keep original carton for storage of the fan.
- Coil and tie the power cord to avoid damage during storage.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet.
- Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product.
- If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

Fuse Replacement

Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades. See Fig. 2.

Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity. Be careful not to break glass window. Replace fuse. **WARNING: Risk of fire.** Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6mm x 10mm). Be sure fuse is properly seated within its cavity. Close fuse cover by sliding it back to its original closed position.



Technical Specifications

Net Weight	Rated Voltage	Rated Frequency	Rated Power	Rated Current
11.02lbs	120V	60Hz	110W	0.91A


After-Sales Service

Within one year from the date of purchase, if the fan exhibits quality issues under normal use, we will provide corresponding after-sales support. For assistance, please contact our after-sales team via email at service@edendirect-brand.com.

Thanks for choose the Edendirect brand and purchase our quality products!

If our products or services can satisfy you, we sincerely hope that you will choose Edendirect brand again and leave a good review. This can inspire our hearts! It is also the motivation for us to continue to move forward!

5 star rating

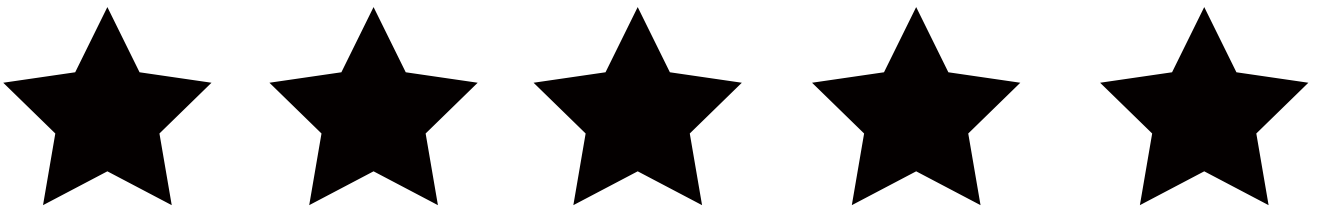

Edendirect will continue to improve the quality of its products and efficient services to provide an easy shopping experience for every customer!

We provide one-year warranty, if you have any problem when you receive the product or during use, please feel free contact email: service@edendirect-brand.com. We hope you will give us the opportunity to help you, and we sincerely thank all of our customers for taking time to research this product and give us valuable suggestions and feedbacks!

*Thank you so much
for your support!!!*



Please read this manual before operating and save it for future reference.

Every fan covered with a 1-year free warranty offered by **Edendirect** that is automatically valid from the date of purchase.

If you have any problem, please email us at **service@edendirect-brand.com**