Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



• Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



• Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.




 Dust and pick-up spills using a clean, non-colored, lint-free cloth.



Parts List			
Label	Picture	Description	QTY
Α		Table Top	2
В	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Leg Connecting plate	2
С	000	Leg Base Plate	2
D	0 0	Leg Column	6
E		Fixed wood	2
<u>Hardware</u>			
Label	Picture	Description	QTY
1		Bolt (M8*38mm)	9
2		Bolt (M8*57mm)	37
3		Spring Washer (M8)	46
4		Flat Washer (M8)	46
(5)		5mm Allen Wrench	1

Assembly Preparation

Before Beginning Assembly:

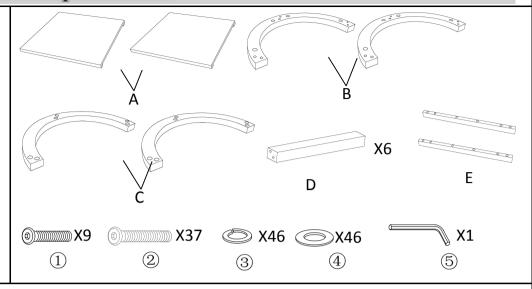



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




· Assemble on a clean non-marring surface (packing foam)-




· Save all packaging until finished-

Assembly Steps

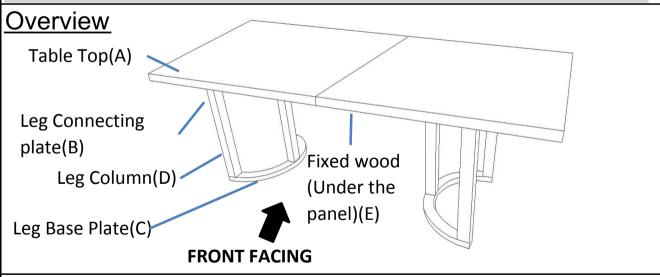


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

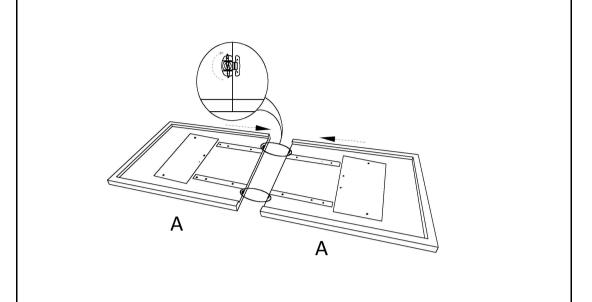


Please put the two panels (A) together as shown. Place all the parts on a clean, non-marring surface.

Step 2

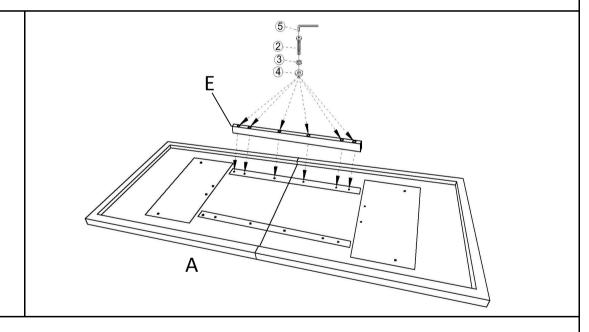

As shown in the picture above, you should place the bottom of the Table Top (A) facing up. Secure the Fixing wood (E) using the Bolts (②) + Spring washers (③) + Flat washers (④) and the Allen Wrench ⑤. At this point in the assembly, DO NOT fully tighten the bolts.

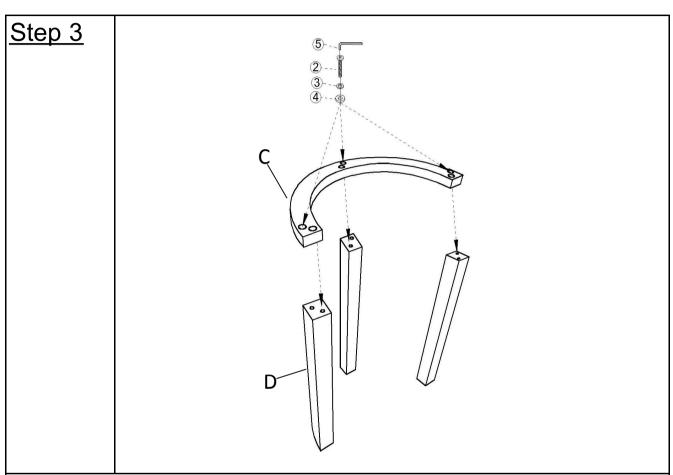


As shown in the figure: Please fix the Leg Base Plate (C) and the Leg Column (D) using Bolts (②) + Spring washers (③) + Flat washers (④) and an Allen wrench(⑤).

Do not fully tighten the Bolts at this time.


As shown in the figure: Please fix the Leg Connecting plate (B) and the Leg Column (D) using Bolts (②) + Spring washers (③) + Flat washers (④) and an Allen wrench(⑤).

Note: DO NOT fully tighten the Bolts at this time.

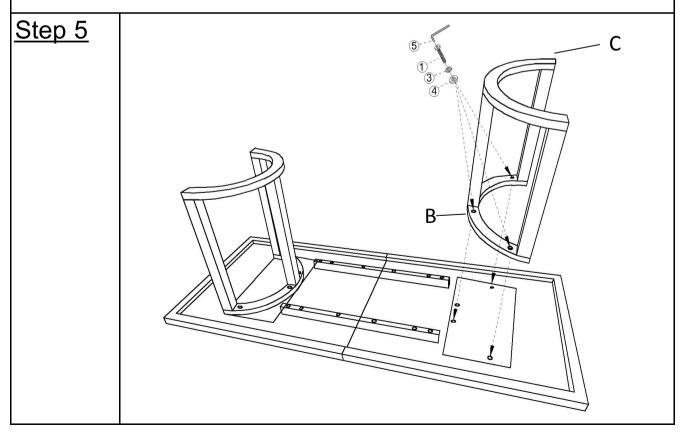

As shown in the figure: Please fix the assembled foot frame to the bottom of the Table Top(A) with Bolts(1) + Spring washers(3) + Flat washers (4) and Allen wrench(5).

Step 6

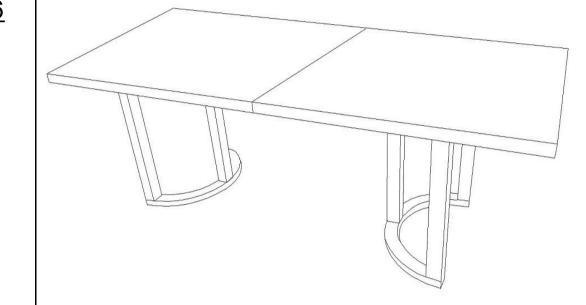

Your Dining Table is ready for use.

This Dining Table should only be used on a flat, level surface.