 


REDMOND / MANSFIELD / STANWICK

---

72 INCH TV MEDIA STAND

MODEL # AXCRED72-FG

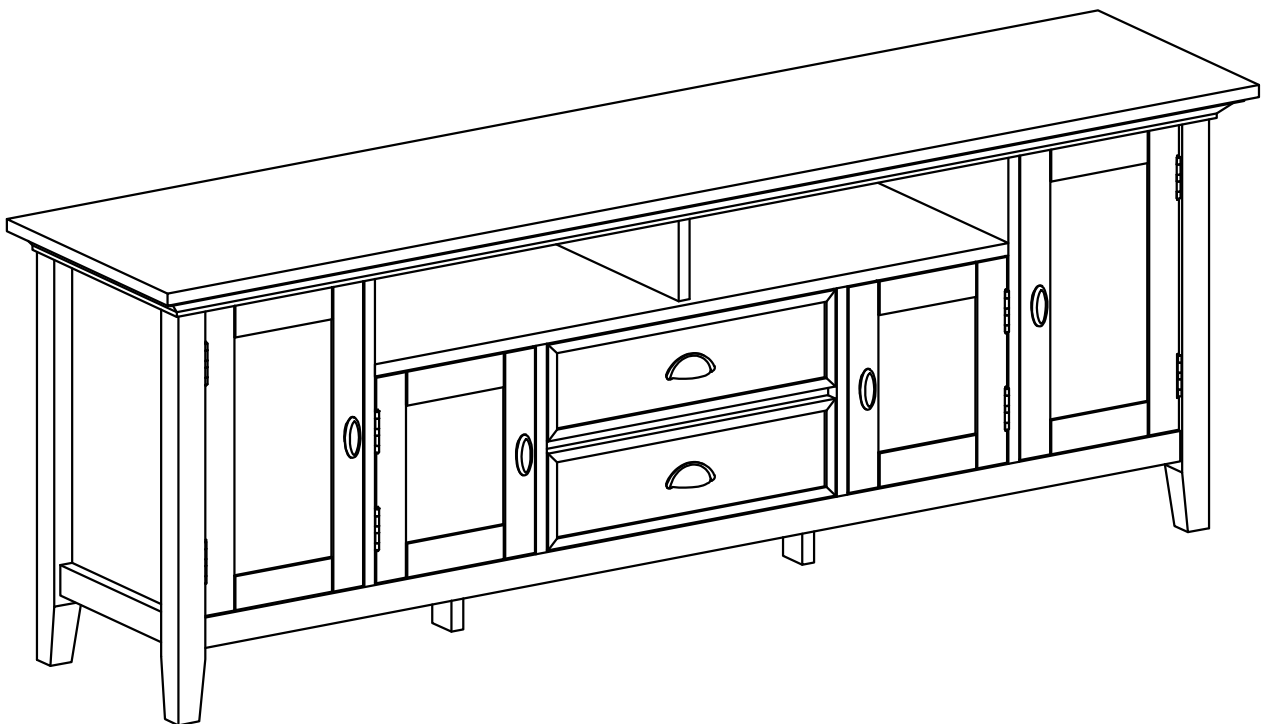



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your  
replacement parts free of charge

Please call Customer Service at 1-866-518-0120 ext. 262

Monday to Friday between 9 am –4 pm EST

or go to

[www.simpli-home.com/parts request](http://www.simpli-home.com/parts request)

In order to assist you in a timely manner, please have the following  
information ready:

Model # \_\_\_\_\_ Part Number or Letter \_\_\_\_\_

Purchased at \_\_\_\_\_ Date of Purchase \_\_\_\_\_

**If you wish to return the product, please contact the retailer where the  
product was purchased.**

**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## SAFETY INFORMATION

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help. If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

**IMPORTANT :** Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## CARE and MAINTENANCE

Perhaps the greatest environmental damage to wood furniture comes from wide swings in relative humidity (RH) in our homes. Wood absorbs and desorbs water as relative humidity rises and falls, and in doing so it swells and shrinks. Making matters worse, it expands and contracts unequally along different grain directions. As humidity changes, the components of wooden objects are continually pushing and pulling against each other. This pressure often results in parts of furniture no longer fitting together closely or becoming distorted or breaking from their own internal stresses.

The response to relative humidity changes begins with determining the annual average RH for your particular space. Then try to keep the RH in the space where your furniture is as close to that average as possible, generally within about 10% up or down. De-humidify in the summer and humidify in the winter.

Be aware that raising the temperature lowers the humidity and vice versa. Thus, modern heating systems, which can drive down interior RH in the winter, almost invariably cause problems for furniture. To counteract their effect, you can either modify the RH by keeping furniture containing spaces cooler in the winter or most importantly, have a good working humidifier for your home. A humidistat automatically works to balance the humidity in your home so it is constant. Dry indoor air can suck enough moisture from its surroundings to do permanent damage to wood, causing it to crack or split.

Remember, that not all woods are created equal. Two factors that help determine how rapidly a wood will lose moisture are pore size and surface hardness. A piece made from a dense and hard wood will dry less rapidly than pieces made from softer woods.

 
Furniture that is sealed and lacquered will lose moisture more slowly than an unfinished piece while pieces with veneer finishes are not only stronger, but lose moisture more slowly than other finishes.

### **To help protect your wood furniture, take these steps:**

 
- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly. Don't over-humidify; that can damage wood by causing it to expand and contract.
- Keep furniture out of direct sunlight, which can cause it to dry out, crack and warp.
- If you can avoid it, don't put furniture near heating vents. If you must, keep the piece 3 to 4 inches away from the wall, giving the heat and air space to circulate.
- Dust with soft dry cloth.
- Do not use liquid or aerosol products.
- To avoid marking, do not place rubber on surface (foot pads, etc.)
- For soil build-up, wipe with damp cloth & dry.
- Do not use abrasive cleaners.

## PART DESCRIPTION

 
AL

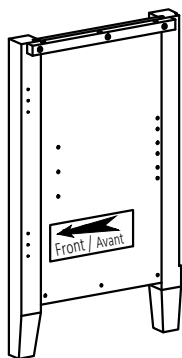LEFT SIDE  
QTY 1

 
AR

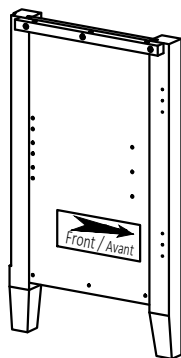RIGHT SIDE  
QTY 1

 
B

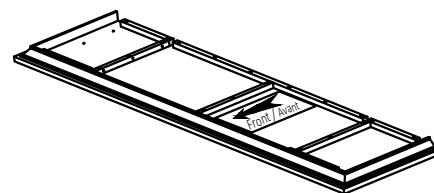TOP  
QTY 1

 
C

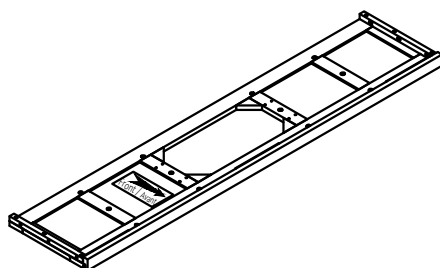BOTTOM SHELF  
QTY 1

 
DL

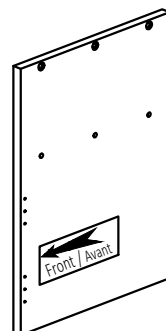LEFT LARGE DIVIDER  
QTY 1

 
DR

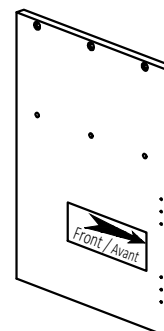RIGHT LARGE DIVIDER  
QTY 1

 
E

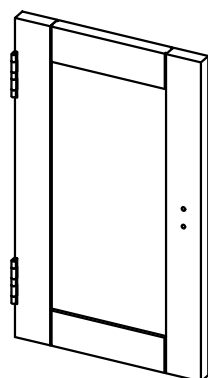LARGE DOOR (L&R Same)  
QTY 2

F

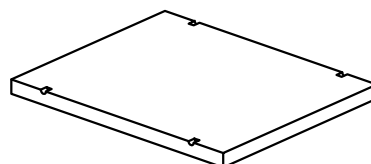CABINET SHELF  
QTY 2

GL

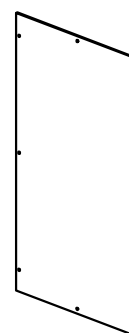 
LEFT BACK PANEL  
QTY 1

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

 
## PART DESCRIPTION

GR

 
Warning Label

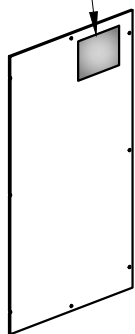RIGHT BACK PANEL  
QTY 1

 
G1

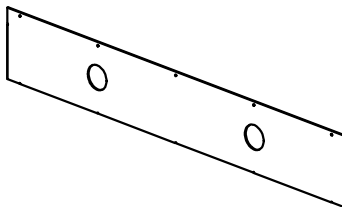TOP BACK PANEL  
QTY 1

 
G2

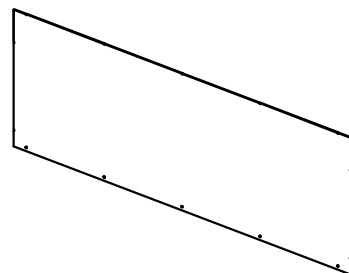BOTTOM BACK PANEL  
QTY 1

 
H

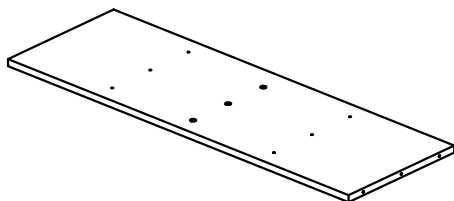TOP SHELF  
QTY 1

 
I

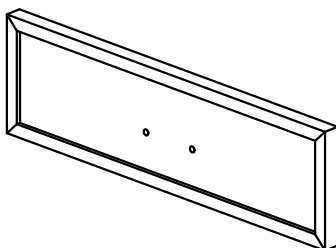DRAWER FRONT  
QTY 1

 
JL

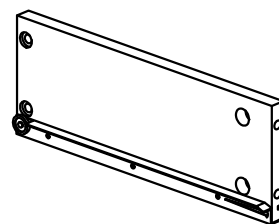LEFT DRAWER SIDE  
QTY 1

 
JR

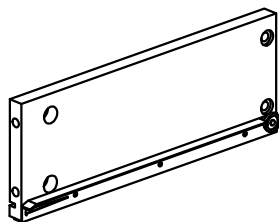RIGHT DRAWER SIDE  
QTY 1

K

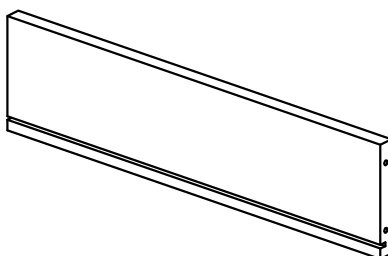DRAWER BACK  
QTY 1

 
L

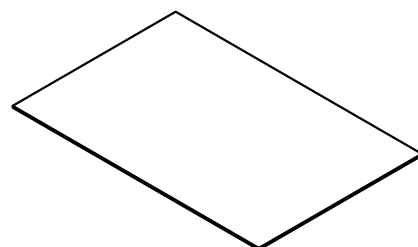DRAWER BOTTOM  
QTY 1

 
**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

## PART DESCRIPTION

 
M

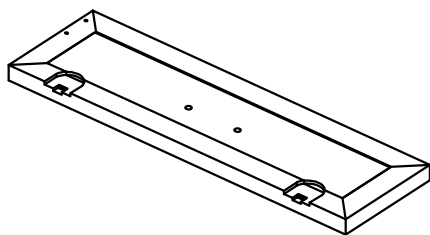FLIP DOWN DOOR  
QTY 1

 
N

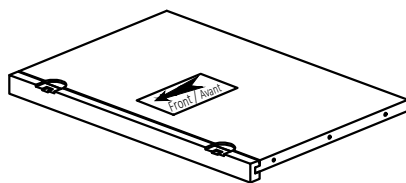MIDDLE SHELF  
QTY 1

 
O

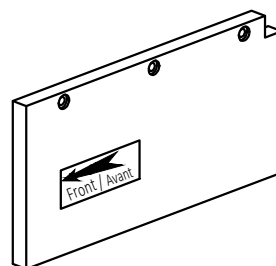SMALL DIVIDER  
QTY 1

 
P

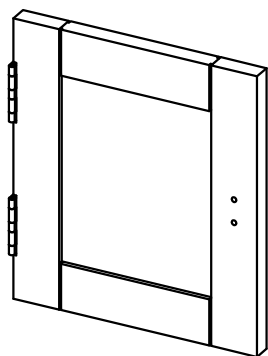SMALL DOOR (L&R Same)  
QTY 2

 
QL

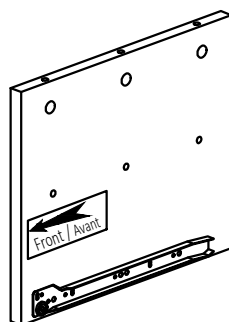LEFT MIDDLE DIVIDER  
QTY 1

QR

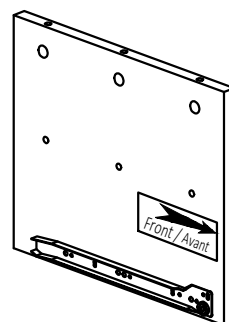RIGHT MIDDLE DIVIDER  
QTY 1

 
R

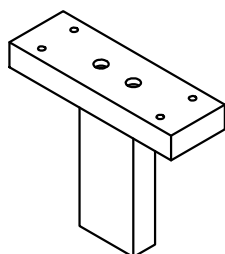SUPPORT LEG  
QTY 2

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

## HARDWARE DESCRIPTION

1



 
ALLEN KEY SCREW  
M6 X 30mm  
QTY 52

2



ALLEN KEY  
QTY 1

3



SHELF SUPPORT  
QTY 12

4



 
PHILLIPS SCREW  
M3 X 12mm  
QTY 24

5



 
PHILLIPS SCREW  
M3 X 15mm  
QTY 20

6



 
PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 31

7

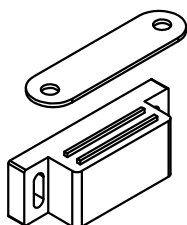

MAGNET AND PLATE  
QTY 5 SETS

8

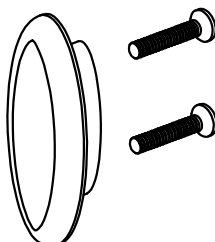

HANDLE  
M4 X 22mm  
QTY 4 SETS

9

 


CAM LOCK PIN  
CAM LOCK  
QTY 10 SETS

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

 
## HARDWARE DESCRIPTION

10

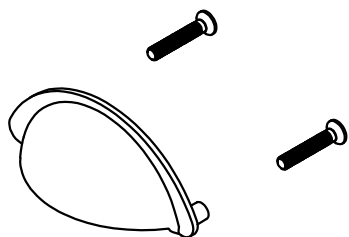

HANDLE  
M4 X 10mm  
QTY 2 SETS

11



 
PHILLIPS SCREW  
M4 X 30mm  
QTY 8

12



 
PHILLIPS SCREW  
M3.5 X 12mm  
QTY 12

13

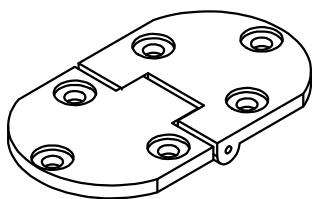

 
HINGE  
QTY 2 SETS

14

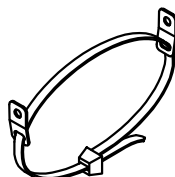

 
- a.  M4 X 25mm - QTY 2  
( 1 is extra )
- b.  M4 X 15mm - QTY 1
- c.  M4 X 25mm - QTY 1

FURNITURE TIP OVER RESTRAINT  
QTY 1 SET

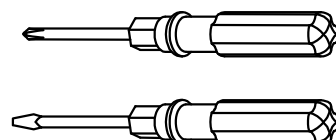 


Required -  
Flathead screwdriver  
Phillips screwdriver  
**Not Included**

**NEED HELP?** For help with assembly or if you are missing a part,  
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

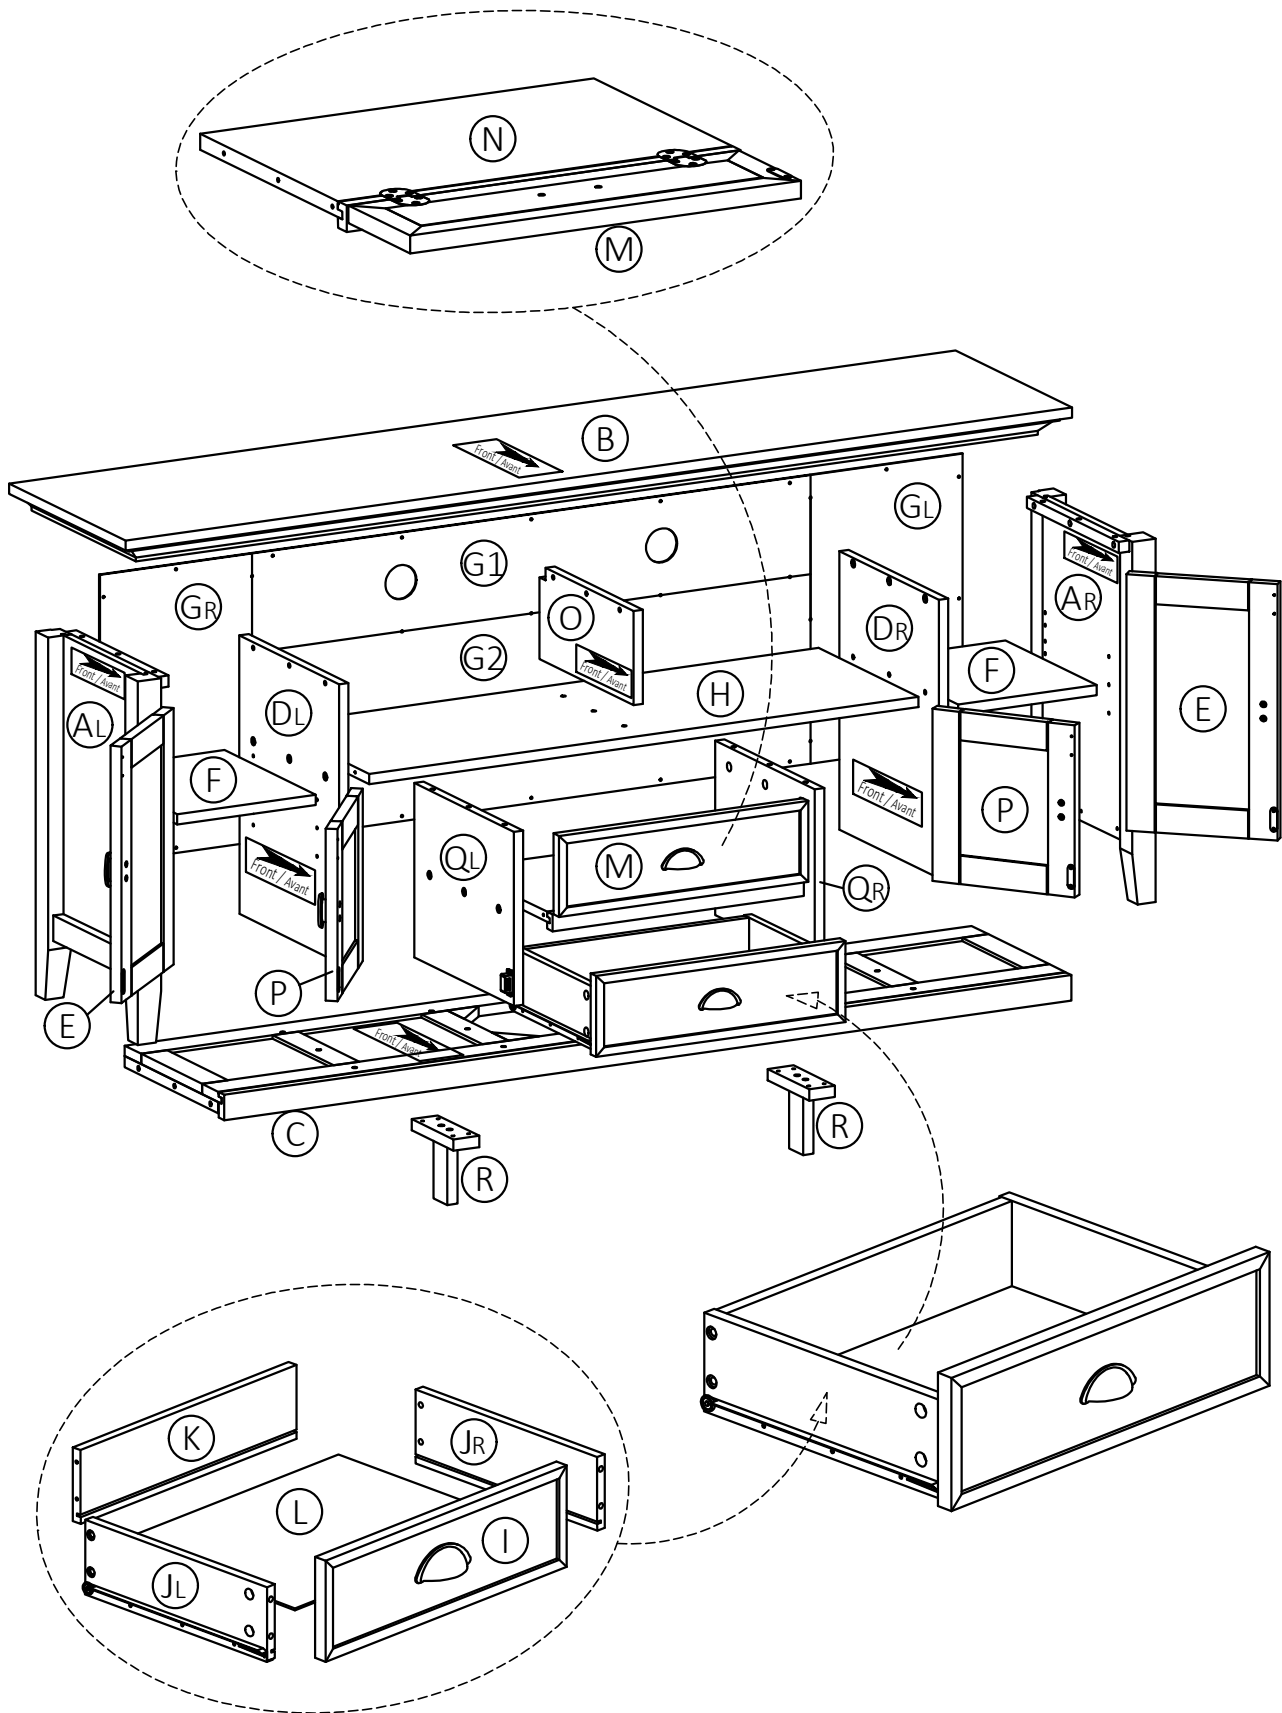 


## STEP-1

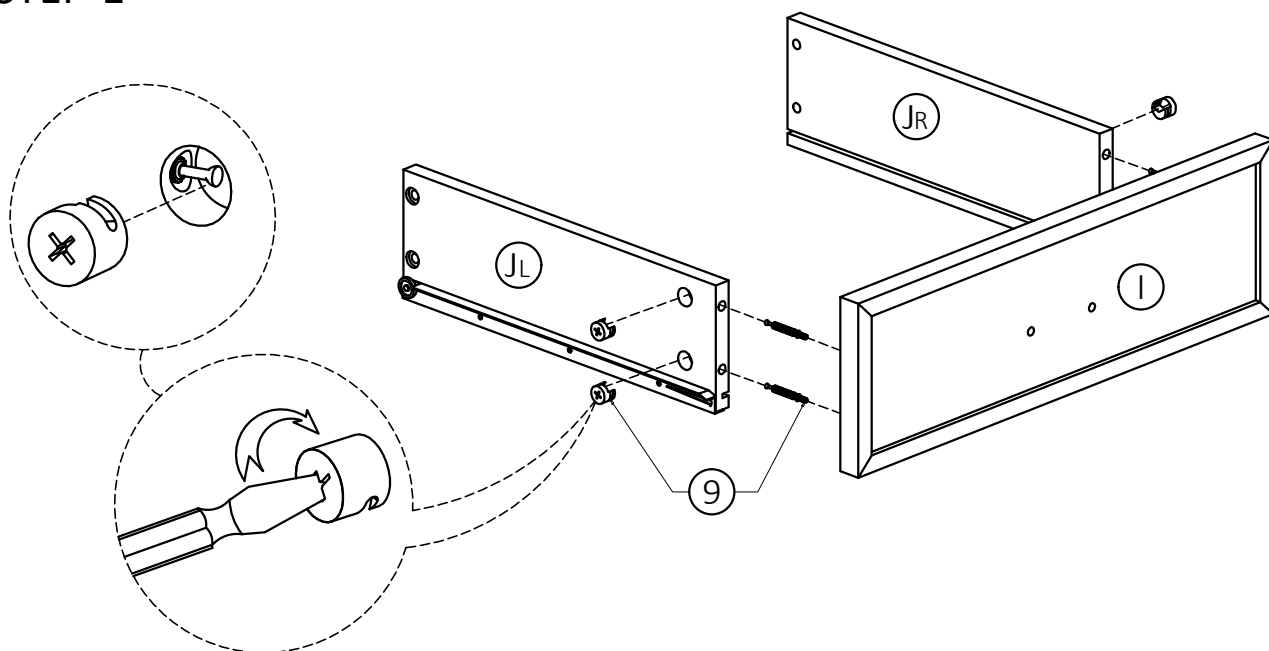

 
1. Attach four Cam Lock Pins (9) to back of Drawer Front (I).
2. Align Cam Lock Pins with pre-drilled holes and attach Drawer Sides (JL, JR).
3. Insert two Cam Locks (9) into pre-drilled holes on each Drawer Side (JL, JR).
4. Use flathead screwdriver to secure Cam Locks.

## STEP-2

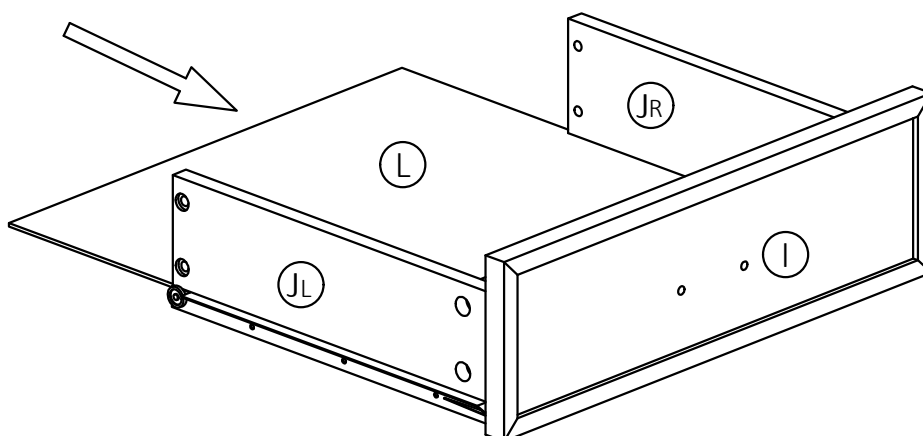

 
 
1. Slide Drawer Bottom (L) firmly into slots on Drawer Sides (JL, JR) and Drawer Front (I).

## STEP-3

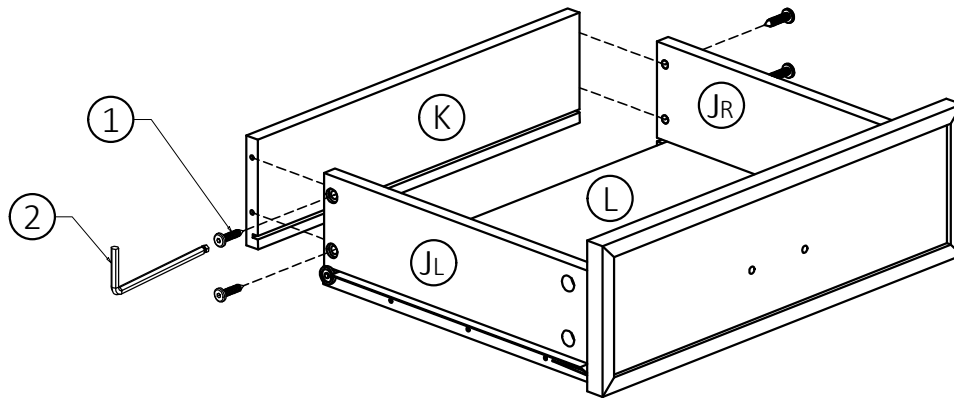

 
1. Align Drawer Back (K) with Drawer Bottom (L) and press firmly into slot.
2. Attach Drawer Back (K) using two Allen Key Screws (1) through pre-drilled holes on each Side (JL, JR).
3. Use Allen Key (2) to tighten Screws. Do not over-tighten.

## STEP-4

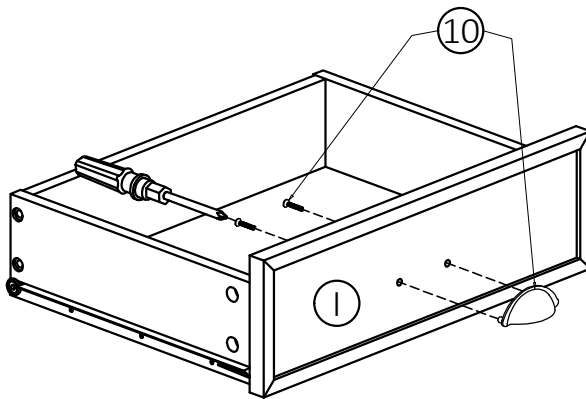 


**NOTE:** The screwdriver is not included in the hardware pack.

1. Use phillips screwdriver to attach Handle (10) to Drawer Front (I).

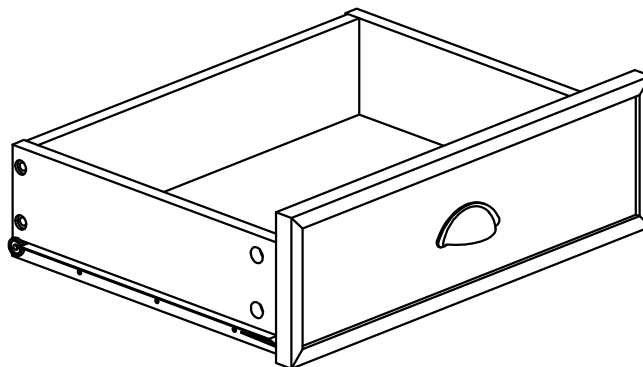 


## STEP-5

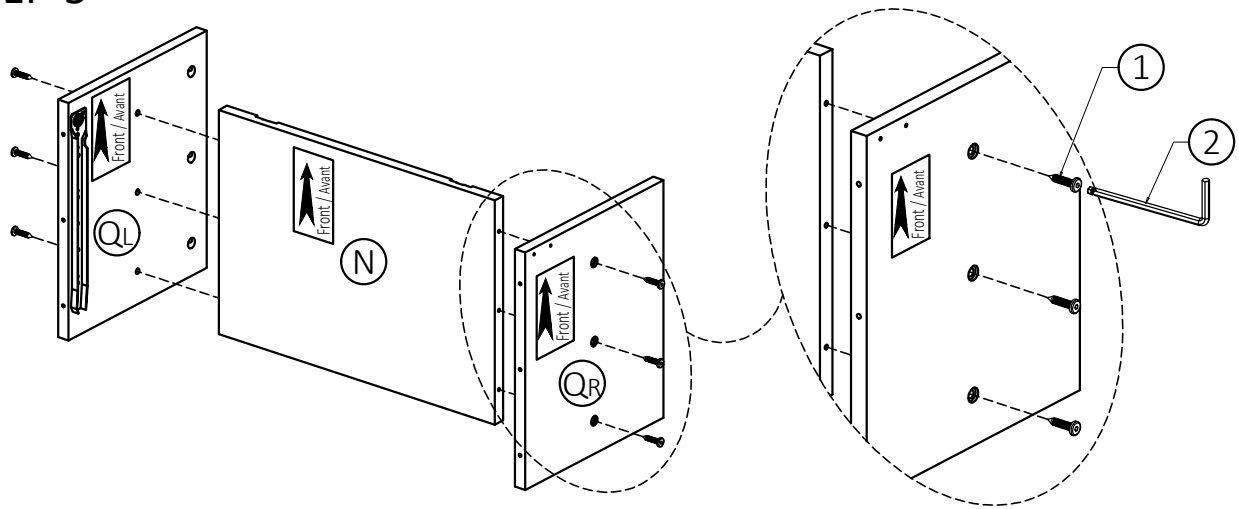

 
1. Attach Middle Dividers (QL, QR) to Middle Shelf (N) using six Allen Key Screws (1) (three screws on each Middle Divider).
2. Use Allen Key (2) to tighten. Do not over-tighten.

## STEP-6

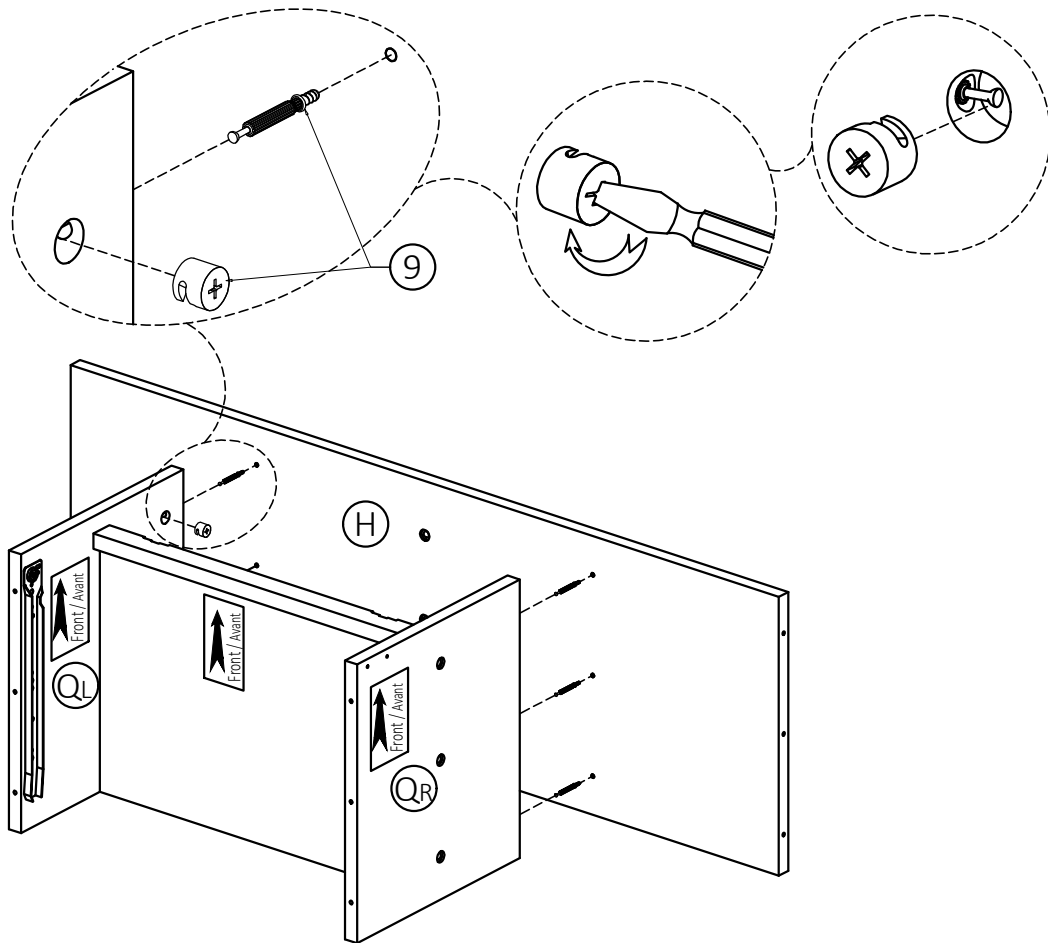

 
1. Attach six Cam Lock Pins (9) to underneath of Top Shelf (H).
2. Align Cam Lock Pins with pre-drilled holes and attach Middle Dividers (QL, QR).
3. Insert three Cam Locks (9) into pre-drilled holes on each Middle Divider (QL, QR).
4. Use flathead screwdriver to secure Cam Locks.

## STEP-7

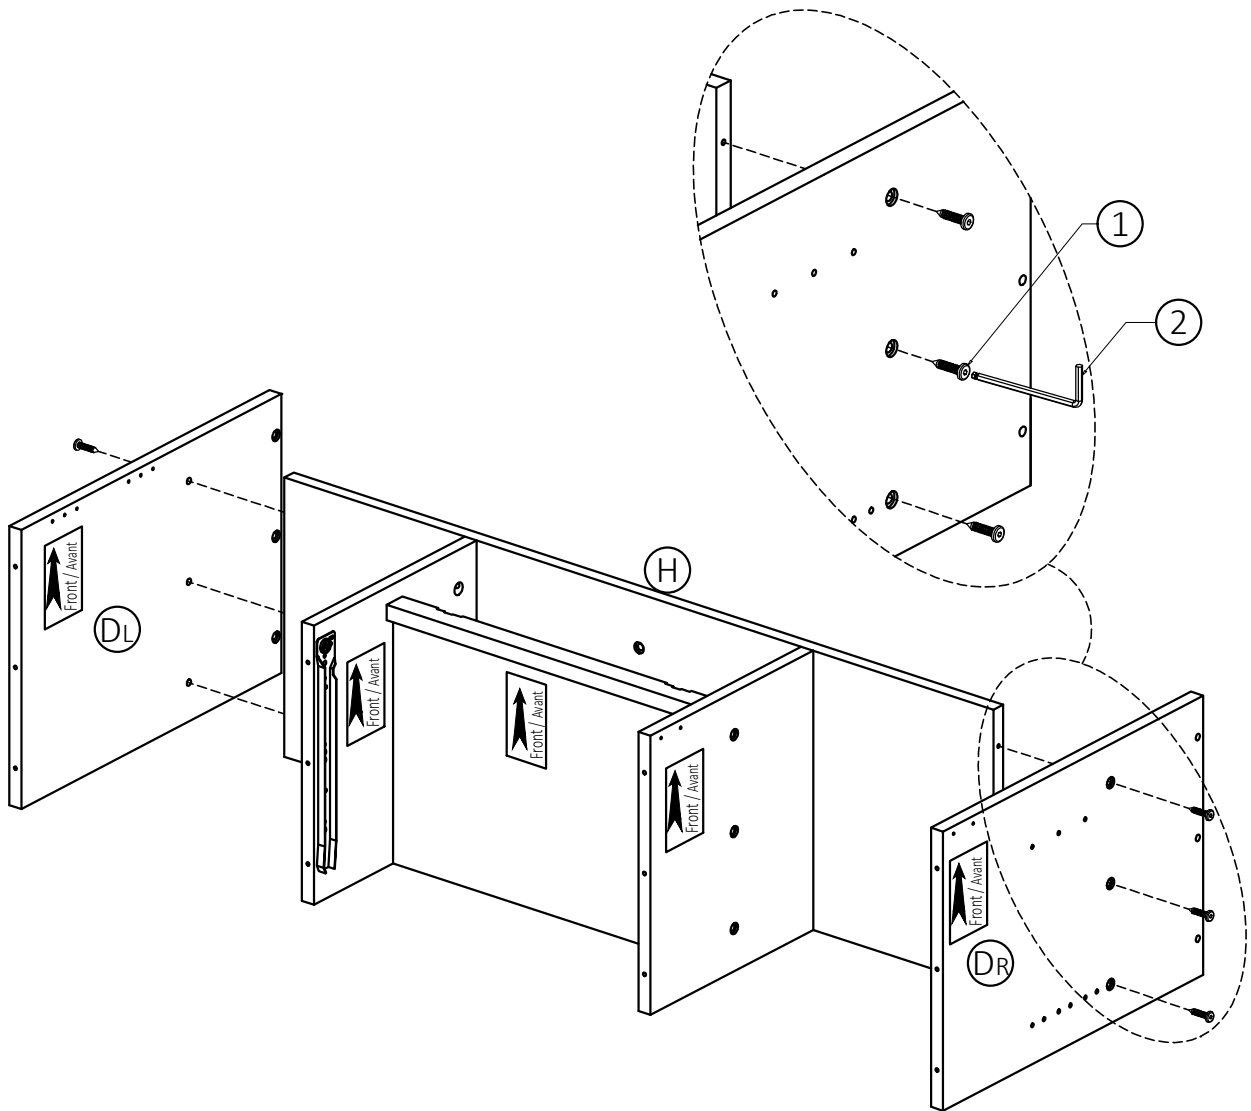

 
1. Attach Large Dividers (DL, DR) to Top Shelf (H) using six Allen Key Screws (1) (three screws on each Divider).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.

## STEP-8

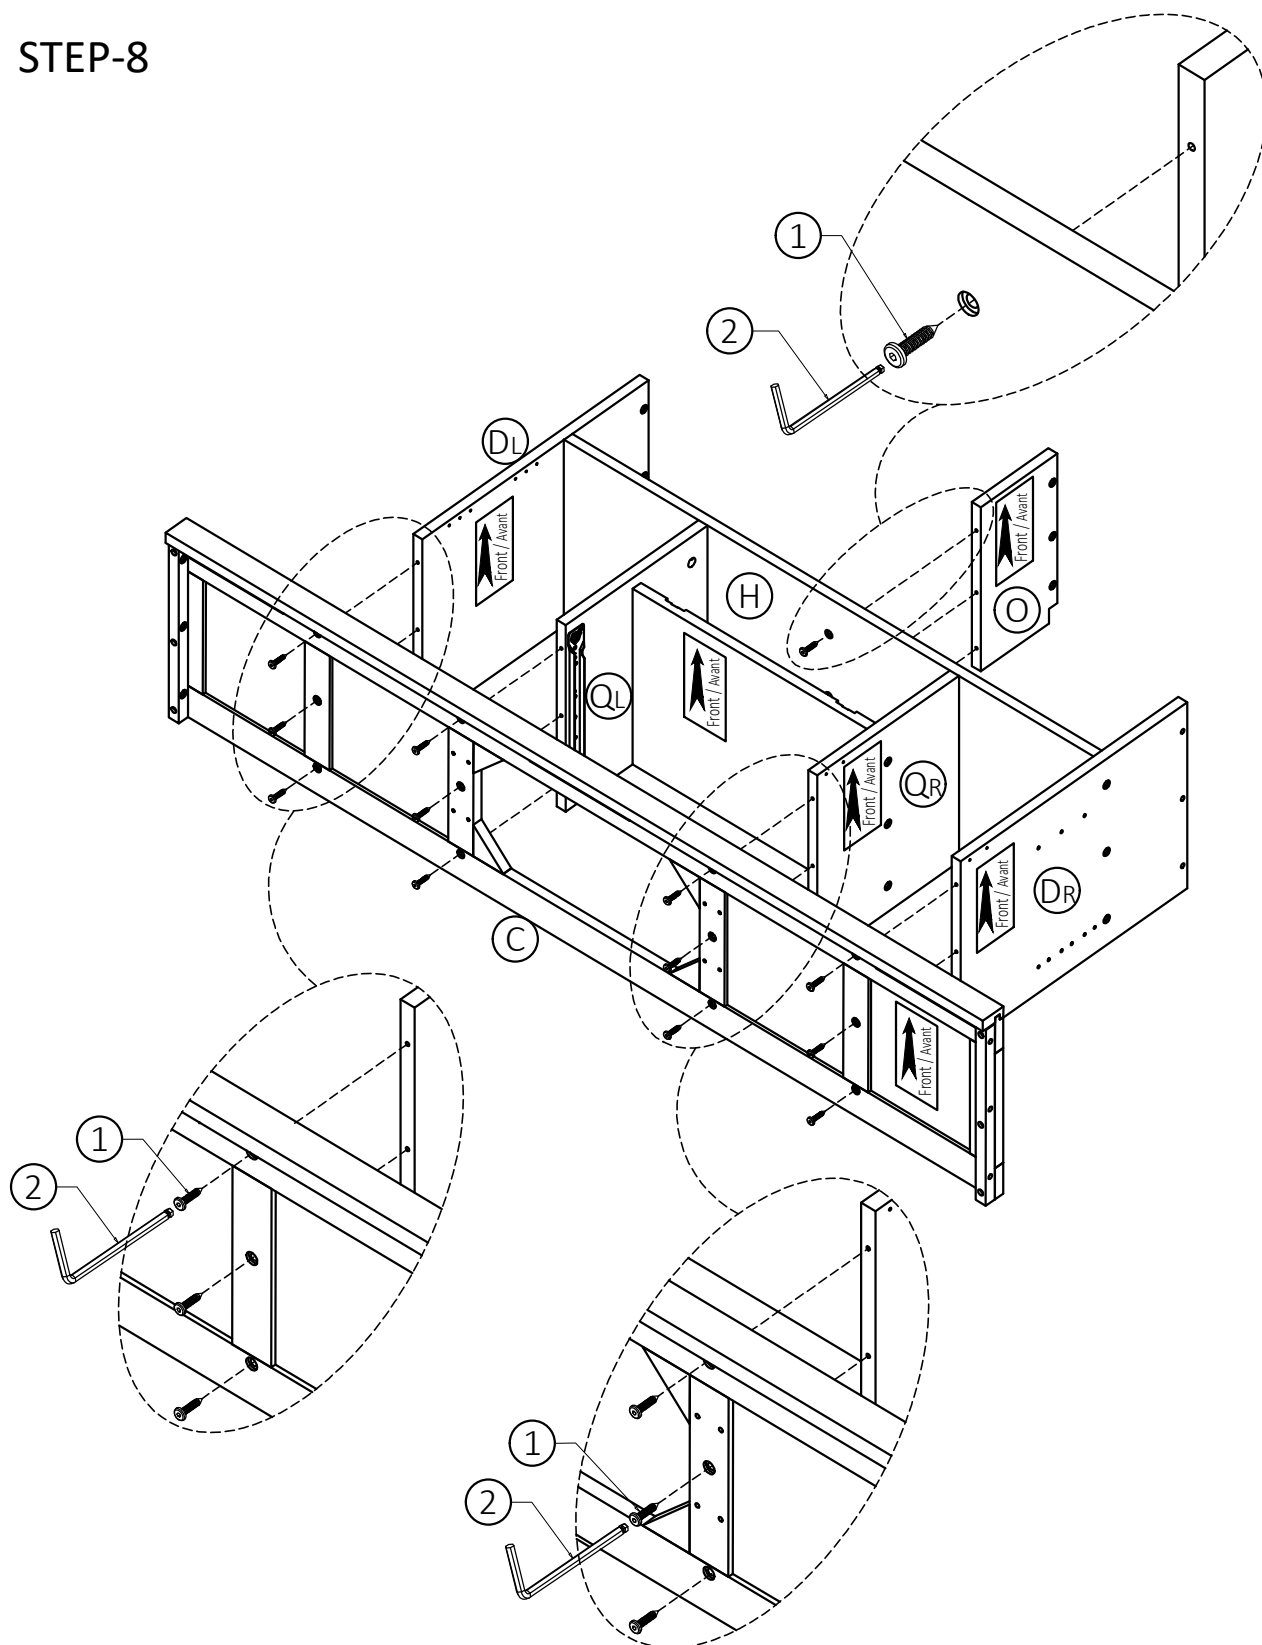 


1. Attach Bottom Shelf (C) to Middle Dividers (QL, QR) and Large Dividers (DL, DR) using twelve Allen Key Screws (1) (three screws on each Divider).
2. Attach Small Divider (O) to Top Shelf (H) using three Allen Key Screws (1)
3. Use Allen Key (2) to tighten. Do not over-tighten.

## STEP-9

 


NOTE: The screwdriver is not included in the hardware pack.

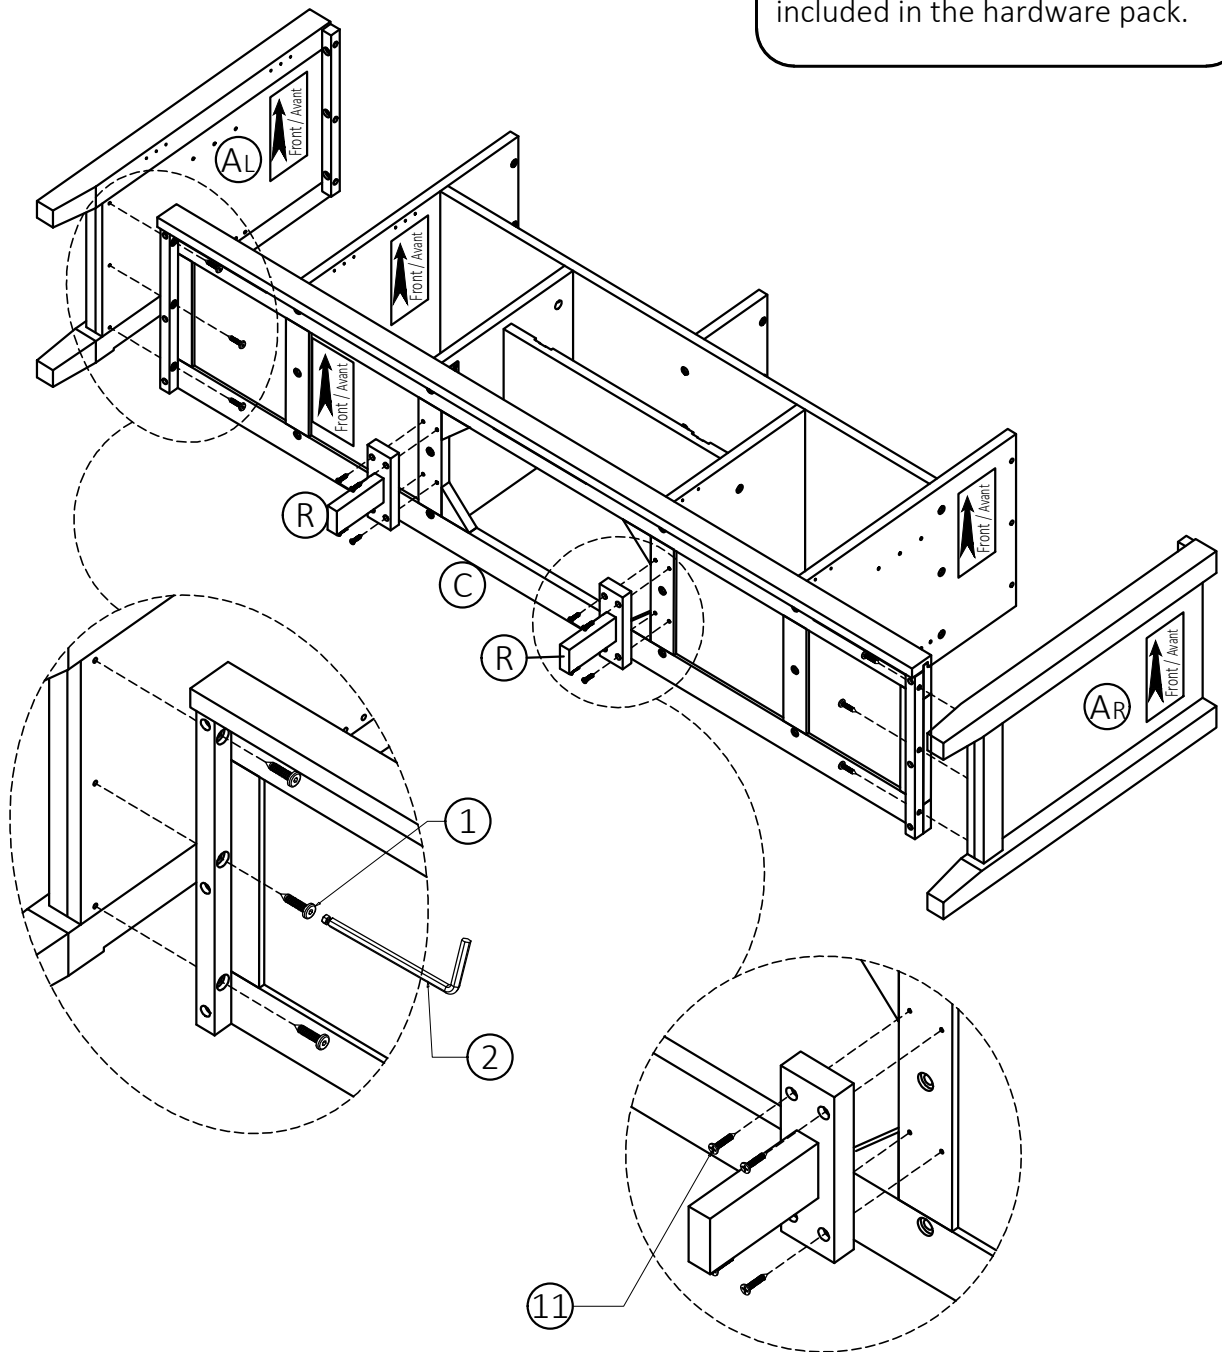

 
 
1. Attach Sides (AL, AR) to Bottom Shelf (C) using six Allen Key Screws (1) (three Screws on each Side).
2. Use Allen Key (2) to tighten Screws. Do not over-tighten.
3. Attach Support Legs (R) to Bottom Shelf (C) using eight Phillips screws (11) (four Phillips screw on each Support Leg).
4. Use Phillip Screwdriver to snugly tighten screw.

STEP-10

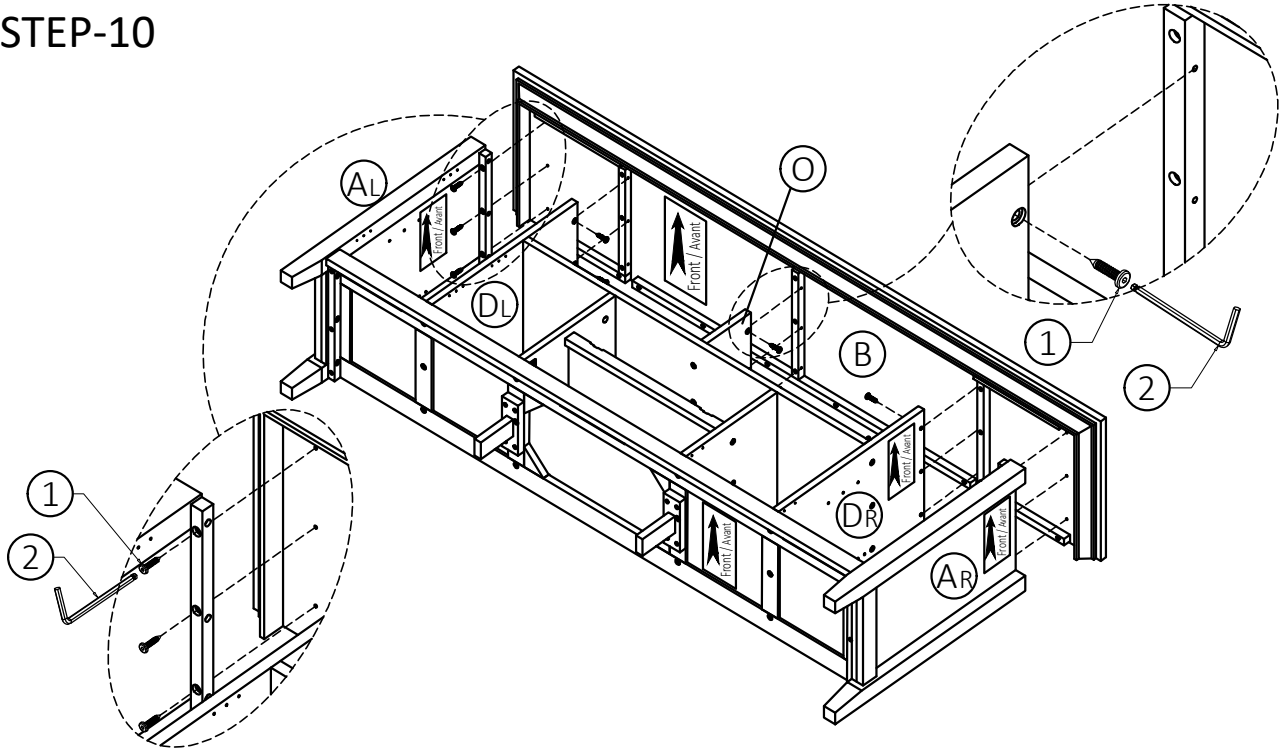

1. Attach Top (B) to Sides (AL), (AR), Small Divider (O) and Large Dividers DL, DR using fifteen Allen Key Screws (1) (three screws on each Side, Divider).
2. Use Allen Key (2) to tighten. Do not over-tighten.

STEP-11

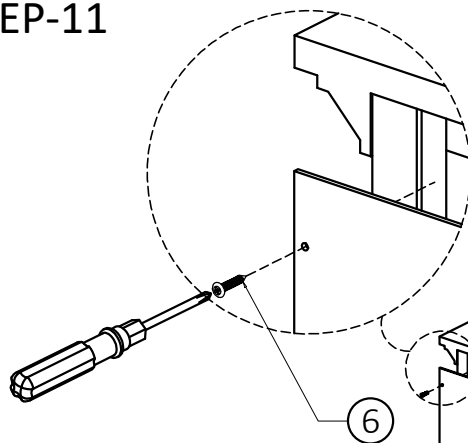 


**NOTE:** The screwdriver is not included in the hardware pack.

**Warning Label**

 
1. Attach Back Panels (GL), (GR), (G1), (G2) to back frame of TV using thirty one Phillips Screws Round Head (6) into pre-drilled guide holes.
2. Use Phillips screwdriver to tighten screw. Do not over-tighten.

STEP-12

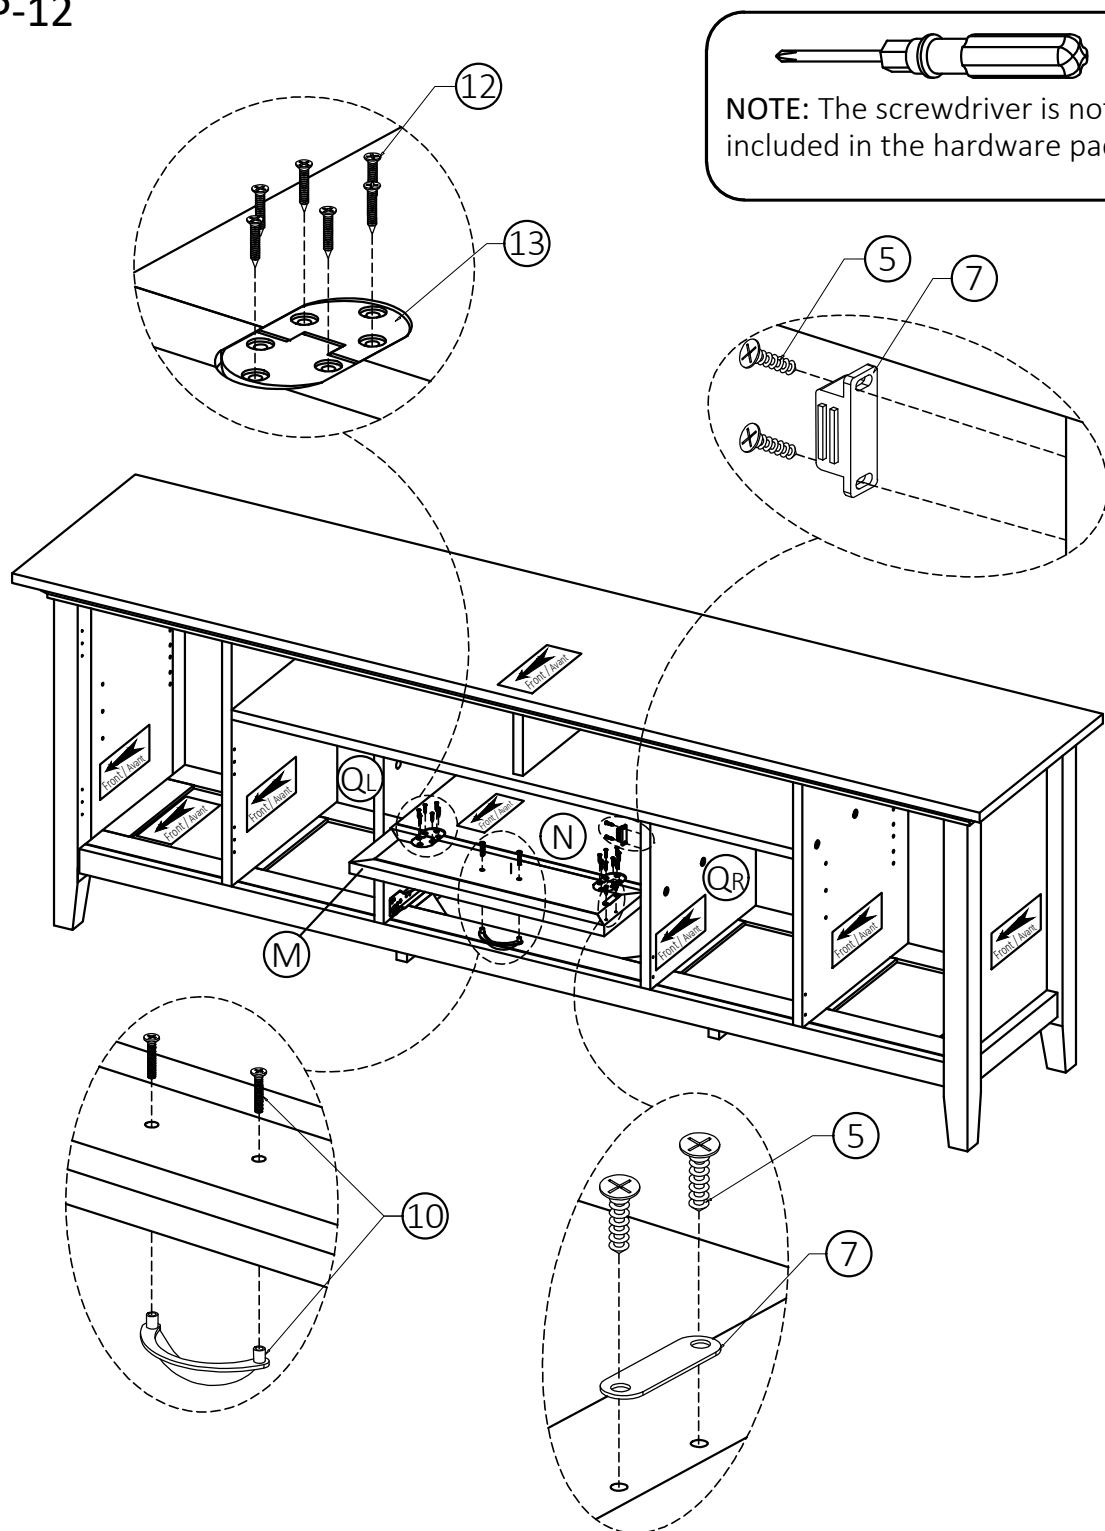 


1. Attach Flip Down Door (M) to Middle Shelf (N) using two Hinges (13) and twelve Phillips Screws (12).
2. Attach Magnet Plates (7) to top corner of Middle Divider (QL, QR) using Phillips Screws (5) into guide holes on Middle Divider (QL, QR).
3. Attach Magnets (7) to Flip Down Door (M) using Phillips Screws (5) into guide holes on Flip Down Door (M).
4. Use a Phillips screwdriver to snugly tighten screw.

## STEP-13

 


NOTE: The screwdriver is not included in the hardware pack.

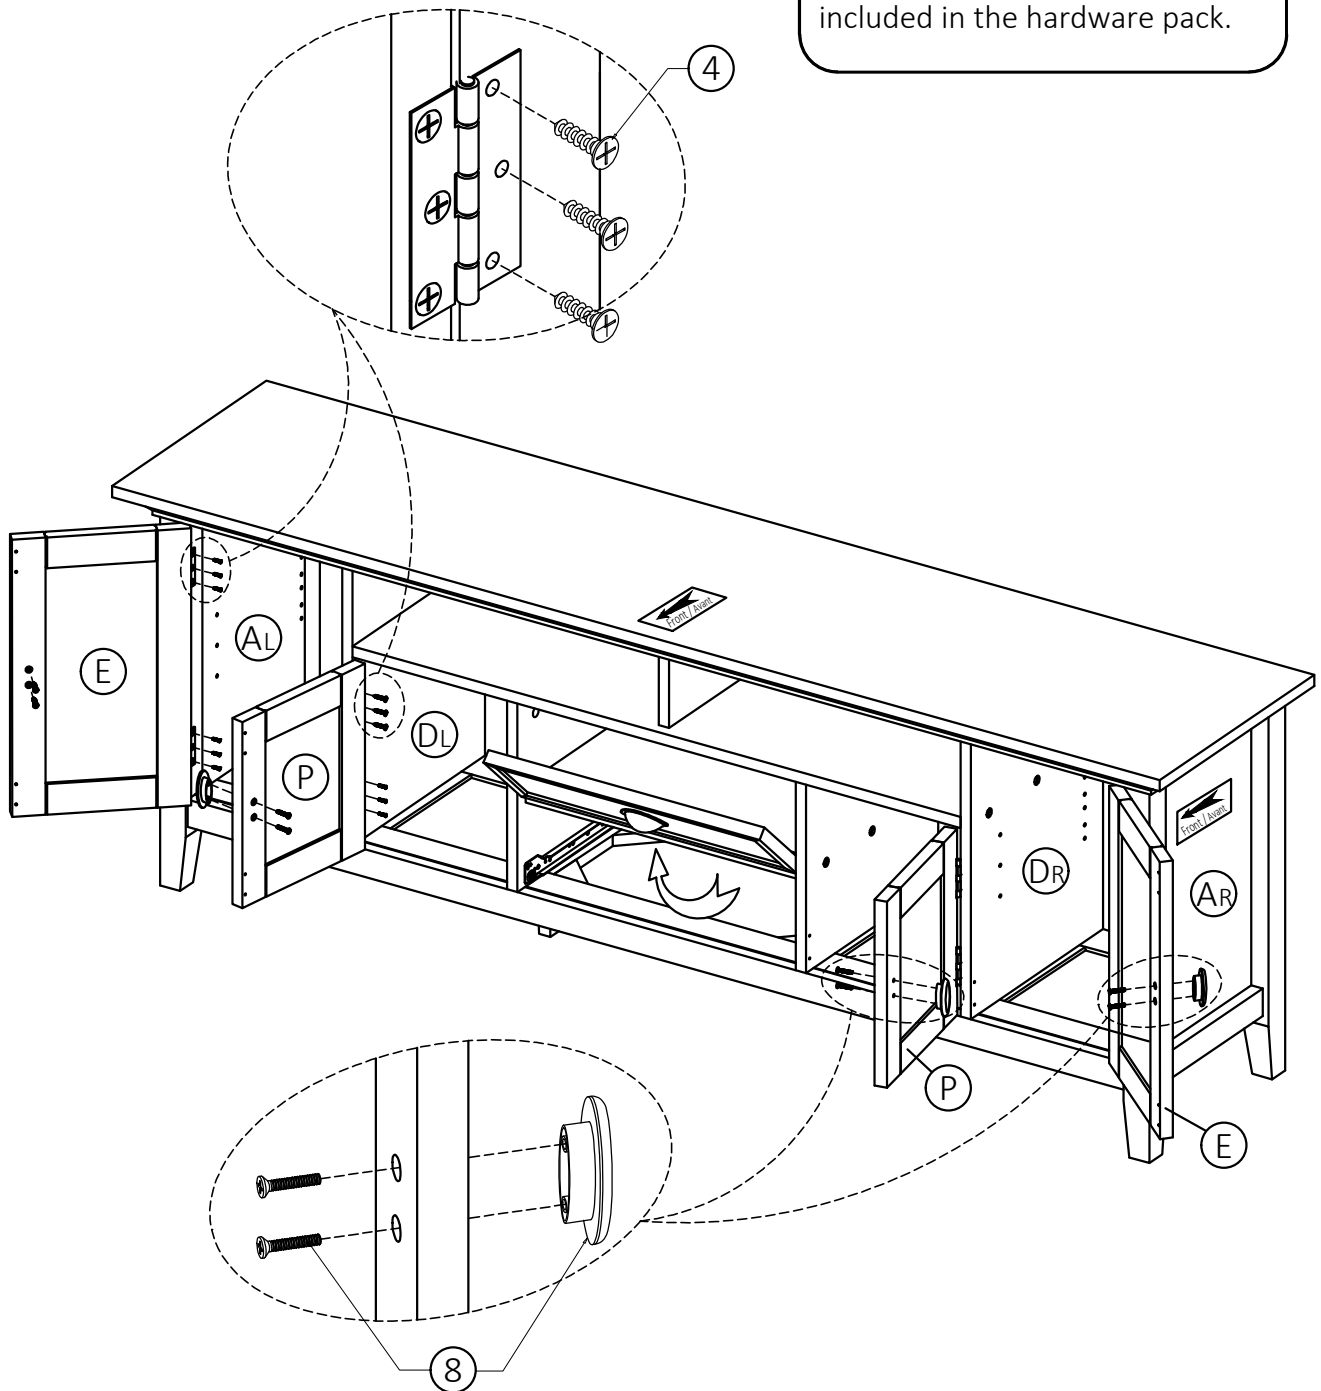 


1. Attach hinges on Large Doors (E) to Sides (AL, AR) using Phillips Screws (4) into guide holes.
2. Attach hinges on Small Doors (P) to Large Dividers (DL, DR) using Phillips Screws (4) into guide holes.
3. Use a Phillips screwdriver to snugly tighten screw.
4. Use Phillips screwdriver to attach Handle (8) to Large Doors (E) and Small Doors (P).

## STEP-14

 


**NOTE:** The screwdriver is not included in the hardware pack.

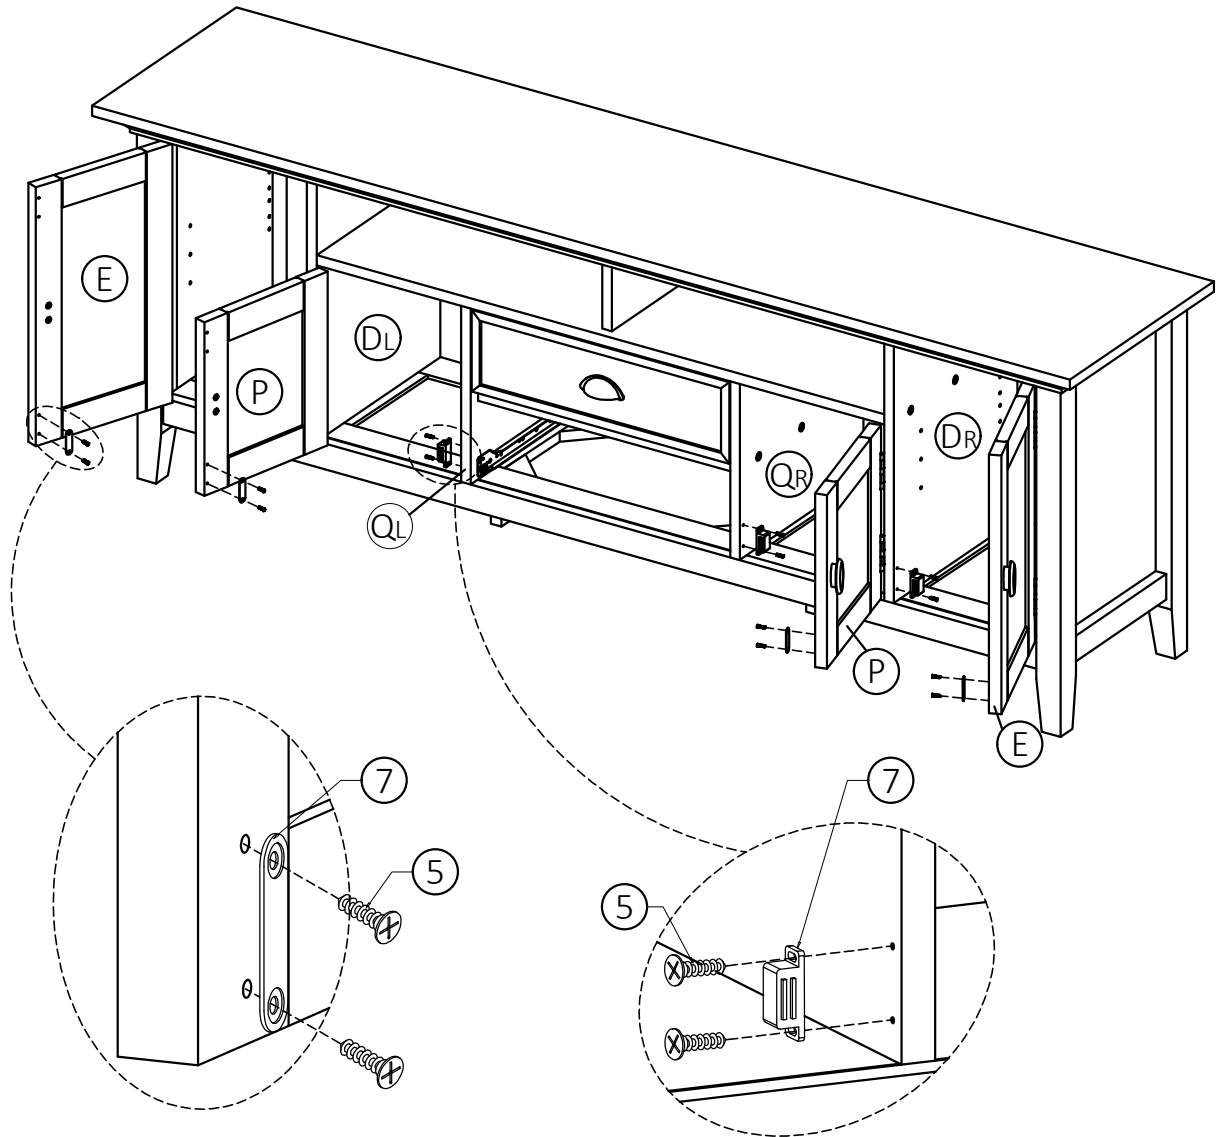

1. Attach Magnets Plates (7) to bottom corner of Large Doors (E) and Small Doors (P). using Phillips Screws (5) into guide holes on Large Doors (E) and Small Doors (P).
2. Attach Magnets (7) using Phillips Screws (5) into guide holes on Large Dividers (DL, DR) and Middle Dividers (QL, QR).
3. Use Phillips Screwdriver to snugly tighten screw.

## STEP-15

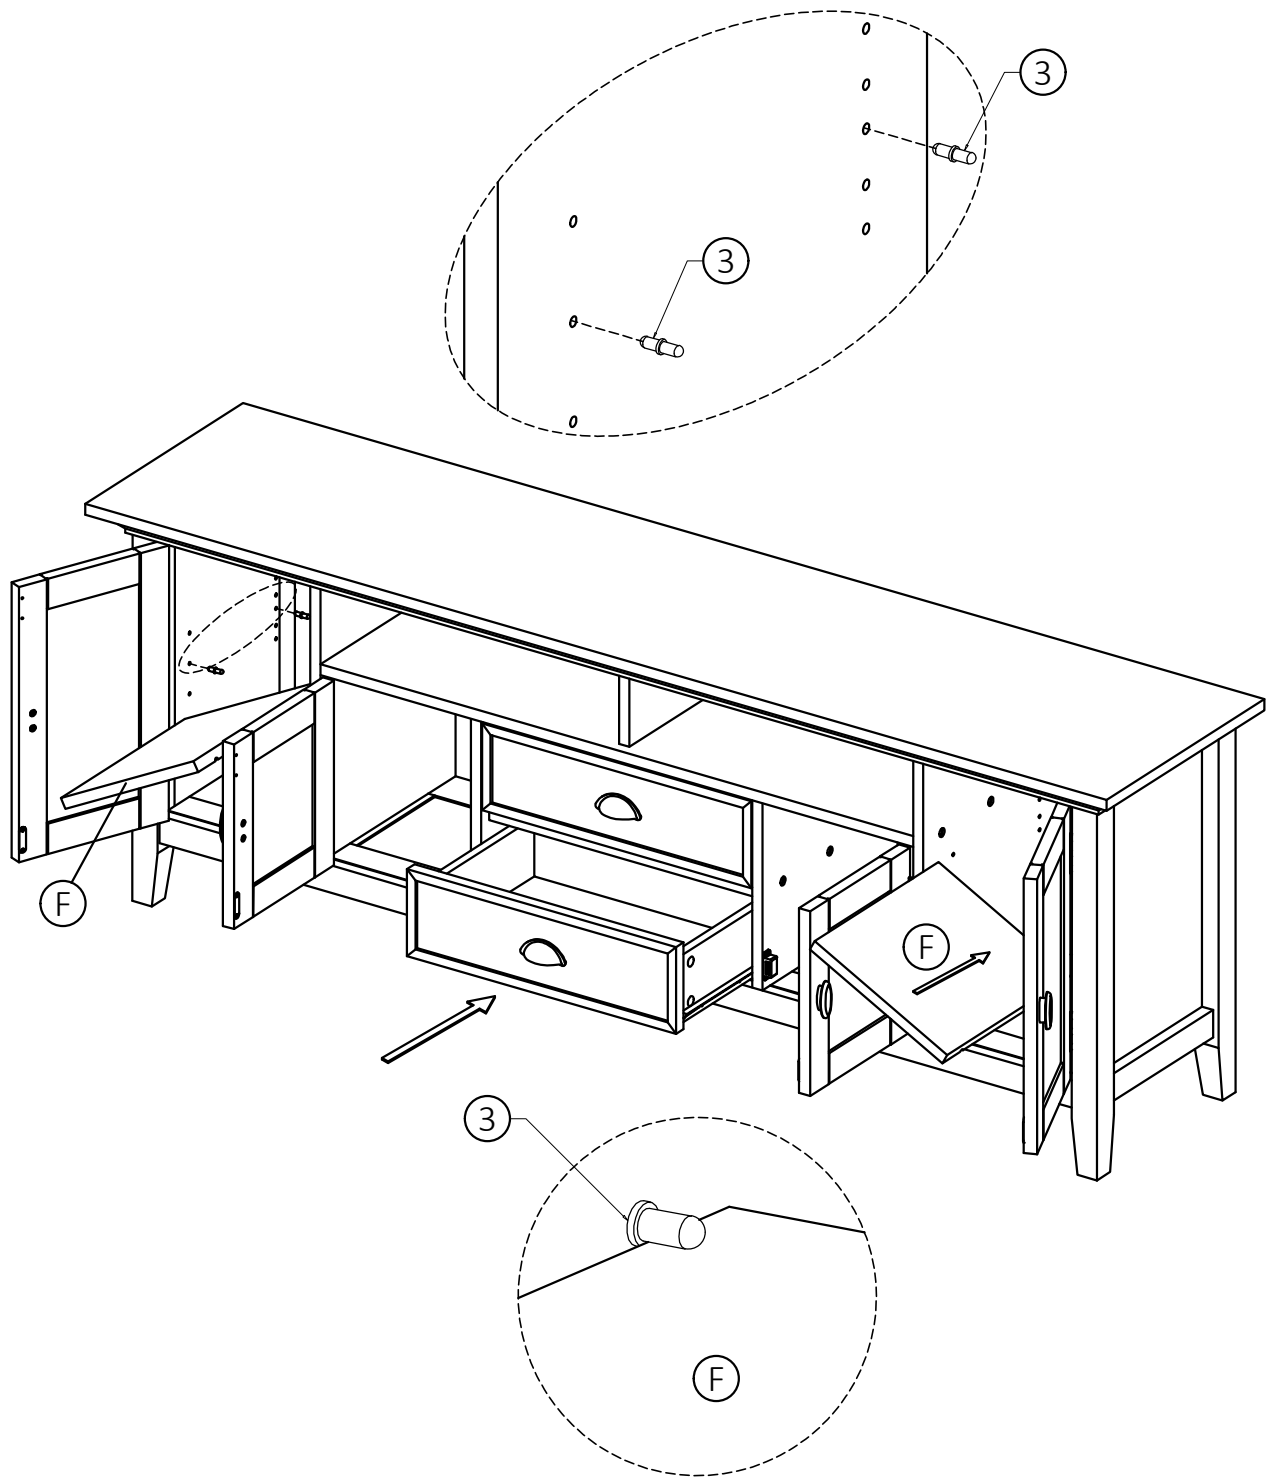

1. Use four Shelf Supports (3) for each Cabinet Shelf (F) in desired location.
2. Two Shelf Supports (3) may be used on back top of each Cabinet Shelf (F) as a tipping restraint.
3. Insert assembled drawer into glides on assembled TV Media Stand.

## FURNITURE TIP OVER RESTRAINT ASSEMBLY

 


### WARNING

 
Serious or fatal crushing injuries can occur from furniture tip-over.

If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### STEP-16



 
NOTE: The screwdriver is not included in the hardware pack.

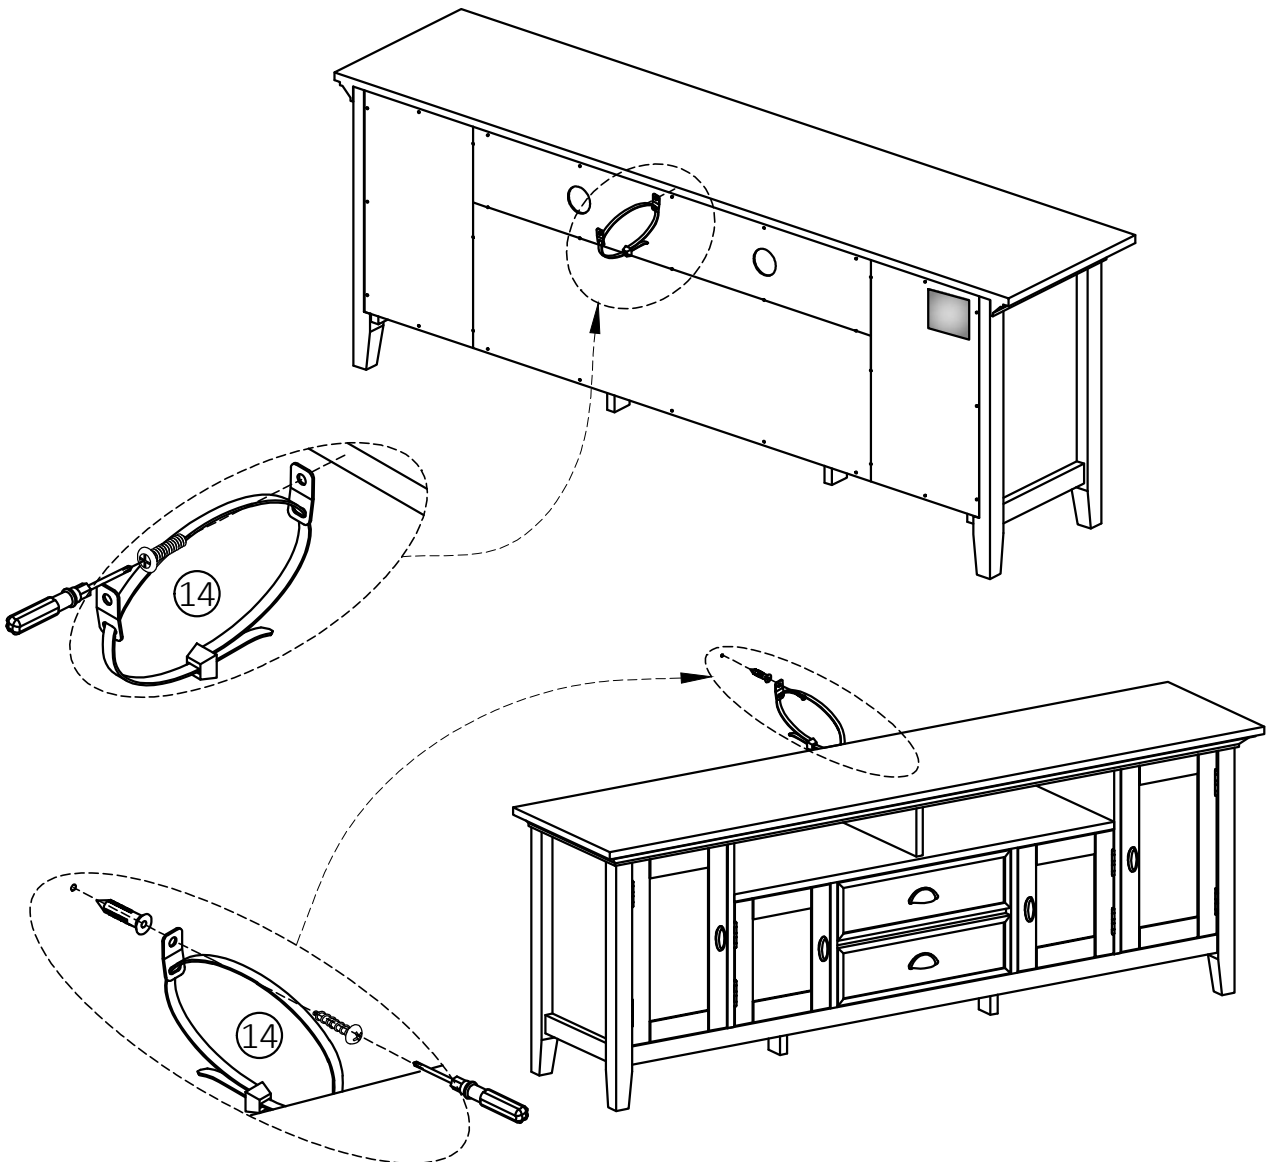

 
## FURNITURE TIP OVER RESTRAINT ASSEMBLY

### Furniture Tip Over Restraint Instructions:

 
1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

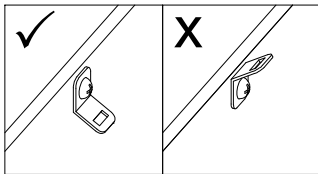

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches **below** the bracket mounted to the furniture.

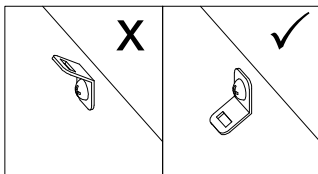

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

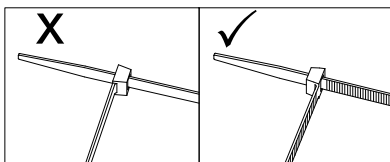

- DO NOT place heavy objects in top drawers
- DO NOT let children climb or hang on drawers, doors or shelves



## WARRANTY

Thank you for purchasing a Simpli Home – Wyndenhall – Brooklyn + Max product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [customerservice@simpli-home.com](mailto:customerservice@simpli-home.com).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.