G7013D120CR ASSEMBLY INSTRUCTIONS

Disclaimer:

Thank you for your purchase. Please read carefully and keep these instructions, as you may need them later.

Beware of potential electrical shock! Before installing the fixture or removing any other light already present, please turn off the main power at the circuit breaker.

If your product contains glass items, please handle with care, as glass is fragile and can lead to injuries if handled incorrectly.

Please keep in mind that the warnings and instructions present in this document are not meant to cover and prevent all possibilities and situations that could lead to injury or damage. It is the responsibility of the end-user to exercise caution and common sense when handling and installing the product.

All electrical connections must be made by qualified personnel in accordance with the National Electrical Code.

Please refer to the table below for electrical connections:

Fixture wire markings:

"L"	Live wire (Black or Brown)	"L"	Live wire (Black)
"N"	Neutral wire (White or Blue)	"N"	Neutral wire (White)
"≟"	Ground wire (Green or Bare)	"≟"	Ground wire (Green or Bare)

For <u>installation</u>, please refer to the <u>written instructions at the back</u> or follow the <u>link below</u> for the video instructions.

Need to contact us?

Please send an email at: service@aloadecor.com

Need more information?

Please visit our website: www.aloadecor.com



AC power equivalent:


https://youtu.be/67pqEH8N_uU




Installation instructions:

(link to the video instructions on the other side)


1) Connect wires according to the connection table on the other side of this page.

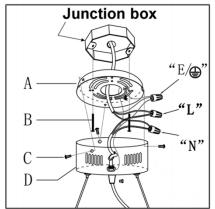

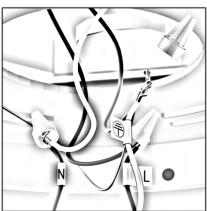


2) Use the provided screws (B) to secure the mounting bracket (A) to the junction box.


Then secure the canopy (D) to the mounting bracket (A) using the second set of screws (C).

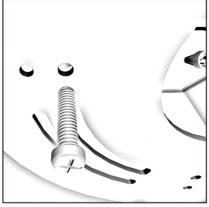



3) Install the bulbs and crystal clusters to the fixture. (Bulb not included)

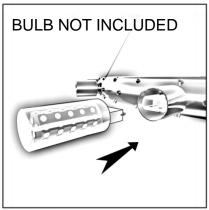

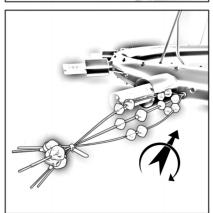

4) Use scissors to cut the zip ties keeping the clusters shut.

Optionnal: Adjust the wire and cord to set the fixture at the desired height.

