

INSTALLATION INSTRUCTIONS

Before Using the Wine Cooler

Remove the exterior and interior packing

Check to be sure you have all of the following parts:

6 Wooden Shelves*

Keys

Stainless Steel Handle

Instruction Manual

L-Shaped Screwdriver

Before connecting the wine cooler to the power source, let it stand upright for approximately 24~36 hours. It will reduce the possibility of a malfunction in the cooling system from handling during transportation.

Clean the interior surface with lukewarm water using a soft cloth.

Install the handle on the left side of the door.

Installation of the Wine Cooler

This appliance is designed to be for freestanding installation or built-in (fully recessed). Place your product on a floor that is strong enough to support it when it is fully loaded. To level the product, adjust the front leveling legs at the bottom of the unit

Please locate the product away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Due to direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly. Don't install in a location where the temperature will fall below 60°F (16°C). Avoid locating the unit in a moist area.

For best performance, it is recommended that you install the appliance in a location with an ambient temperature between 72°-78°F. If the ambient temperature is above or below recommended temperatures, the performance of the unit may be affected.

Built-in Cabinet Instructions

For built-in installation, leave a (6 mm) space on each side and at the top of the wine cellar to ensure proper air circulation to cool the compressor and condenser. Also, be sure to not obstruct the front exhaust vent with any objects as this may affect the unit from performing properly.

Cabinet Opening Dimensions

- Minimum Width: 11.72" (29.8 cm)
- Minimum Depth: 22.65" (57.6 cm)
- Minimum Height: 34.37" (87.3 cm)

