


Installation Manual


Please note we are always ready to support you. Don't hesitate to contact us when you have any questions, we will try our best to resolve your issue ASAP.

(Fredbeck_Amy@outlook.com)









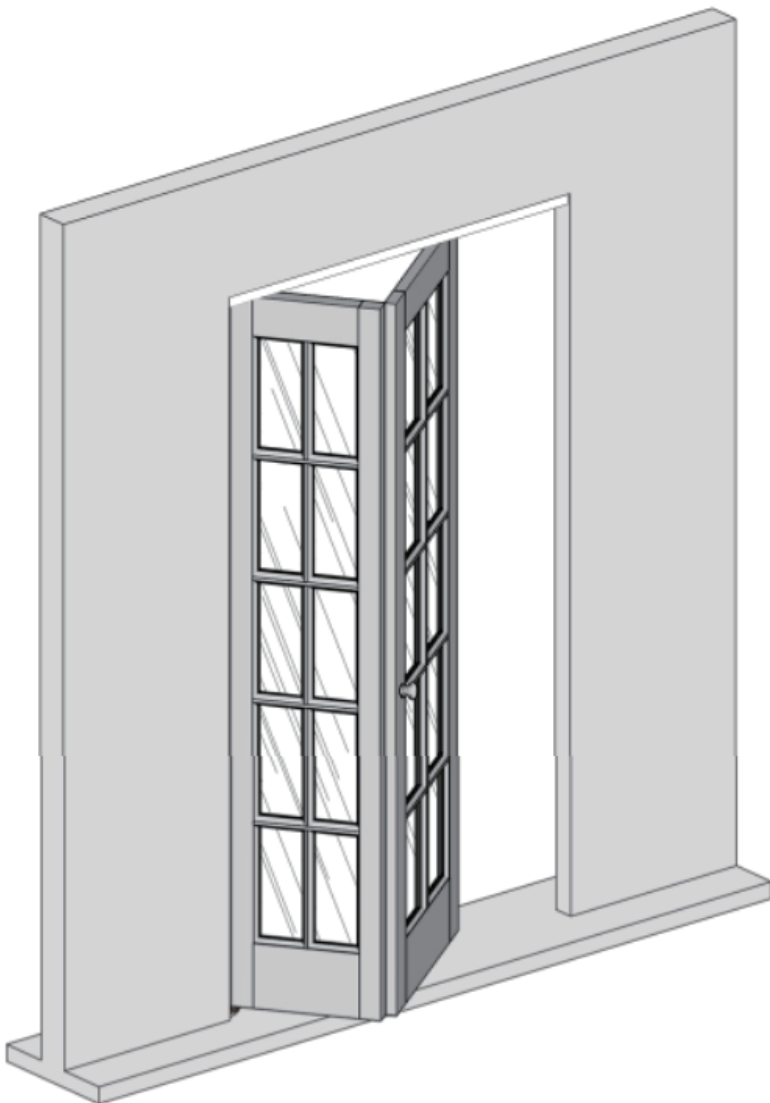


Pre-installation









TOOLS REQUIRED

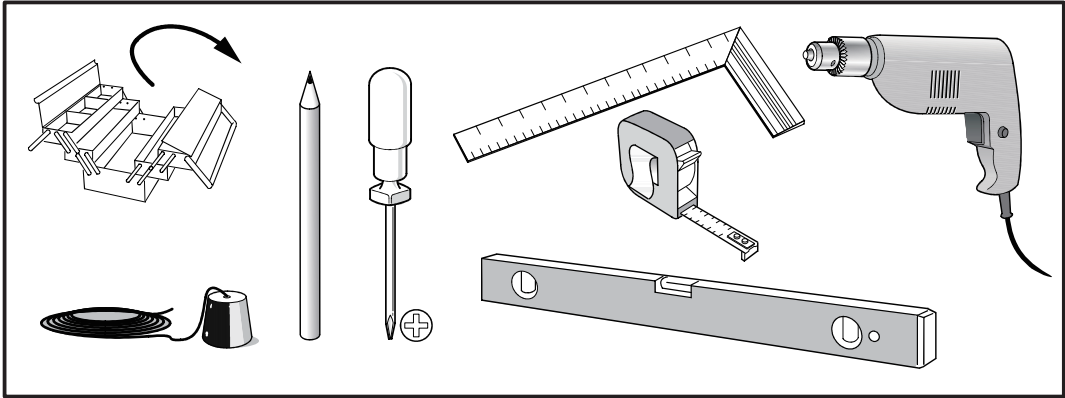


HARDWARE INCLUDED

       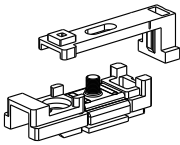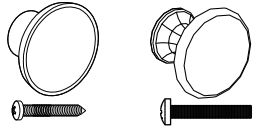A  ST4.2x32	B 	C 
D 	E 	F  ST4.2x16
G 	H 	I  ST4x45 M4x40
J Only for 4 door  ST4.2x16	K 	 ST4.2x25

        Parts of list


Option Size	24"	28"	30"	32"	36"	48" (4doors)	60" (4doors)	72" (4doors)
A   ST4.2x32	1	1	1	1	1	1	1	1
	4	4	4	5	5	6	7	9
B 	1	1	1	1	1	2	2	2
C 	1	1	1	1	1	2	2	2
D 	1	1	1	1	1	2	2	2
E 	1	1	1	1	1	2	2	2
F   ST4.2x16 (x4)	3	3	3	3	3	6	6	6
G 	1	1	1	1	1	2	2	2
H 	1	1	1	1	1	2	2	2
I  M4x40 (x1)  ST4x45 (x1)	1	1	1	1	1	2	2	2
J   ST4.2x16 (x2)	1	1	1	1	1	2	2	2
K 	1	1	1	1	1	1	1	1
	1	1	1	1	1	1	1	1
 ST4.2x25	9	9	9	9	9	18	18	18

Installation

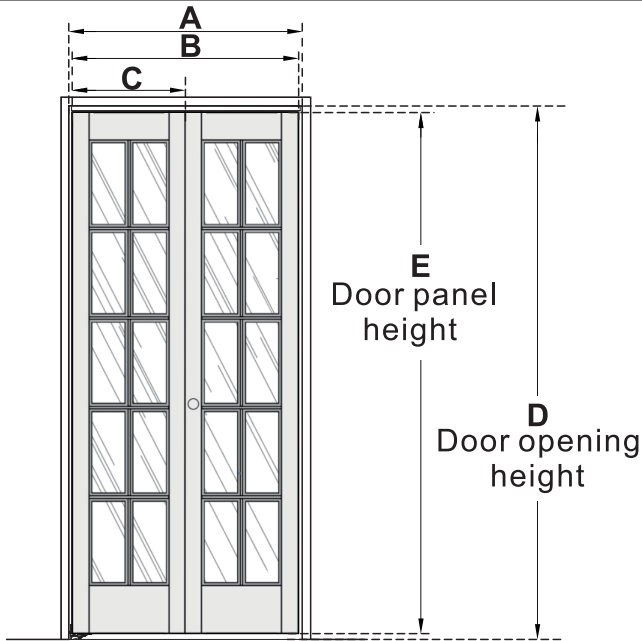

Option Size	A Door Opening Width	B Door Panel Width	C Single Door Panel Width	D Door Opening Height	E Door Panel Height
23 1/2" X 78 3/4"	24"	23 1/2"	11 3/4"	80 3/4"	78 3/4"
27 1/2" X 78 3/4"	28"	27 1/2"	13 3/4"	80 3/4"	78 3/4"
29 1/2" X 78 3/4"	30"	29 1/2"	14 3/4"	80 3/4"	78 3/4"
31 1/2" X 78 3/4"	32"	31 1/2"	15 3/4"	80 3/4"	78 3/4"
35 1/2" X 78 3/4"	36"	35 1/2"	17 3/4"	80 3/4"	78 3/4"
41 1/2" X 78 3/4"	42"	41 1/2"	20 3/4"	80 3/4"	78 3/4"
47 1/2" X 78 3/4"	48"	47 1/2"	23 3/4"	80 3/4"	78 3/4"
23 1/2" X 94 3/4"	24"	23 1/2"	11 3/4"	96 3/4"	94 3/4"
29 1/2" X 94 3/4"	30"	29 1/2"	14 3/4"	96 3/4"	94 3/4"
35 1/2" X 94 3/4"	36"	35 1/2"	17 3/4"	96 3/4"	94 3/4"


Installation

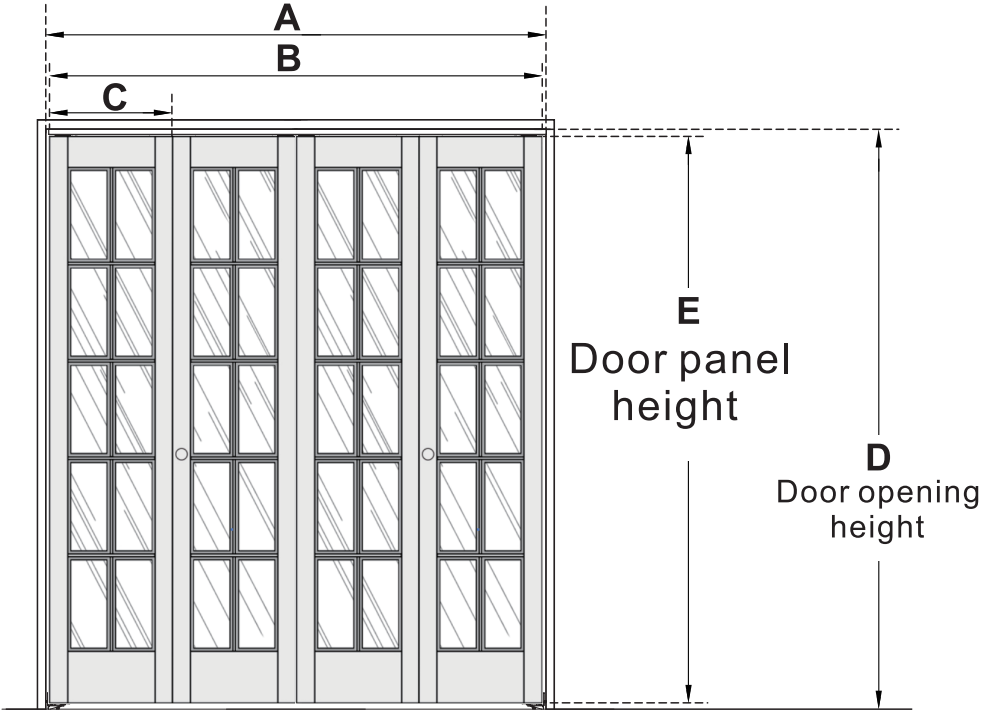


Option Size	A Door Opening Width	B Door Panel Width	C Single Door Panel Width	D Door Opening Height	E Door Panel Height
47 ⁵ / ₈ "×78 ³ / ₄ "	48"	47 ⁵ / ₈ "	11 ³ / ₄ "	80 ³ / ₄ "	78 ³ / ₄ "
59 ⁵ / ₈ "×78 ³ / ₄ "	60"	59 ⁵ / ₈ "	14 ³ / ₄ "	80 ³ / ₄ "	78 ³ / ₄ "
71 ⁵ / ₈ "×78 ³ / ₄ "	72"	71 ⁵ / ₈ "	17 ³ / ₄ "	80 ³ / ₄ "	78 ³ / ₄ "

Installation


2 X DOOR

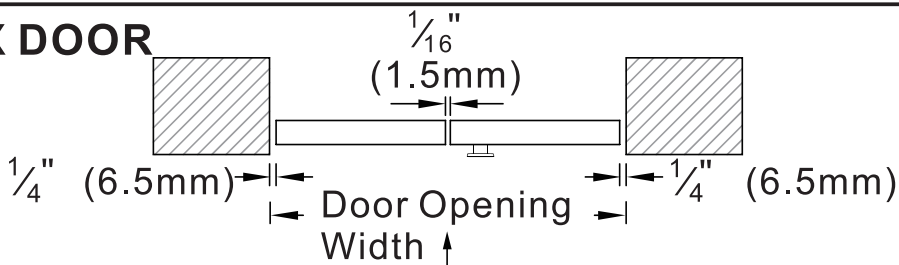

2 X DOOR WIDTH + $\frac{9}{16}"$ (14.5mm)

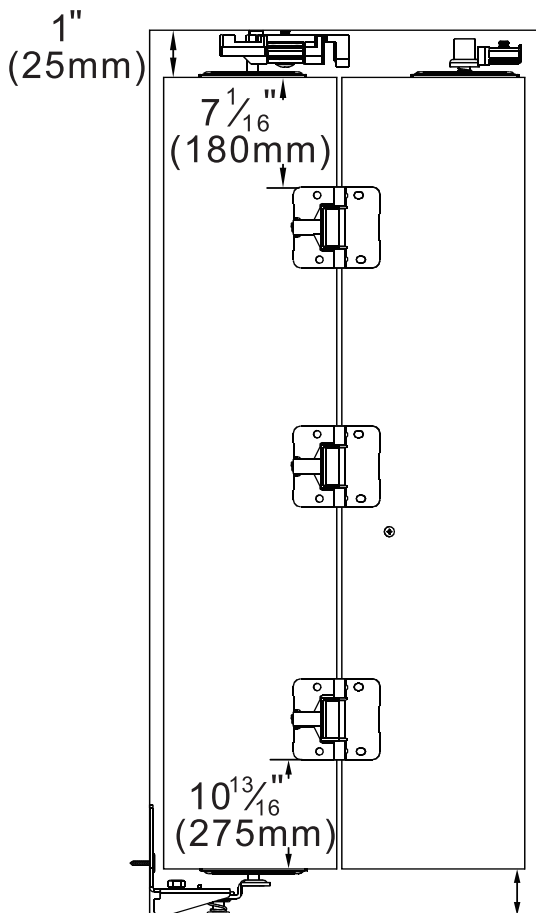


Back view

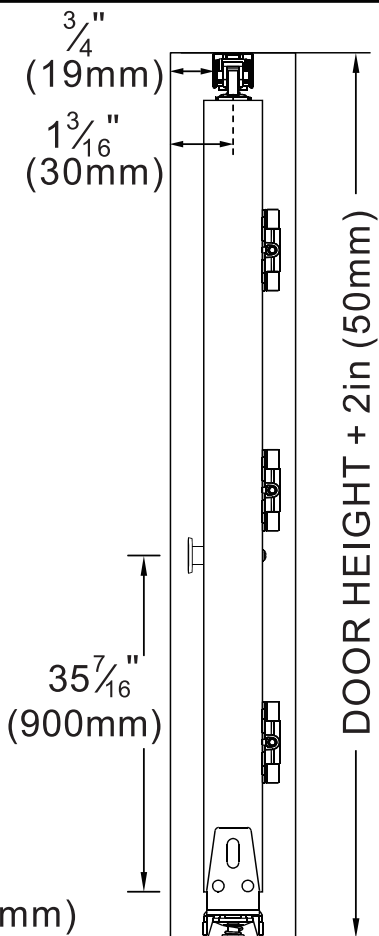


Side view

Installation

4 X DOOR

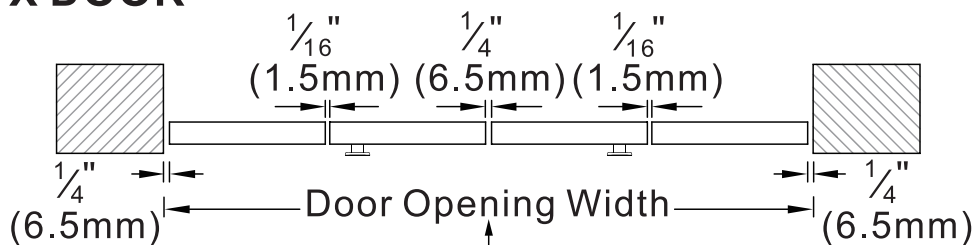

4 X DOOR WIDTH + $\frac{7}{8}"$ (22.5mm)

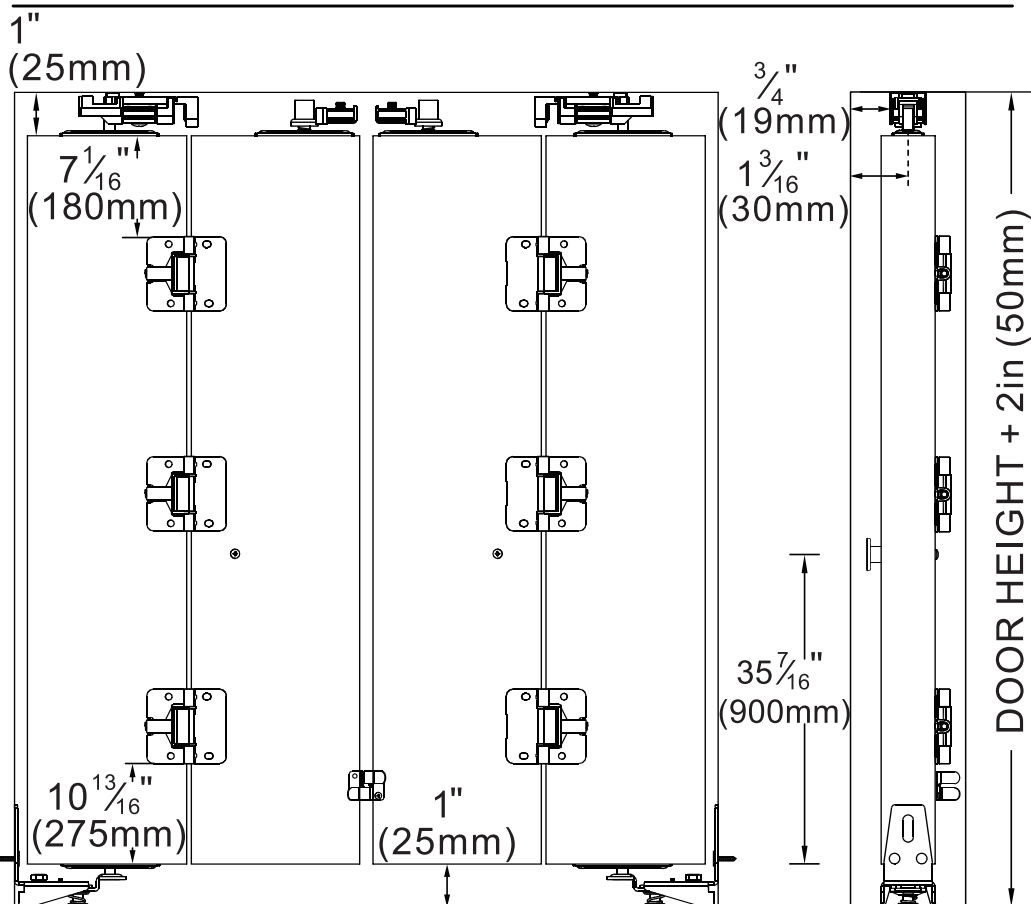

Back view

Side view

 
 
Installation

1

A

B

G




(x1)


(x1)

(x1)


Side view

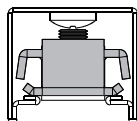

X

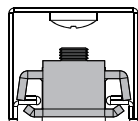


✓

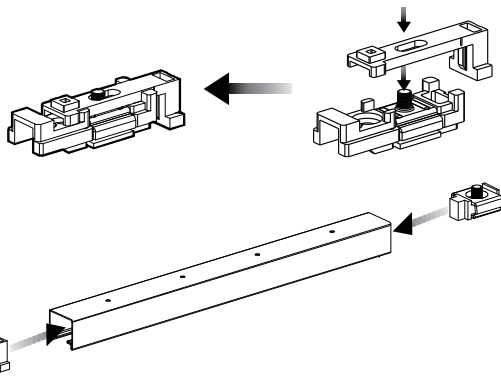

⚠ Do not full tighten screws before completing assemble.

2

 A




(x1)





2 X Door

4 X Door

 Top view



ST4.2x32

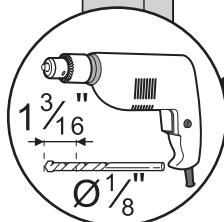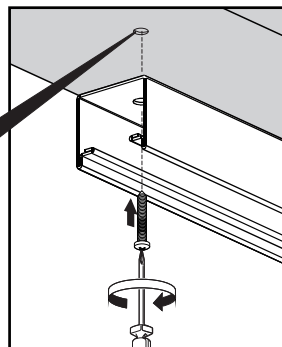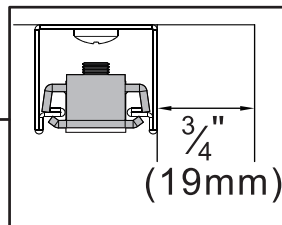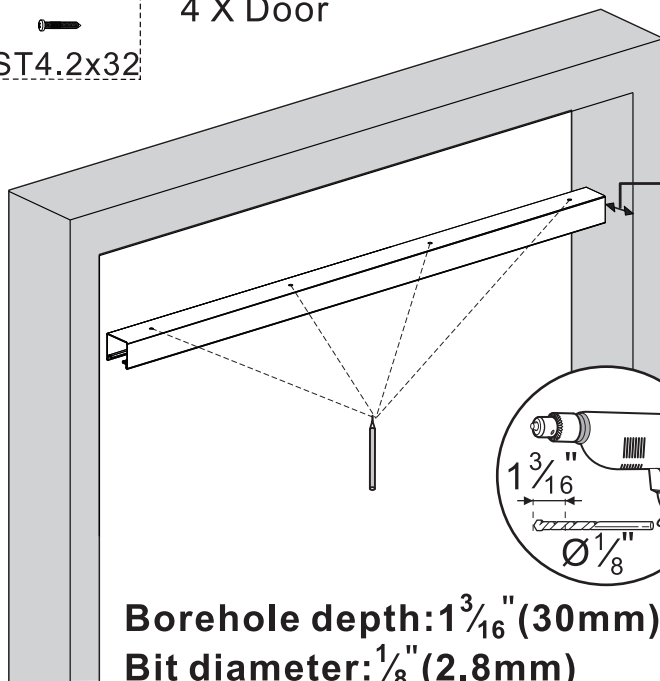




Borehole depth: $1\frac{3}{16}$ " (30mm)
Bit diameter: $\frac{1}{8}$ " (2.8mm)

Installation

3

F
(x3)


ST4.2x16
(x12)

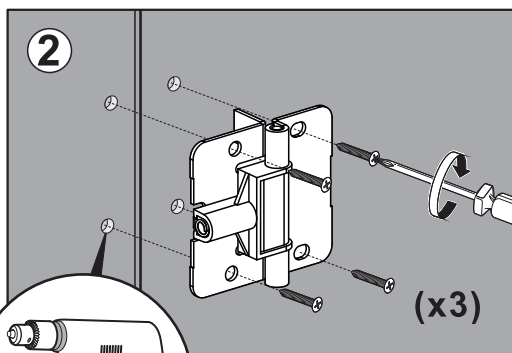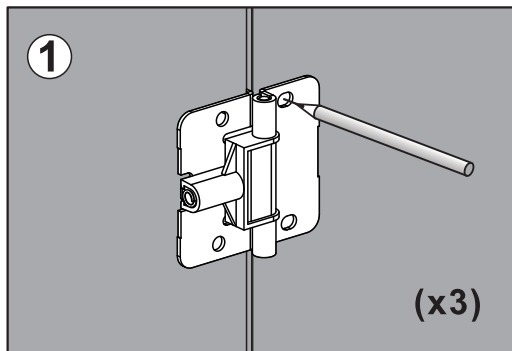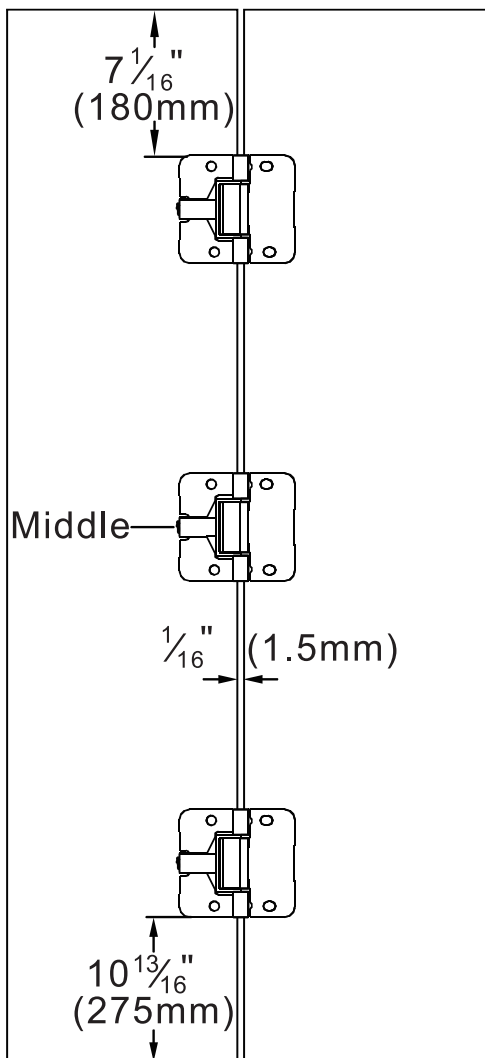

Borehole depth: $\frac{3}{8}"$ (10mm)
Bit diameter: $\frac{1}{8}"$ (2.8mm)


Installation

- 4** Install pivot plates to top and bottom of door panel as shown.

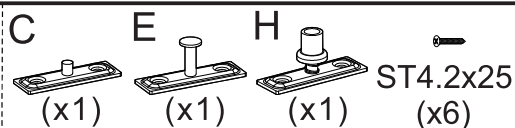


2 X DOOR

LEFT HAND SWING

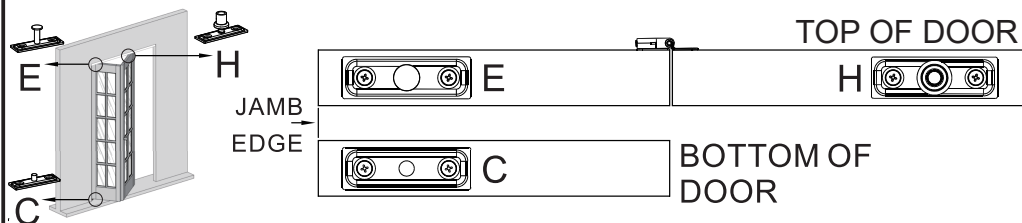


RIGHT HAND SWING

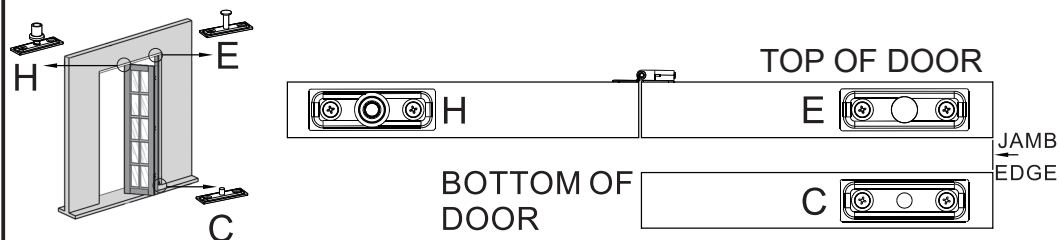

4 X DOOR

LEFT HAND SWING

RIGHT HAND SWING

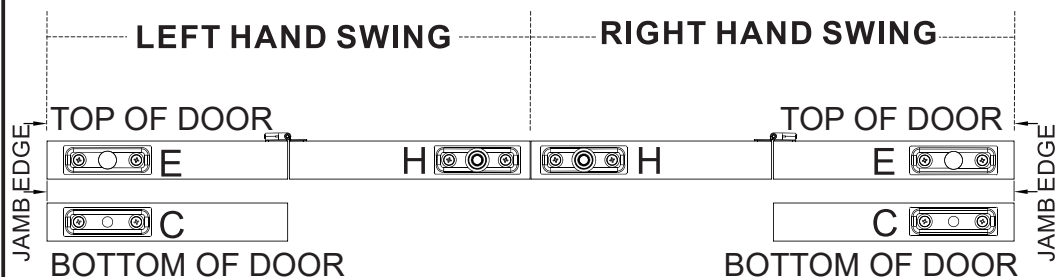

Installation

- 5**
D Mark hole location of bottom pivot bracket on side jamb. Fasten to side jamb with one ST4.2 X 25 flat head screw.






ST4.2x25
(x1)



Keep
Vertical

DOOR HEIGHT + 2in (50mm)

1"
(25mm)

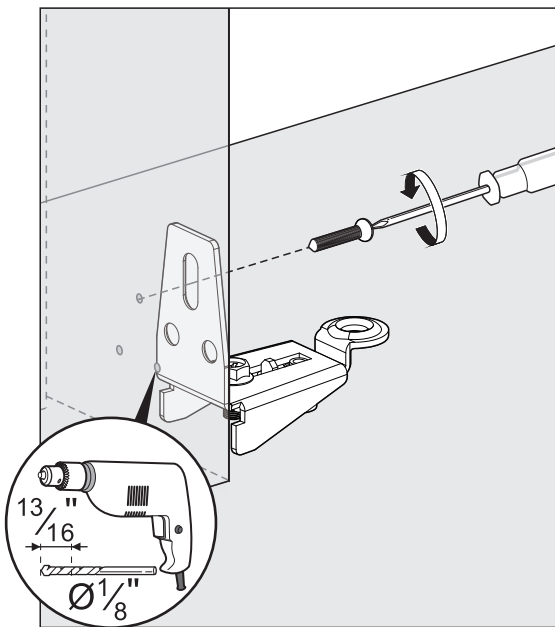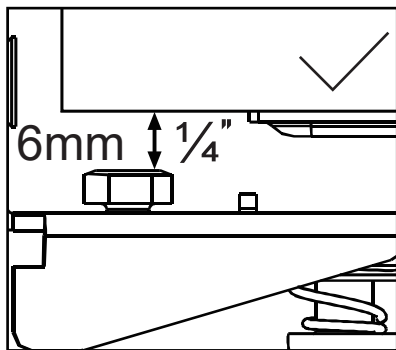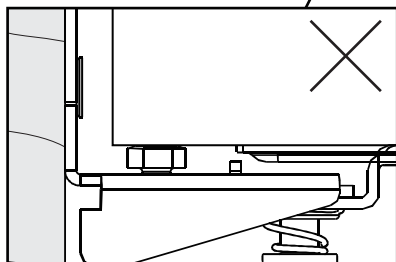


Borehole depth: $\frac{13}{16}$ " (20mm)
Bit diameter: $\frac{1}{8}$ " (2.8mm)

Installation


6

ST4.2x25
(x2)


Note: Ensure track bracket lock is in the unlocked position.

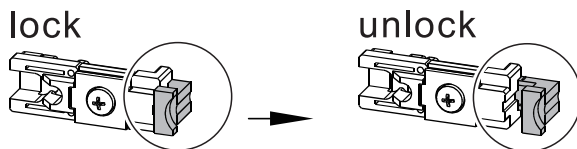




(A) Fold door and place panel guide into track. Insert top pivot pin into receptor of track bracket lock and firmly seated.

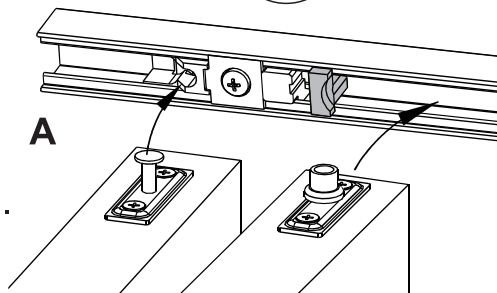

(B) Slide tab lock toward pin so that door panel is hanging from top pivot pin.

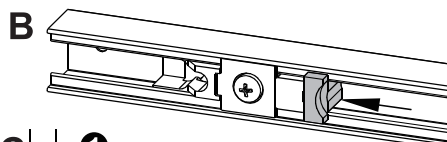





(C) Depress bottom pivot bracket socket arm and insert bottom pivot pin. Secure bottom pivot bracket with other 2 screws. Use a wrench for horizontal adjustment through track bracket lock and bottom pivot bracket.

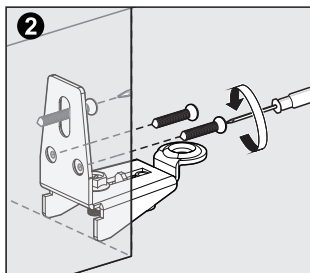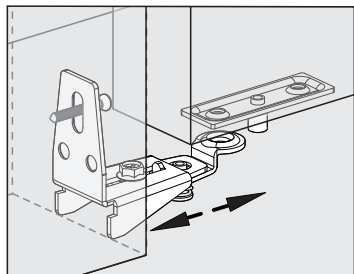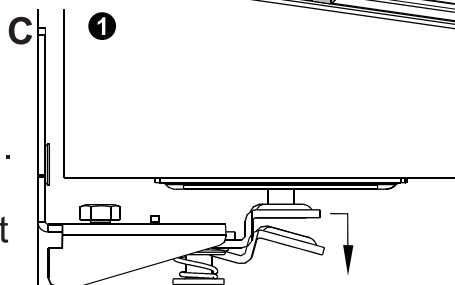

Installation

7



 
Install door pull.

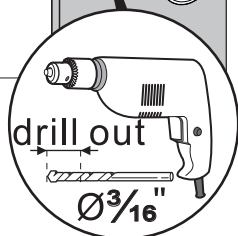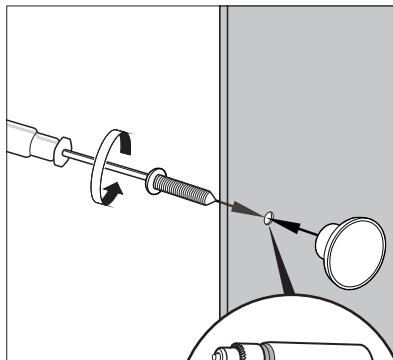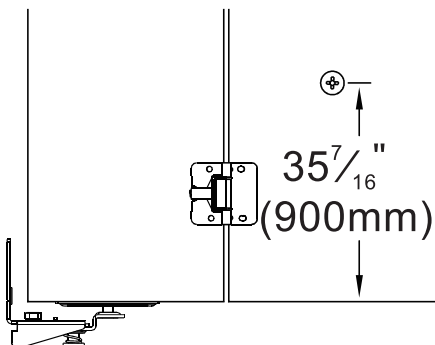

Borehole depth: Drill out
Bit diameter: $\frac{3}{16}$ " (5mm)


8

Mount aligner on back side of lead doors.
(4 door sets only)

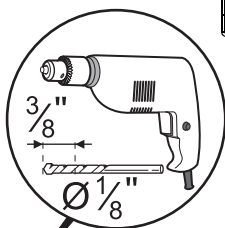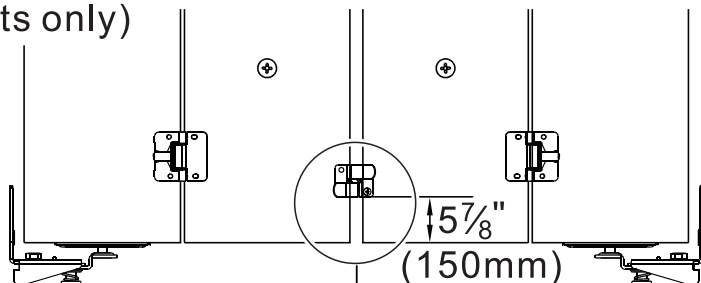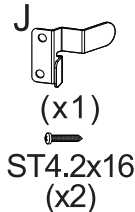


Borehole depth: $\frac{3}{8}$ " (10mm)
Bit diameter: $\frac{1}{8}$ " (2.8mm)


1

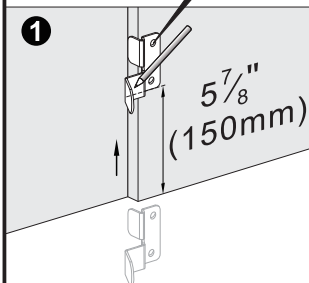


2

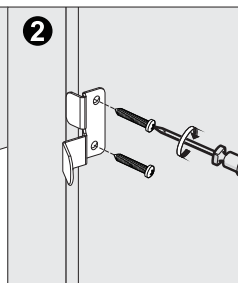

3

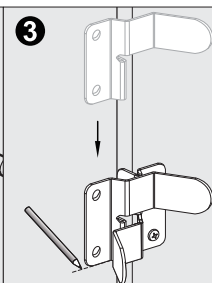

4

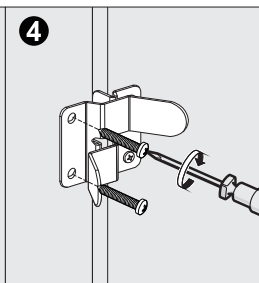


Installation

9


Adjust track stop

Close doors, slide track stop until it touches panel guide. Then open doors, move track closer to panel guide and tighten. Doors should "snap" shut yet open easily by a slight pull on the pull.

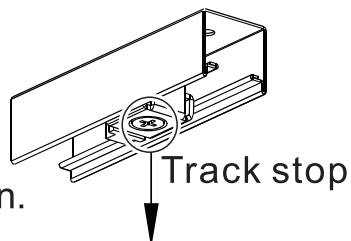


**Please screws
tighten after
competing assemble**

2 Door

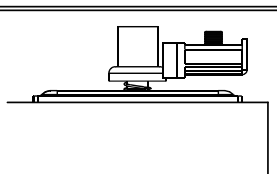


4 Door

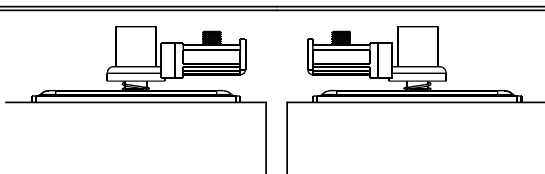


10

K


(x1)

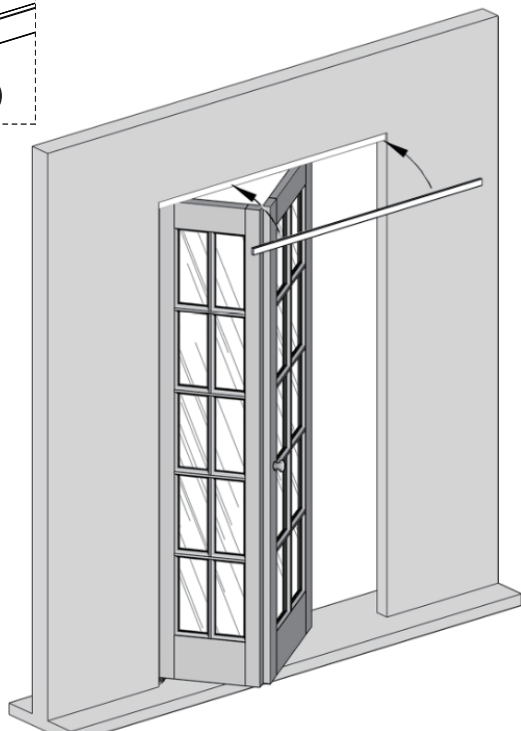

1

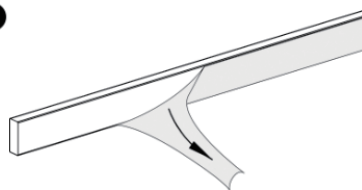



2

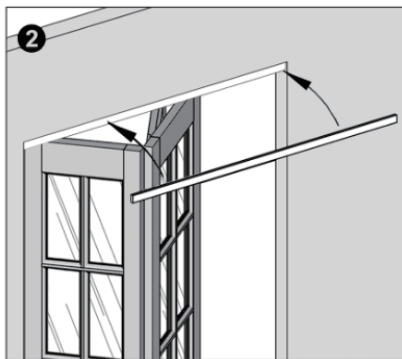

Precautions

If the door panel operates roughly or appears tilted after installation, check for these common issues:

- ① Avoid contact between the door panel and the floor guide.
- ② Ensure the door opening height = door height + 2"(50mm).
- ③ Ensure the track is centered vertically over the bottom floor guide.

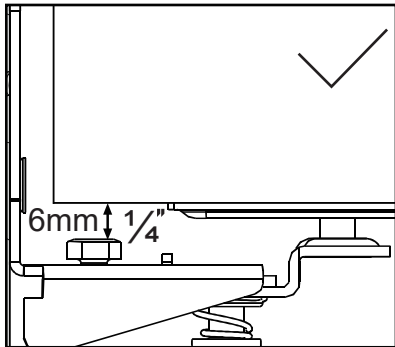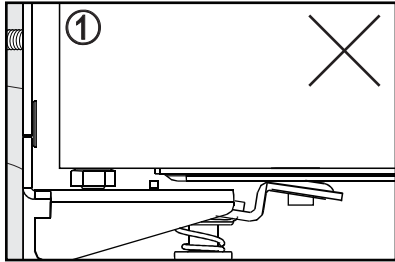

Door Panel Tilt

