





Sideboard

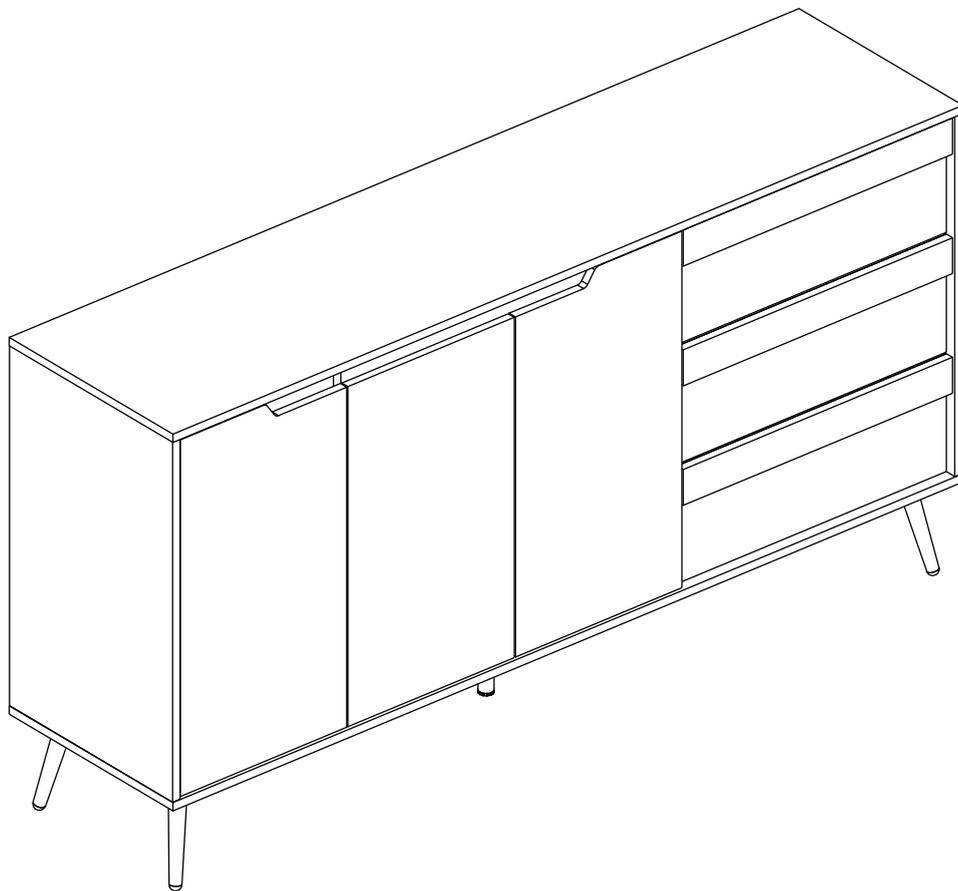

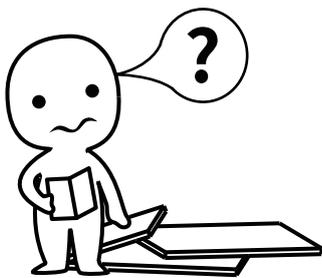


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

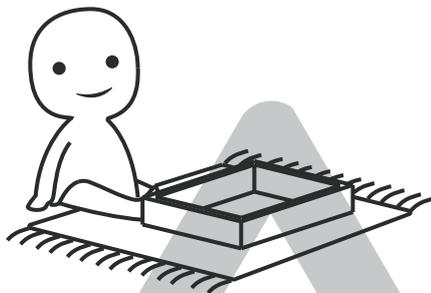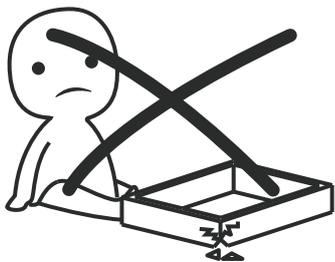


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

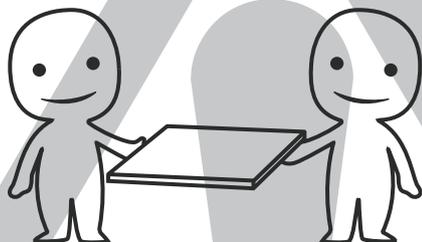

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

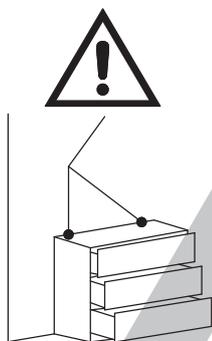

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

















Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

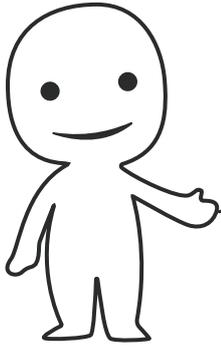



Please prepare the following tools

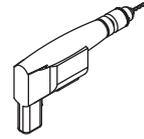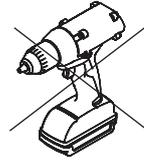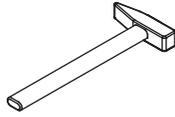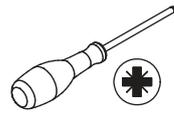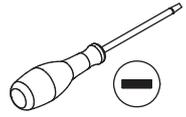






When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

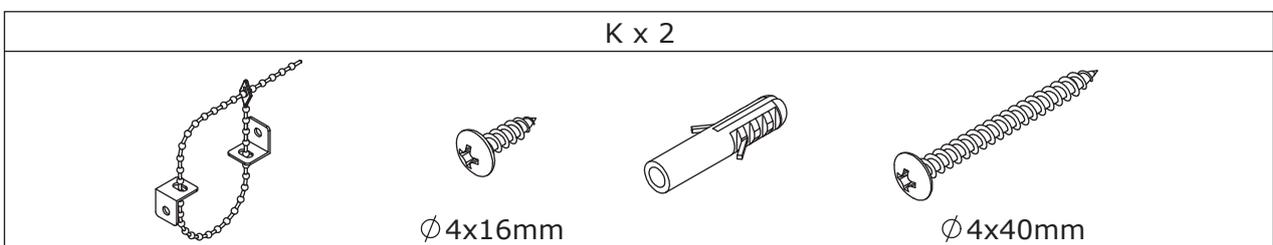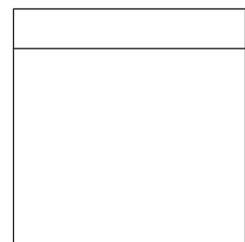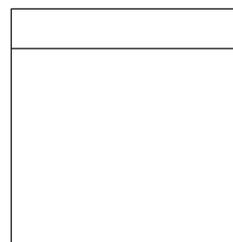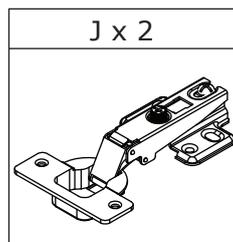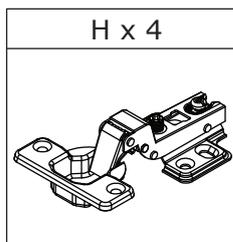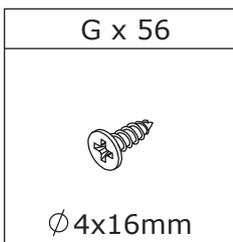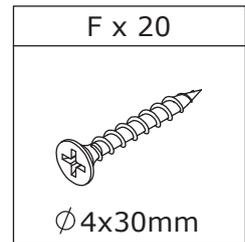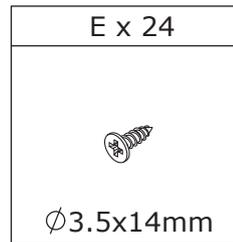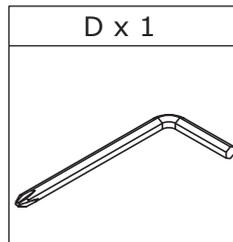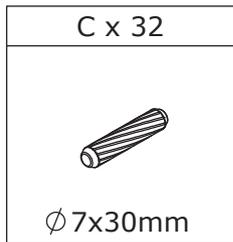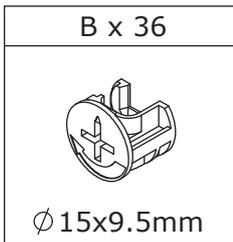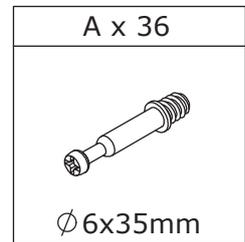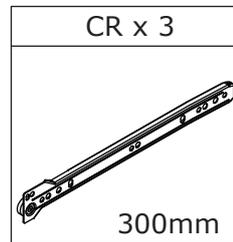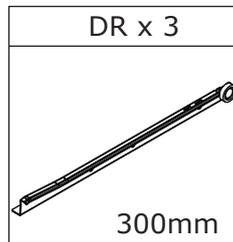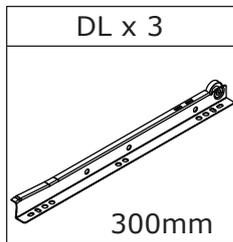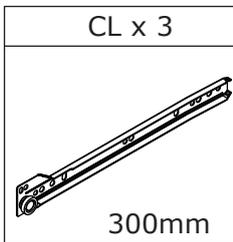


















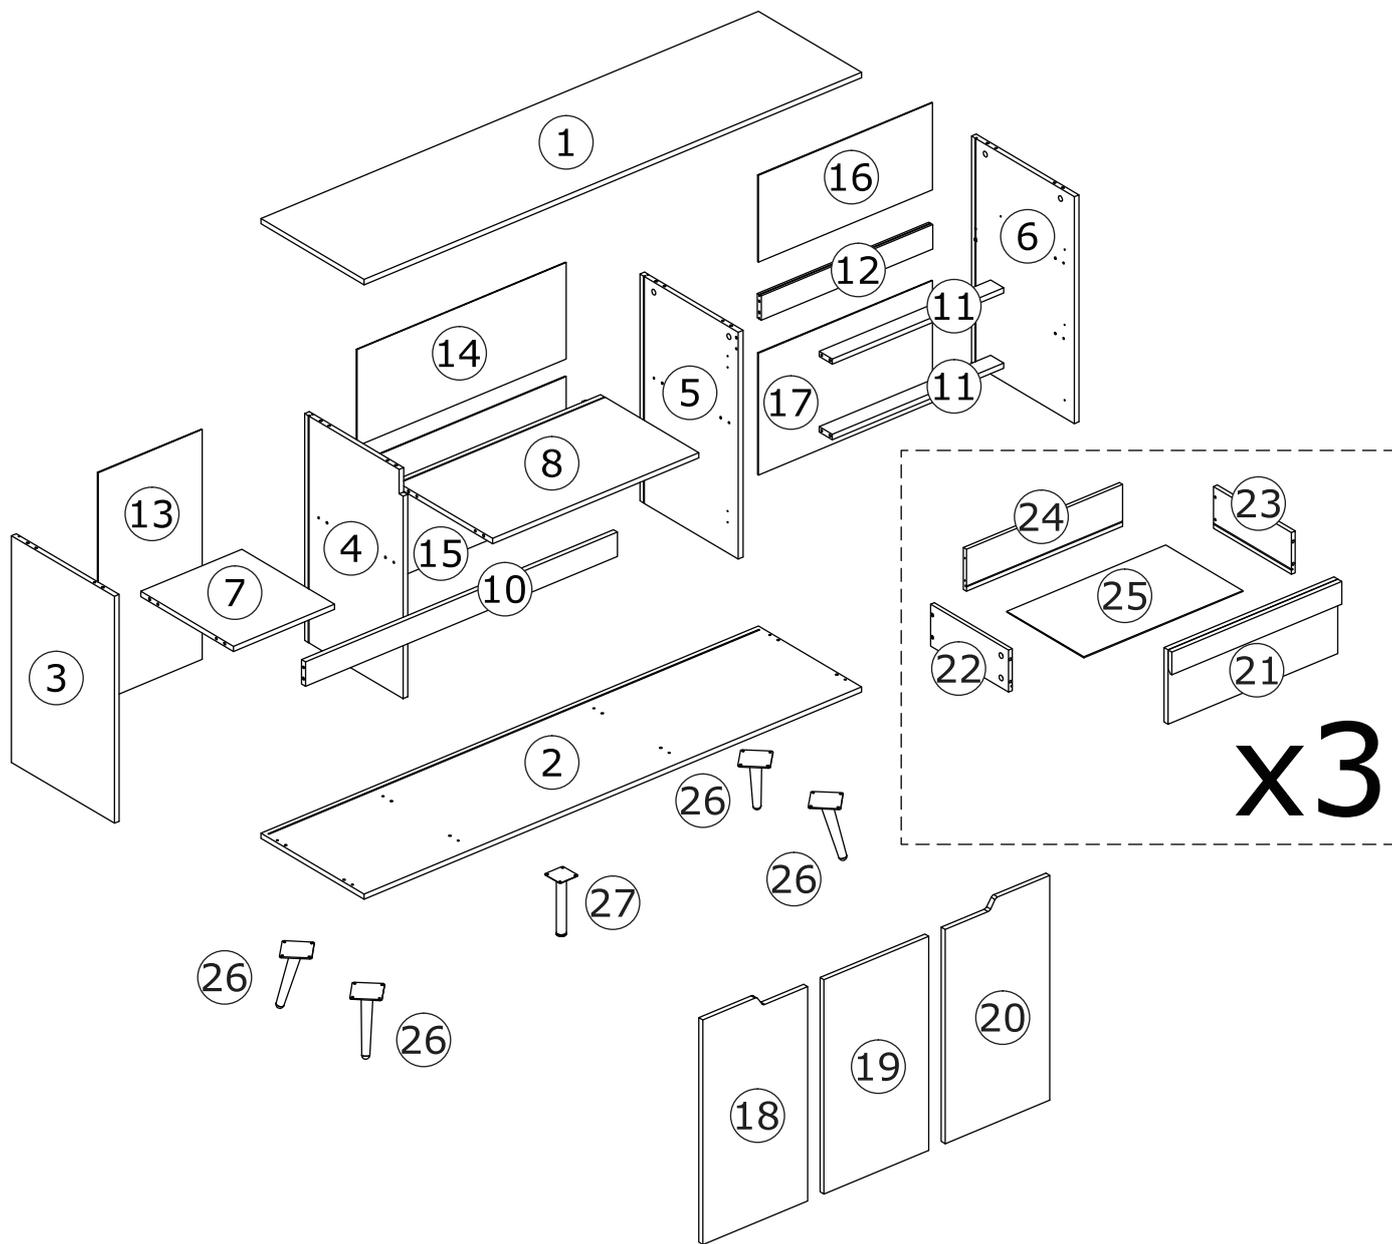


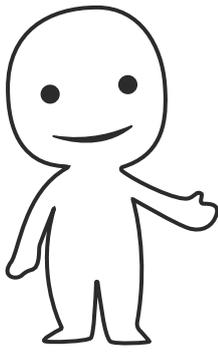


Please prepare the following tools

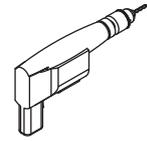
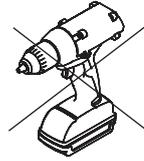
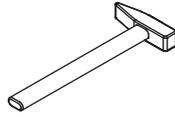
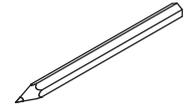
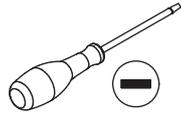


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

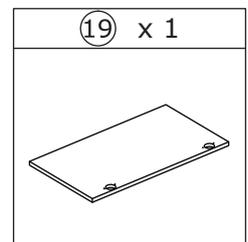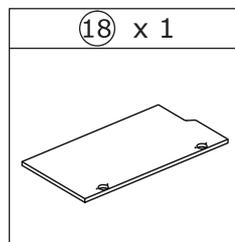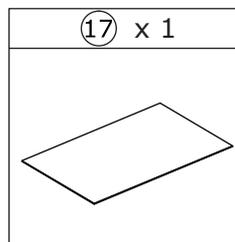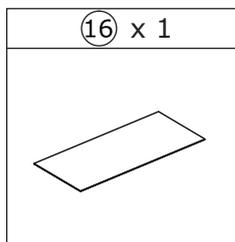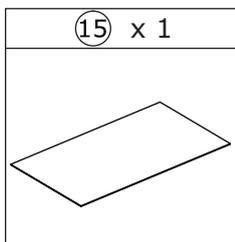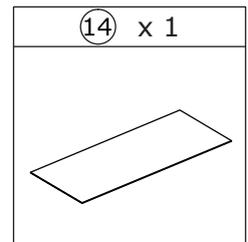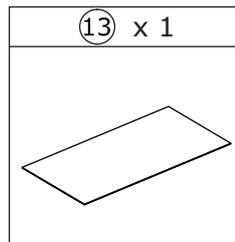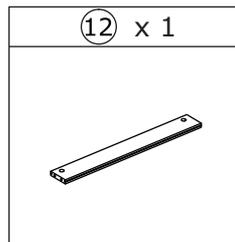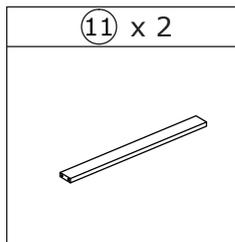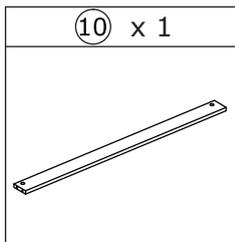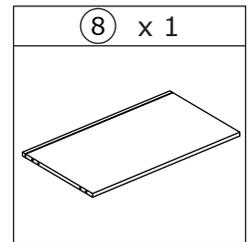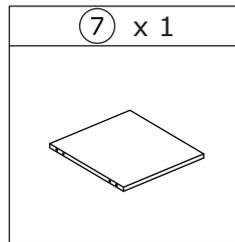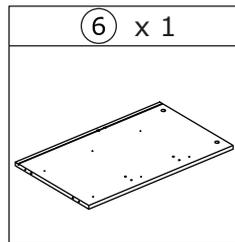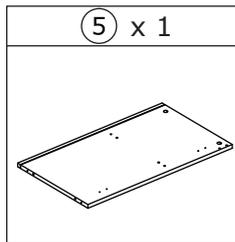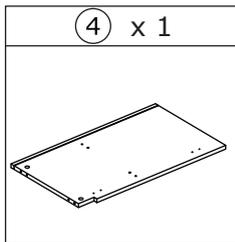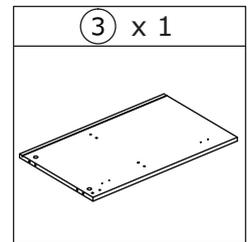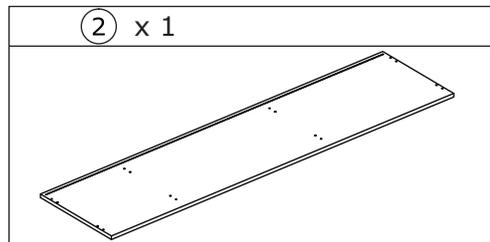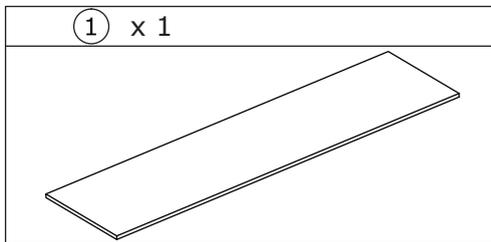

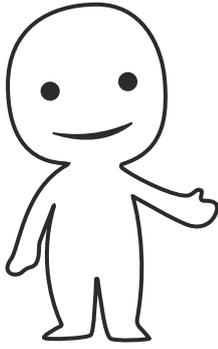


Please prepare the following tools

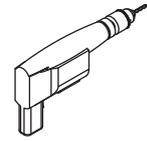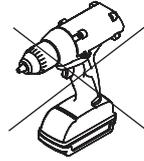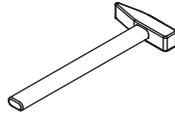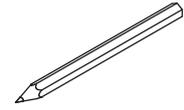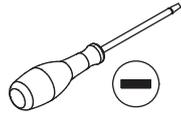


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

②0 x 1

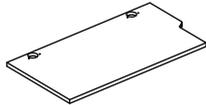

②1 x 3

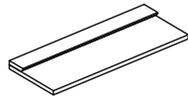

②2 x 3




②3 x 3




②4 x 3



②5 x 3

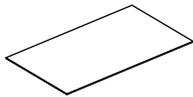


②6 x 4

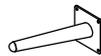

②7 x 1




1

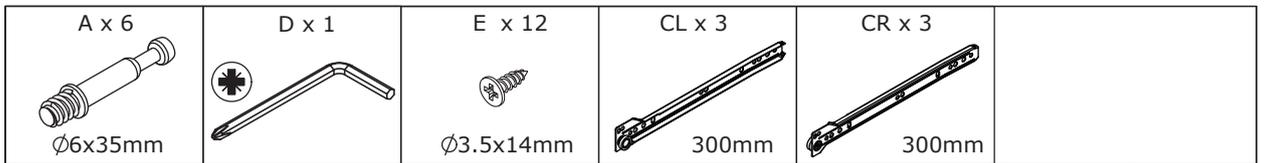


Fix slide rails(CL) to board 5 with screws(E) as shown. Insert quickfit screw(A) into board 5 as shown.


Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

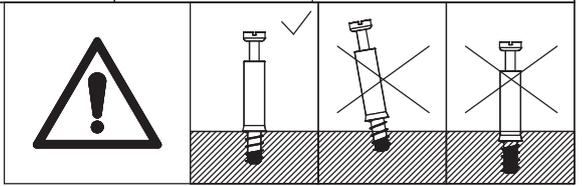



Same as above steps to fix slide rail(CR) to board 6 with screws (E). Insert quickfit screw(A) into board 6.

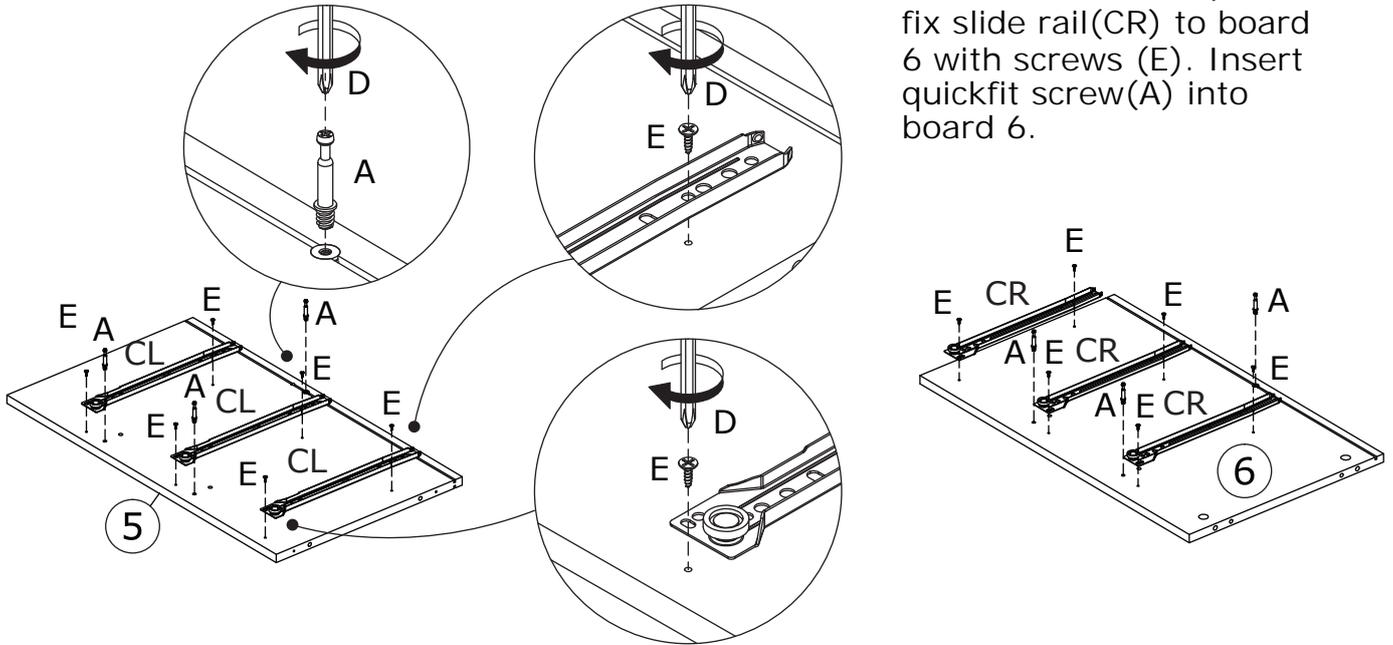



2

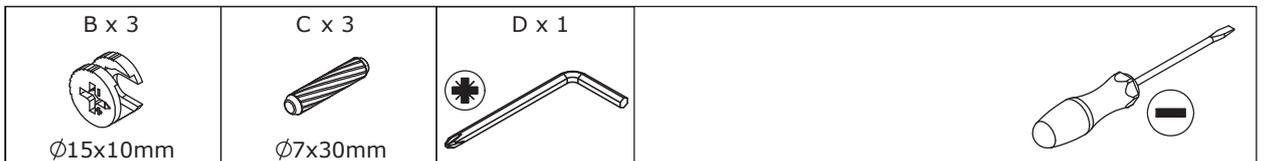



Insert wooden dowels(C) into boards 11 and 12 as shown, then attach boards 11 and 12 to board 6, insert cam locks (B) into boards 11 and 12, turn cam locks clockwise to tighten as shown.

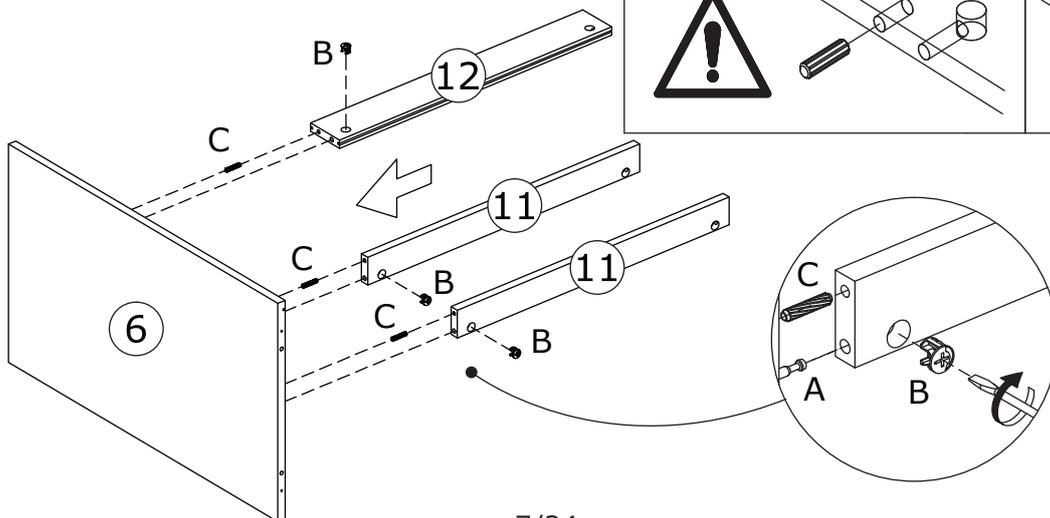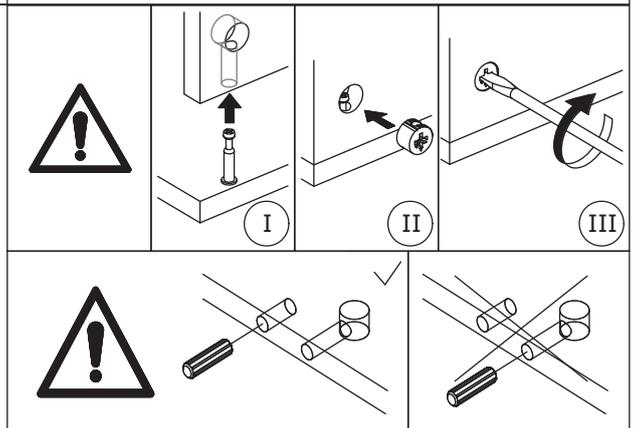


3

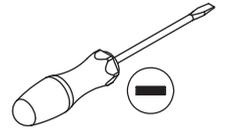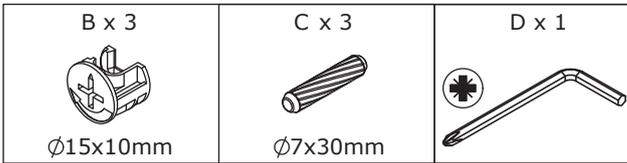



Insert wooden dowel(C) into board 11 and 12 as shown, then attach the board 5 to them, insert cam locks(B) into corresponding holes in them, turn cam locks clockwise to tighten as shown.

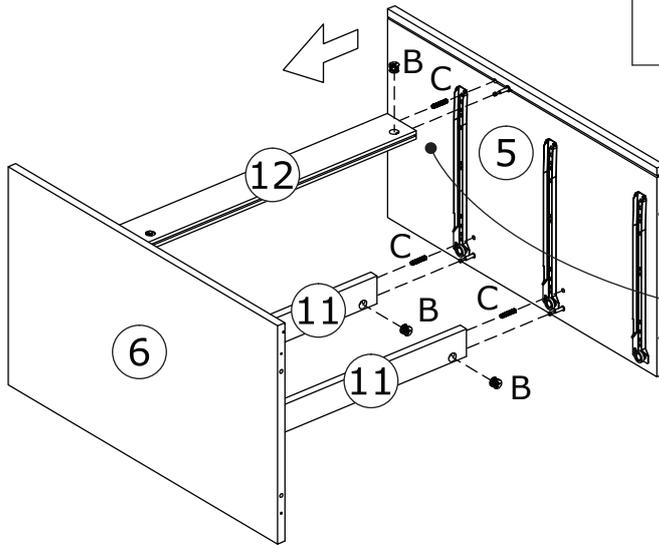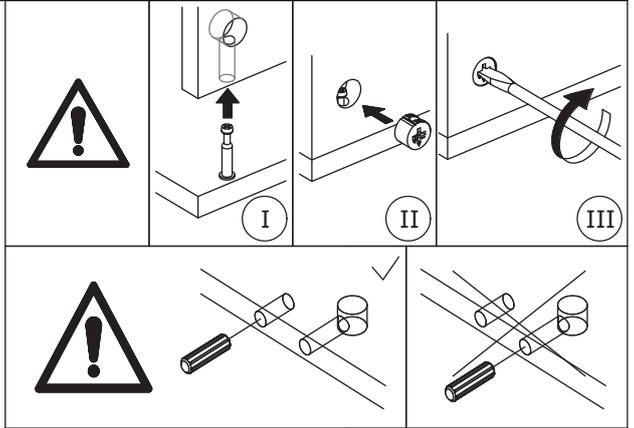


4

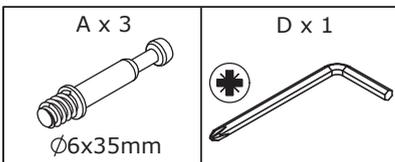



Insert quickfit screws(A) into board 5 as shown.

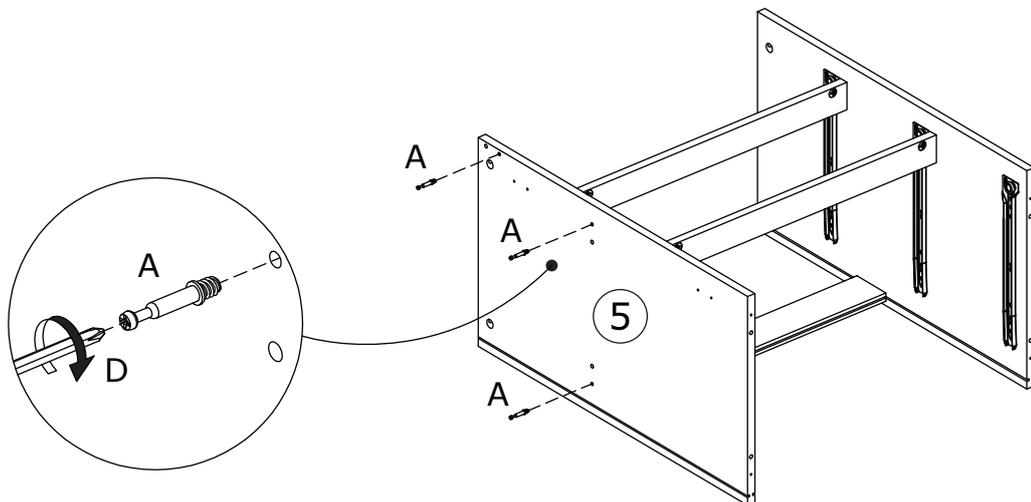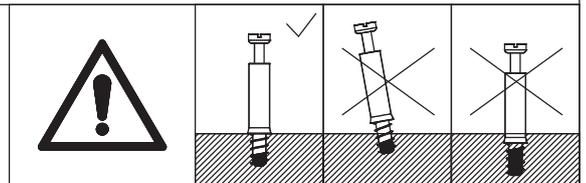


5

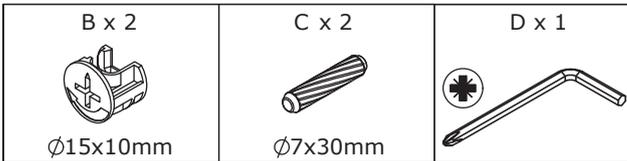



Insert wooden dowel(C) into board 8 as shown, then attach board 8 to board 5, insert cam lock (B) into board 8, turn cam locks clockwise to tighten as shown.

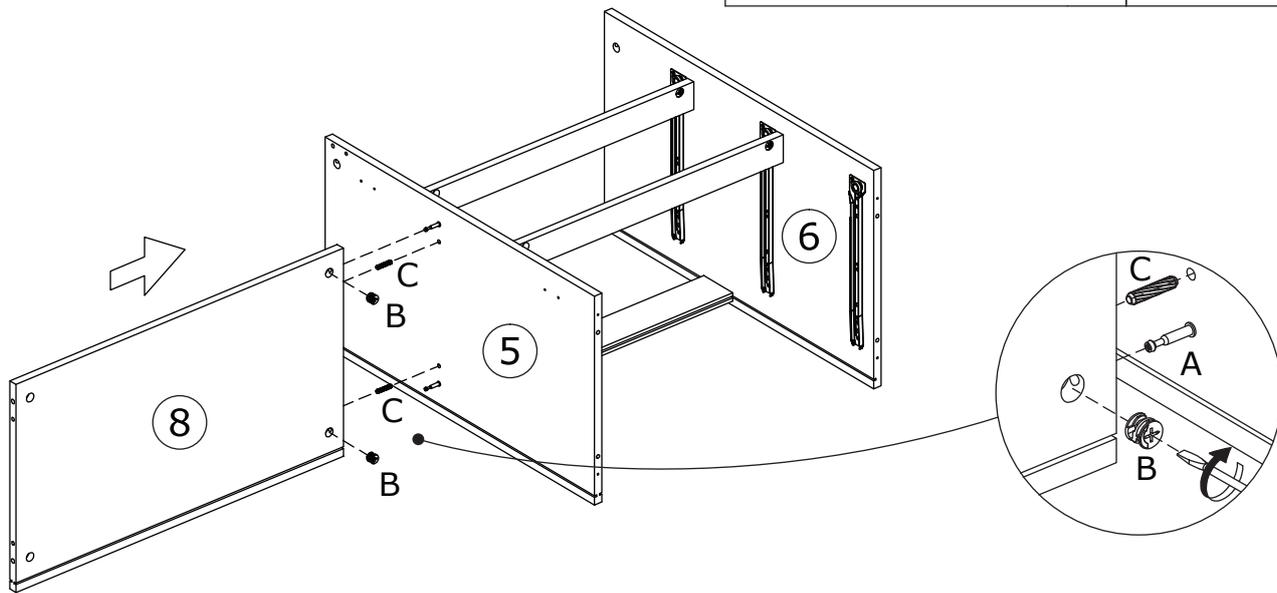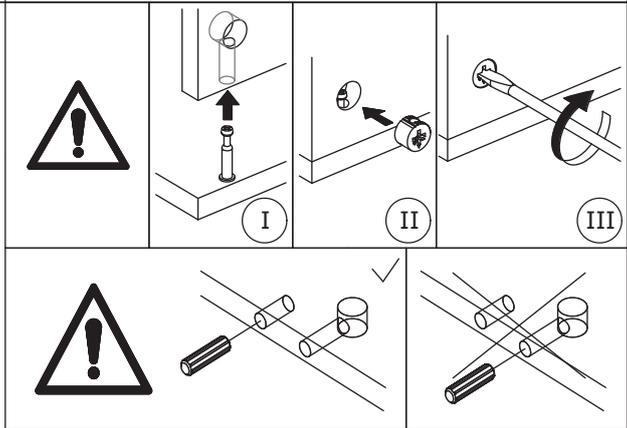



6

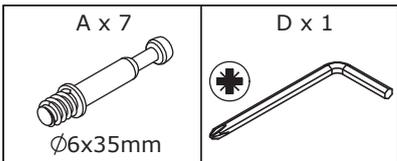



Insert quickfit screw(A) into boards 3 and 4 as shown. Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

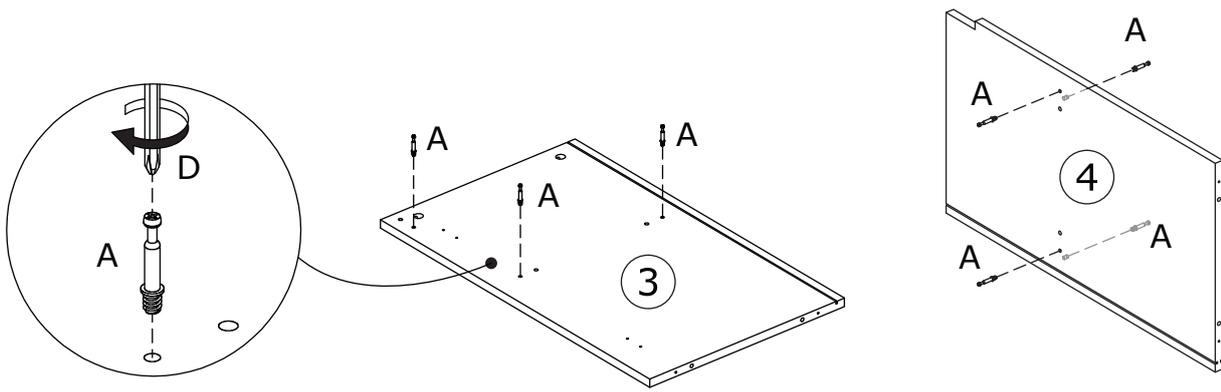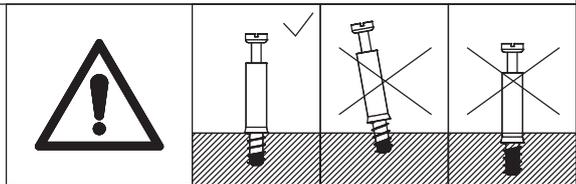


7

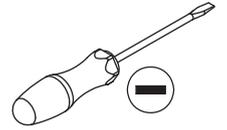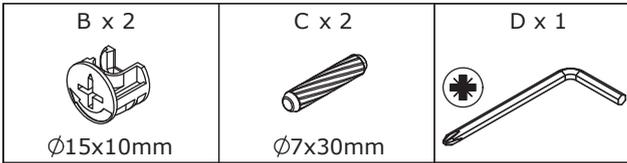

Insert wooden dowel(C) into board 8 as shown, then attach board 4 to board 8, insert cam locks (B) into the board 8, turn cam locks clockwise to tighten as shown.

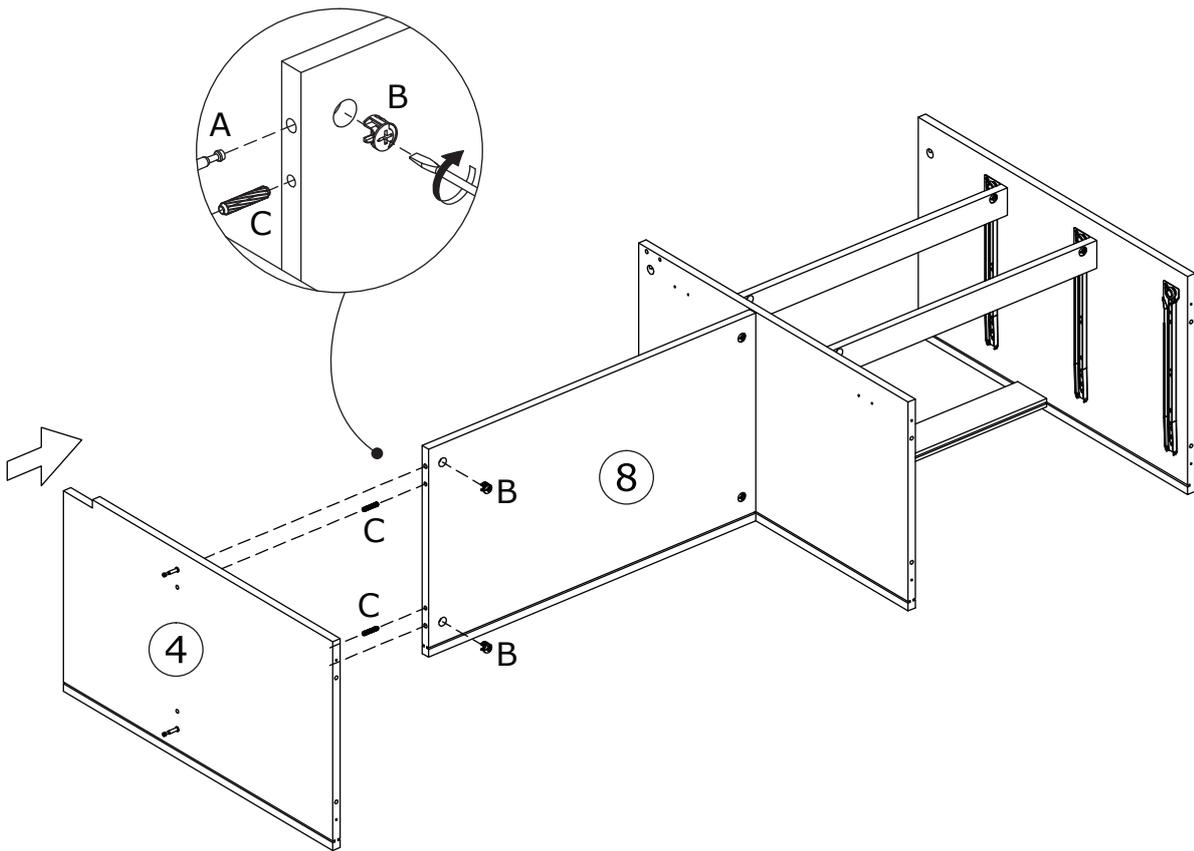
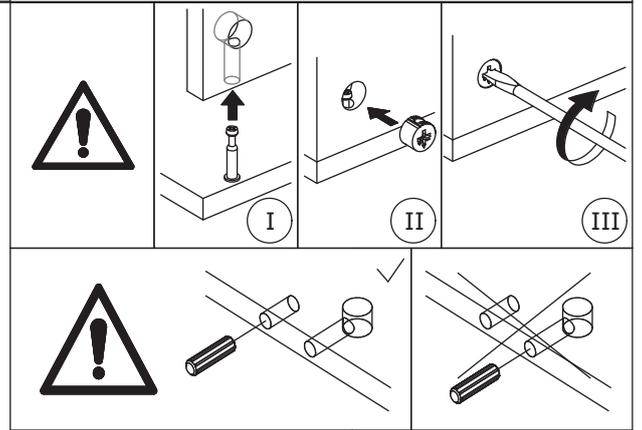


8

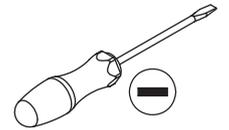


Insert wooden dowel(C) into board 7 as shown, then attach board 7 to the board 4, insert cam lock(B) into board 7, turn cam locks clockwise to tighten as shown.

Same as above steps to attach board 10 to board 5 using wooden dowel(C) and cam lock(B).

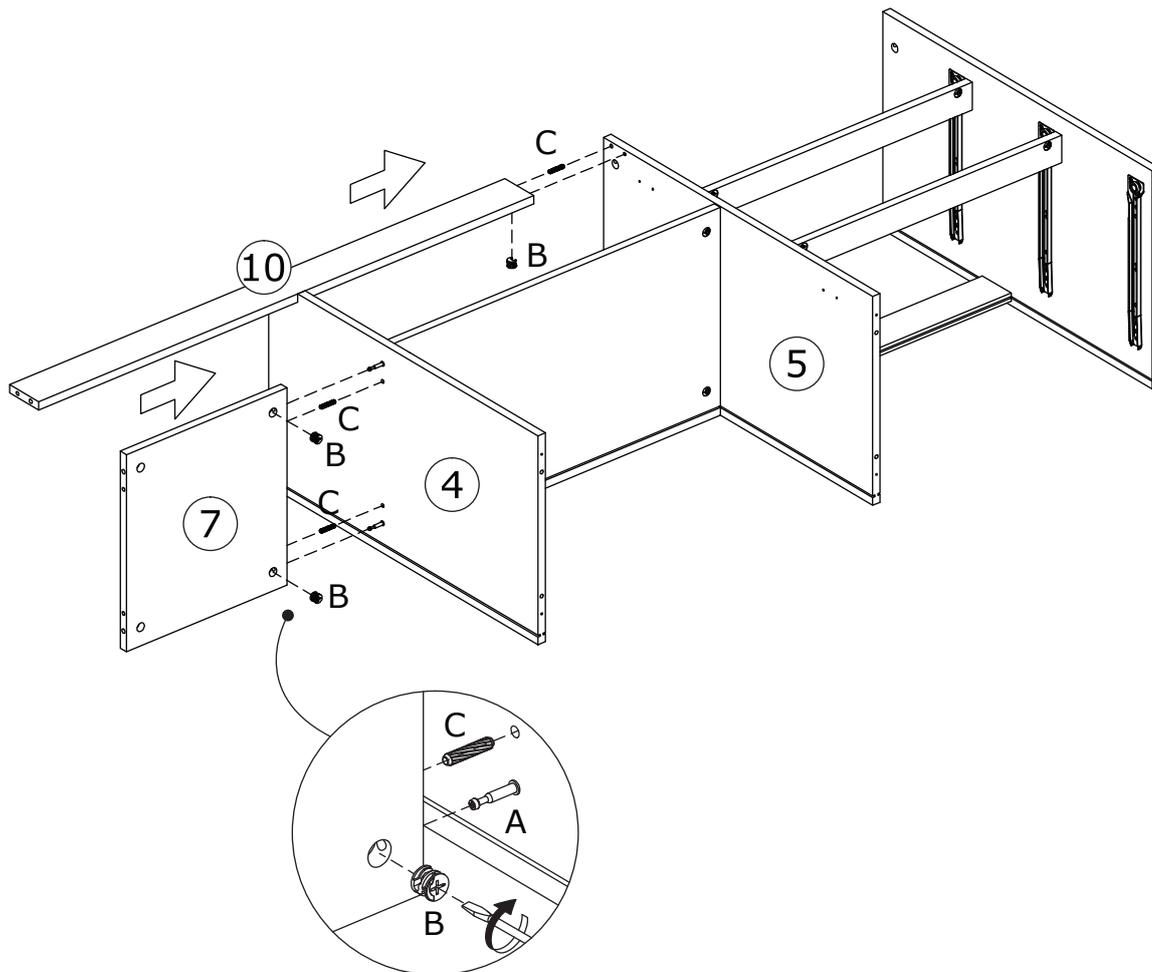
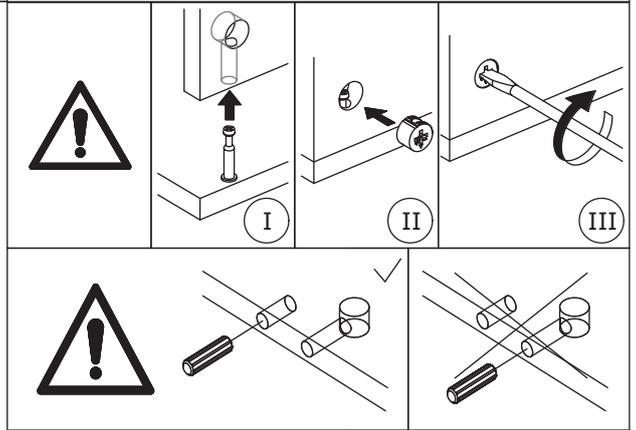


9


B x 3  $\varnothing 15 \times 10 \text{mm}$	C x 3  $\varnothing 7 \times 30 \text{mm}$	D x 1 
---	--	---

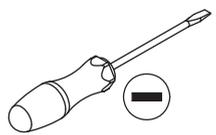



Insert wooden dowel(C) into board 7 and 10 as shown, then attach board 3 to them,
 Insert cam lock(B) into the corresponding holes in them, turn cam locks clockwise to tighten as shown.

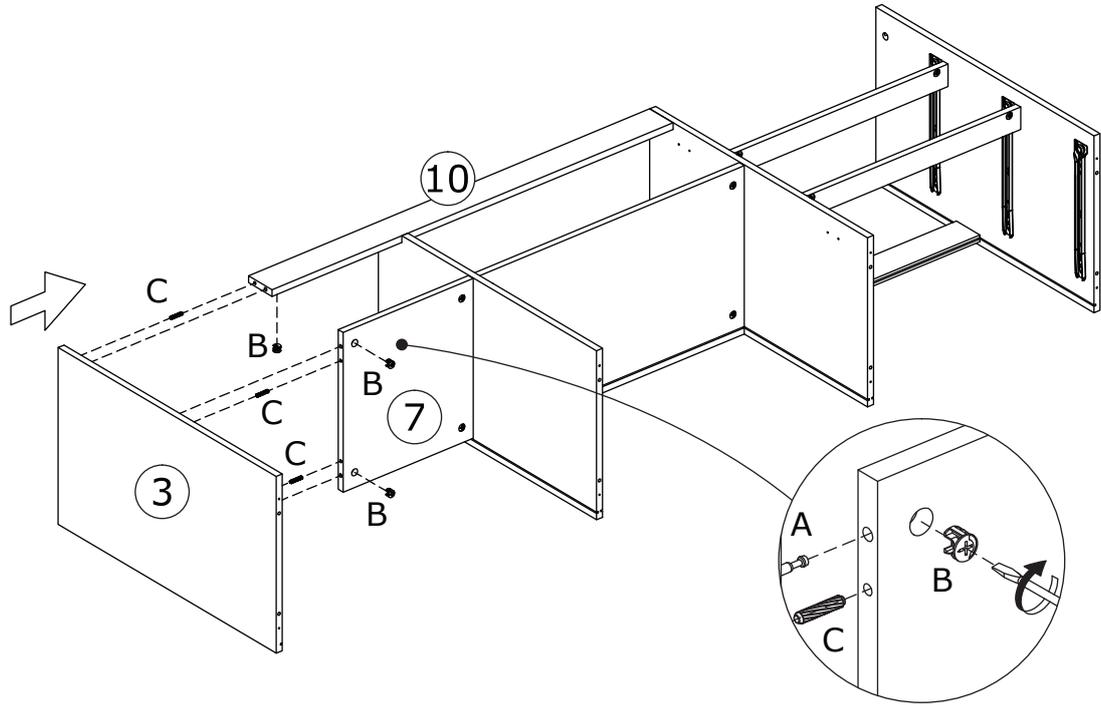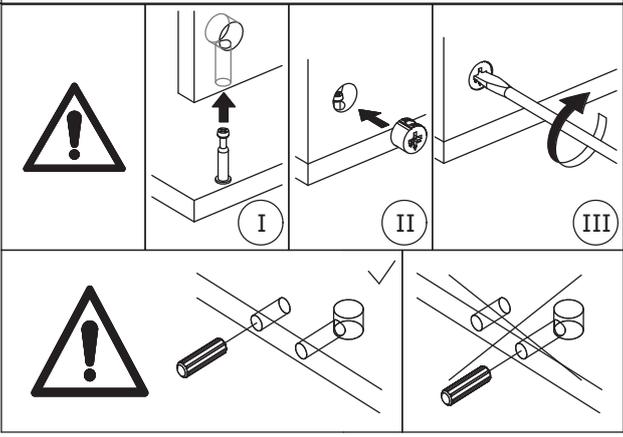


10

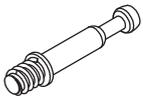A x 8  $\varnothing 6 \times 35 \text{mm}$	D x 1 
--	---

Insert quickfit screw(A) into board 1 as shown. Do not use an electric screwdriver, do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

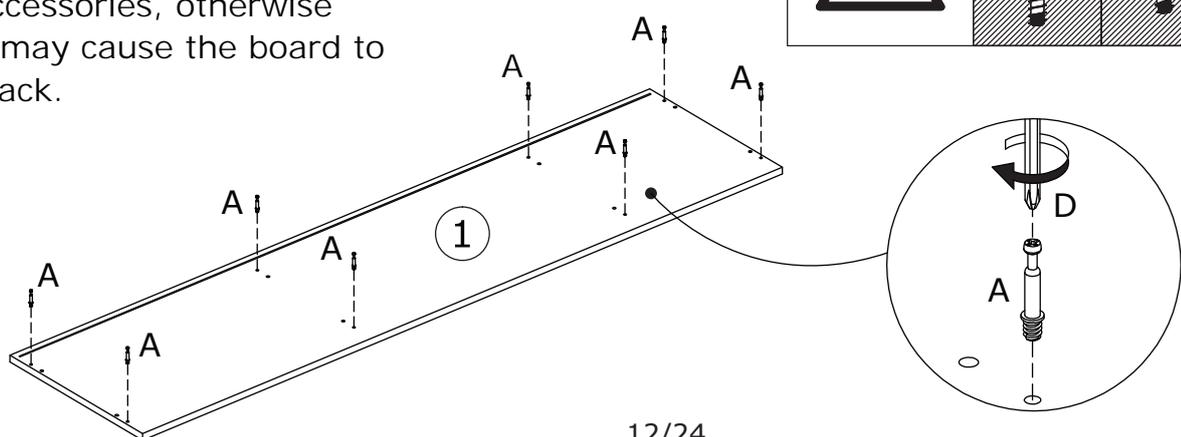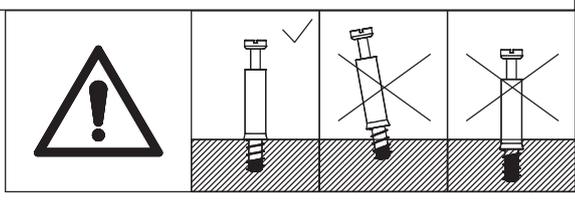




11

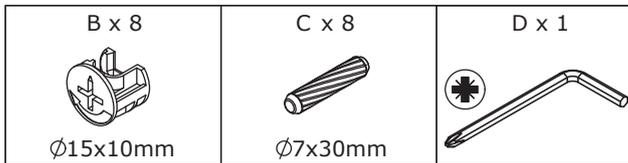


Slide board 14 and 16 into available slots as shown.

Insert wooden dowel(C) into the corresponding holes of the boards 3,4,5 and 6 as shown, then attach board 1 to them.

Insert cam lock(B) into the corresponding holes in them, turn cam locks clockwise to tighten as shown.

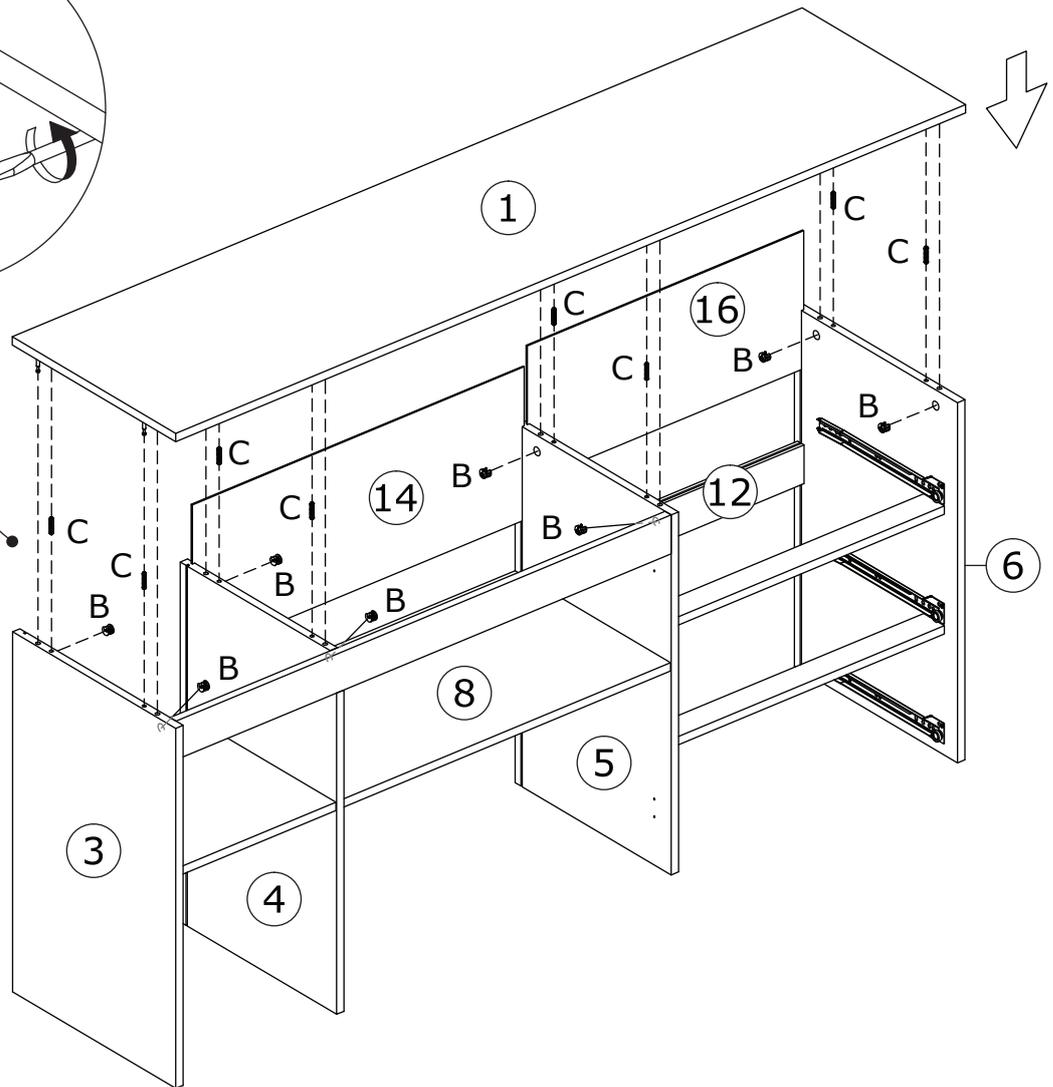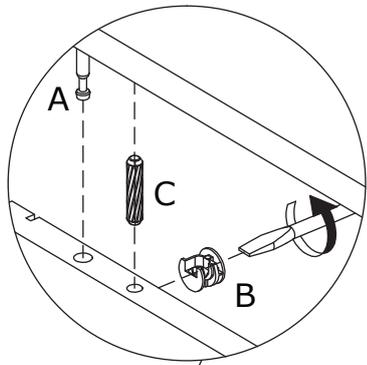
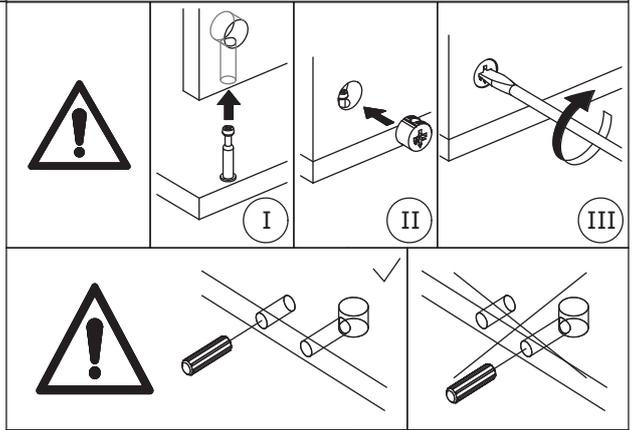


12

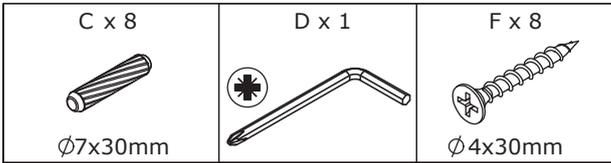

Turn the assembled unit upside down, slide boards 13,15 and 17 into available slots as shown.


Insert wooden dowels (C) into the corresponding holes of boards 3,4,5 and 6, then attach board 2 to them using screws (F) as shown.

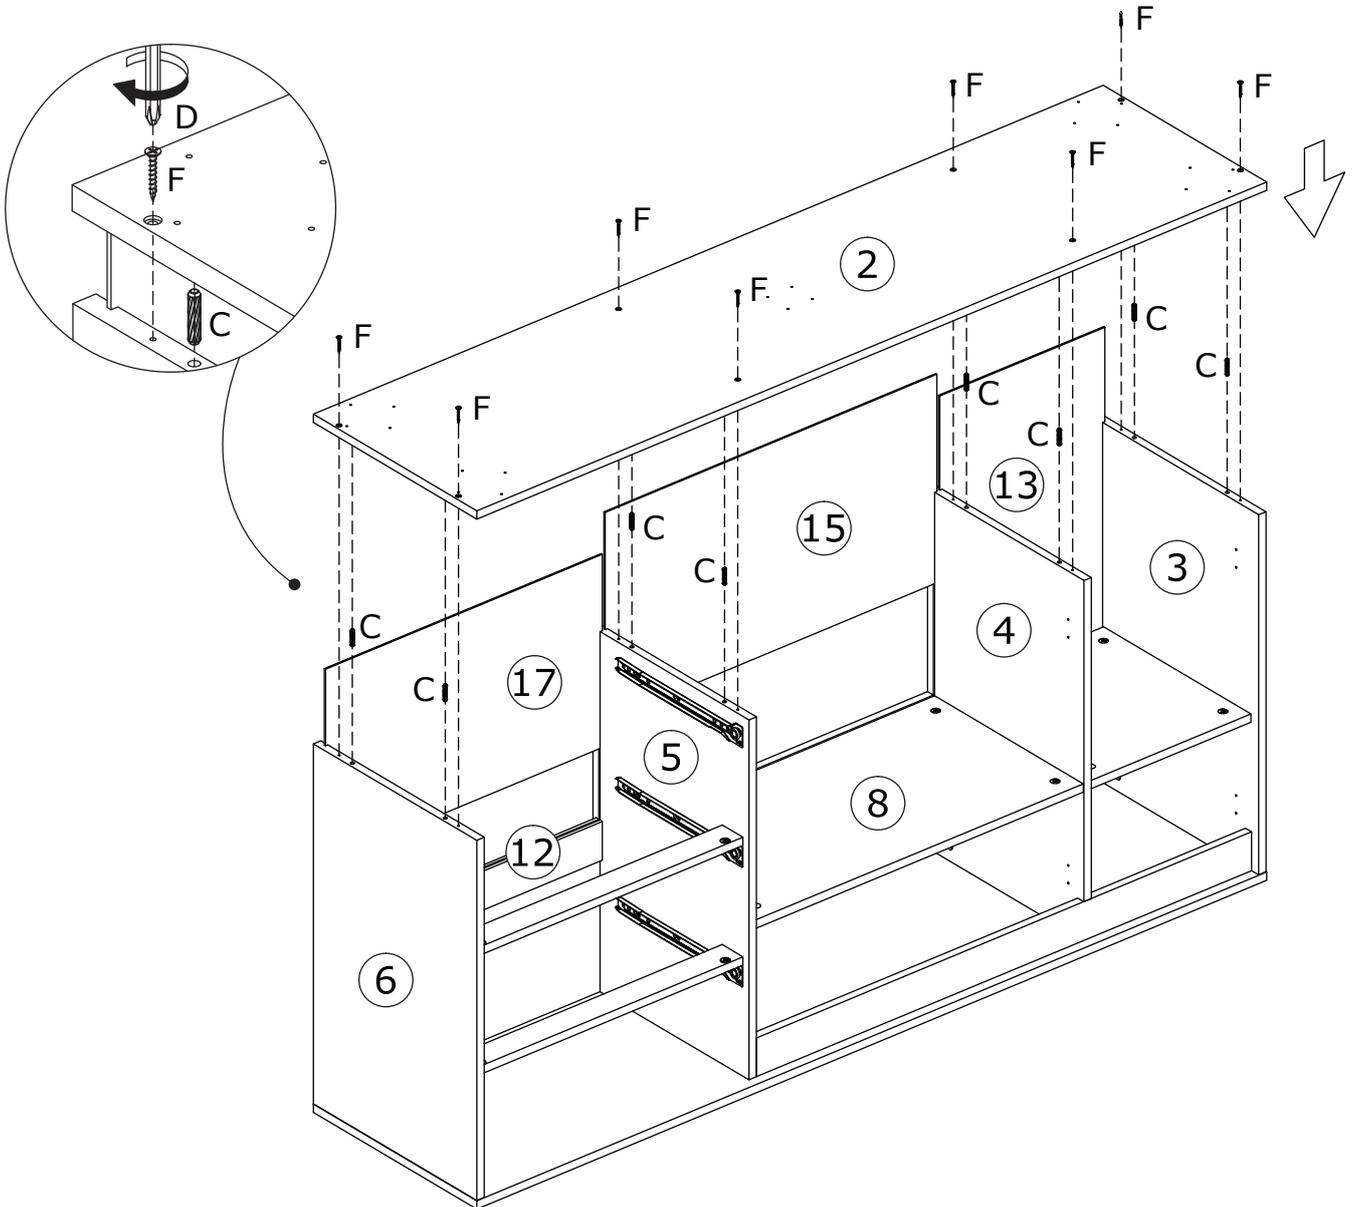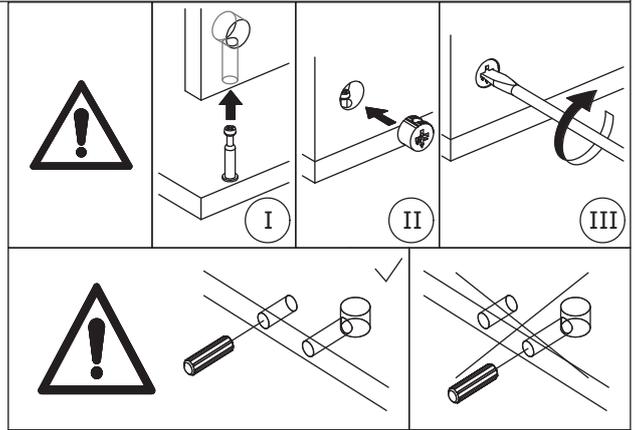


13



Fix legs 26 and leg support 27 to board 2 with screw(G) as shown.


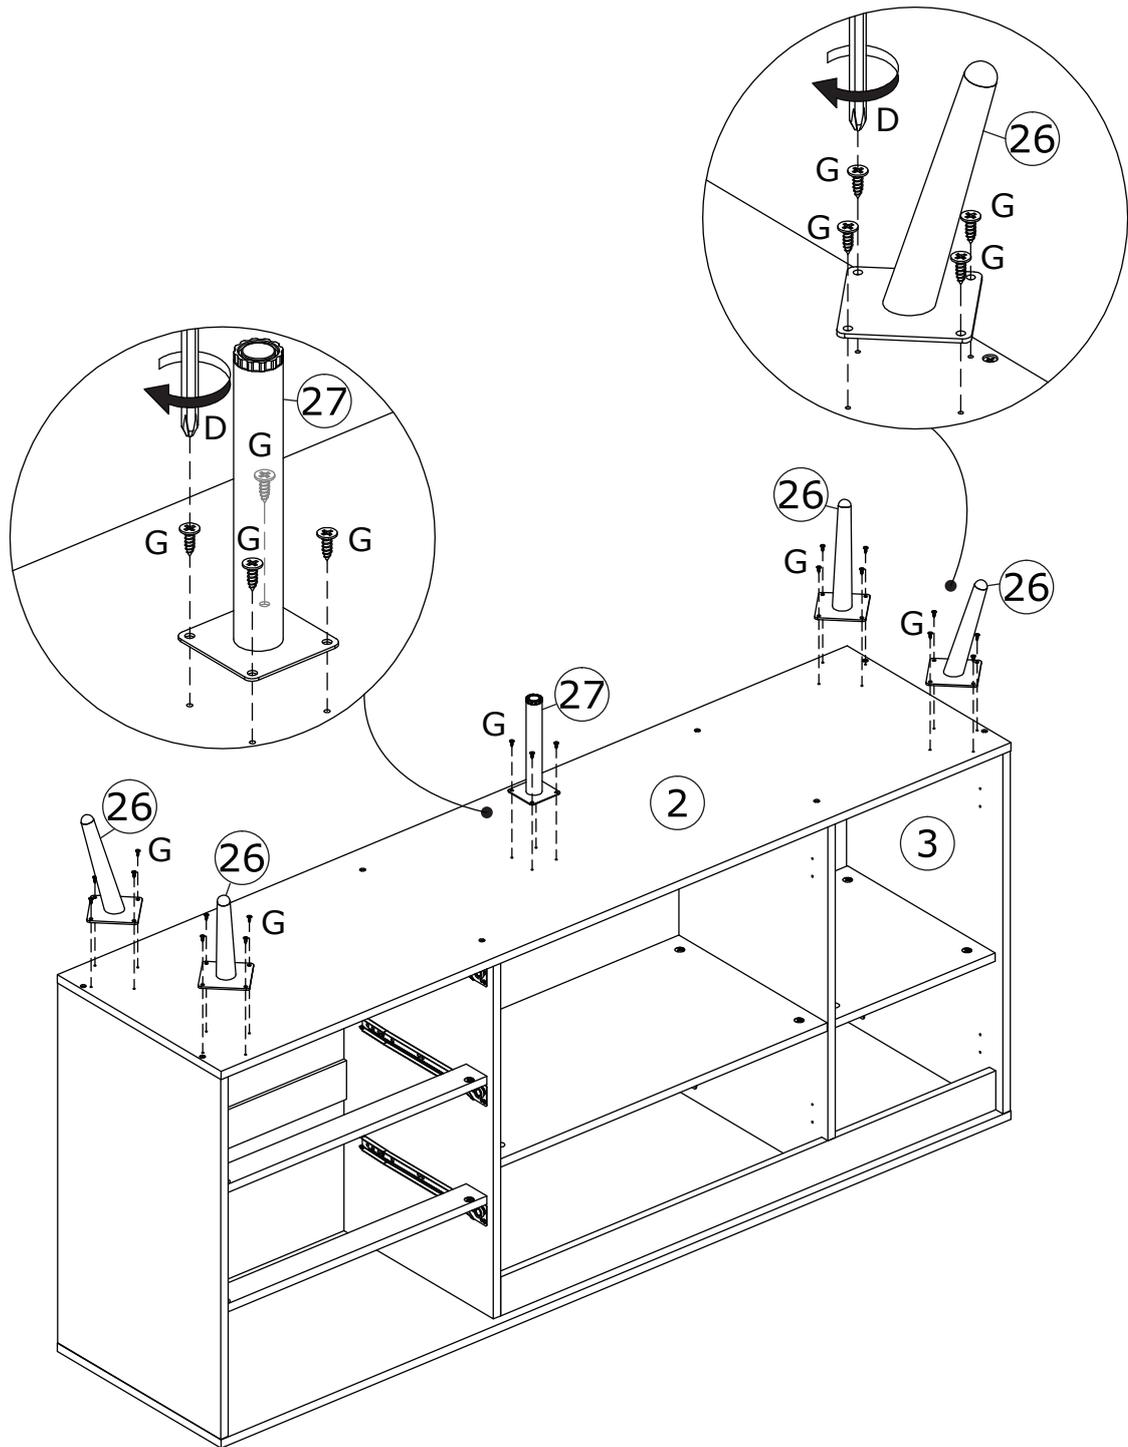


14

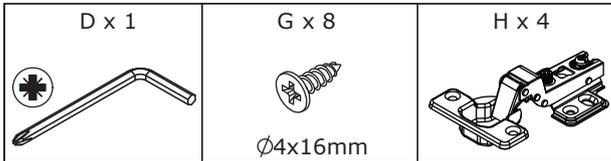


Fix hinge(H) to door 18 and 19 with screw(G) as shown.

Do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

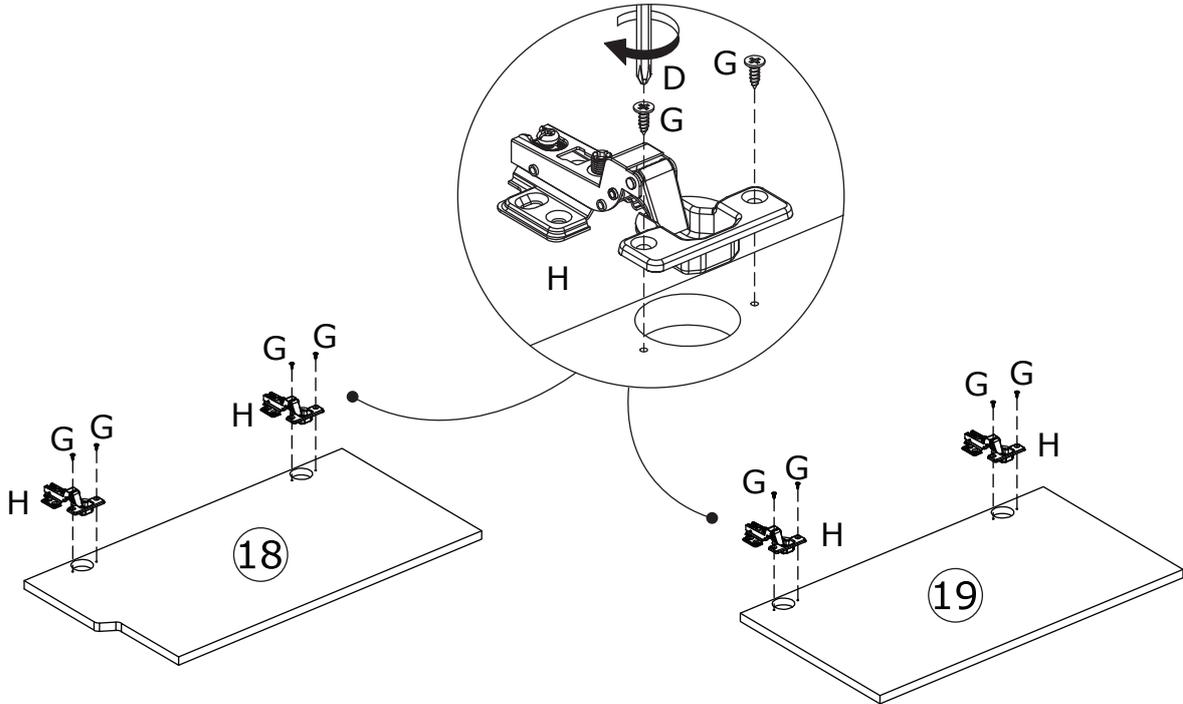
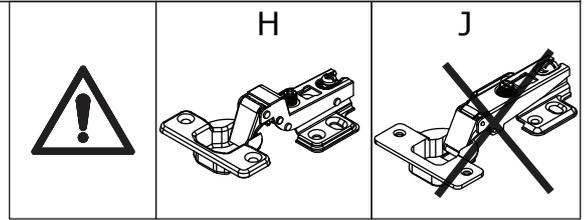


15

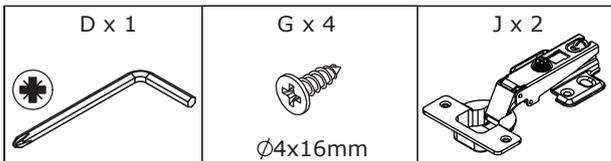


Fix hinge(J) to door 20 with screw(G) as shown.

Do not use force during the rotation of the accessories, otherwise it may cause the board to crack.




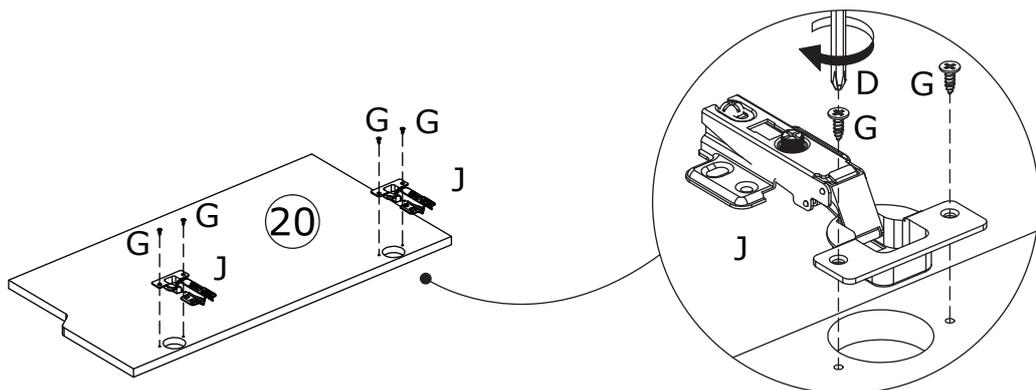
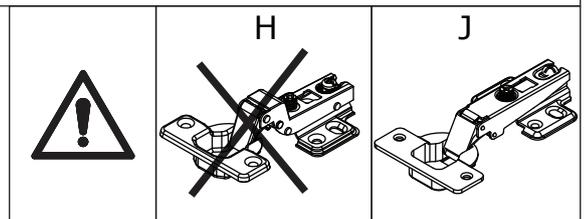


16

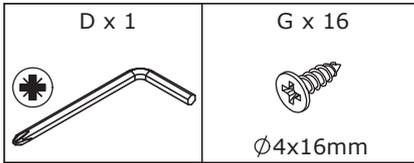


Attach door 18 to board 3 by fixing hinges with screws (G) as shown.
Attach Door 19 to board 4 by fixing hinges with screws (G) as shown.

Do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

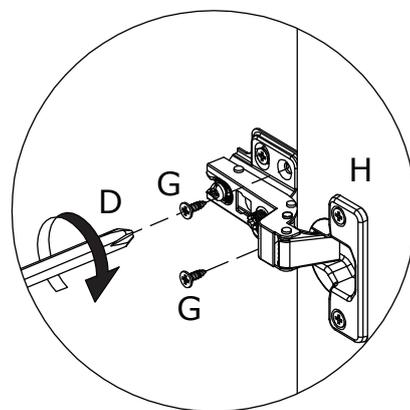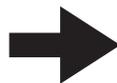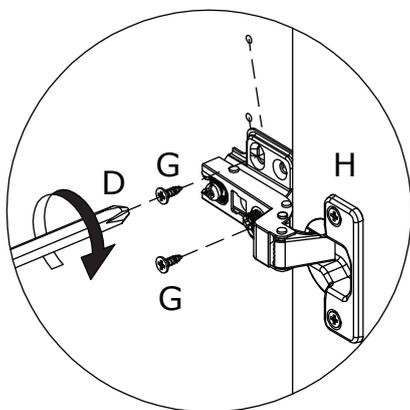
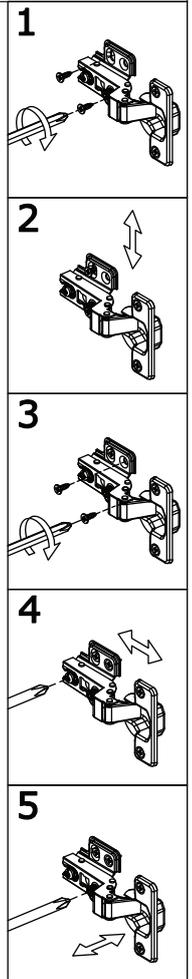
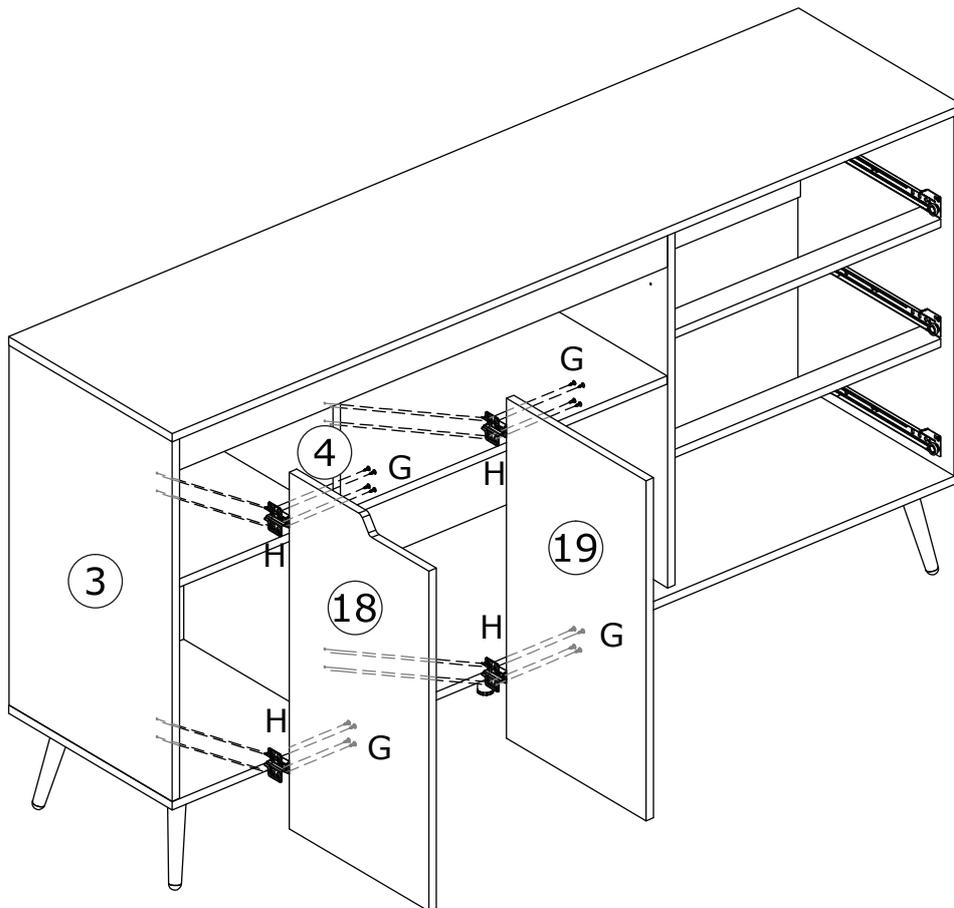


17


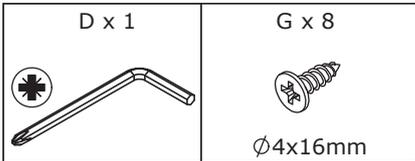


Attach door 20 to board 5 by fixing hinges(J) with screw(G) as shown.

Do not use force during the rotation of the accessories, otherwise it may cause the board to crack.

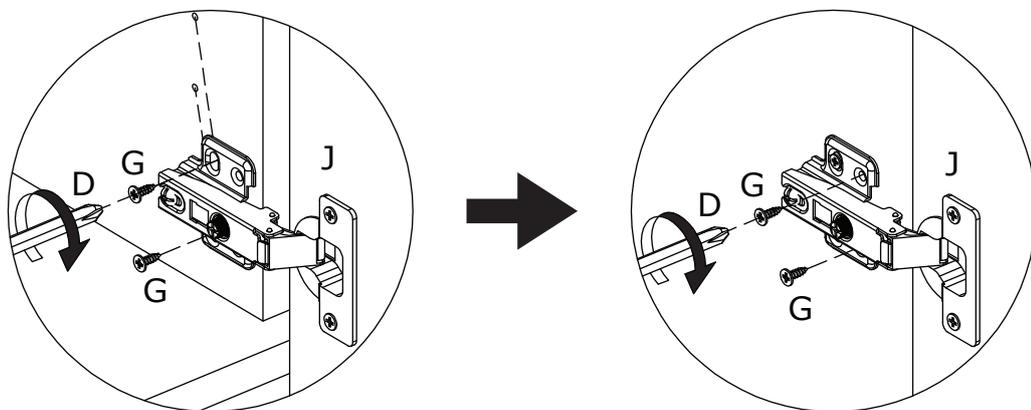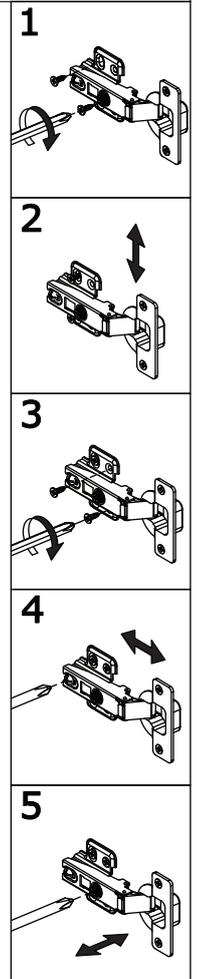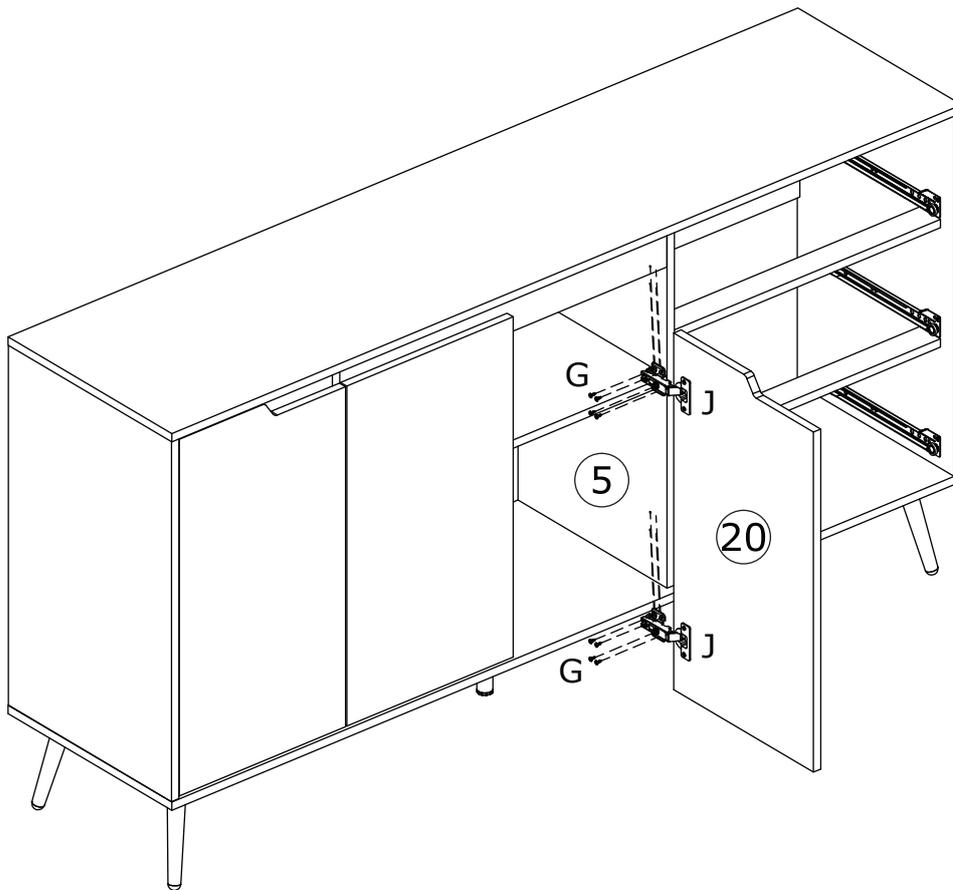


18

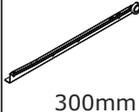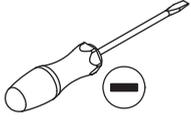A x 12  Ø6x35mm	B x 12  Ø15x10mm	D x 1 	E x 12  Ø3.5x14mm	F x 12  Ø4x30mm	DL x 3  300mm	DR x 3  300mm	
--	---	--	--	--	---	--	---


DRAWER QTY: 3pcs

Attach boards 22 and 23 to board 24 using screw(F) as shown.
Insert quickfit screw(A) into board 21 as shown.

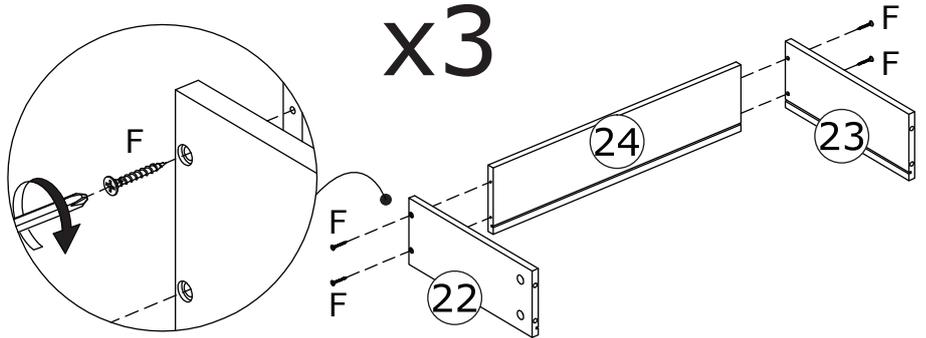


Insert board 25 into available slots of boards 22, 23 and 24 as shown.

Attach board 21 to boards 22 and 23, insert cam lock(B) into the corresponding holes in them, turn the cam locks clockwise to tighten as shown.

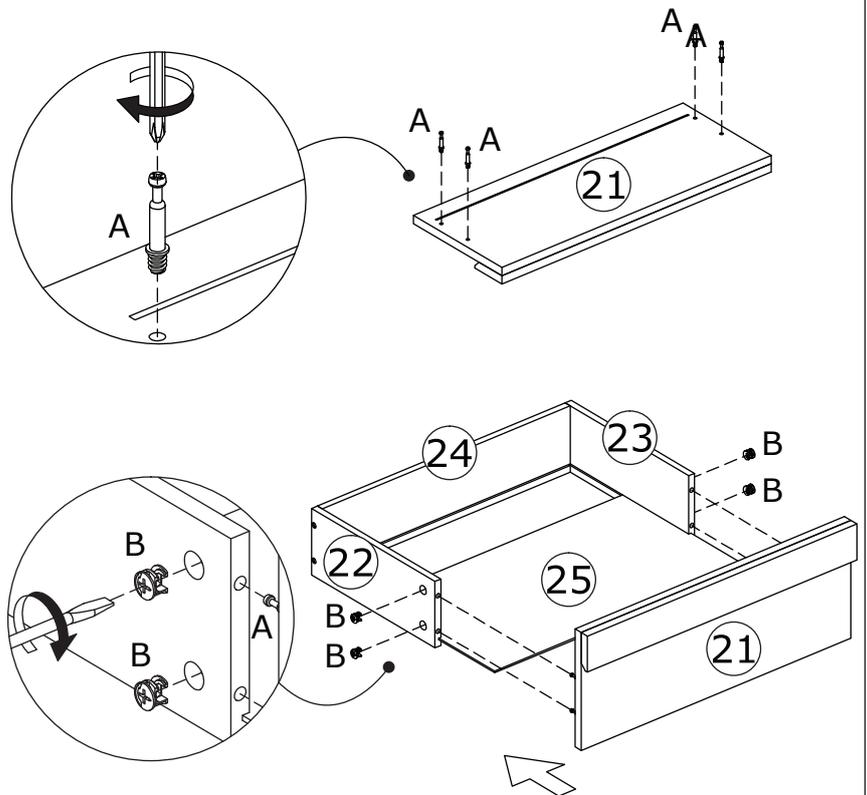


Fix slide rail(DL) and (DR) to board 22 and 23 with screw(E) as shown.

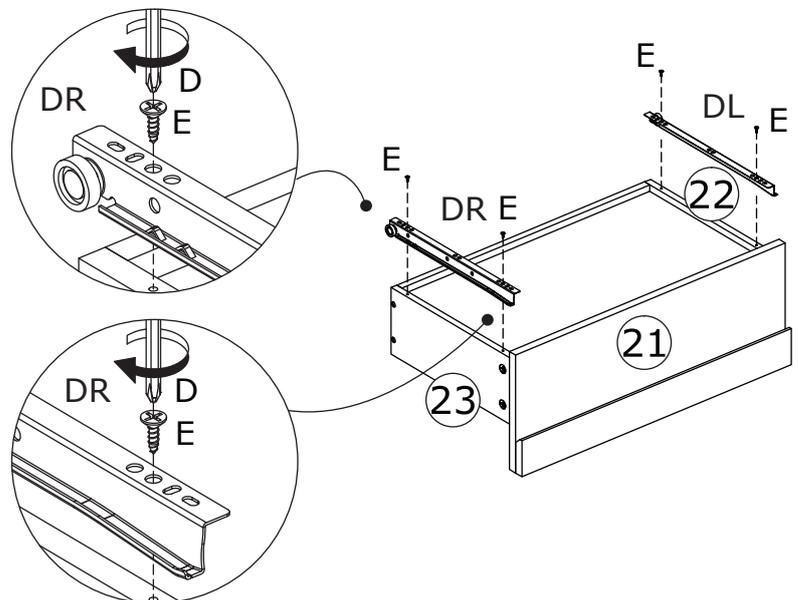


19


Align rails, slide all drawers.

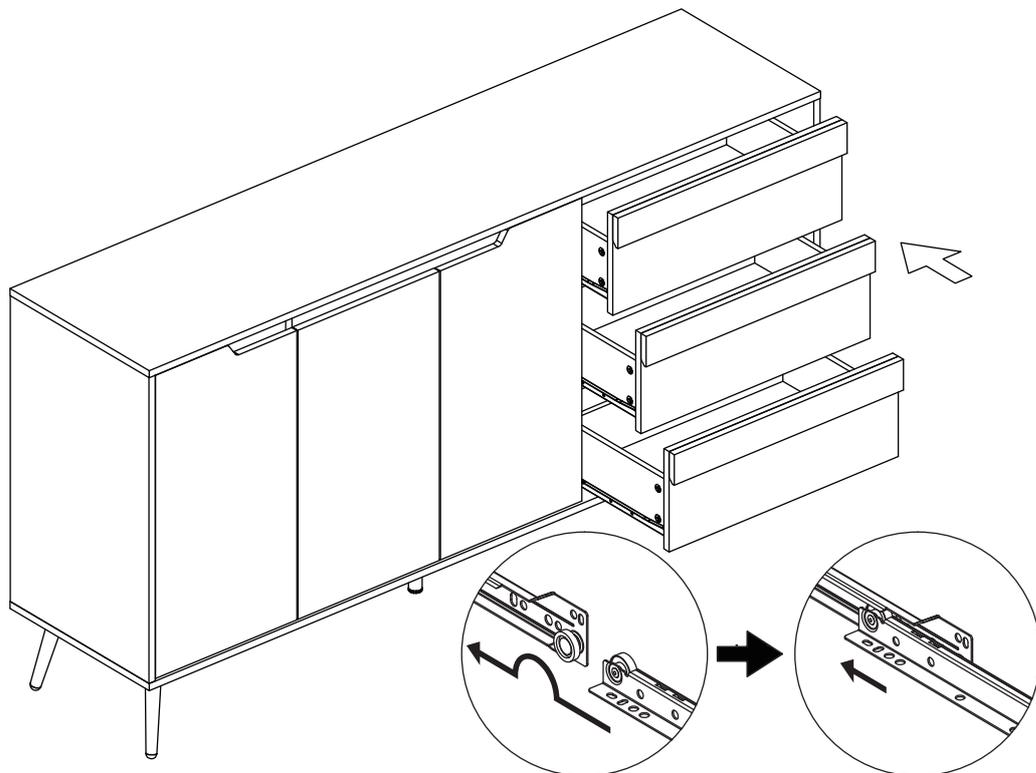


20

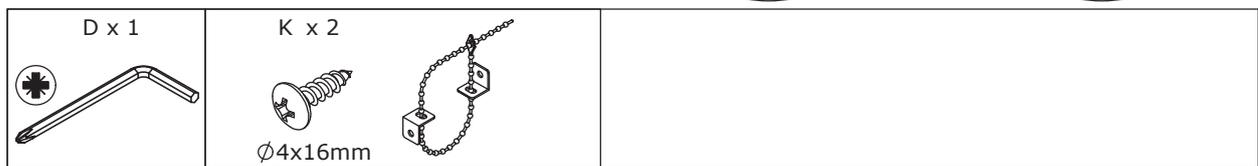

Fix corner braces of the wall attachment(K) to board 1 with screws as shown.

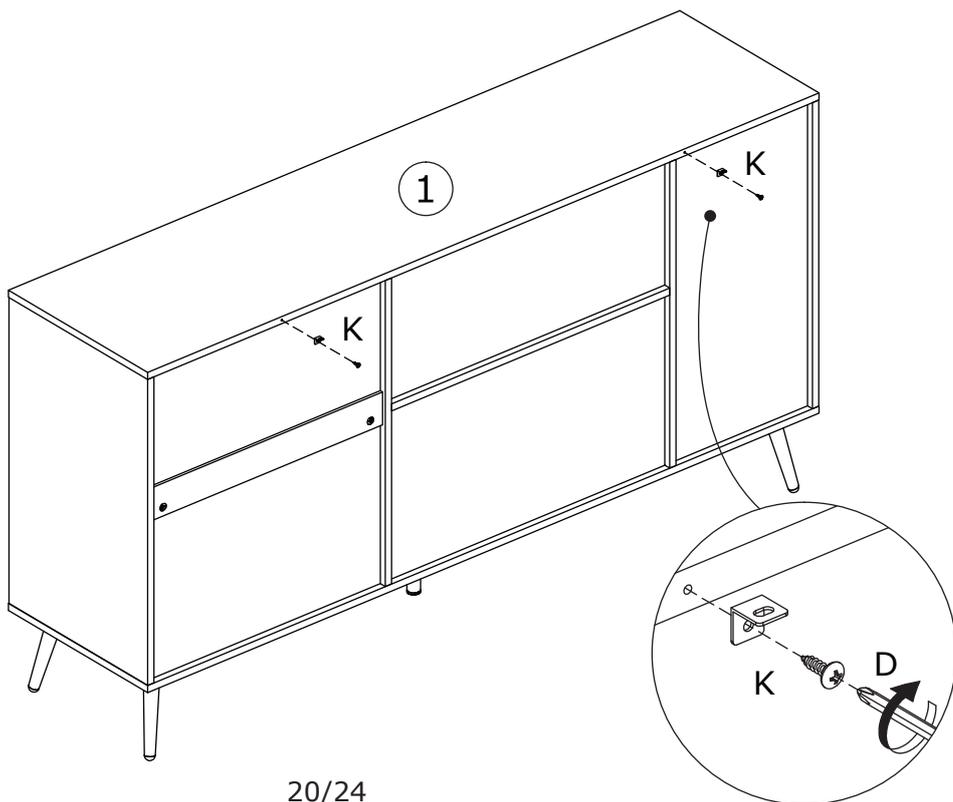


21












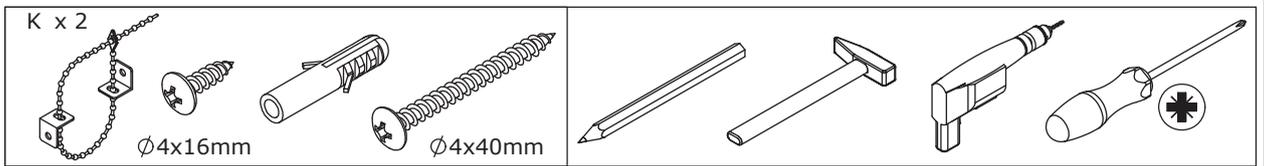


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment. Please read and follow each step of the instructions carefully as below.

1. According the position of each safety strap where you want amount it to make a mark using a pencil as shown.
2. Selecting an appropriate size drill bit to drill a hole in the wall at each mark using power drill.
3. Hit a wall anchor into each hole using a hammer.
4. Fix a corner brace to each wall anchor with screw.
5. Connect the corner braces together using safety straps, then tight the safety straps as shown.

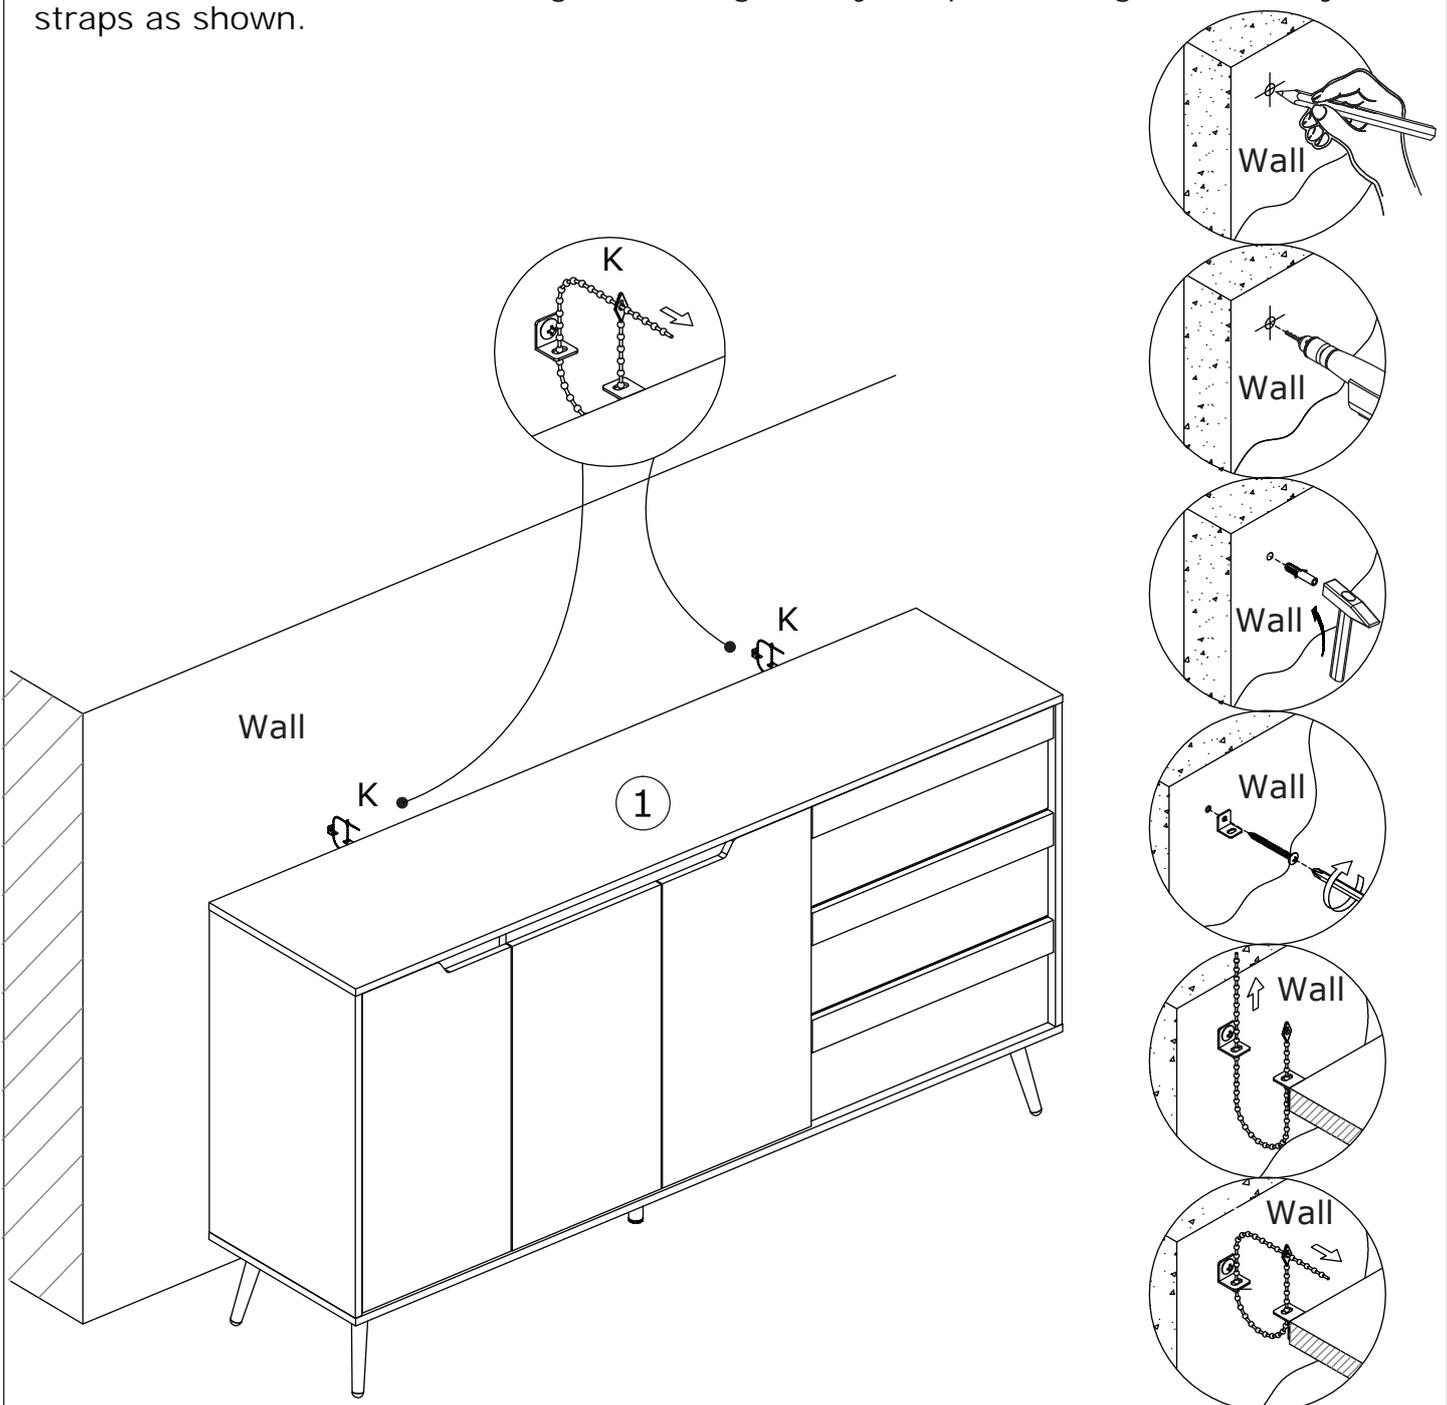

Adjust hinges to make the doors alignment.

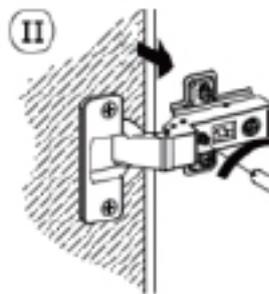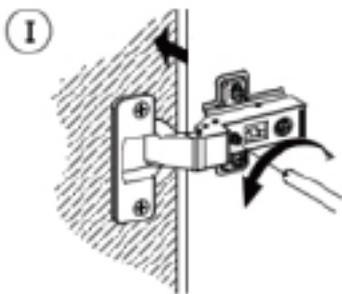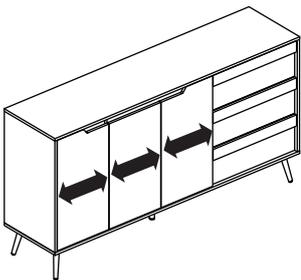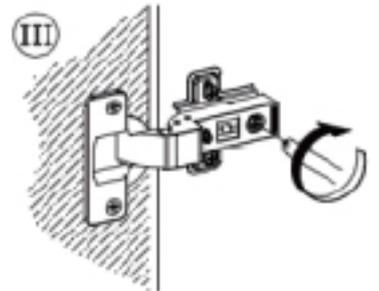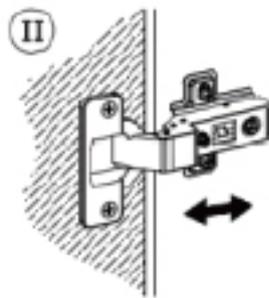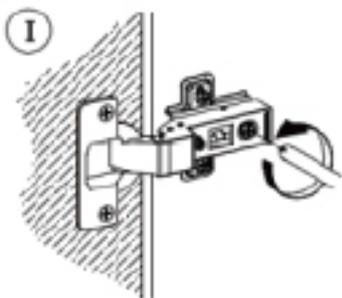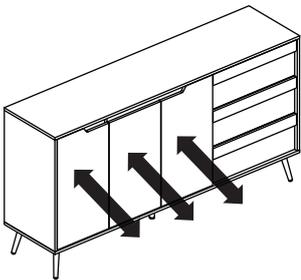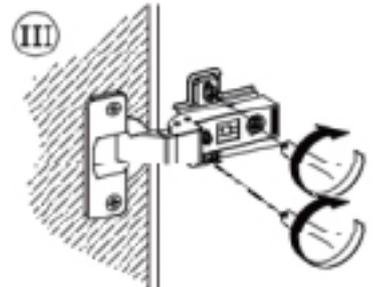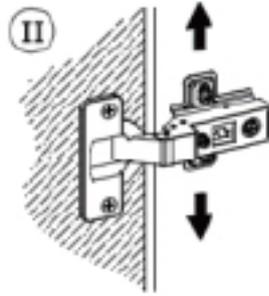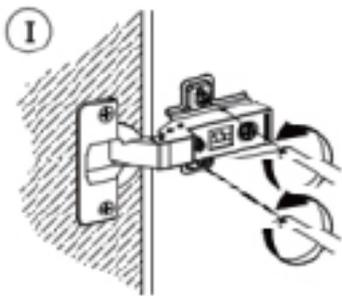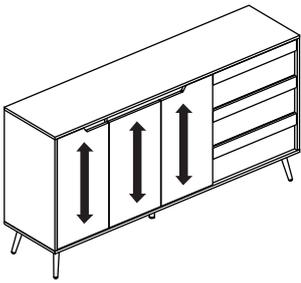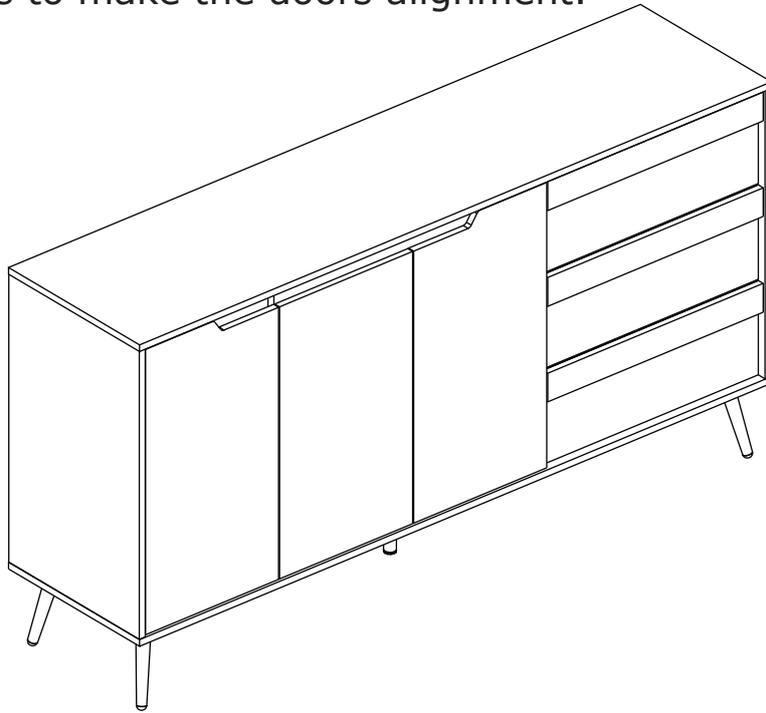

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.