

# INSTRUCTION MANUAL



PRODUCT CODE: 75077

## BRIGHTON TOASTER



ESTD. ENGLAND 1958

## How Can We Help?

The Haden team is always interested in what you have to say, so why not get in touch?



Call us

**California: +1 562 942 0492**

**Outside California: +1 866 942 0492**

**Available Monday - Friday**

**8am - 4:30pm P.T**



Email us

**service@hadenusa.com**



Write to us

**Team Haden, Studio Designs,  
6027 Bandini Blvd, Commerce, CA  
90040**



Visit us

**www.hadenusa.com**

# COMPONENTS



- 1. Toasting Slots
- 2. Carriage Control Lever
- 3. Cancel Button
- 4. Reheat Button

- 5. Defrost Button
- 6. Browning Control
- 7. Crumb Tray

# SAFETY INSTRUCTIONS

**When using electrical Toasters, the following basic safety precautions should always be taken.**

- Before using, check that the voltage of wall outlet corresponds to that shown on the rating plate of the toaster.
- Do not touch hot surface. Use handles, knobs and buttons provided.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Close supervision is necessary when it is used by or near children.
- Unplug the unit from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug. If the main cord is damaged, it must be replaced by a service agent or a qualified person.
- Do not let the cord hang over the edge of a table or counter, or touch any hot surfaces.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not place on or near a hot surface or in a heated oven.
- Do not use the appliance for anything other than its intended use.
- Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire, electric shock and or personal injury.
- Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must not be left unattended.
- The use of accessory attachments is not recommended by the appliance manufacturer as it may cause injuries.
- Don't attempt to dislodge food when toaster is in operation.
- Be sure to take the bread out carefully after toasting so as to avoid injuries.

- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- **WARNING:** if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
- **WARNING:** To prevent electrical shock, unplug before cleaning.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Don't use the appliance outdoors.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS

# HOUSEHOLD USE ONLY

## NOTES ON THE CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## NOTES ON THE CORD

- A short power-supply cord (or detached power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a long cord.
- Longer detachable cord or extension cord is available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used:
  1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance, and.
  2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
  3. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

# USING YOUR TOASTER

## FOR THE FIRST USE

The first use of the toaster may emit an odour. This is from residue or oil remaining in the toaster or heat element from the manufacturing process. It is normal and will not occur after several times use, for the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

1. Insert a regular bread slice into the bread slots, which can be inserted with four slices at most each time.
2. Make sure the crumb tray is positioned in place before using.
3. Plug the power cord into the outlet.
4. Set the browning control knob to your desired setting. There are 7 positions, the lowest "1" is for light and the highest "7" is for dark. Depending on the thickness of the bread, it can be toasted to a golden colour in the middle position.
5. Press the carriage handle down vertically until it latches into position. The light indicator for the Cancel Function will be illuminated, and the appliance will begin toasting.
6. Once the bread has been toasted to the preset colour, the carriage handle will automatically pop up.

**NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.**

## Defrost button

This feature takes the guesswork out of toasting frozen bread. If you want to toast frozen bread, press **Defrost** button and the indicator of **Defrost** button will be illuminated, set color control knob to your desired color, and then lower carriage handle down vertically until it is latched in place. In this mode bread will be toasted to your desired color.

## Reheat button

Press the **Reheat** button and the indicator of **Reheat** button will be illuminated, and then lower carriage handle vertically until it is latched in place. In this mode toasting time is fixed, so long as time runs over, the carriage handle will automatically spring up and end up the reheating process.

Only reheat plain, unbuttered toast.

## CAUTION

1. Remove all protective wrappings and stickers prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter or garlic bread.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. In order to achieve uniform colour we recommend that you should wait a minimum of 30 seconds between each toasting.



# CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let it cool down completely.
2. Wipe the outside with a soft dry cloth, never use metal polish.
3. Remove the crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. The power cord may be wound under the bottom of toaster when not in use or during storage.

## **Crumbs**

Remove crumbs frequently, as they could cause a fire hazard. Unplug the toaster and let it cool down fully. Remove and empty the crumb tray. Wipe it with a damp cloth, dry it, then slide it back into the toaster.  
Don't use the toaster unless the crumb tray is in place and closed.

# TECHNICAL DETAILS

<b>Model</b>	Brighton Toaster
<b>Rated Voltage</b>	120V 60Hz
<b>Rated Power</b>	1600W

# LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) years from the date of original purchase in Canada and one (1) year from the date of original purchase in the U.S. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you.

If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse.

This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g. 120V ~ 60 Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price.

Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights.

You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

## ENVIRONMENT FRIENDLY DISPOSAL

### DISPOSAL:

Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.



This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.



By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.



**HADEN**

ESTD. ENGLAND 1958