 


KDSXB24
V20260211

User Manuals

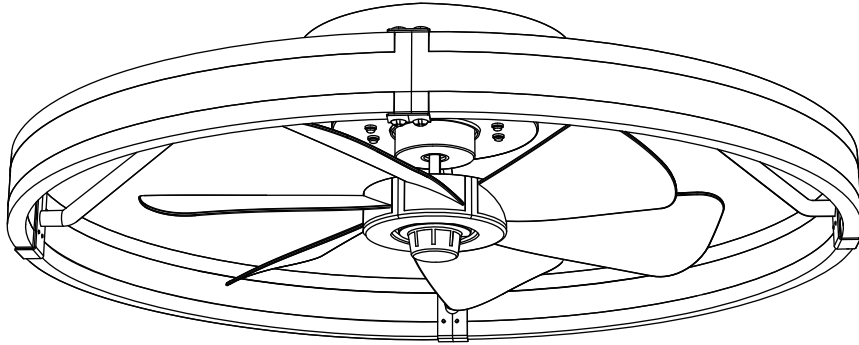

Scan for support or
view installation videos

After-sales Email: support@fanlamppro.com

To assist you faster, please share your order confirmation
screenshot so we can quickly resolve this.

CEILING FAN

WARM TIPS

- About Light Memory:(Figure 1)
 - * Turn off light (wall switch or remote controller)
 - * Turn on the light after 10s to remain last light setting.
- P.S: If turn on within 10s, light CCT will change.
- The lighting kit is unreplaceable.

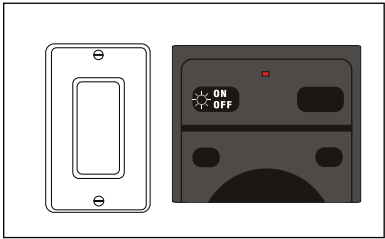 
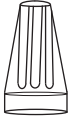 
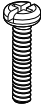 
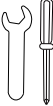 







Figure 1

ACCESSORIES

aa (3)  Wire nut	bb (3)  J-box screw	cc (4)  Self-tapping screw	dd (1)  Canopy screw (spare)	ee (4)  Plastic expansion tube
ff (4)  Washer	gg (4)  Nut	hh (1+1)  Toolkit	ii (18)  Screw	

PACKAGE CONTENTS

     - Package includes 6 fan light accessories. Check for missing parts and confirm all items.

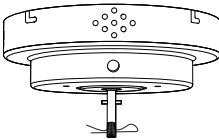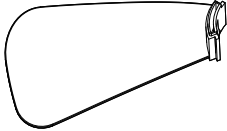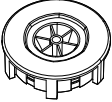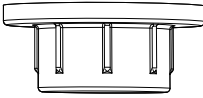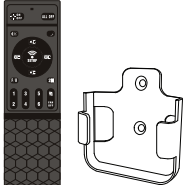A (4)  Lamp body part	B (1)  Canopy part	C (6)  Fan blade
D (1)  Fan blade body	E (1)  Blade cap	F (1+1)  Remote control

CEILING FAN

IMPORTANT WARNING

- To reduce the risk of electric shock, turn off all power sources.
- All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.
- Do not turn the fan blades until the fan installation is completed.
- To avoid personal injury or damage to the fan and other items, maintain and clean the fan with care.

WARNING

TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PERSONAL INJURY
MOUNT FAN TO OUTLET BOX MARKED
ACCEPTABLE FOR FAN SUPPORT

HOW TO OPERATE YOUR CEILING FAN


- **IMPORTANT:** Using a full range dimmer switch(not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed(Figure 1).
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire.
Do not operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.



 (Figure 1)



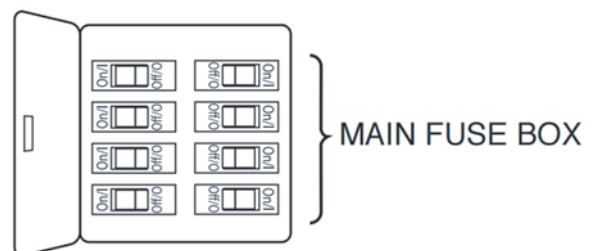


(Figure 2)

CEILING FAN

ELECTRICAL AND STRUCTURAL REQUIREMENTS

   - Your new ceiling fan will require a grounded electrical supply line of AC110~130V/60Hz15 Amp Circuit. Electrical code requires use of a fan-rated outlet box to support the extra weight and motion associated with a ceiling fan. A fan-rated box will be labeled as such and typically supports up to a 70lbs ceiling fan. Fan-Rated Outlet Boxes vary in rating and design. Ensure the ratings of your ceiling fan outlet box meet the requirements for the ceiling fan being installed. Figure 1, Figure 2 and Figure 3 depicts different structural configurations that may be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

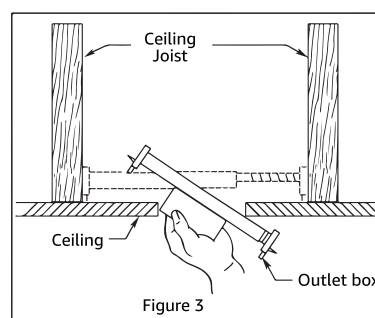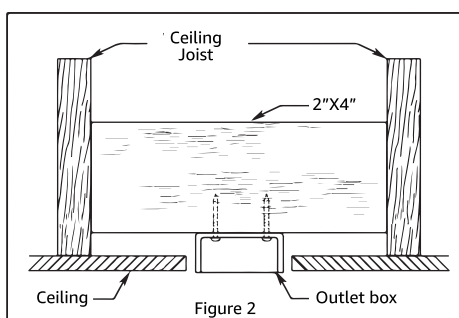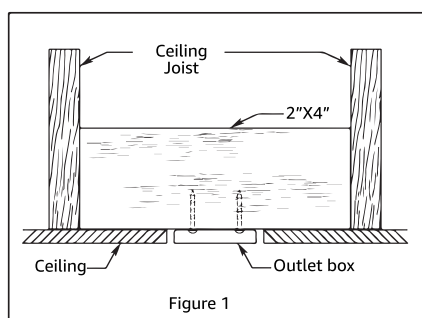

- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

⚠ WARNING

Turning off wall switch is not sufficient, to avoid possible electrical shock be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local codes and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

⚠ WARNING

 
Do not operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

CEILING FAN

FAN BLADE: INSTALL/REMOVE


Needed accessories:

C (6)

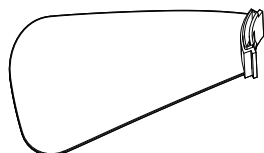


Fan blade

 D (1)

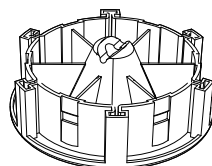


Fan blade body

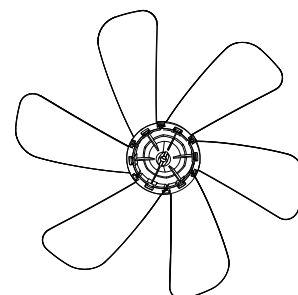 


INSTALL

 Note: 'UP' mark and fan clips must face upward – incorrect orientation prevents use.

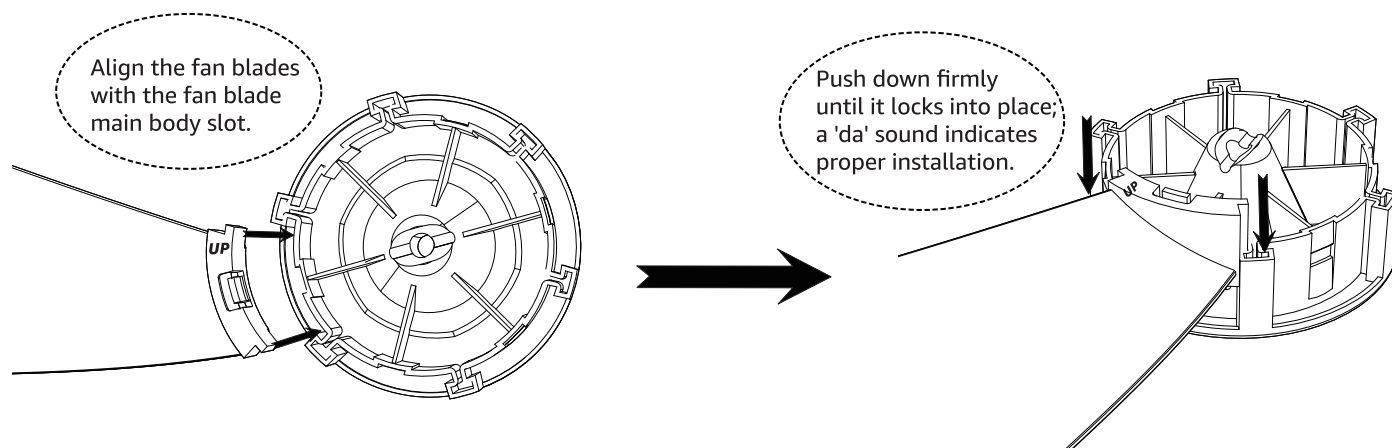

REMOVE

 Note: Please push the screwdriver towards the tail of the blade.

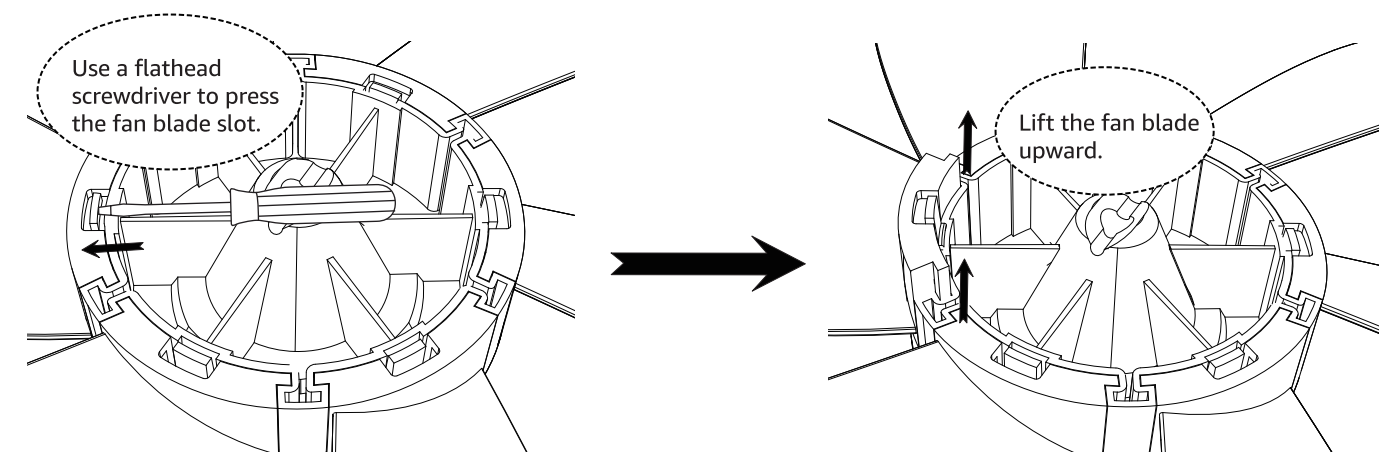


CEILING FAN

INSTALL CEILING HANGING BOARD

Needed accessories:

(1)	bb (2)	cc (4)	ee (4)	ff (4)
Hanging board (pre-assembly)	J-box screw	Self-tapping screw	Plastic expansion tube	Washer

 Note: Do not remove the four screws on the hanging board.


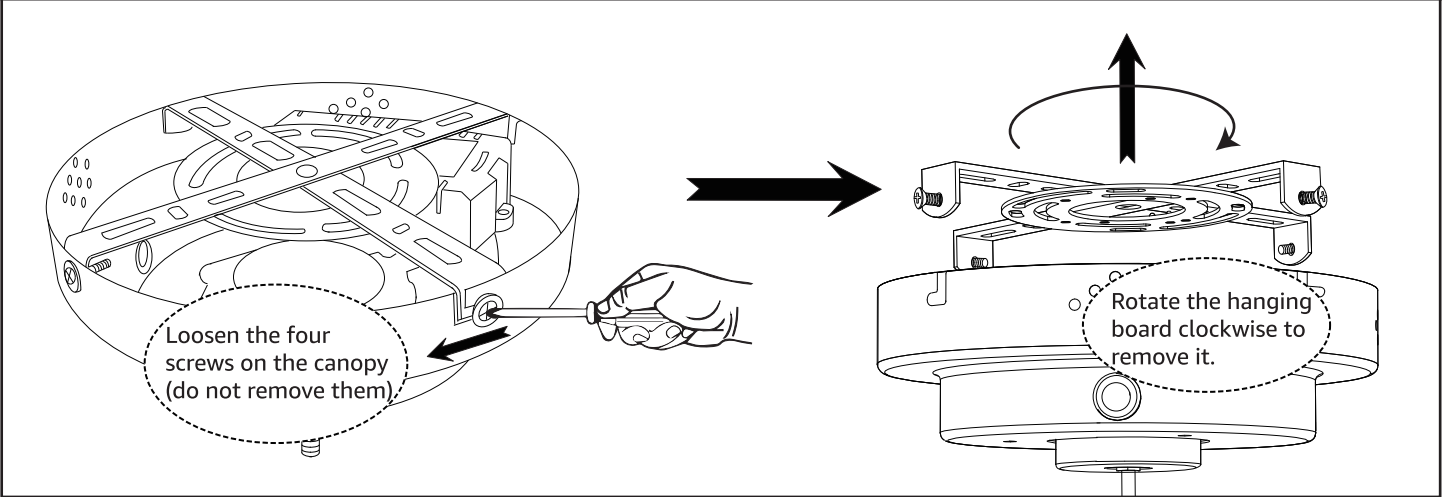


According to the user's ceiling situation, choose the corresponding installation



Junction box	Wooden ceiling	Cement ceiling
ff bb	cc	ee ff

CEILING FAN

 
 
INSTALLATION

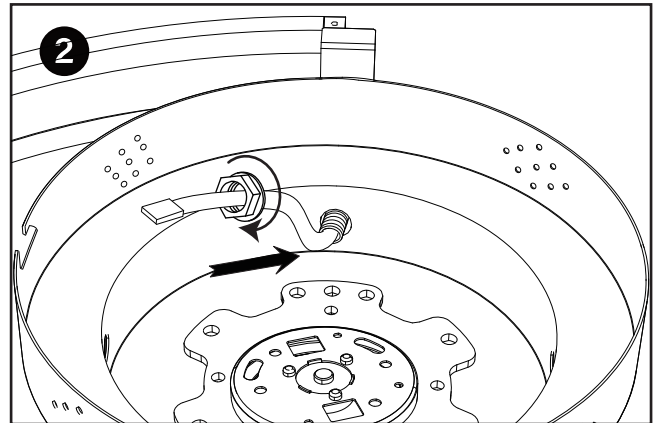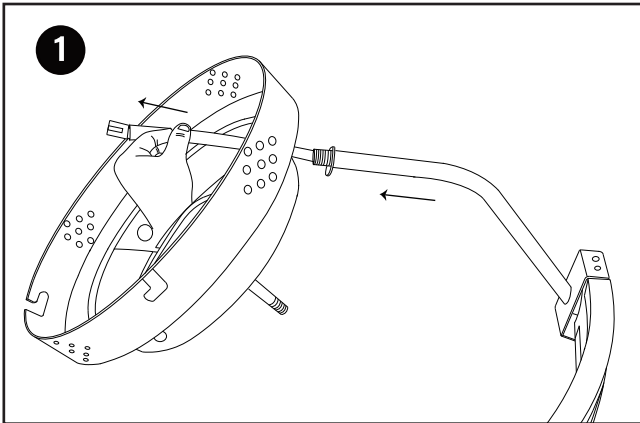

  - 1** Pass the arm and the wires through the opening of the fan motor housing simultaneously.
- 2** Screw the nut onto the wire, then rotate clockwise to secure, without overtightening. (Repeat this procedure for all other lamp arms as per Steps 1-2.)

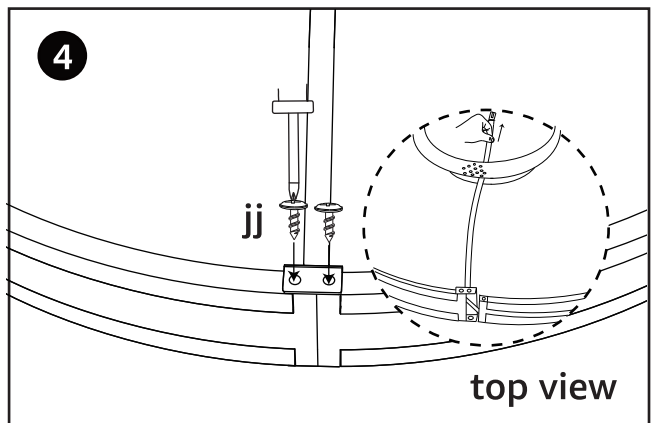
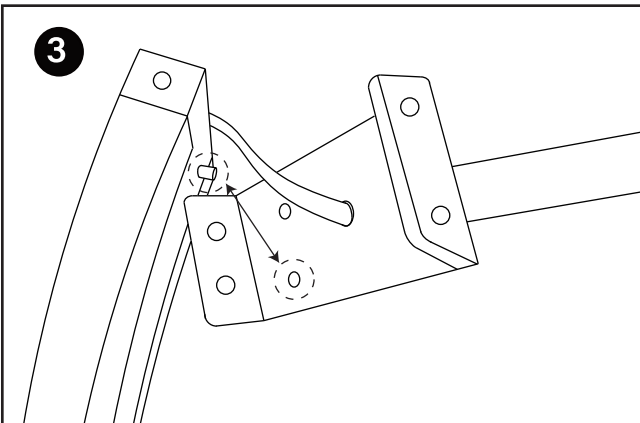


  - 3** Insert the protrusion on the lamp body part into the locating hole of the screw arm connector.
- 4** Lightly pull the wires to the appropriate length, then use jj screws to secure the two lamp bodies together. (top view)

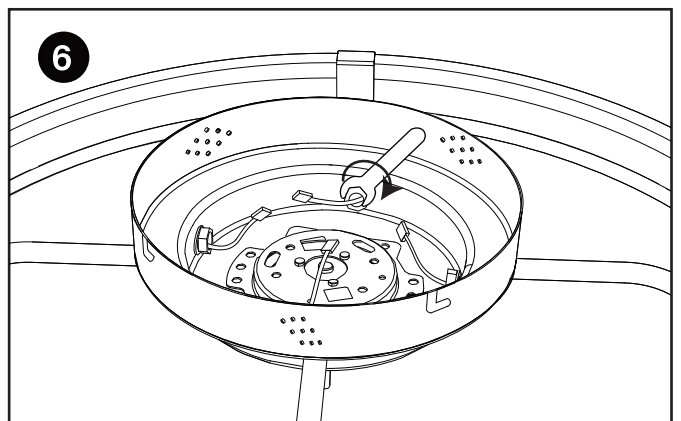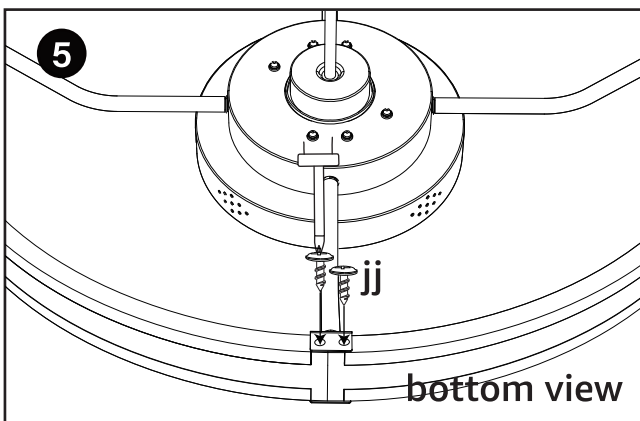



- 5** Secure the two lamp bodies together using jj screws. (bottom view)
- 6** Tighten the four nuts using a wrench.

  CEILING FAN

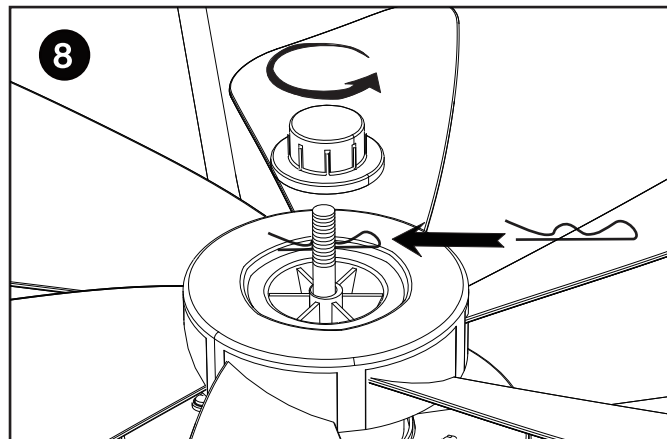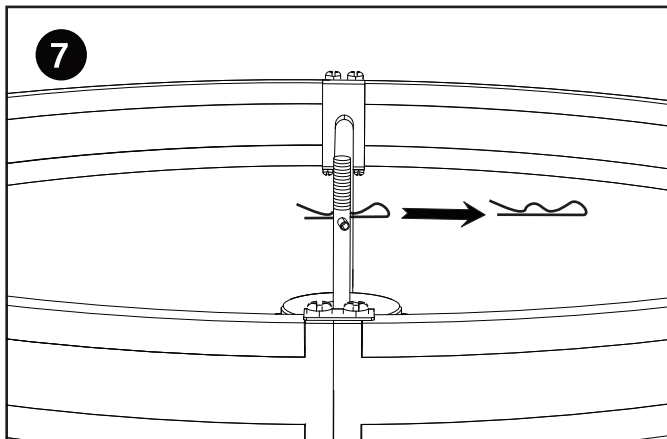

7 Remove the pin from the motor core shaft.

 
 
8 Align the fan blades with the motor core, insert the pin, and then screw in the fan blade cap counterclockwise to secure it.

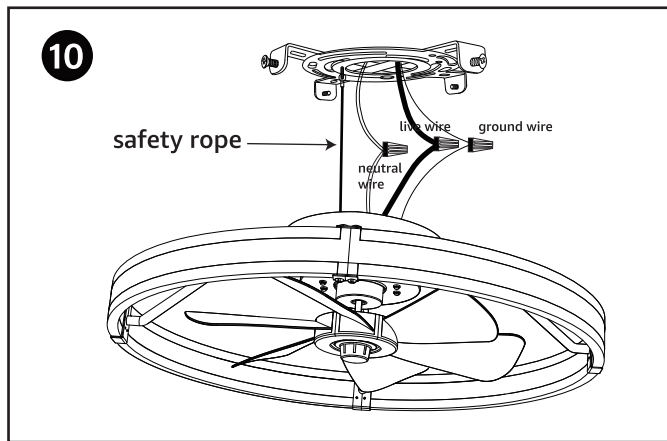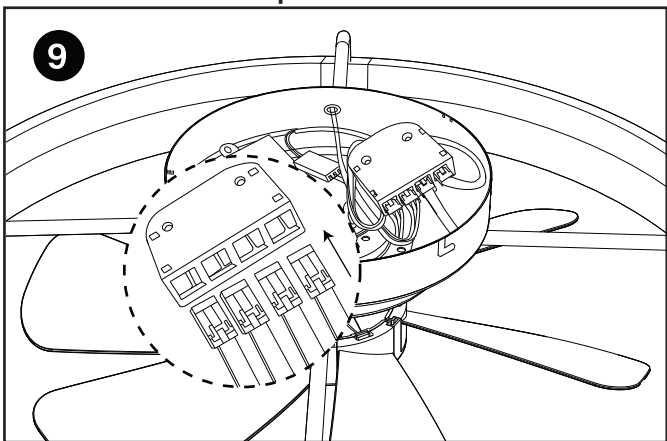

9 Insert the three wires into the terminal ports, peel off the adhesive backing, and secure it inside the back cover.(No order limited, free connection)

10 Hang the lamp on the ceiling plate using the pre-installed safety rope for stability.

  Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire"
(green or yellow/green or bare) from ceiling to the yellow/green wire.

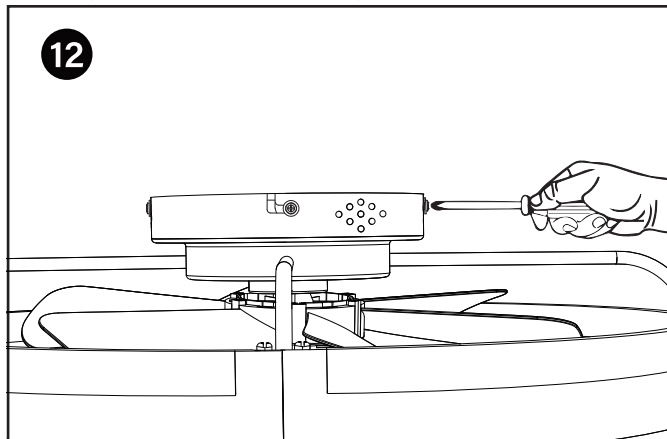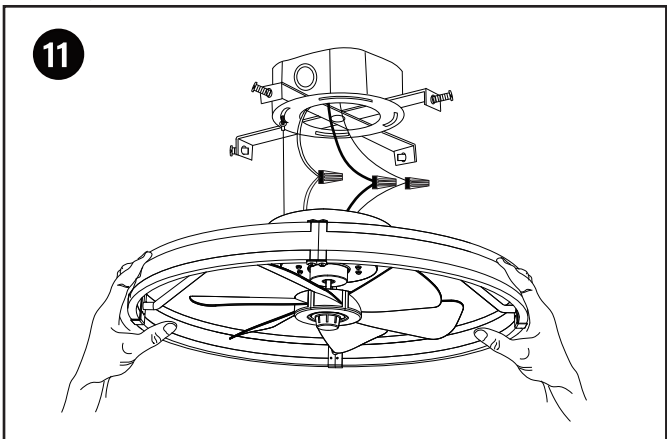


11 Align the grooves on the canopy with the screws on the bracket, then gently push the fixture upward to secure it in place.

12 Rotate the ceiling fan to align it with the grooves, then securely tighten all four screws to ensure stability.

CEILING FAN

 REMOTE CONTROL

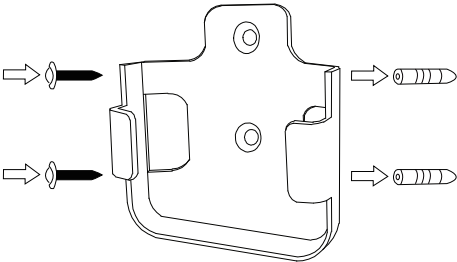		Light on/off
		Light & fan /off
		CCT change
		Night light
		Brightness +
		Brightness -
		CCT + (cooler)
		CCT - (warmer)
		Pairing
		Forward/reverse
		All off after 2 hours
		Fan speed
		Fan speed
		Fan speed
		Natural wind
		Fan off
Attach wall plate using the two screws provided. 		
To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. Ifnot used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity. Pairing method: (single/multiple fans) The remote control transmitter can be used to control multiple receivers. 1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds. 2. Turn on the main power switch of the ceiling fan, then immediately click SETUP button. 3. The light will blink or beep to indicate a successful pairing. If the pairing process is unsuccessful, please repeat the above steps.		

CEILING FAN

APP CONTROL

NOTE: For iPhone users, you can search for "FanLamp Pro" in the AppStore or scan the QR code to download. For Android users, please scan the QR code to download. (Please enable Bluetooth and pair the fan with app to control it!)



Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.



Slide to change the fan speed



Slide to change the brightness of the light



Bluetooth

Connect to accessories you can use for activities such as streaming music, making phone calls, and gaming. [Learn more...](#)

Bluetooth

This iPhone is discoverable as "iPhone" while Bluetooth Settings is open.



1. Ensure Bluetooth is enabled on your mobile device.



Apps FanLamp Pro

ALLOW FANLAMP PRO TO ACCESS

Bluetooth



2. Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.)
Method 1: Click "Allow" when opening the app for the first time.
Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.



Turn on/off the light



Timer the fan



Natural wind: fan speed will change automatically when use this function



Sleeping wind



Night light (10% brightness in neutral white)



Not available for this model



Fan moves forwards



Fan moves reversely



 
 
 
Oscillating Funtion (Not available for this model)



Light off/on



Fan off/on

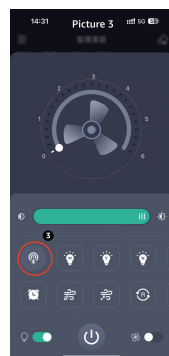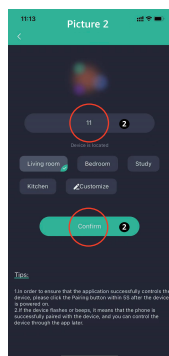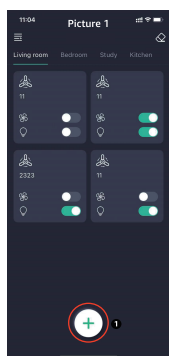

Picture 1

3. Enter the app page and click the plus sign below (Add group).

Picture 2

4. Enter any name, then click Confirm.

Picture 3

5. Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. The fan light will flash twice to indicate successful pairing.

CEILING FAN

TROUBLESHOOTING

WARNING

For your own safety turn off power at fuse box or circuit breaker before trouble shooting.

Trouble	Probable Cause	Suggested Remedy
THE FAN WON'T START OR THE LIGHT WON'T COME ON	1. Fuse or circuit breaker blown. 2. Loose power line connections to the fan or loose switch wire connections in the switch housing. 3. The wiring between the receiving box and the fan is not properly connected. 4. The receiving box is damaged due to the wrong connection.	1. Check main and branch circuit fuses or circuit breakers. 2-3. Check line wire connections to the fan and switch wire connections in the switch housings CAUTION: Make sure the main power is turned off! 4. Contact us for support.
FAN WOBBLER EXCESSIVELY	1. Check for loose ceiling screws. 2. Check if the four screws on the canopy are loose.	1-2. Tighten the loose screws.
FAN SOUNDS NOISY	1. Check for loose ceiling screws. 2. Check if the four screws on the canopy are loose. 3. Check for wrong wire connection to the wall switch or light dimmer.	1-2. Tighten the loose screws. 3. Disconnect from the wall switch and use the remote controller only.
REMOTE DOES NOT WORK	1. Battery out of power 2. Battery not installed correctly 3. Not paired 4. Bluetooth function not on	1. Use new battery 2. Install again to ensure right 3. Pair with light 4. Make sure open BLE to pair

MAINTENANCE:

Periodic cleaning of your new ceiling fan is the only maintenance that is needed. When cleaning, use only a soft brush or lint-free cloth to avoid scratching the finish. Avoid using water as it can damage the motor, finish, and create the possibility of electrical shock. It is best to dry clean the fan to ensure its safe operation.

CEILING FAN

CUSTOMER SERVICE

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

CONTACT INFORMATION

 : You can contact us by sending an email to support@fanlamppro.com