 
 

 
 
 

 
 
 
 

 










## BARBEQUE ASSEMBLY

The barbeque must be fully assembled before use. Only a medium size Philips screwdriver and an adjustable spanner are needed.

Open the carton and remove the parts (Note that the barbeque chassis assembly is heavy and will require at least 2 people to move). Remove all packaging (especially check inside the barbeque and under the charcoal grid) and place parts on a clean surface. Check for any damage or missing parts (if found, contact your service department).

## INCLUDED PARTS HUB™


01/ Barbeque Chassis Assembly x 1Pc	02 / Lid Handle x 1Pc	03 / Lid x 1Pc	04 / Lid Hanging Bracket x 2Pcs	05 / Top Panel Cover x 2Pcs	06 / Charcoal Grid x 1Pc	07 / Charcoal Chamber x 1Pc	08 / Element Support x 2Pcs
							
09 / Element Heat Shield x 1Pc	10 / Left Hand Open Grill x 1Pc	11 / Right Hand Open Grill x 1Pc	12 / Rotisserie Rod x 1Pc	13 / Cliplock Fork™ x 4Pcs	14 / Leg Left Front x 1Pc	15 / Leg Left Rear x 1Pc	16 / Leg Right Front x 1Pc
							
17 / Leg Right Rear x 1Pc	F01 / M4x0.4in (10mm ) x 2Pcs	F02 / Hex Bolt M6 x0.5in (12mm) x 16Pcs	F03 / Spring Washer Ø0.2in (4mm) x 2Pcs	F04 / Washer Ø0.2in (4mm) x 2Pcs			
							

## PACKAGING

Remove all internal cartons and packaging from within the barbeque assembly. Remove all external packaging and remove the appliance from the packaging base before operation. Recycle as per your local government/state laws.


## STEP 01

/Take the Ø4mm spring washers (F03) and Ø0.2in (4mm) washers (F04) and place them onto two M4x0.4in (10mm) screws (F01). Take the two lid hanging brackets (04) and fit onto the two M4x0.4in (10mm) screws (the legs of the brackets should hang around the screw heads). Place the handle (02) on the inset side of the lid (03) and align the handle legs with the two holes. Fix the lid hanging brackets to the bottom of the lid by screwing the screws into the handle legs (take care that the hanging brackets are running parallel to the lid shorter sides). Tighten fully. If assembled correctly, the lid will hang from the bracket at the rear of the barbecue using the lid hanging brackets to hook it in place.

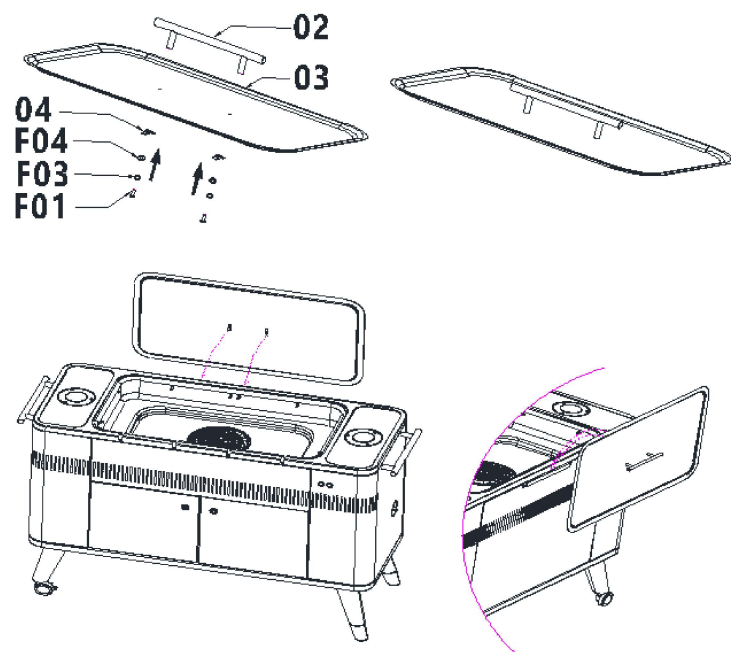


## STEP 02

/Rotate the barbecue chassis assembly (01) onto its rear panel and lay on a clean flat surface (the cardboard packaging is ideal). Fix the four legs (14, 15, 16 & 17) to the bottom panel (castors to the left hand side) using sixteen M6 bolts (F02). Note that when finished, the legs will angle out towards the corners.

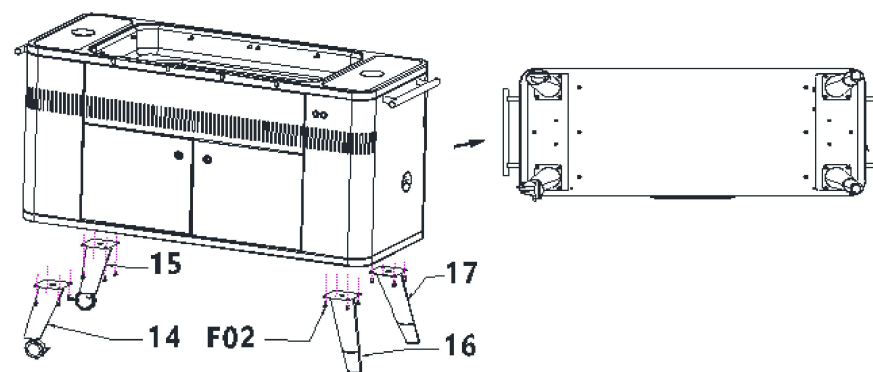


## STEP 03

/Take the two Top Panel Covers (05) and place them over the end of the rotisserie poles at either end of the barbecue. Press into place.

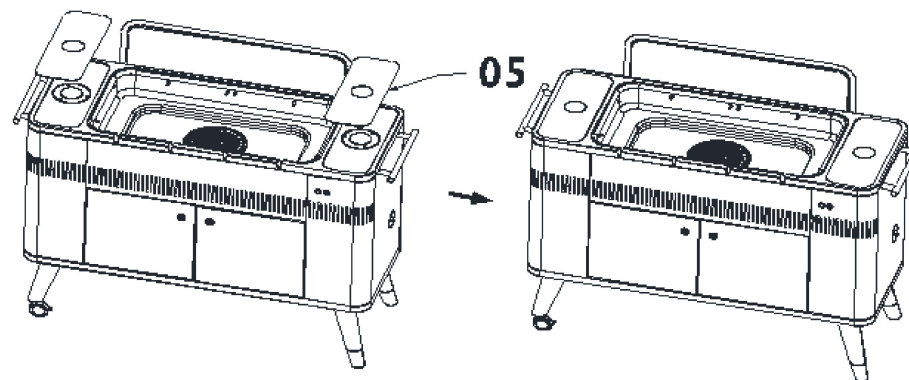


## STEP 04

/If not already assembled, lever up the element and place the heat shield (09) inside the bowl. Take the two element supports (08), fit them together and place them centrally on the heat shield. Lever the element back down onto the element supports.\*

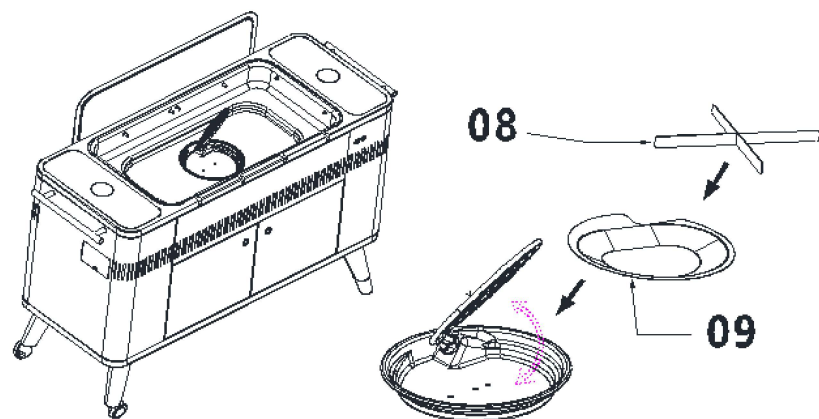


## STEP 05

/Place the charcoal chamber (07) centrally within the barbecue and place the charcoal grid (06) in the centre hole above the element.

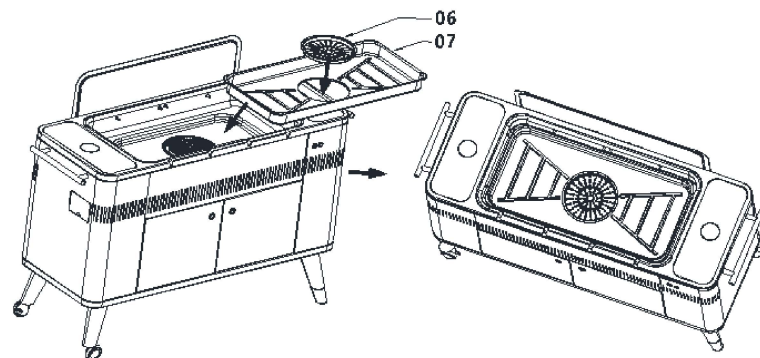


## STEP 06

/Place the left hand open grill (10) and right hand open grill (11) on the twelve pins on the inner chassis (above the charcoal chamber) and lever down into the notches at the front of the barbecue. Take care that the grills are level and stable.

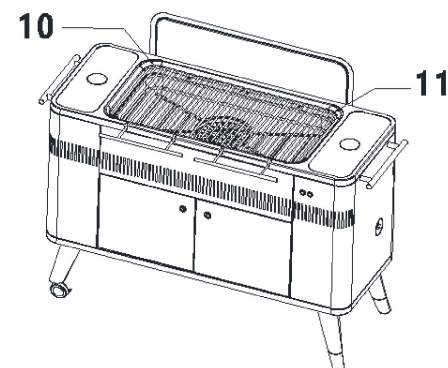


## STEP 07

/The rotisserie rod and Cliplock Forks™ are stored in the compartment at the front of the left hand side panel. Lift the storage door up, remove the Cliplock Forks™ (13) (take care of the sharp points of the fork fingers) and pull the rotisserie rod (12) out from the storage compartment. Note: If the barbecue has been in operation, the rotisserie parts may be hot – remove before cooking or use heat proof gloves. The Cliplock Forks™ slide on the rod and are locked in place by pressing down on the fork levers.

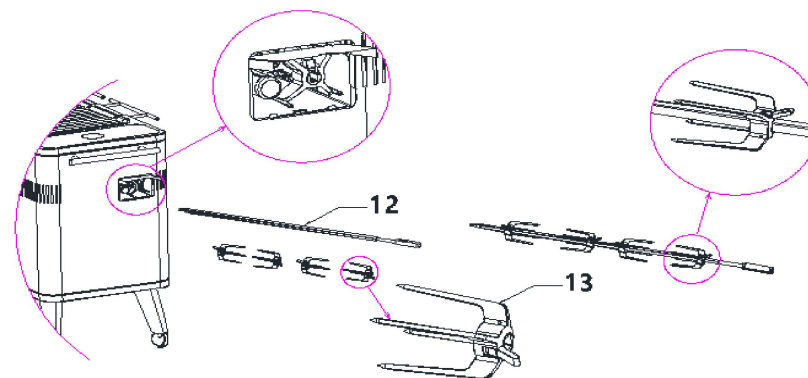


## STEP 08

/To extend the rotisserie poles, first press and release them so the first section pops out from the barbecue. Pull the poles up and rotate clockwise to allocate the poles in one of the 3 height settings. The pole to the right contains the rotisserie motor.

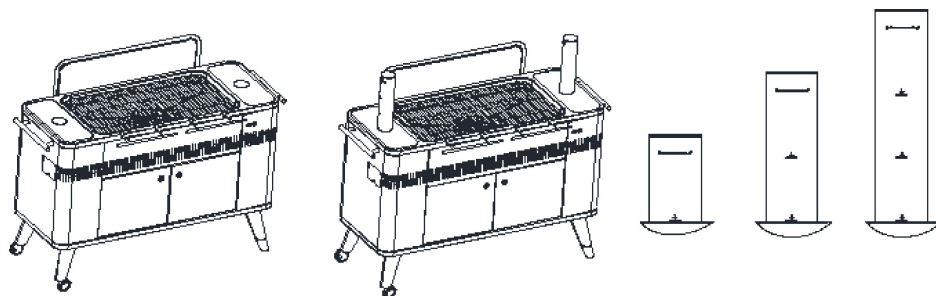

## STEP 09

/Take the rotisserie rod with the food attached and place the pointed end in the motor hole at the top of the right hand side pole. Lever the handle side of the rod down into the slot of the left hand and close the pole cover.

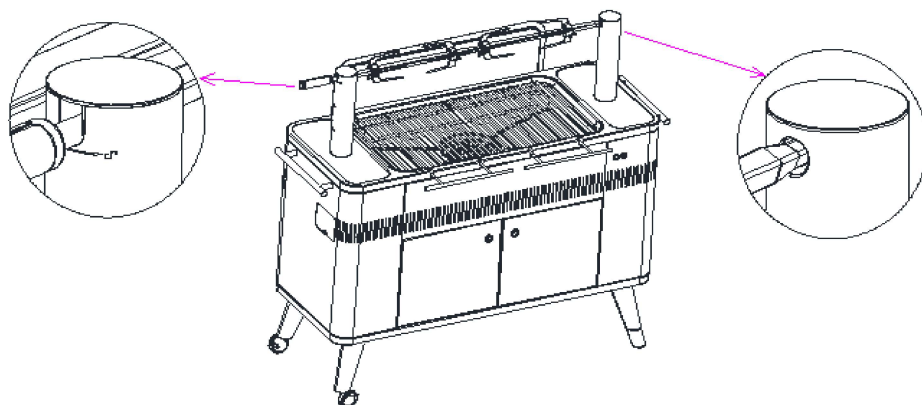

## STEP 10

/With the barbecue in a secure position, fully extend the power cord from the recess on the right hand side (do not over-extend) and connect to your power supply.

\*Due to ongoing design modifications, support brackets may be permanently fixed to the element

## MAINTENANCE

It is recommended that at the commencement of each barbecue season the following maintenance be conducted:

### BARBEQUE

1. Wipe over the outer areas of the barbecue with a clean cloth.
2. Check all oils and ash have been cleaned from the charcoal chamber and under the element.
3. Check all fasteners for tightness and re-tighten where necessary to ensure rigidity of the structure.
4. Check retractable power cord is operational and the cord/plug is undamaged.

**Wear and tear to this barbecue can be reduced by covering and storing out of the weather when not in use.**

## PARTS LIST: HBCE2BUS

	PART NAME	QTY
1	Foot Front	1
2	Hex Bolt M6x0.5in (12mm)	16
3	Leg Upper Right Front	1
4	Foot Rear	1
5	Leg Upper Right Rear	1
6	Chassis Right Hand Side Panel	1
7	Pole Assembly Support	2
8	Hex Bolt M8x0.4in (10mm)	4
9	Plug Recess	1
10	Plug recess Bracket	1
11	Retractable Power Cord Assembly	1
12	Power Cord Assembly Cover	1
13	Chassis Rear Panel	1
14	Chassis Top Plate Assembly	1
15	Element Spring	1
16	Grill Support Long	4
17	Inner Pole Assembly Right	1
18	Inner Chassis	1
19	Pole Flange	2
20	Right Open Grill	1
21	Lid	1

22	Rotisserie Fork	4
23	Rotisserie Rod	1
24	Lid Handle	1
25	Inner Pole Assembly Left	1
26	Left Open Grill	1
27	Outer Pole Assembly	2
28	Charcoal Grid	1
29	Charcoal Chamber	1
30	Element Assembly	1
31	Top Panel Covers	2
32	Element Support	2
33	Storage Door	1
34	Element Heat Shield	1
35	Grill Support Short	8
36	Element Bowl	1
37	Barbeque Handle	2
38	Chassis Left Hand Side Panel	1
39	Element Bowl Support	1
40	Fork & Rod Storage Box	1
41	Door Magnet	2
42	Chassis Front Panel	1
43	Chassis Bottom Panel	1
44	Castor Leg Rear	1
45	Thermostat Mount	1

46	Thermostat	1
47	Castor Leg Front	1
48	Cabinet Top Panel	1
49	Cabinet Side Panel	2
50	Cabinet Shelf	1
51	Door Inner Panel	2
52	Door Upper Hinge	2
53	Left Hand Door	1
54	Right Hand Door	1
55	Door Handle	2
56	Door Lower Hinge	2
57	Lockable Castor	2
58	PCB Top Cover	1
59	PCB	1
60	PCB Bottom Cover	1
61	PCB Mounting	1
62	Element Switch	1
63	Rotisserie Motor Switch	1

Note: List does not include all fasteners.

