 
 
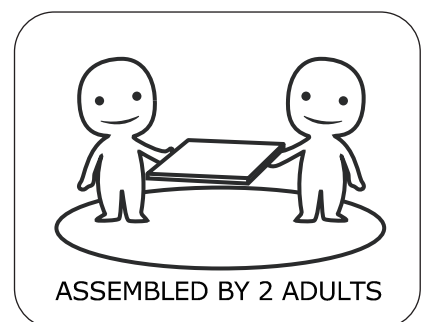 




Cabinet

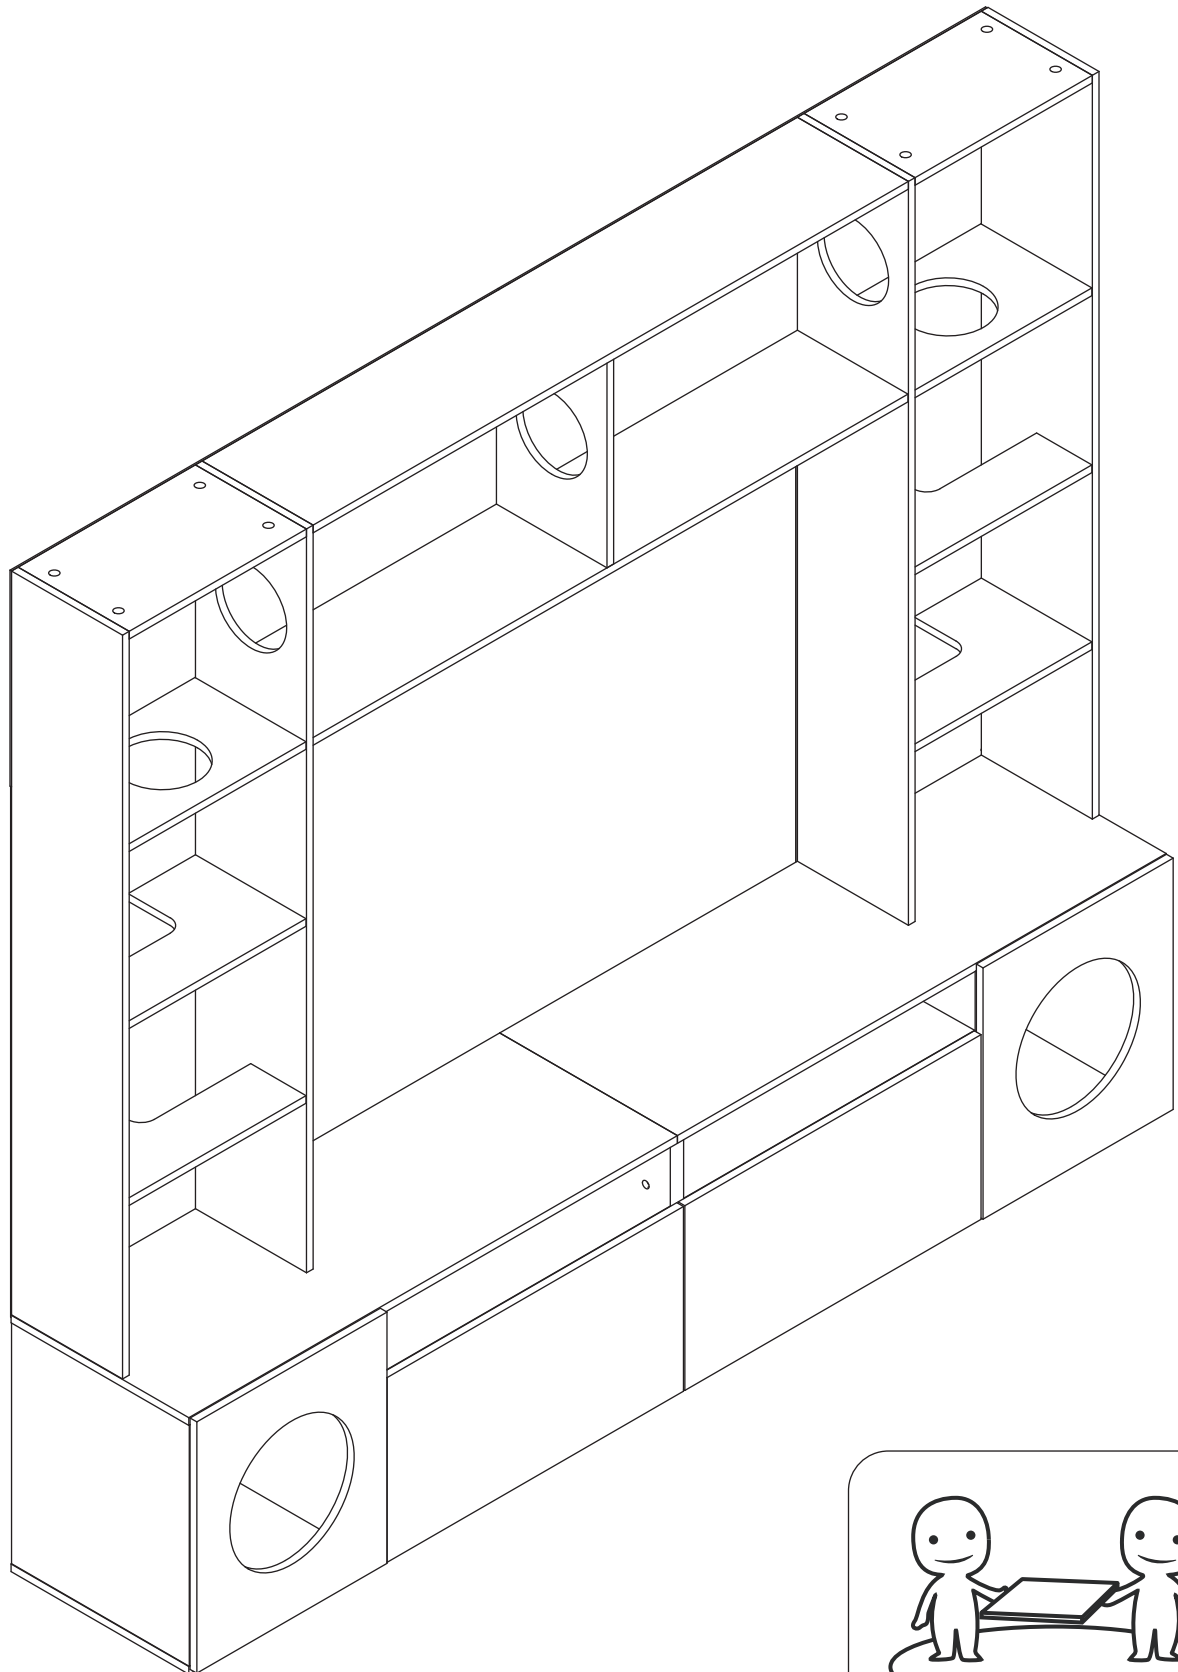

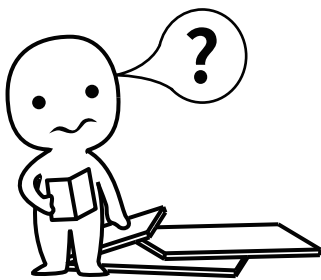


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

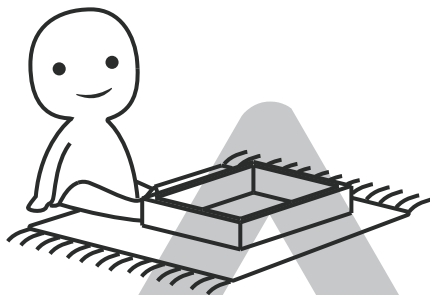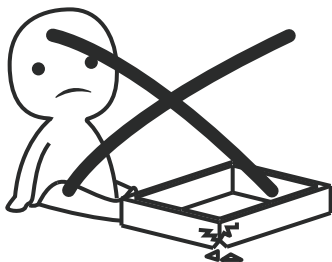



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

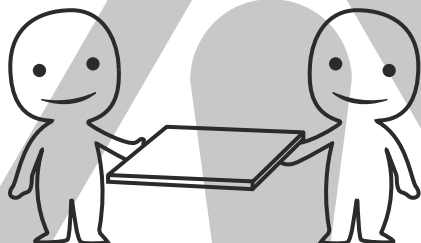

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

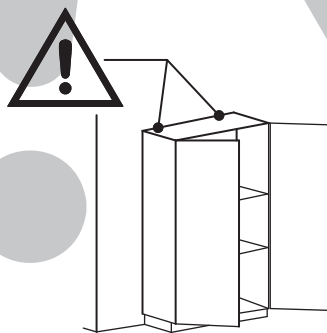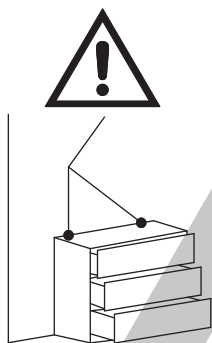

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

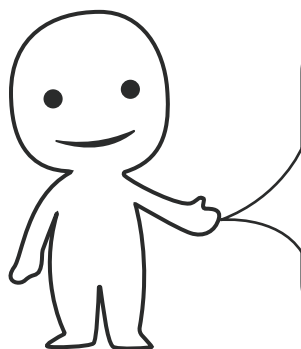


Please prepare the following tools

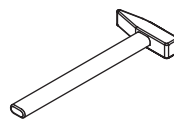   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 72



Ø 6 x 35 mm

B x 72



 
Ø 15 x 10 mm

C x 82




Ø 6 x 30 mm

D x 42




Ø 3.5 x 14 mm

 E x 30




Ø 5 x 40 mm

 
F x 2

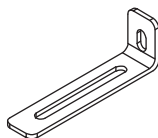

G x 85

 


H x 4

 


ZB

 I x 4

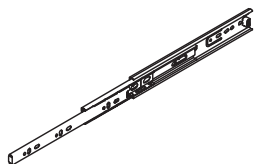

350 mm

 J x 16



K x 2



 
K-1



K-2

L x 10



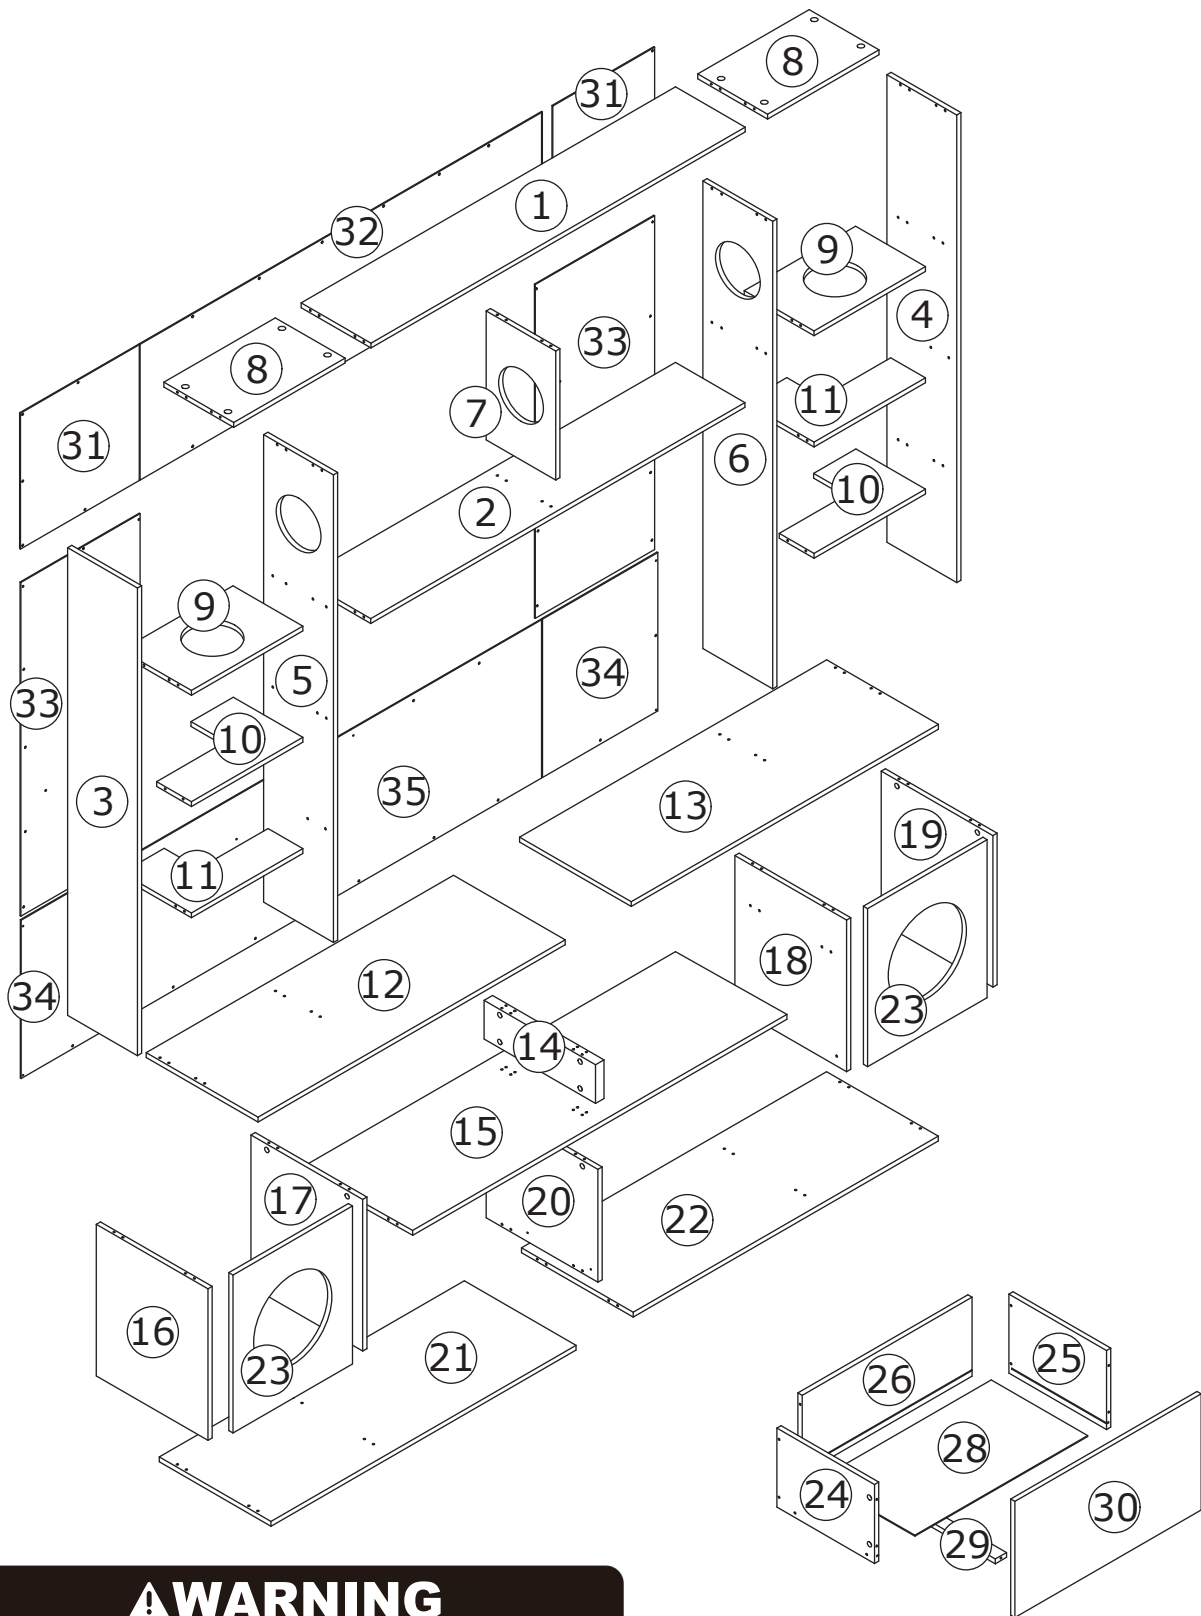

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

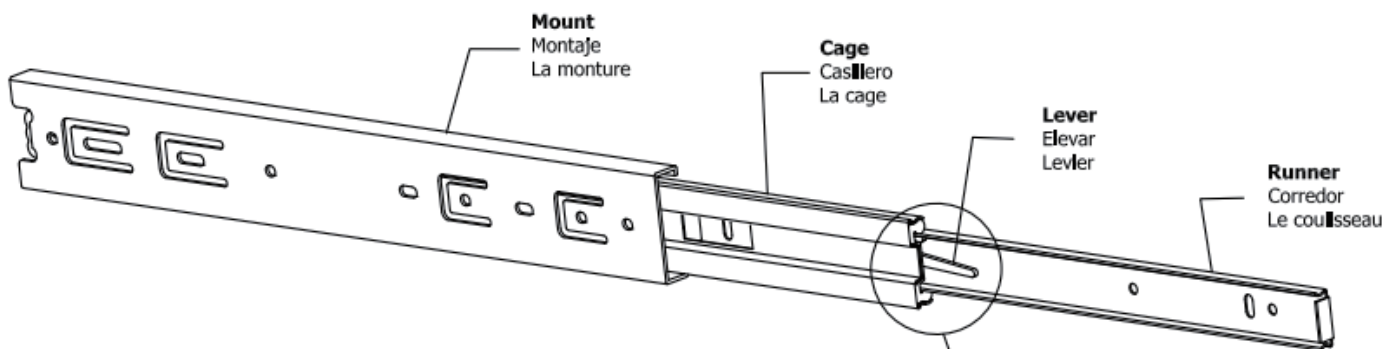

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

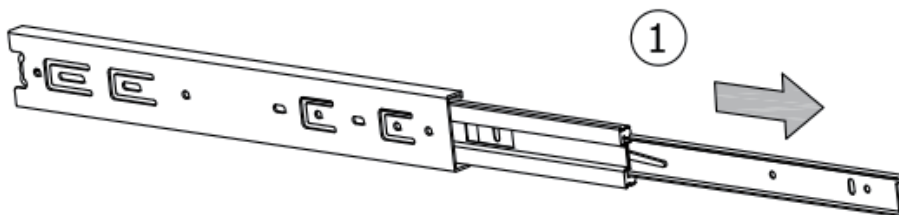




 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

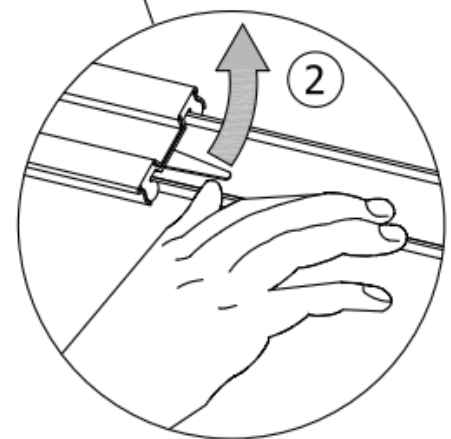

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

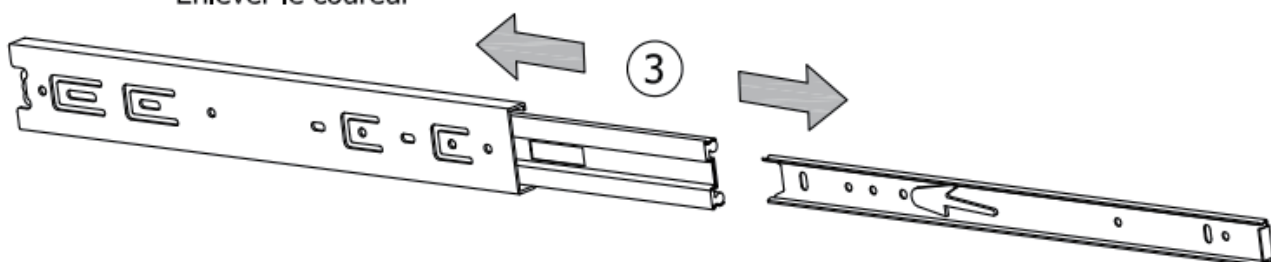




1

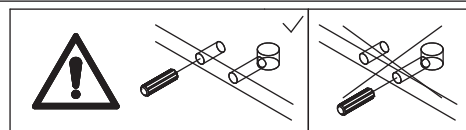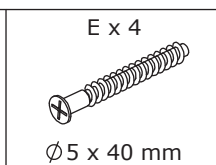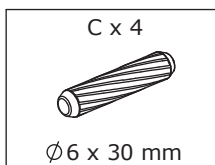    

 
Connect board 7 to board 1 and 2 using wooden dowel(C), and fix with screw(E) as shown.

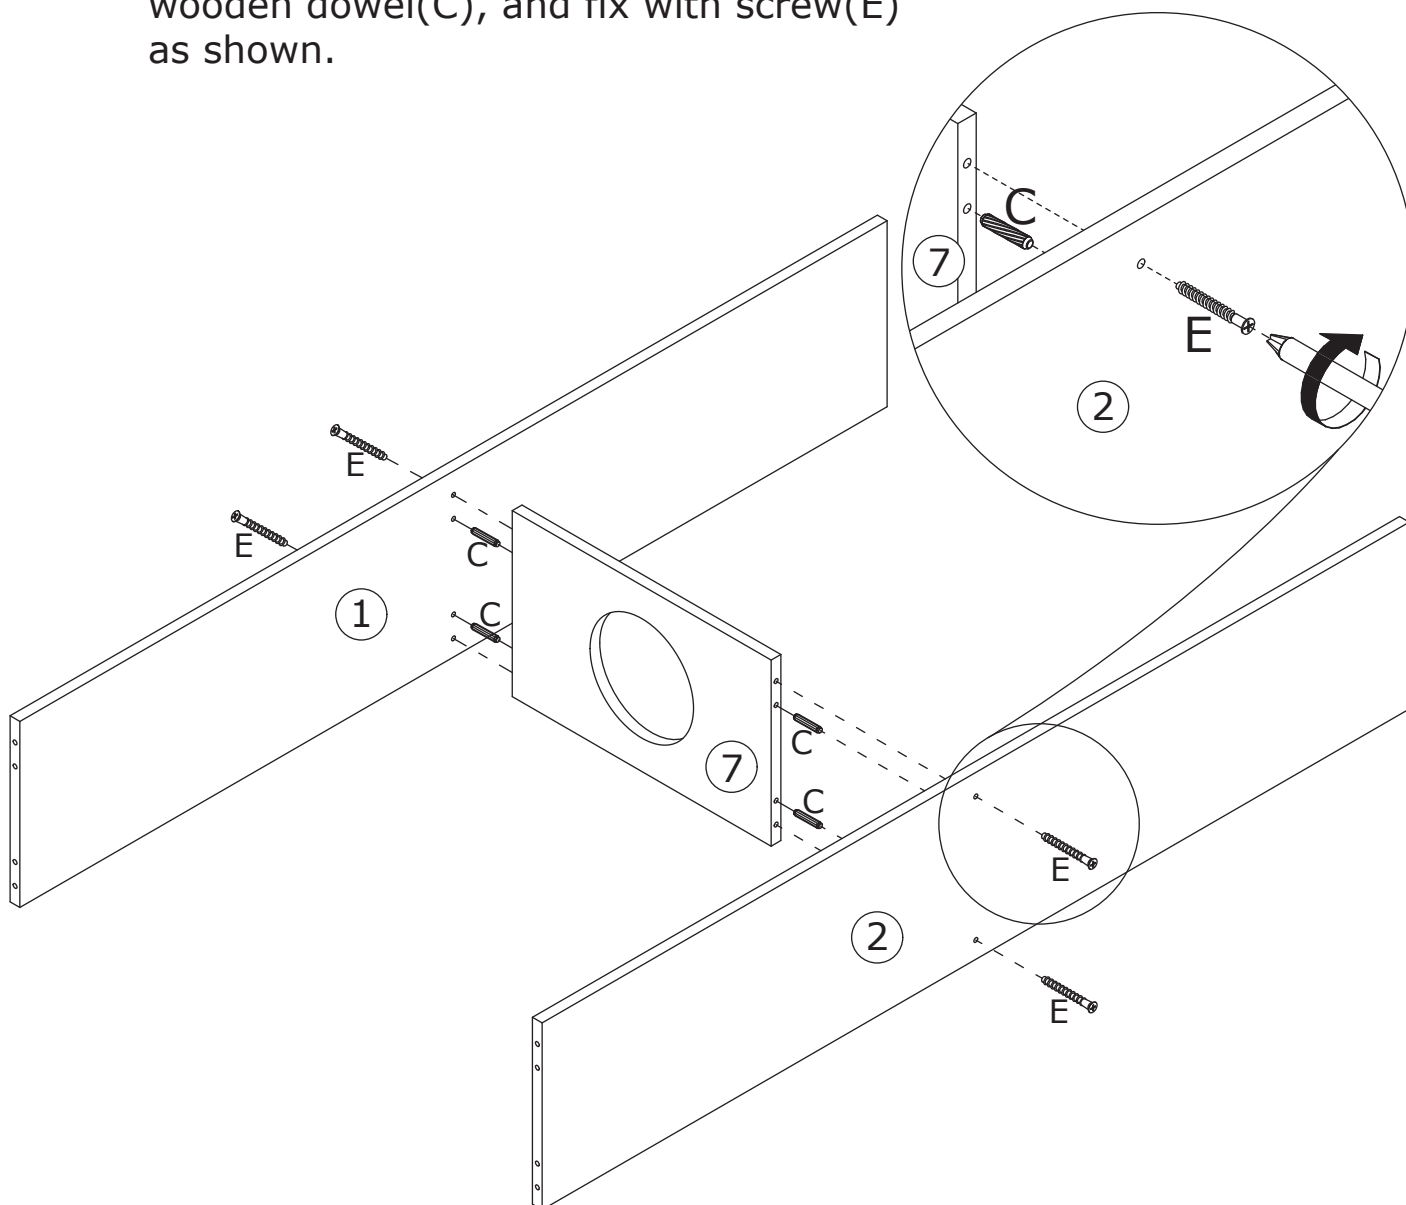


2

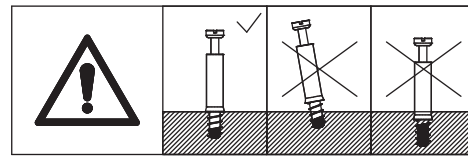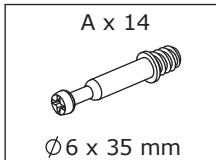   

 
Screw eccentric rod(A) into board 5 and 6 as shown.

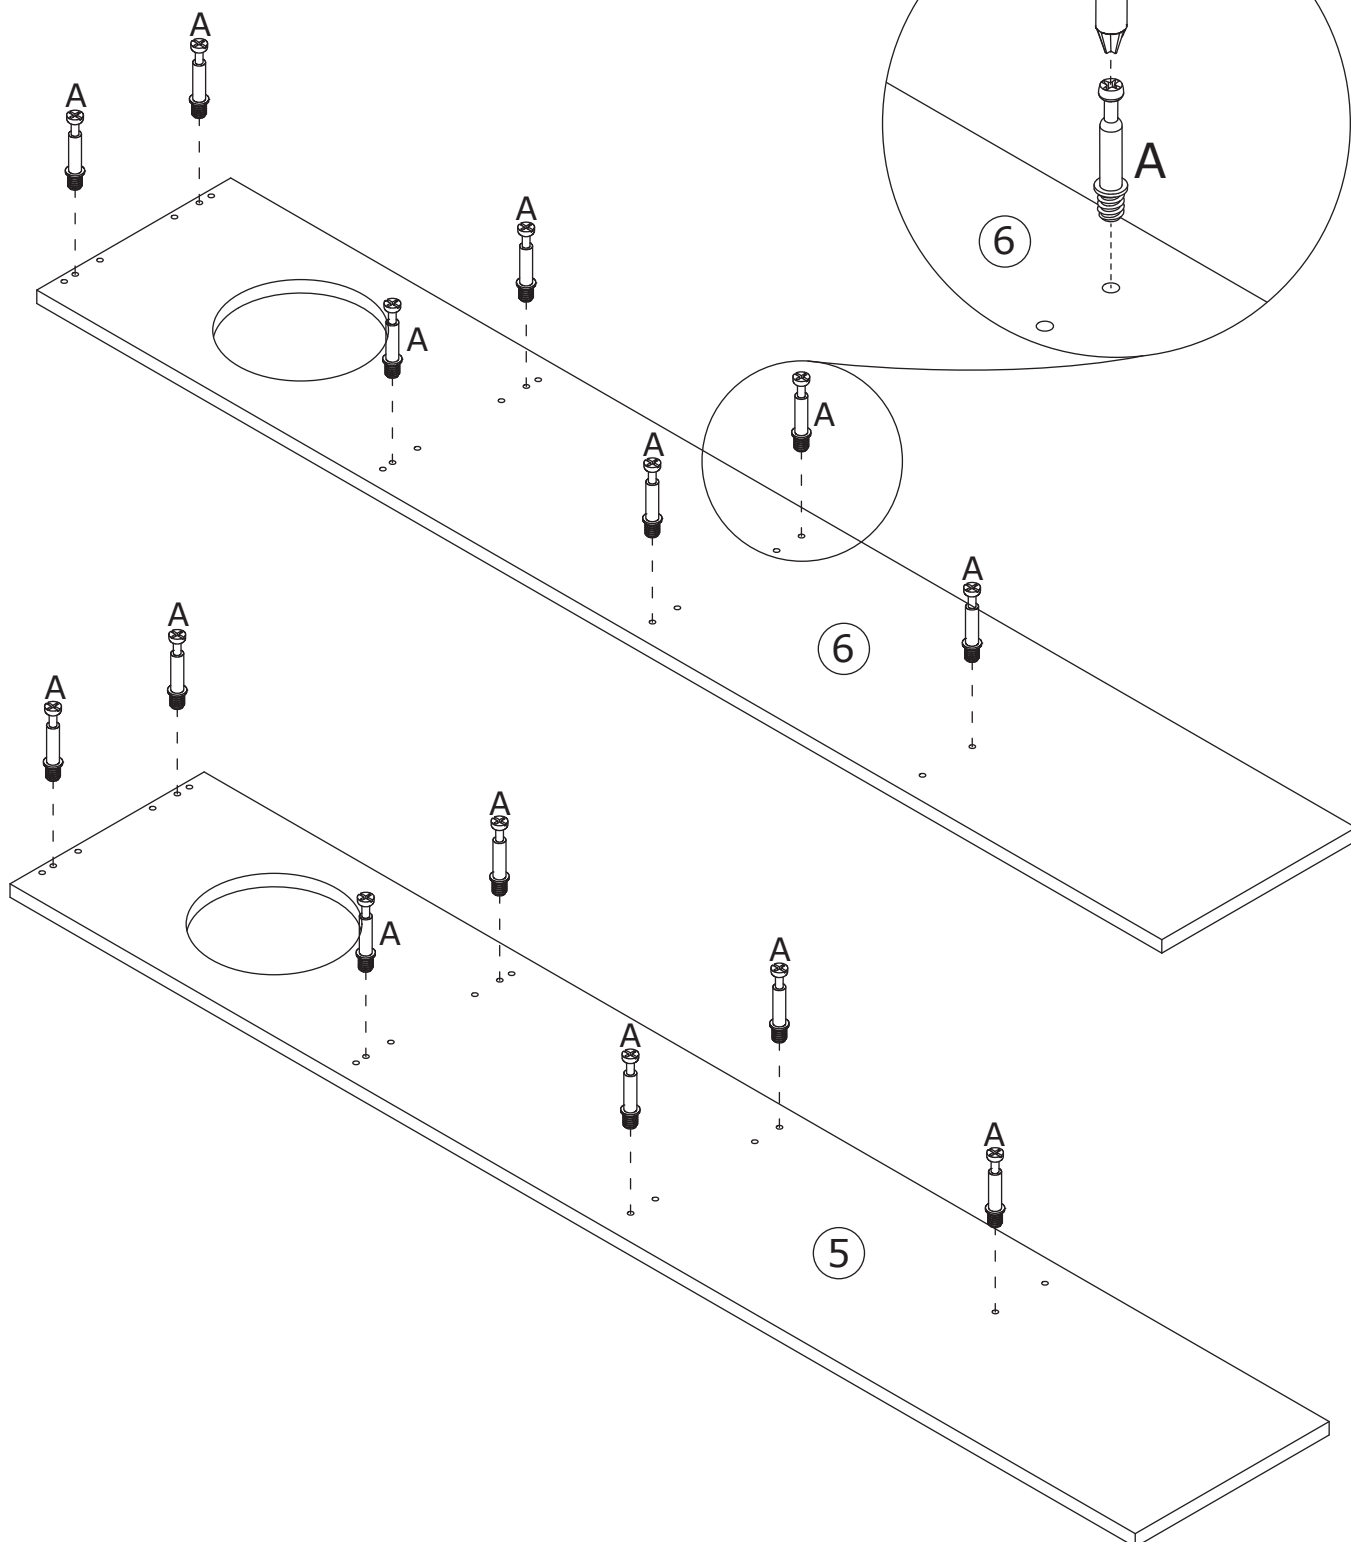

3

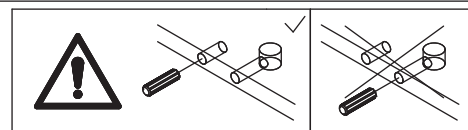 


 Connect board 5 and 6 to board 1 and 2 using wooden dowel(C), and fix with screw(E) as shown.


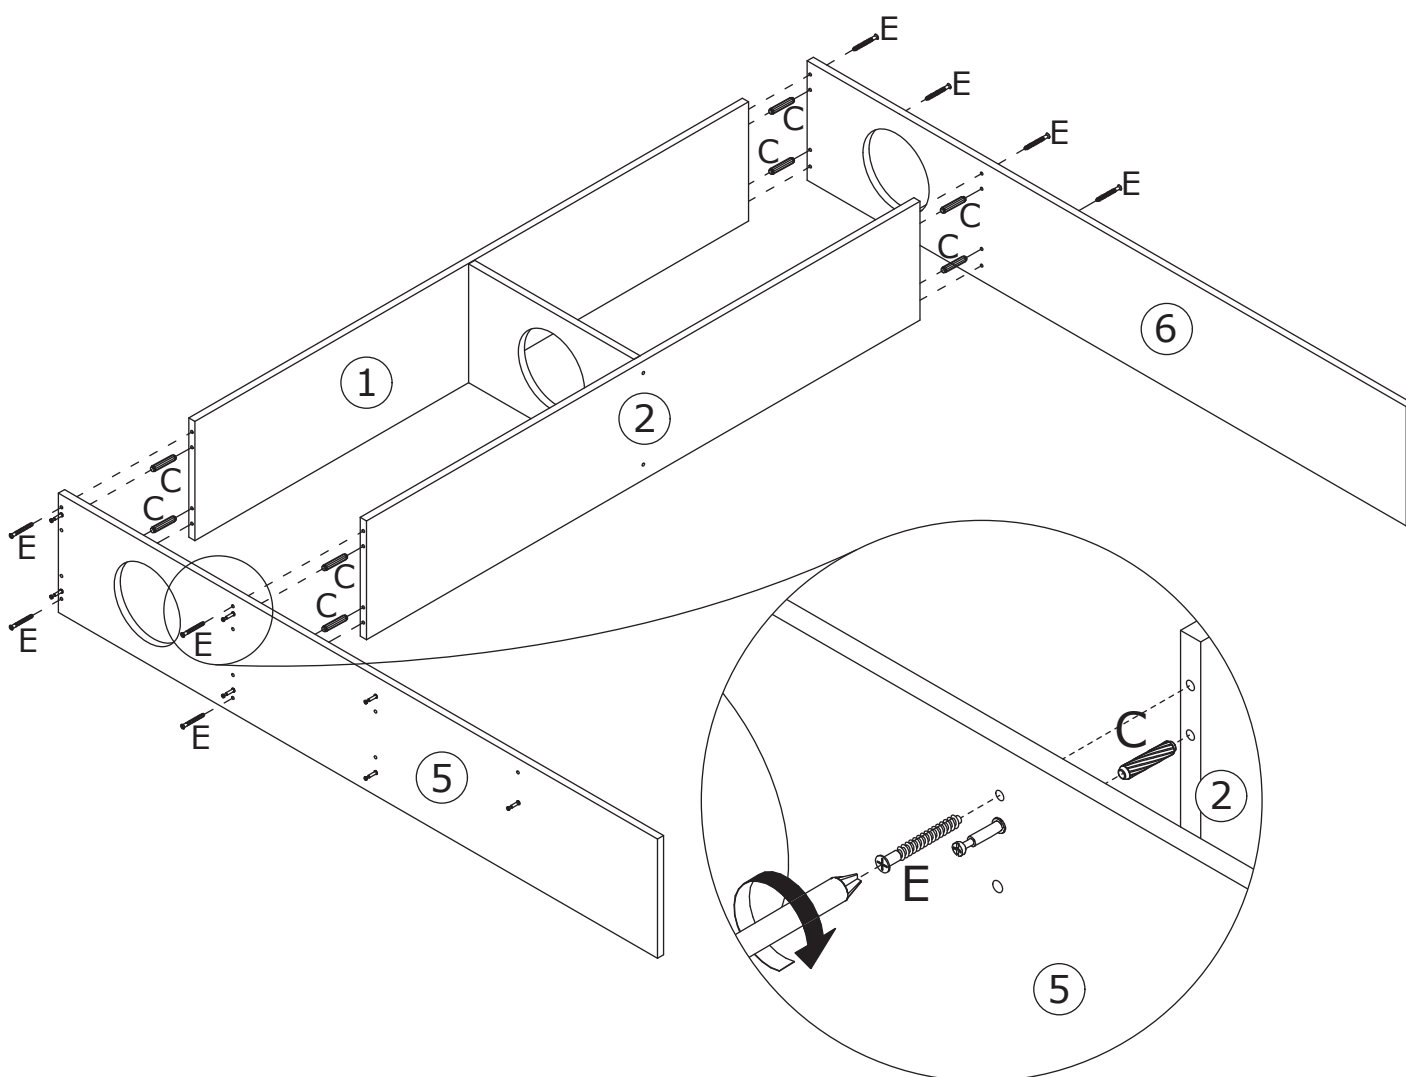


4

 
A x 14







Ø6 x 35 mm

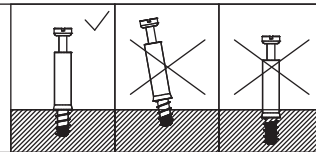  

 
Screw eccentric rod(A) into board 3 and 4 as shown.

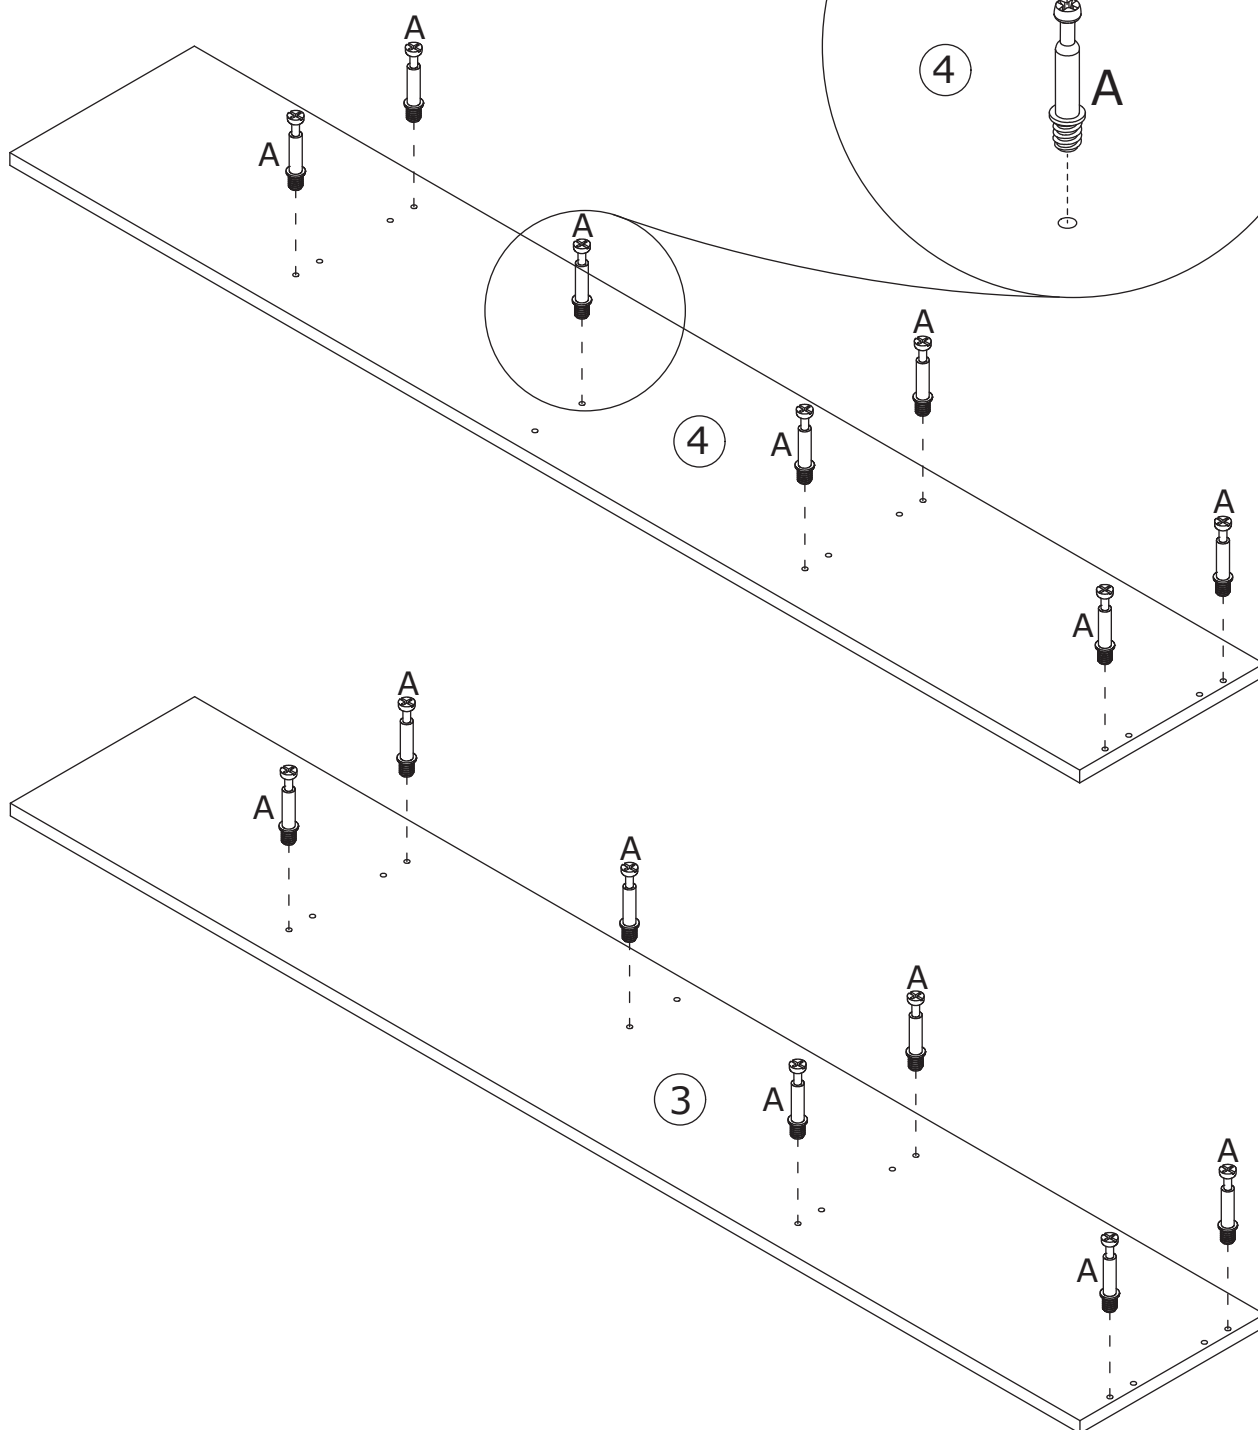




5

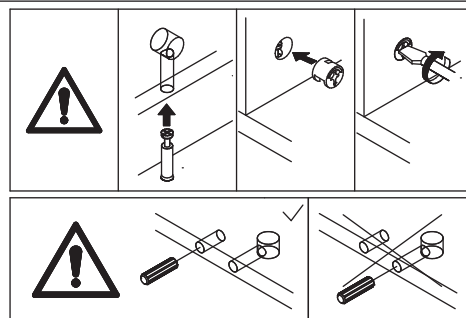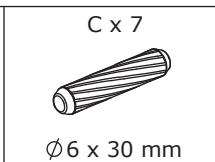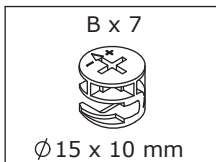    

 
Attach board 8, 9, 10 and 11 to board 4 using wooden dowel(C), add cam lock(B) into board 8,9,10,11 and turn clockwise to tighten as shown.

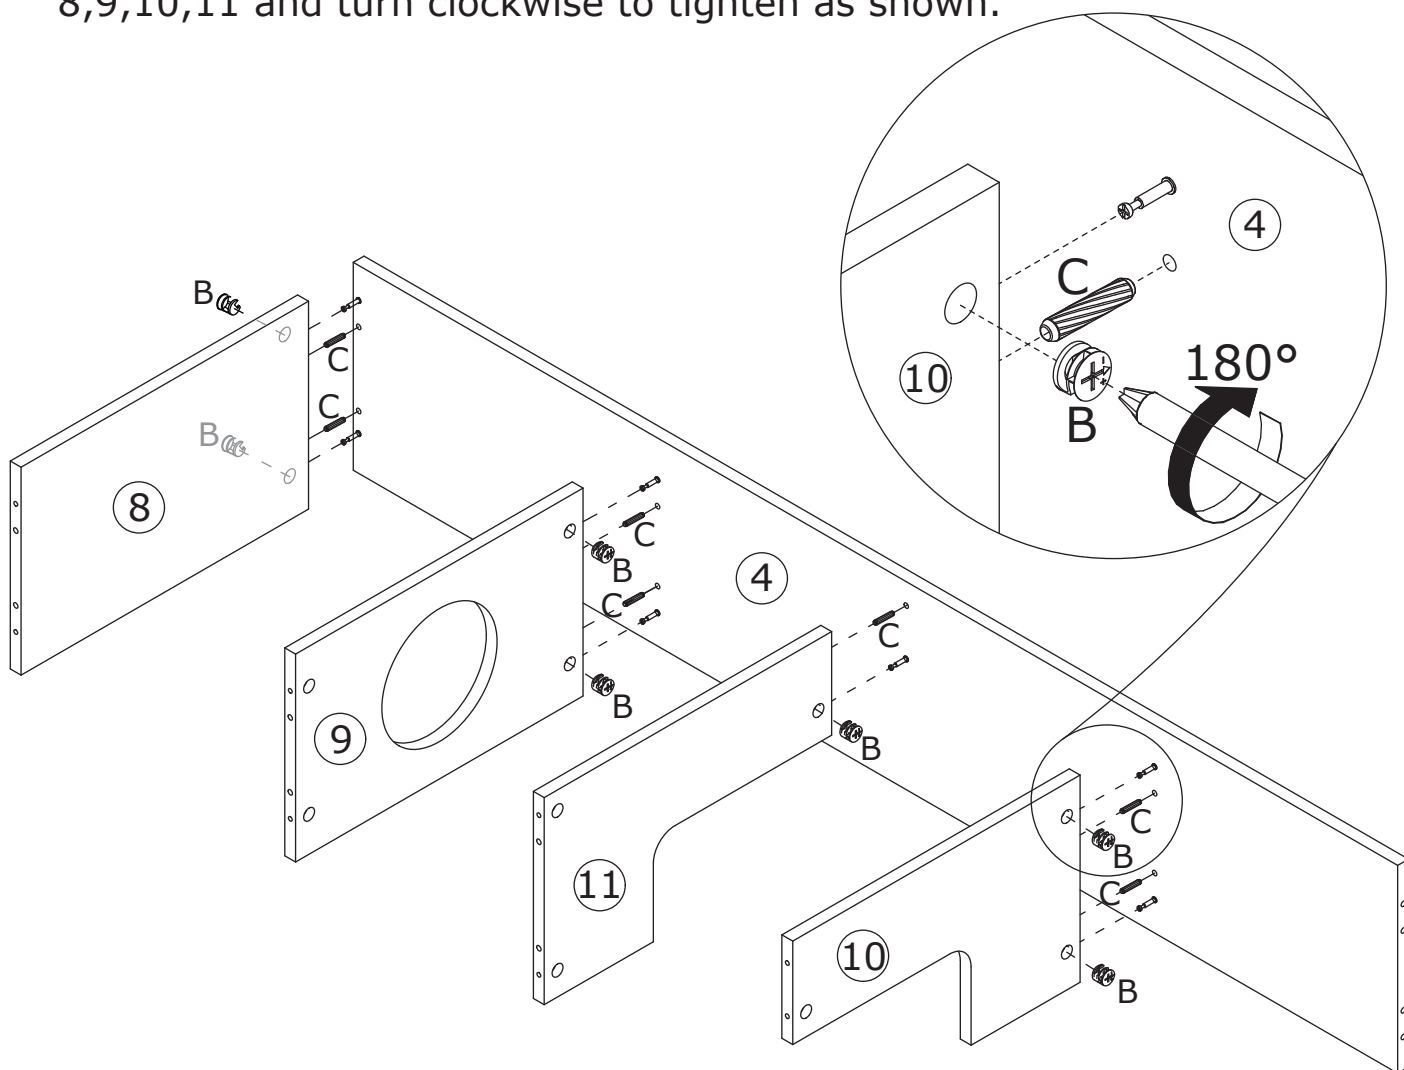


6

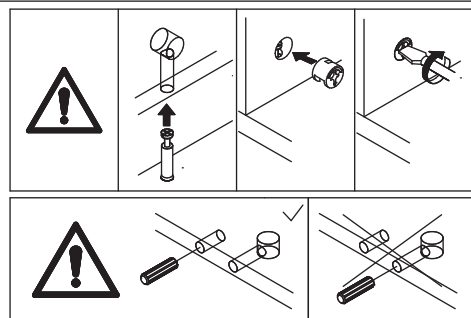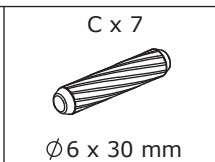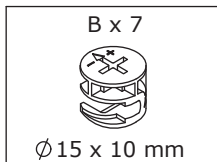   

 
Attach board 8, 9, 10 and 11 to board 3 using wooden dowel(C), add cam lock(B) into board 8,9,10,11 and turn clockwise to tighten as shown.

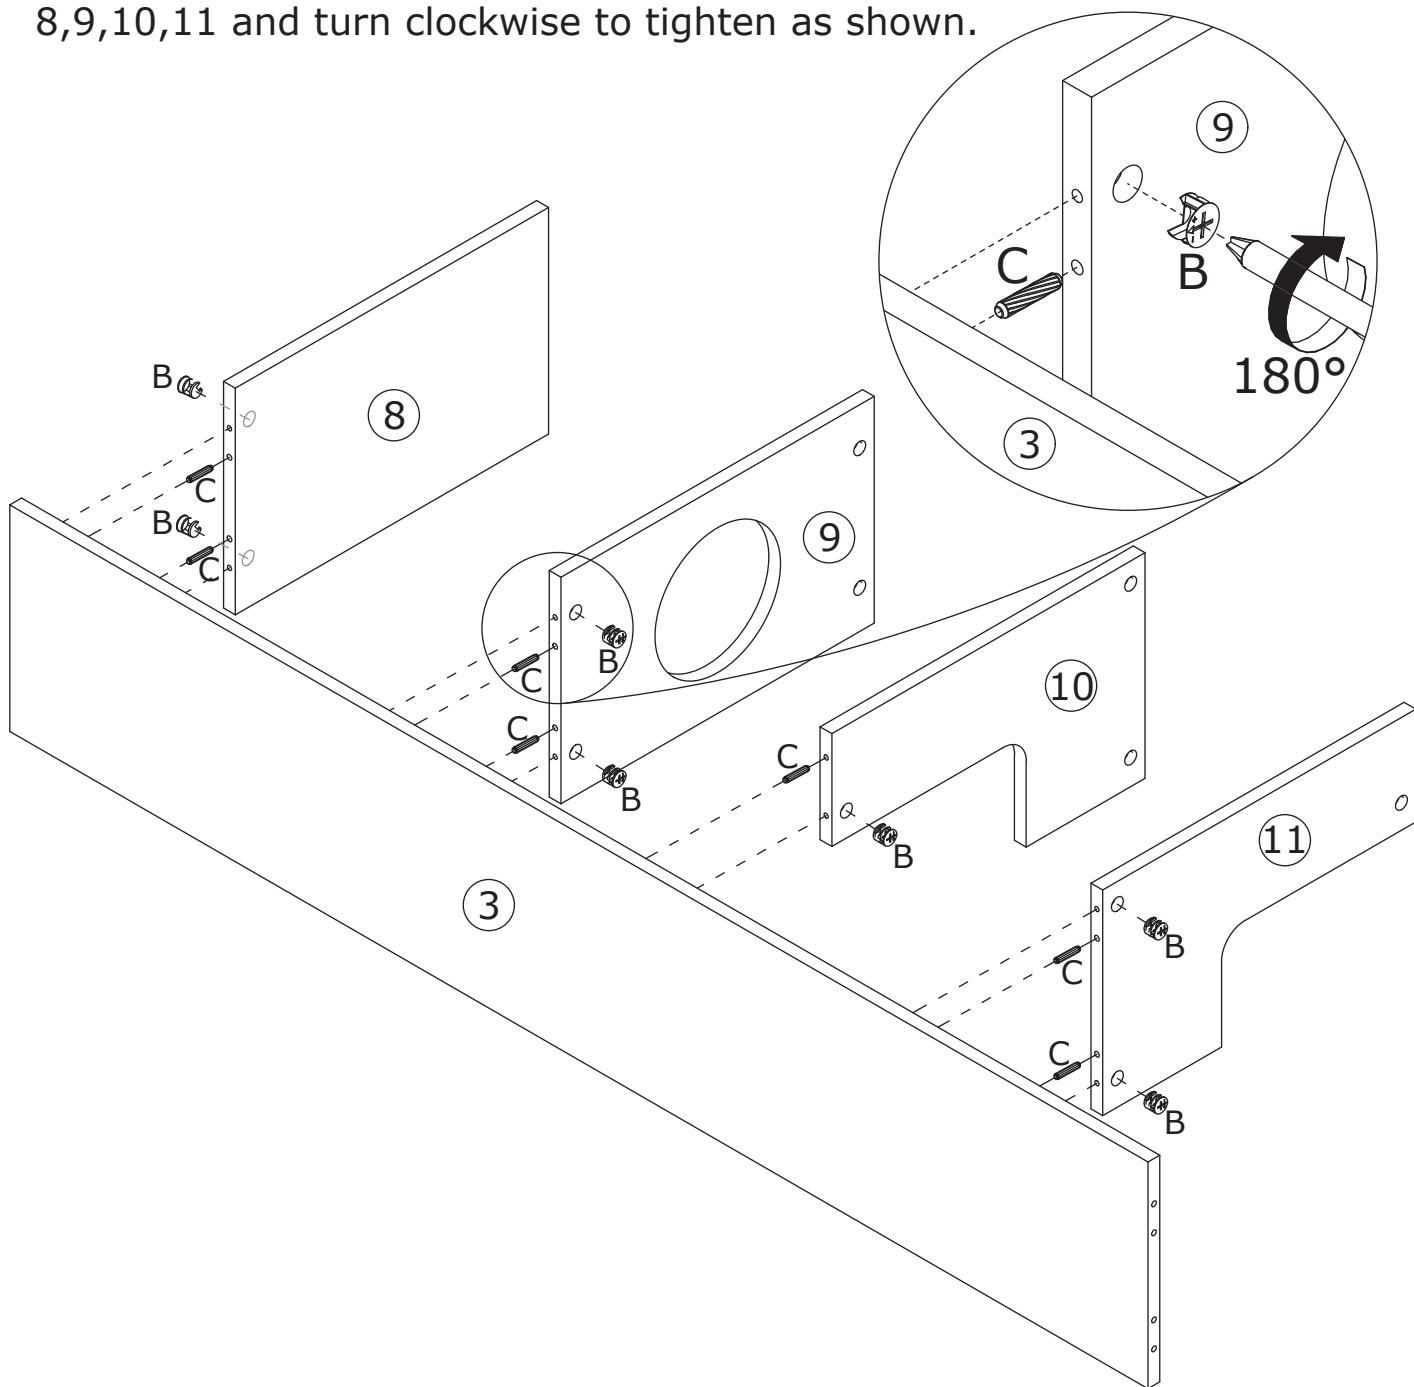


7

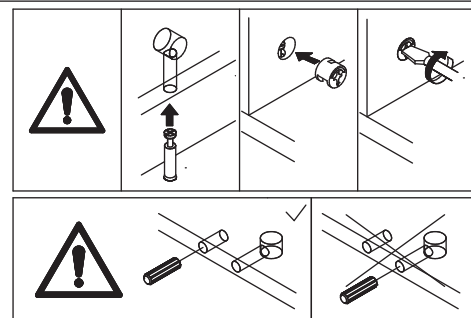 

 
Attach the two components to board 5 and 6 using wooden dowel(C), add cam lock(B) into board 8,9,10,11 and turn clockwise to tighten as shown.

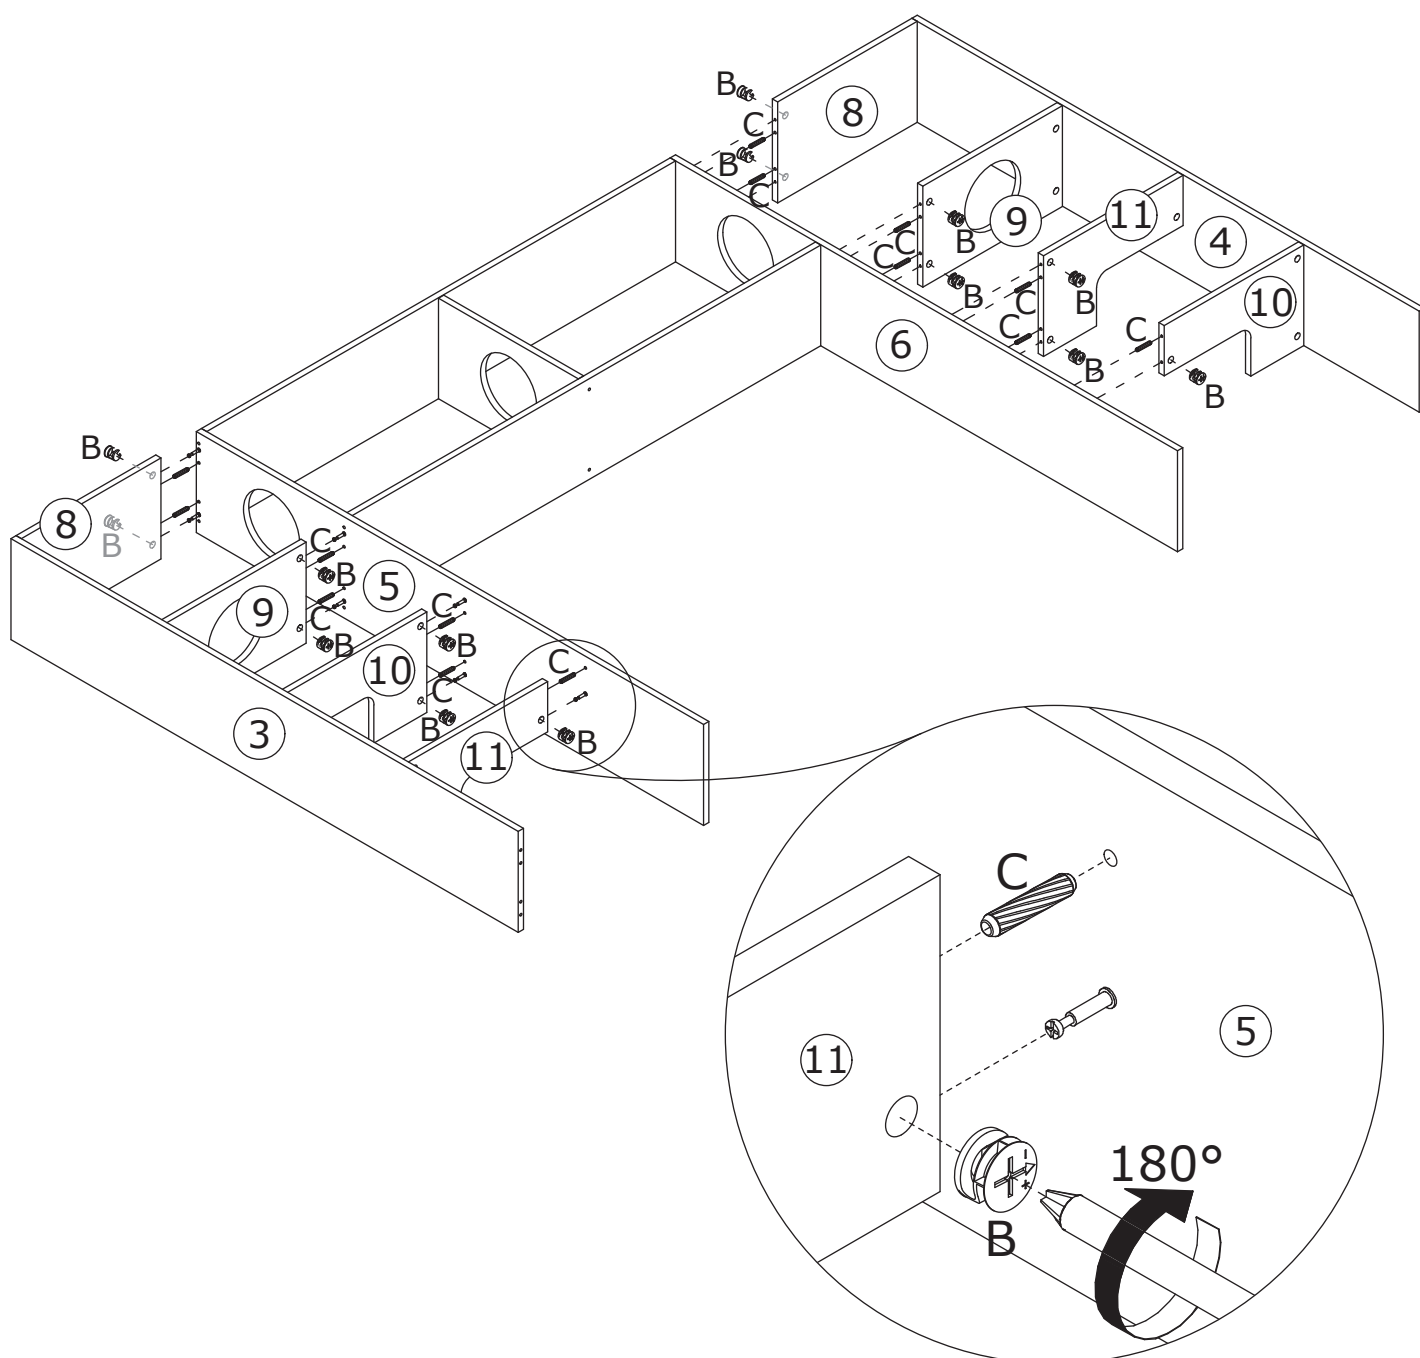




8

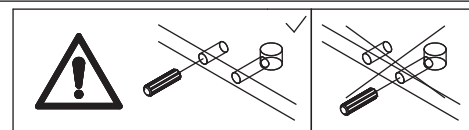 

 
Attach board 12 and 13 to board 3, 5, 6 and 4 using wooden dowel(C), and fix with screw(E) as shown.

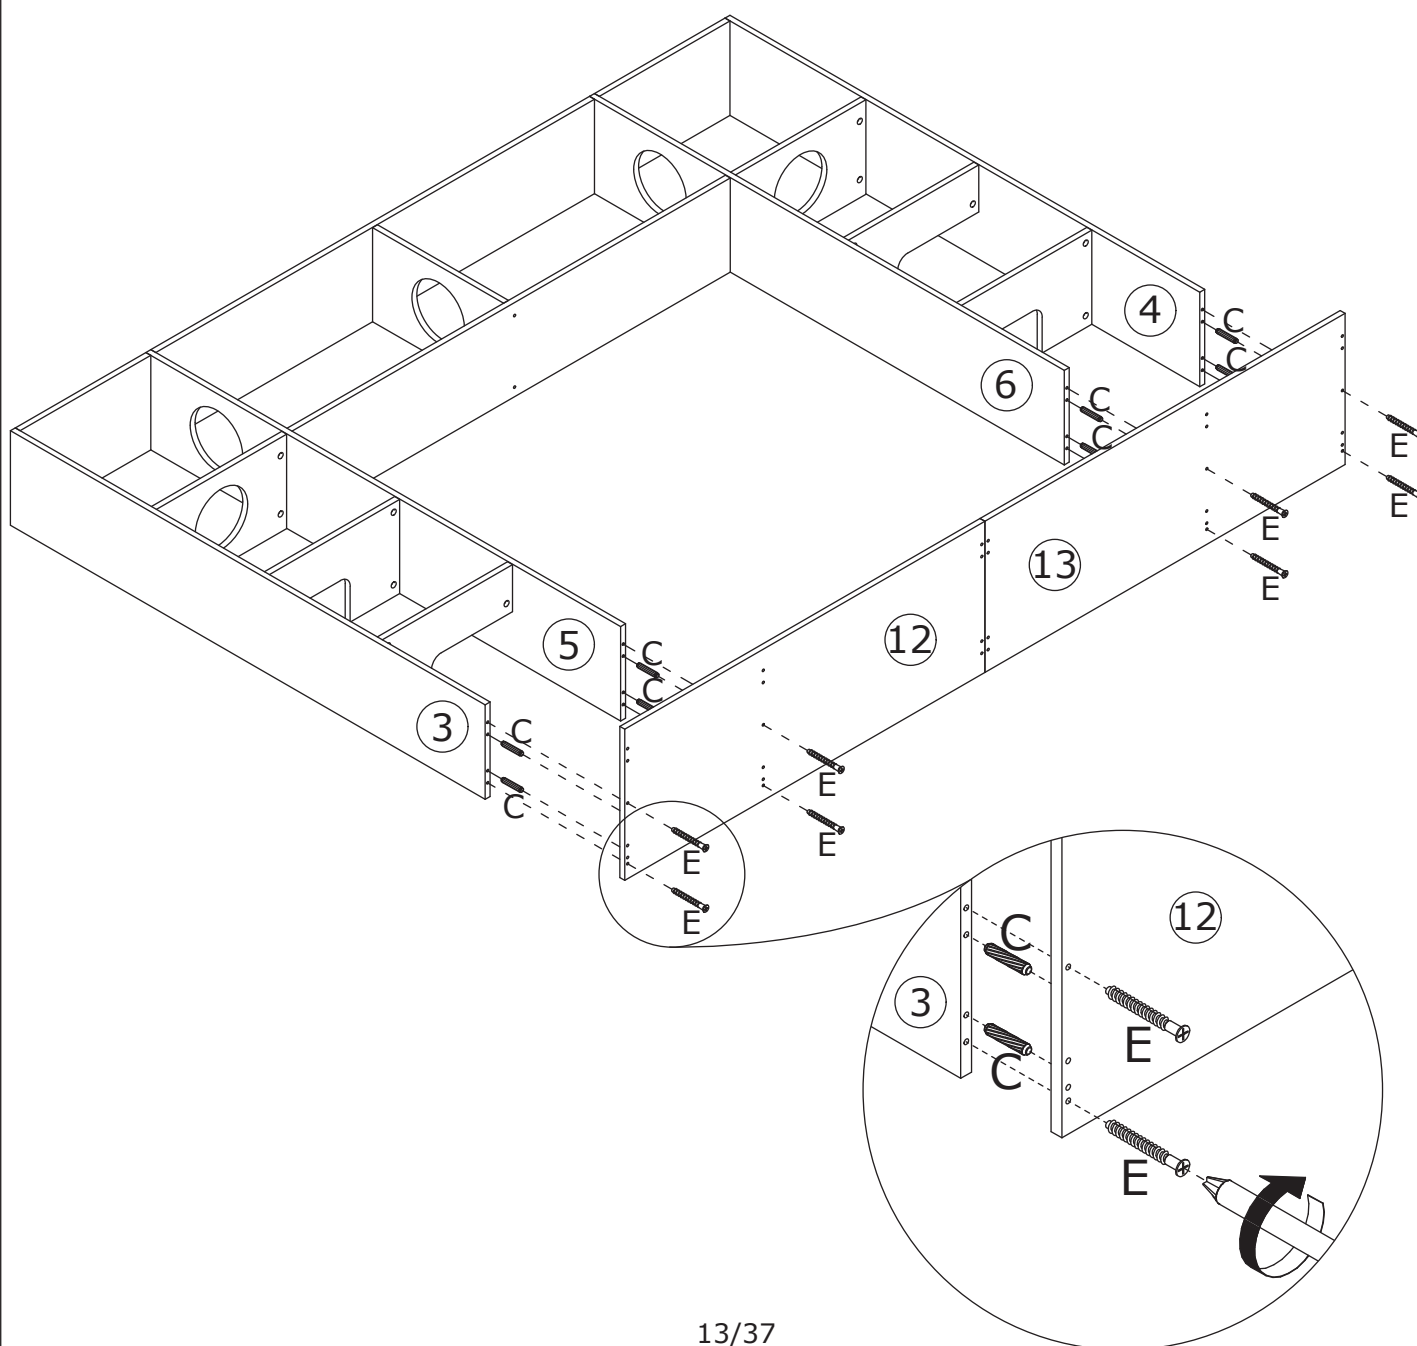






9

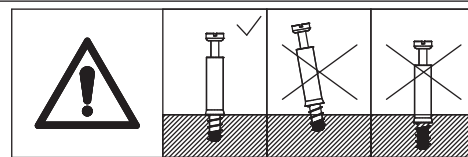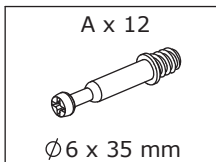   

 Screw eccentric rod(A) into board 12 and 13 as shown.

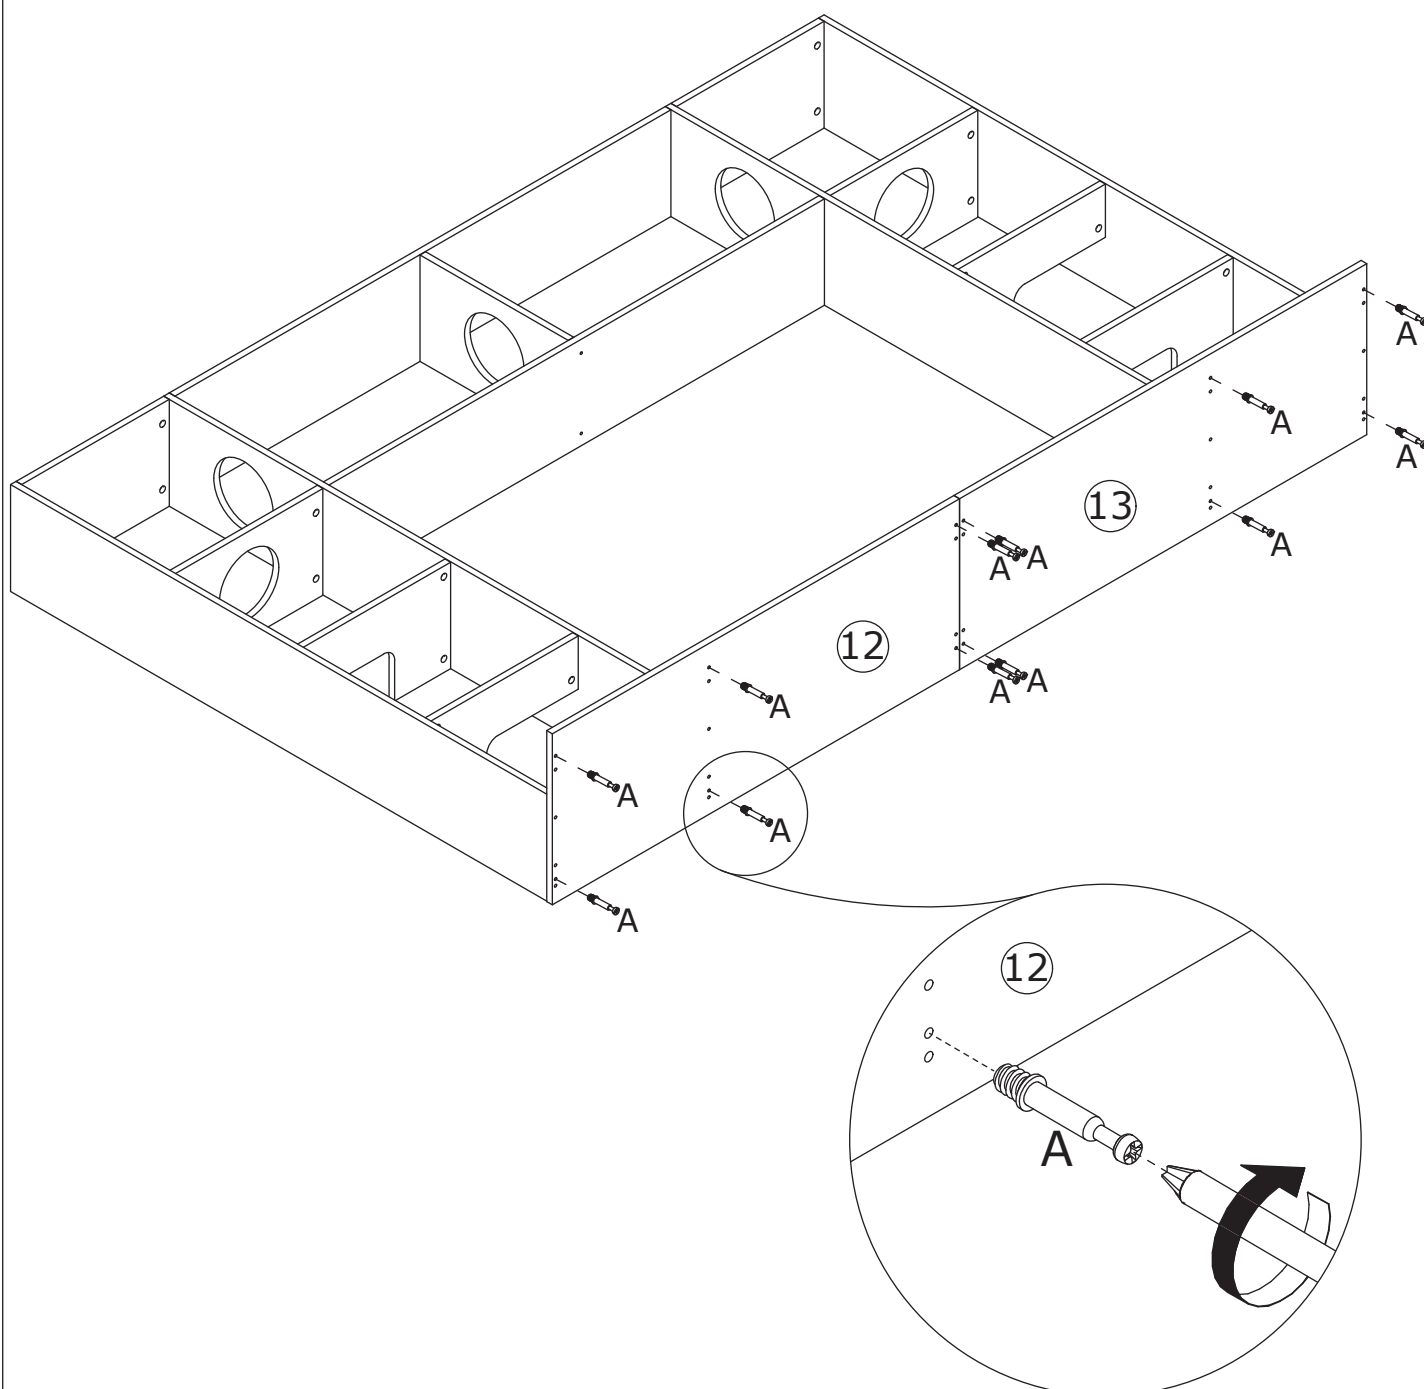

10

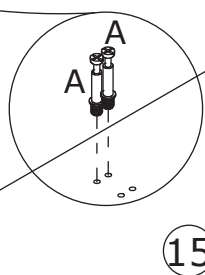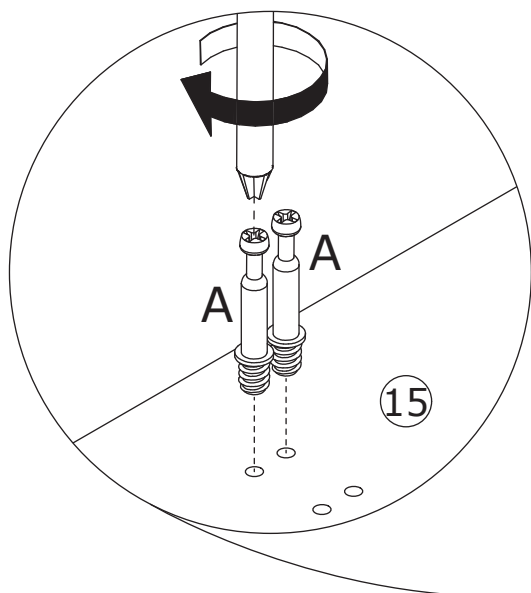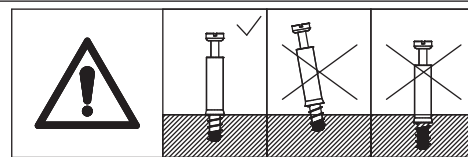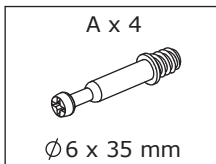     

Screw eccentric rod(A) into board 15 as shown.

 
11

B x 4











Ø 15 x 10 mm

C x 4






Ø 6 x 30 mm

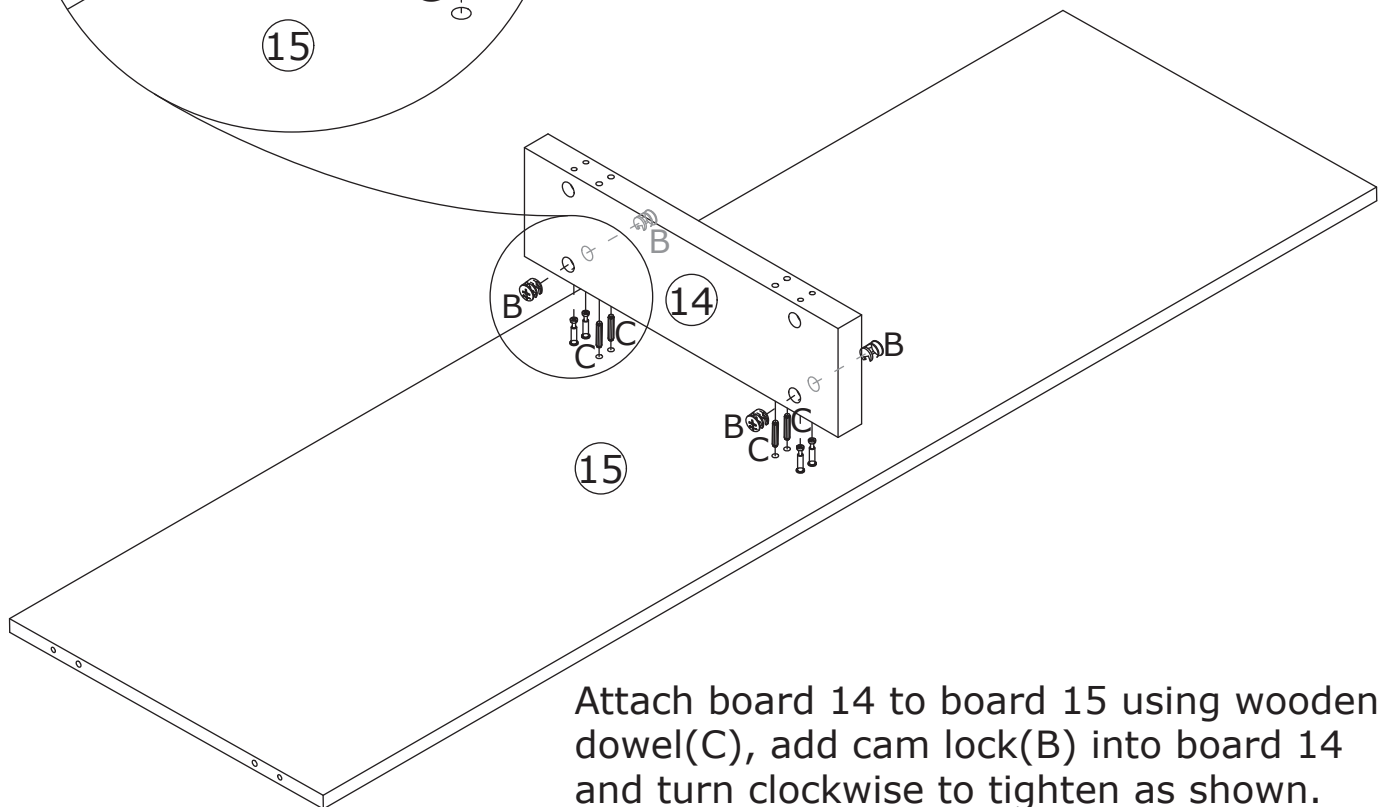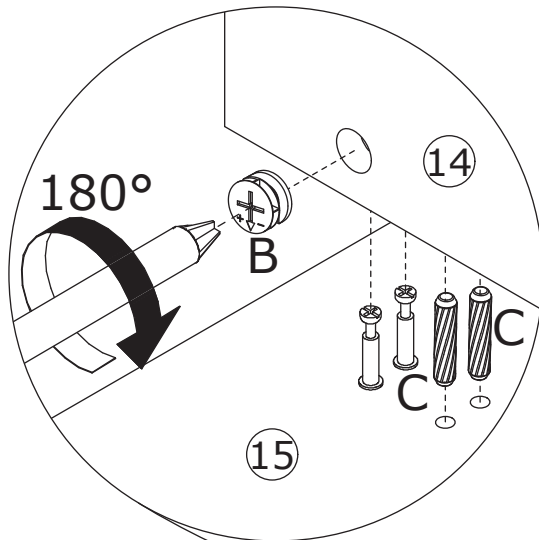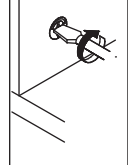        


Attach board 14 to board 15 using wooden dowel(C), add cam lock(B) into board 14 and turn clockwise to tighten as shown.

 12



A x 2

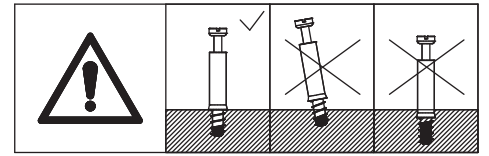   Ø6 x 35 mm



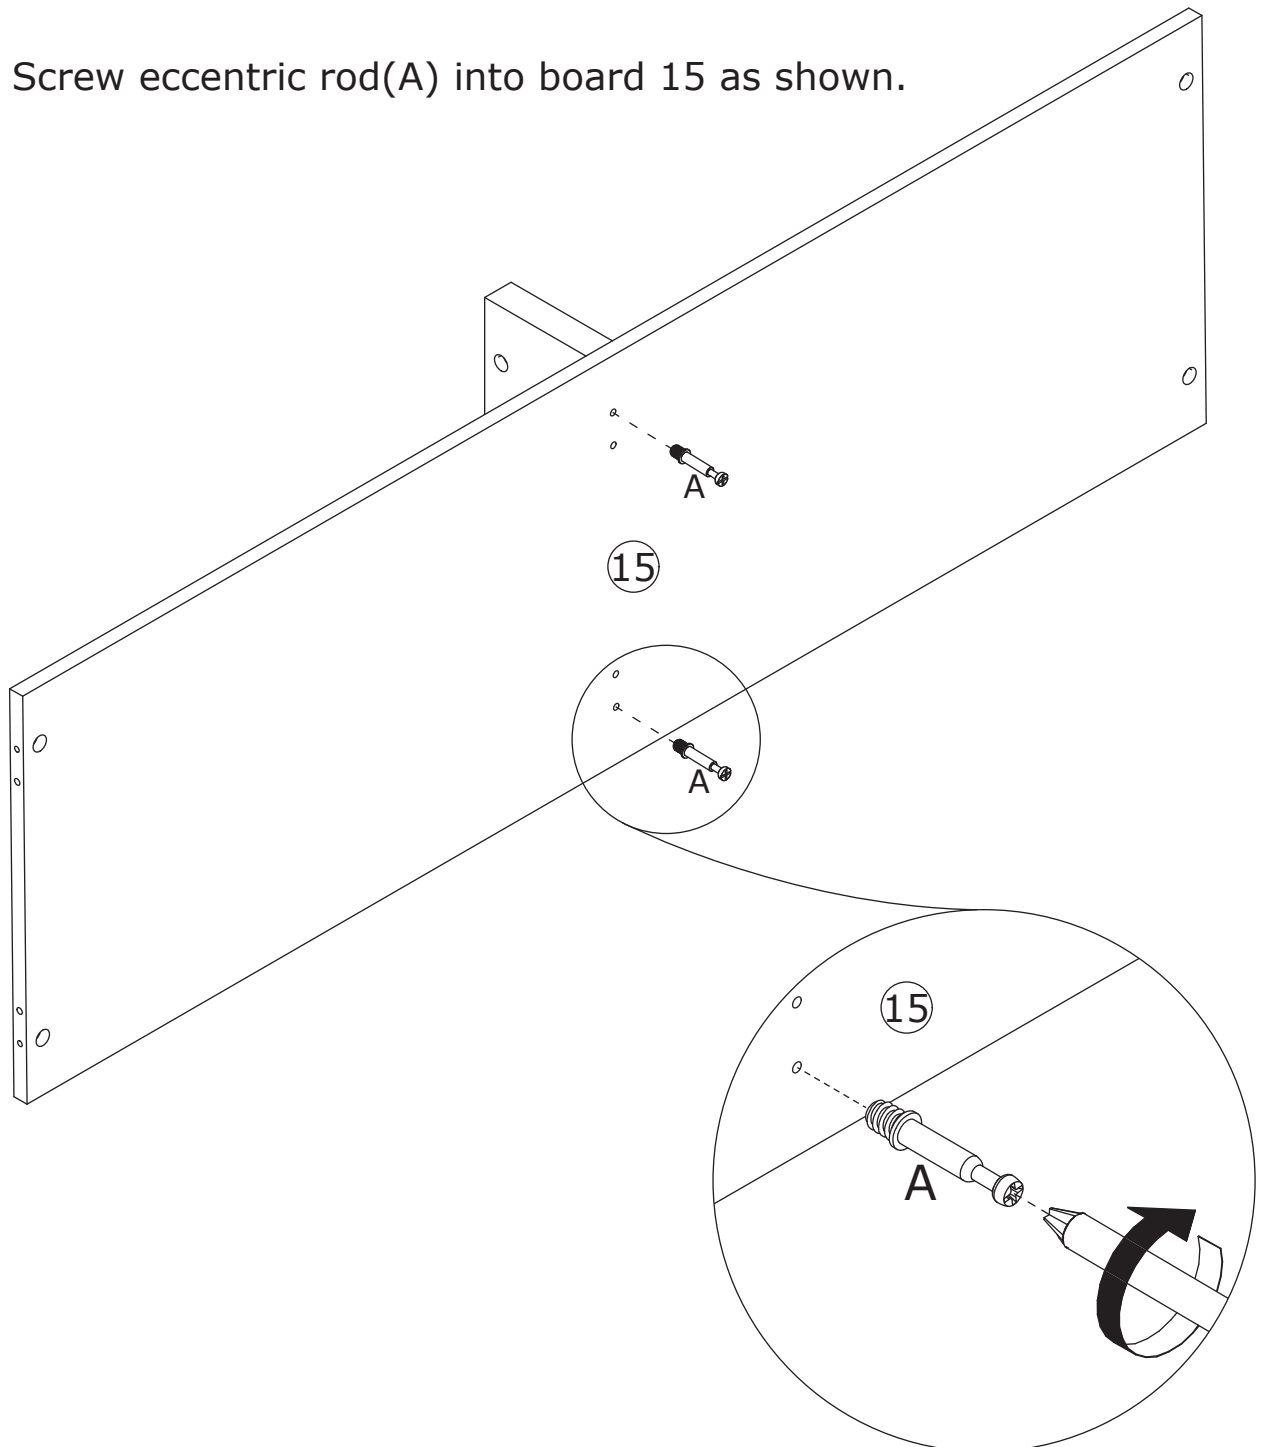 


  Screw eccentric rod(A) into board 15 as shown.




13

A x 4  Ø 6 x 35 mm	D x 4  Ø 3.5 x 14 mm	I x 2  350 mm	
---	---	--	---

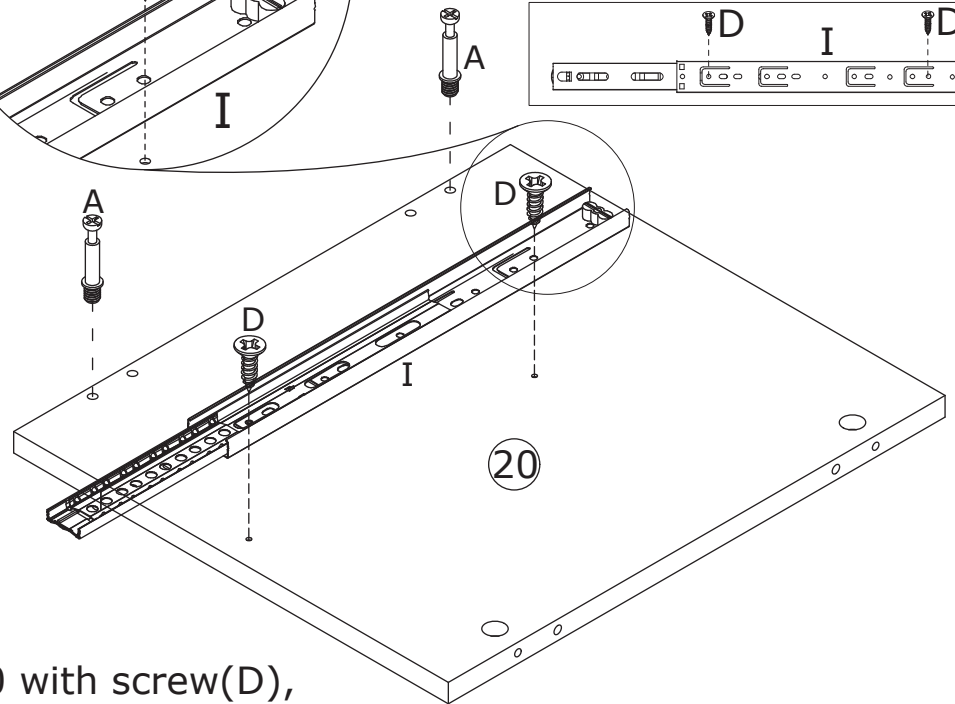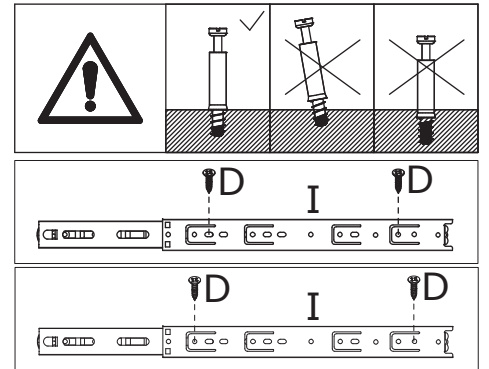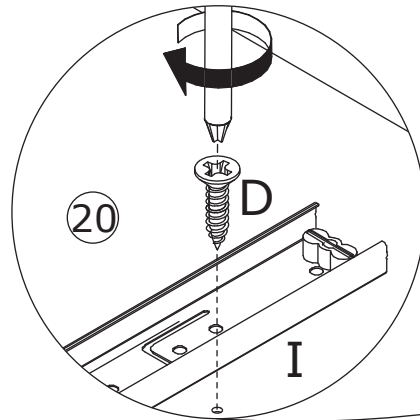   

 Fix rail(I) to board 20 with screw(D),
and screw eccentric rod(A) into at first.
Flip to back, fix rail(I) and screw
eccentric rod(A) into as well.

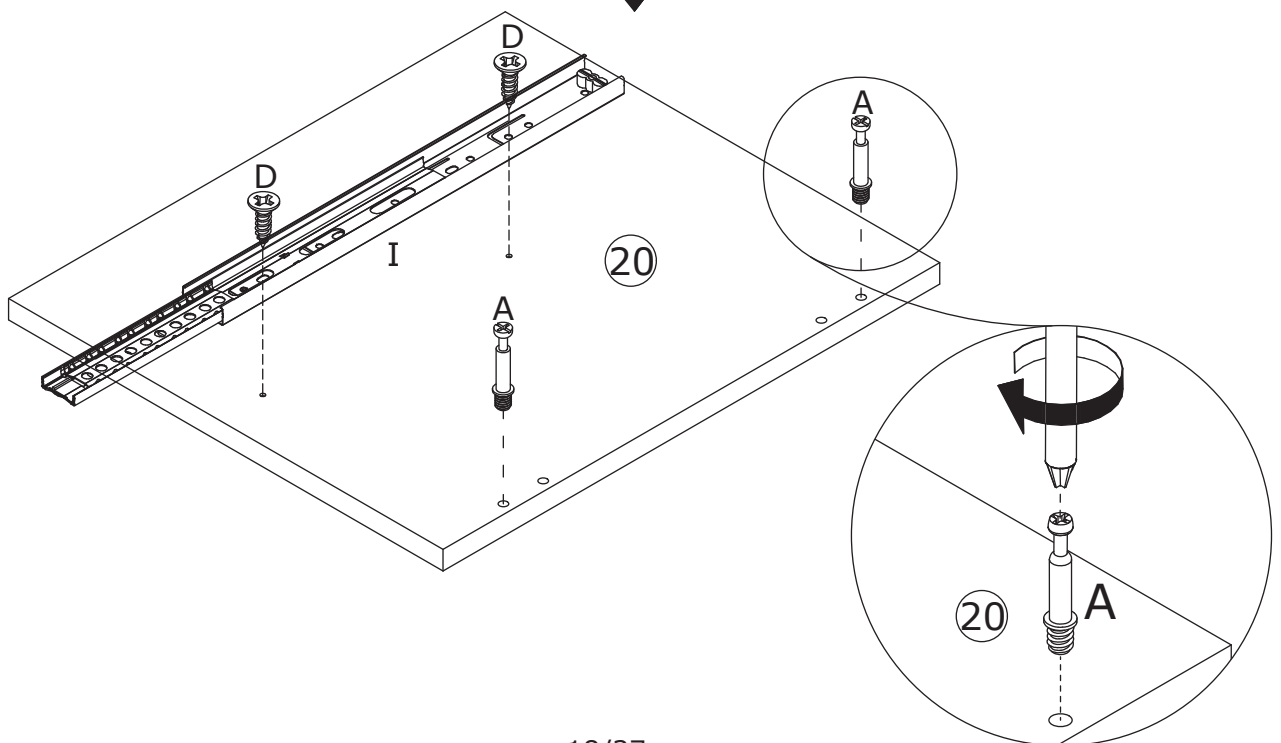


14

B x 2






Ø 15 x 10 mm


 
C x 2





Ø 6 x 30 mm

 
 
 


  Attach board 20 to board 15 using wooden dowel(C), add cam lock(B) into board 20 and turn clockwise to tighten as shown.

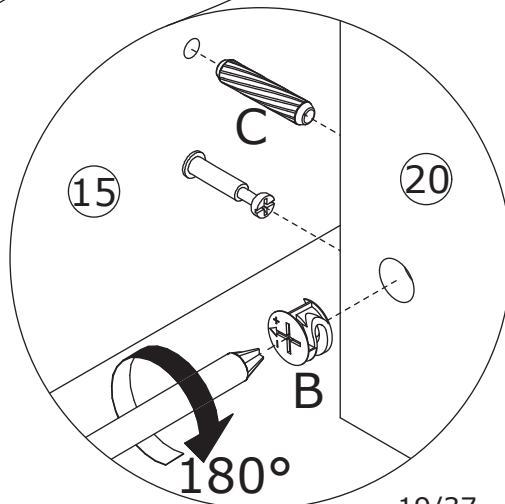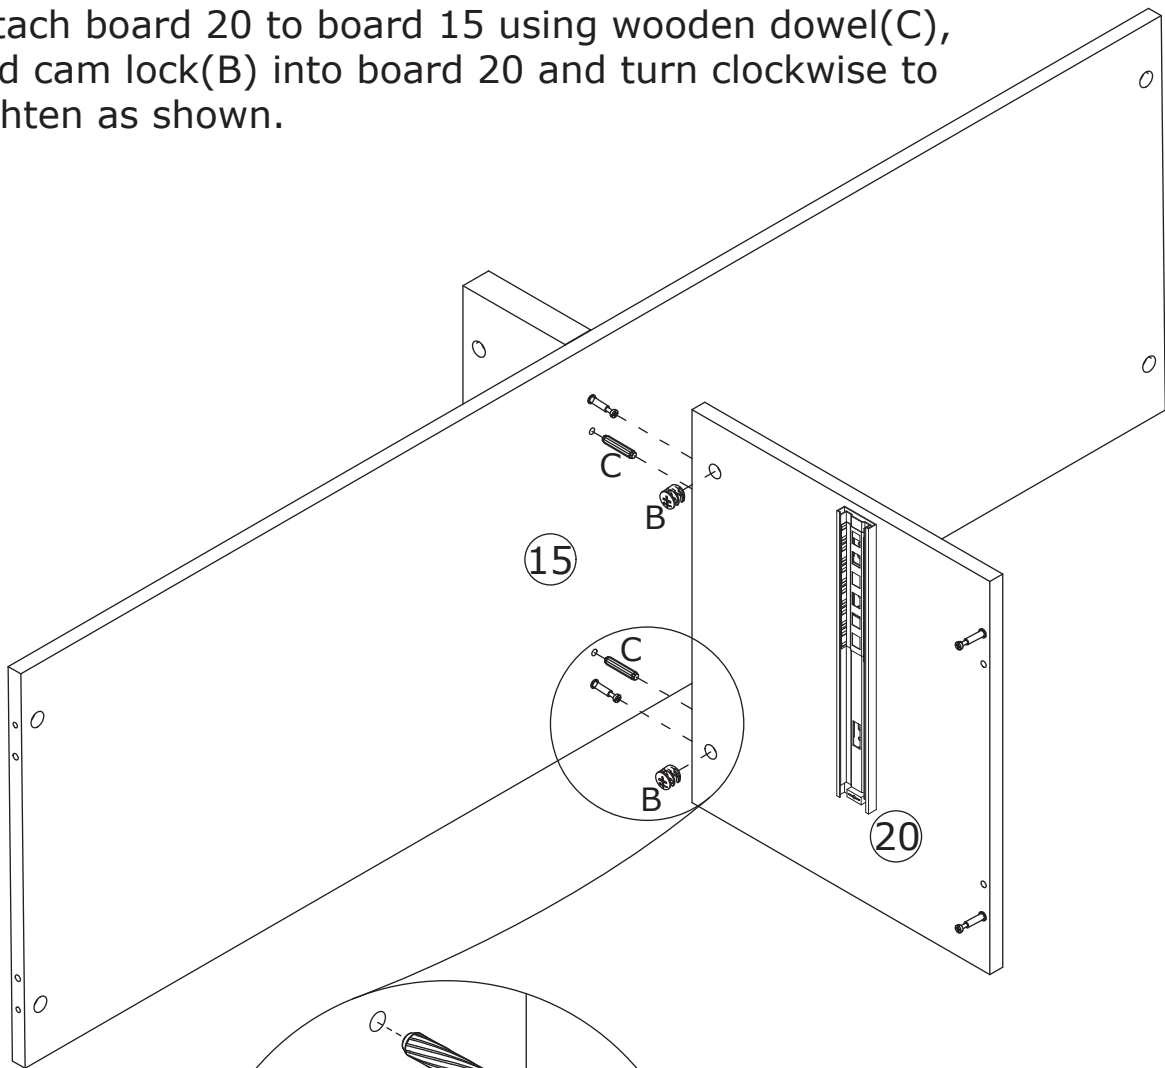


15


 
 
A x 4  Ø6 x 35 mm	D x 4  Ø3.5 x 14 mm	I x 2  350 mm	
--	--	--	---

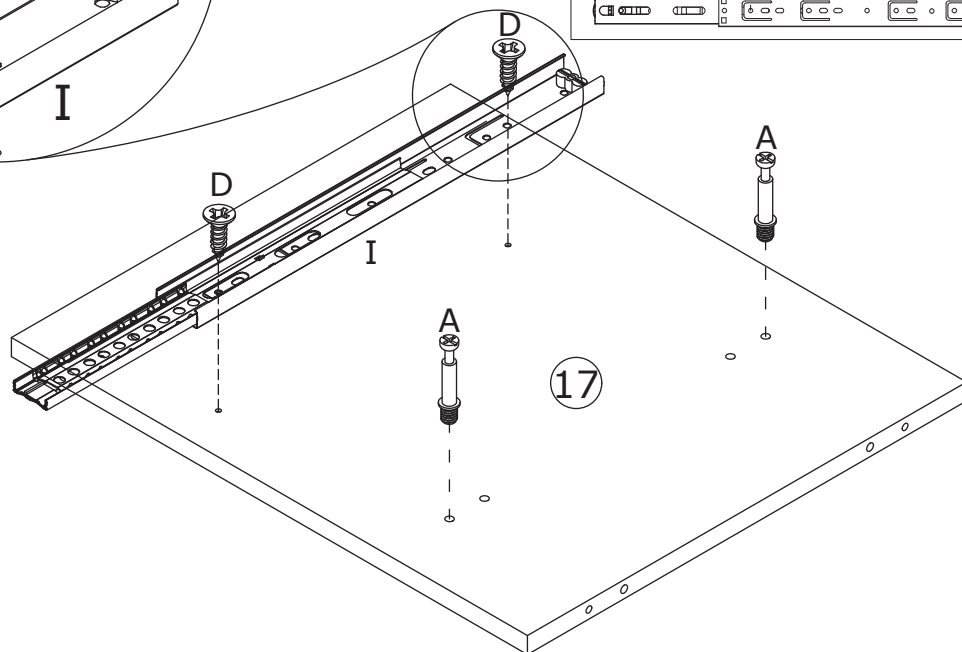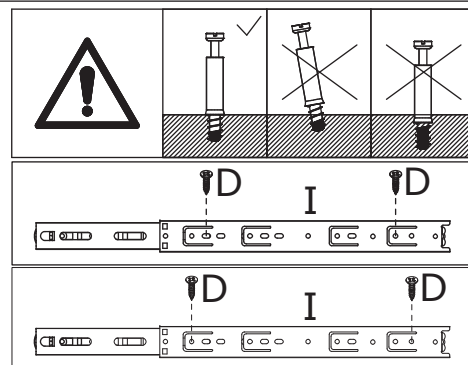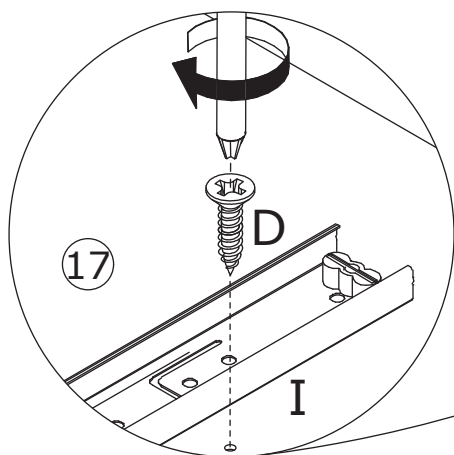   

 
Fix rail(I) to board 17 and 18 with screw(D), and screw eccentric rod(A) into as shown.

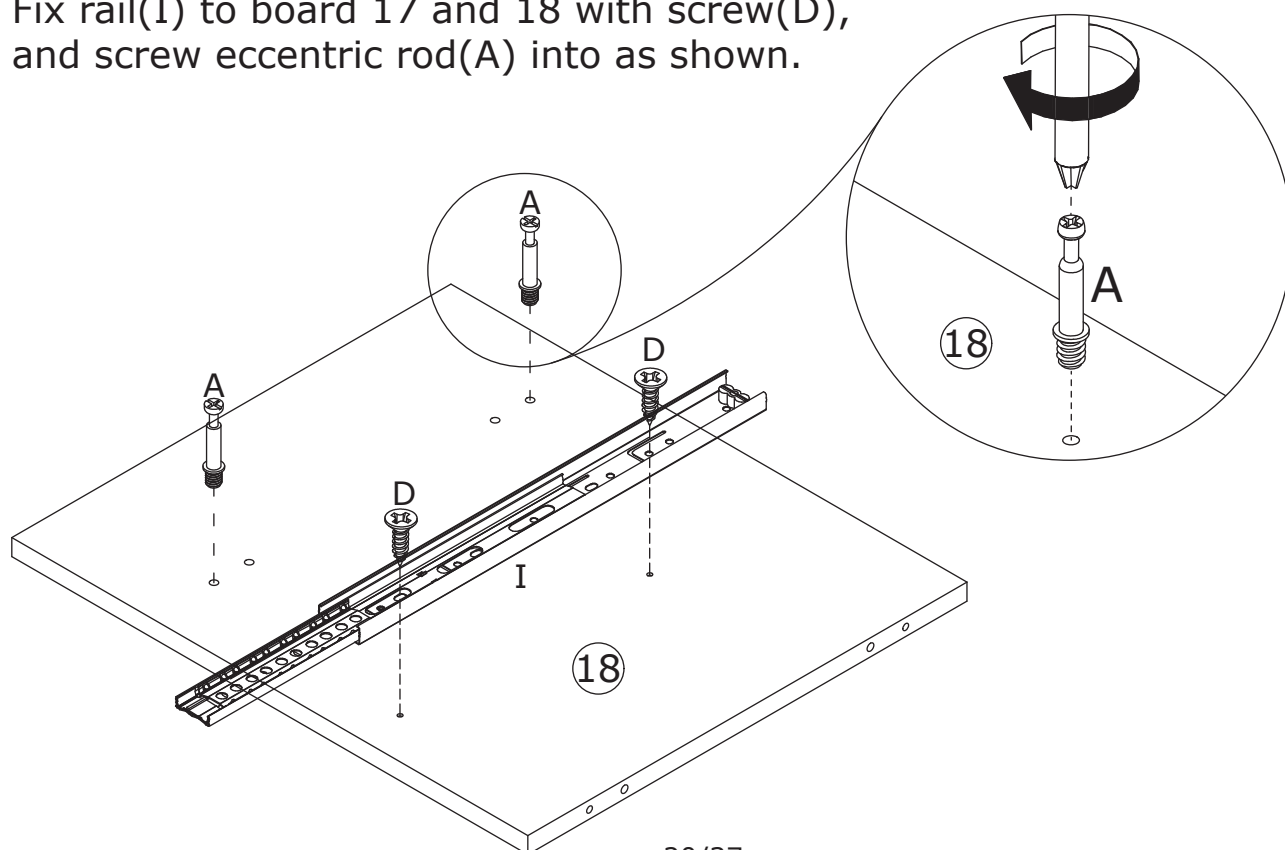




16

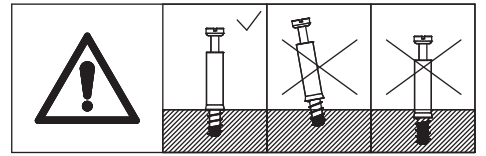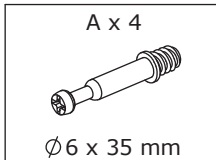   

 
Screw eccentric rod(A) into board 21 as shown.

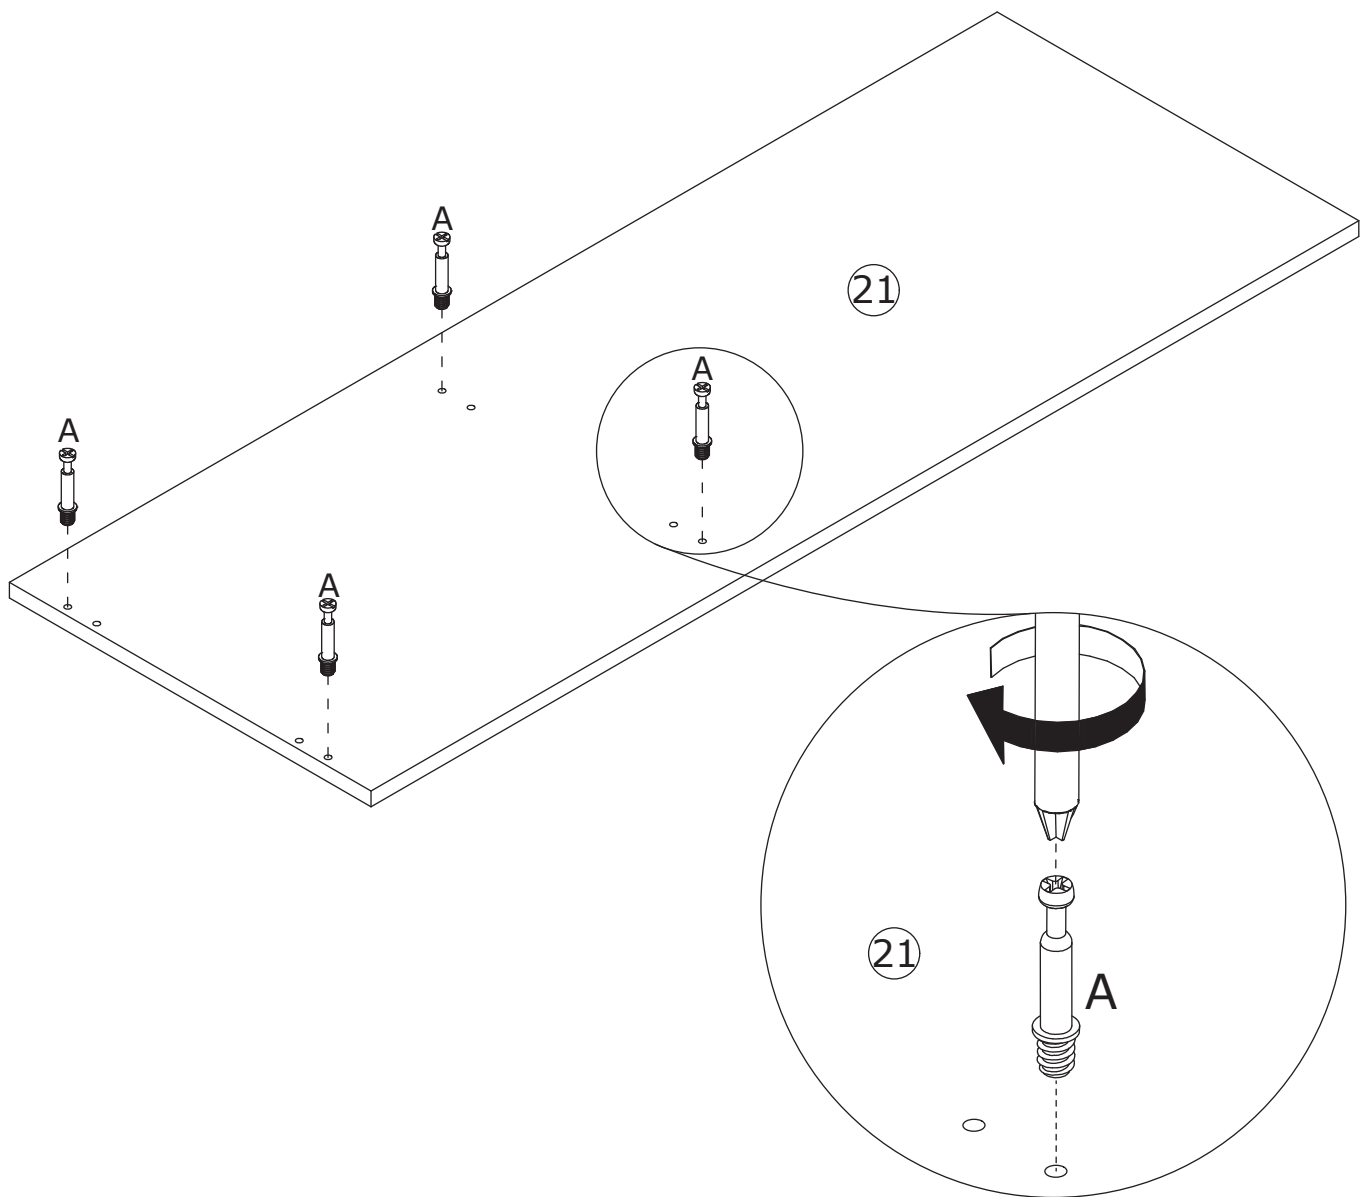

17

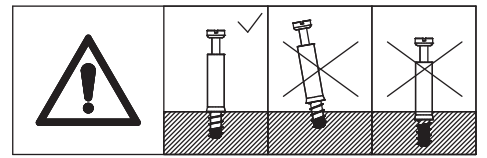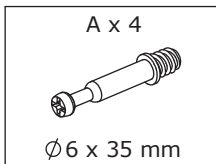   

 Screw eccentric rod(A) into board 22 as shown.

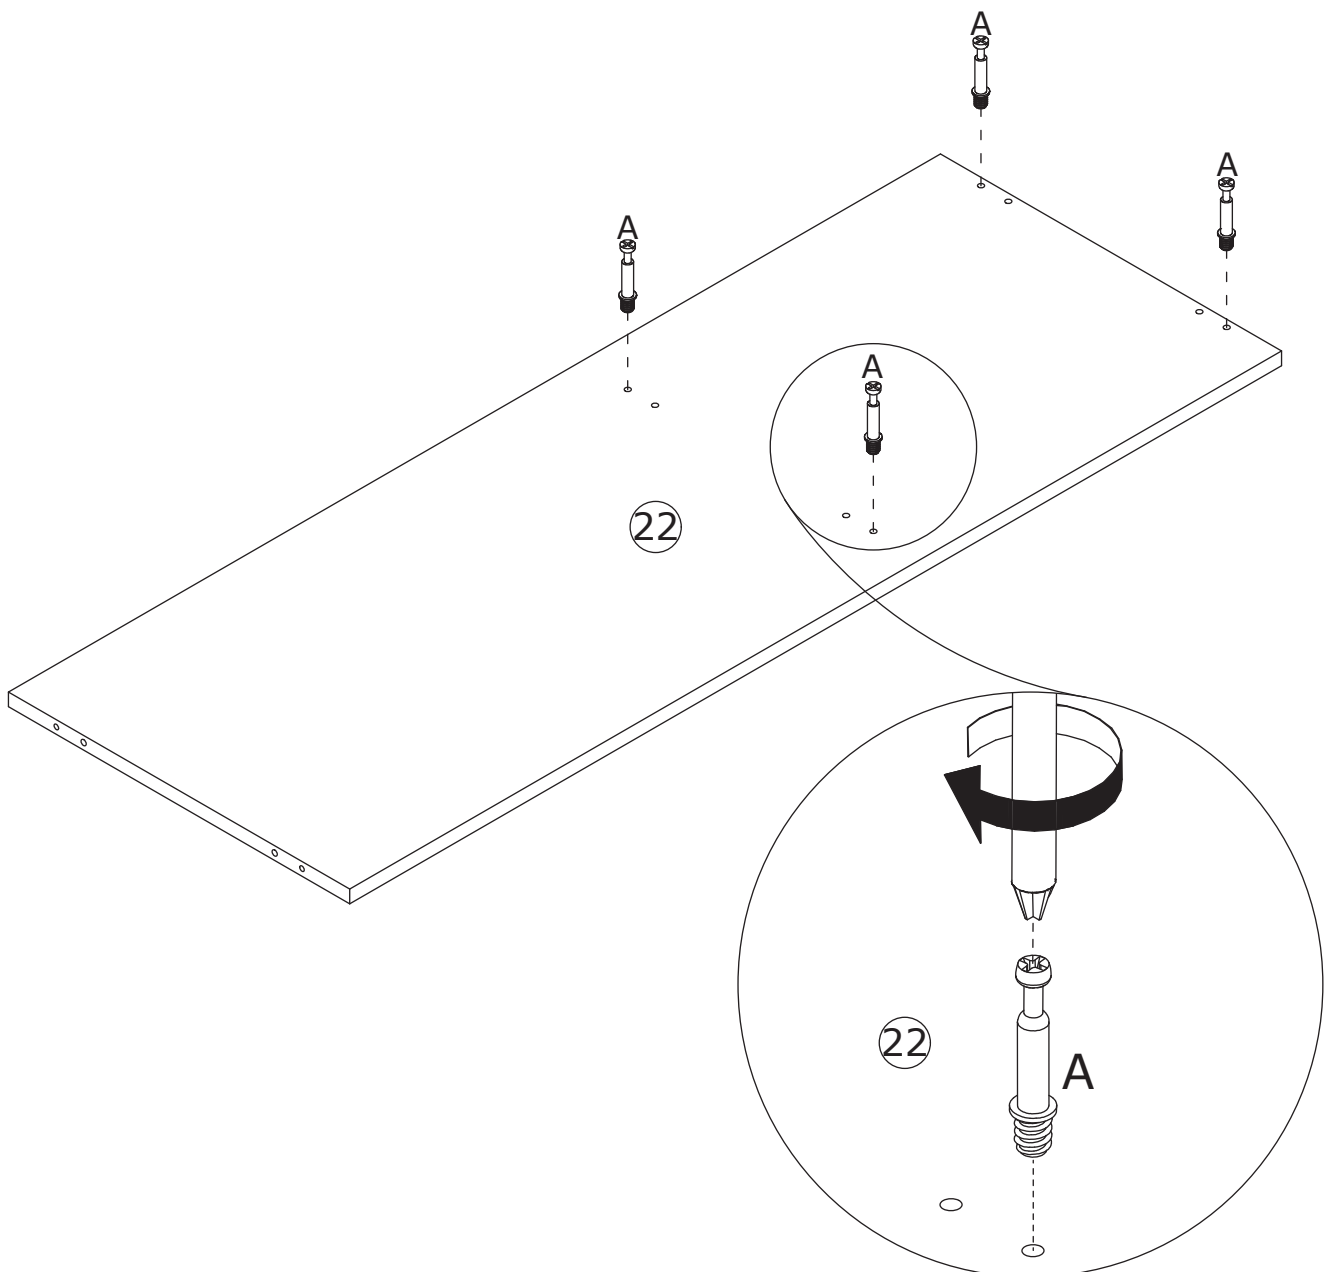


18

B x 4









Ø 15 x 10 mm


 
C x 4



Ø 6 x 30 mm

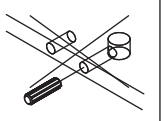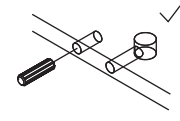      

  Attach board 16 and 17 to board 21 using wooden dowel(C), add cam lock(B) into board 16,17 and turn clockwise to tighten as shown.

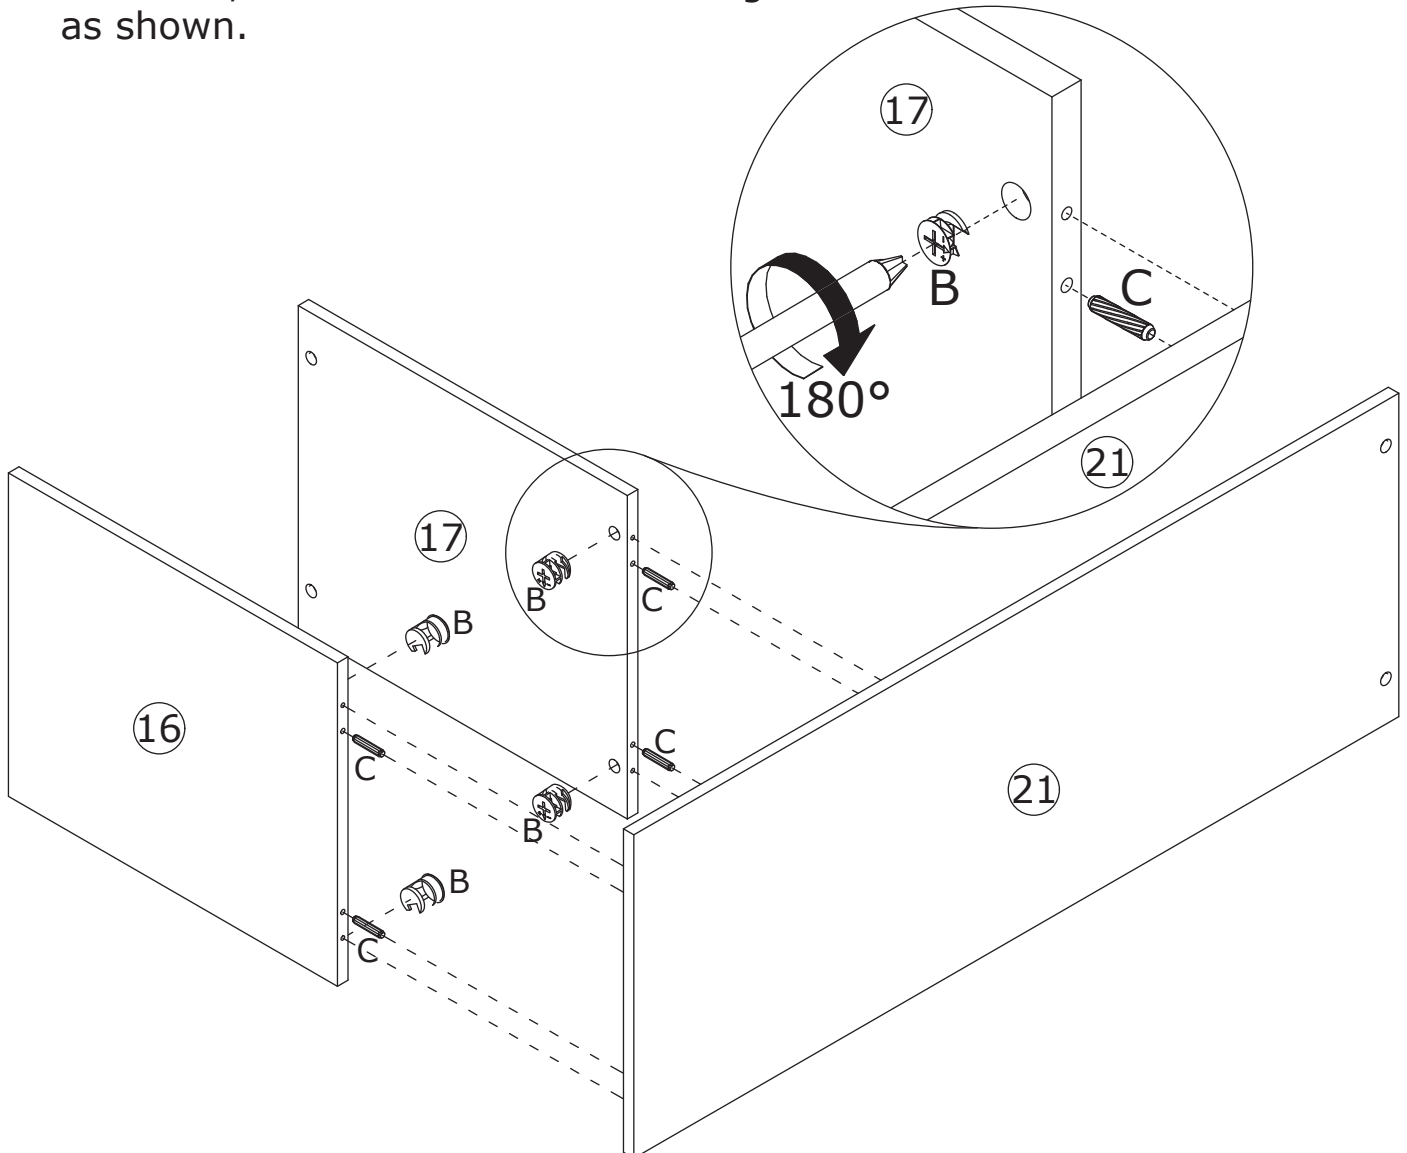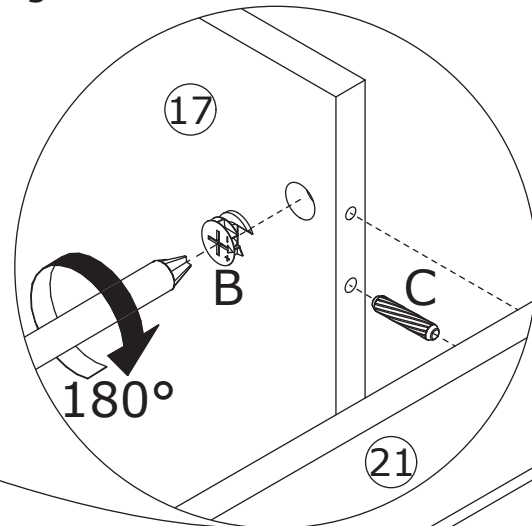

19

B x 4

 
 


Ø 15 x 10 mm


C x 4









Ø 6 x 30 mm

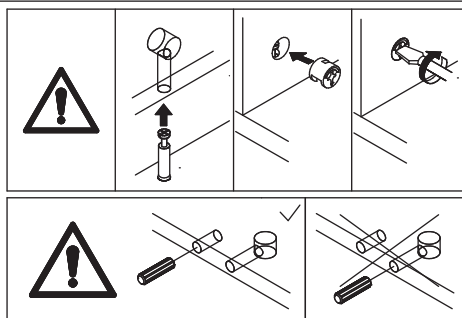

 Attach board 18 and 19 to board 22 using wooden dowel(C), add cam lock(B) into board 18,19 and turn clockwise to tighten as shown.


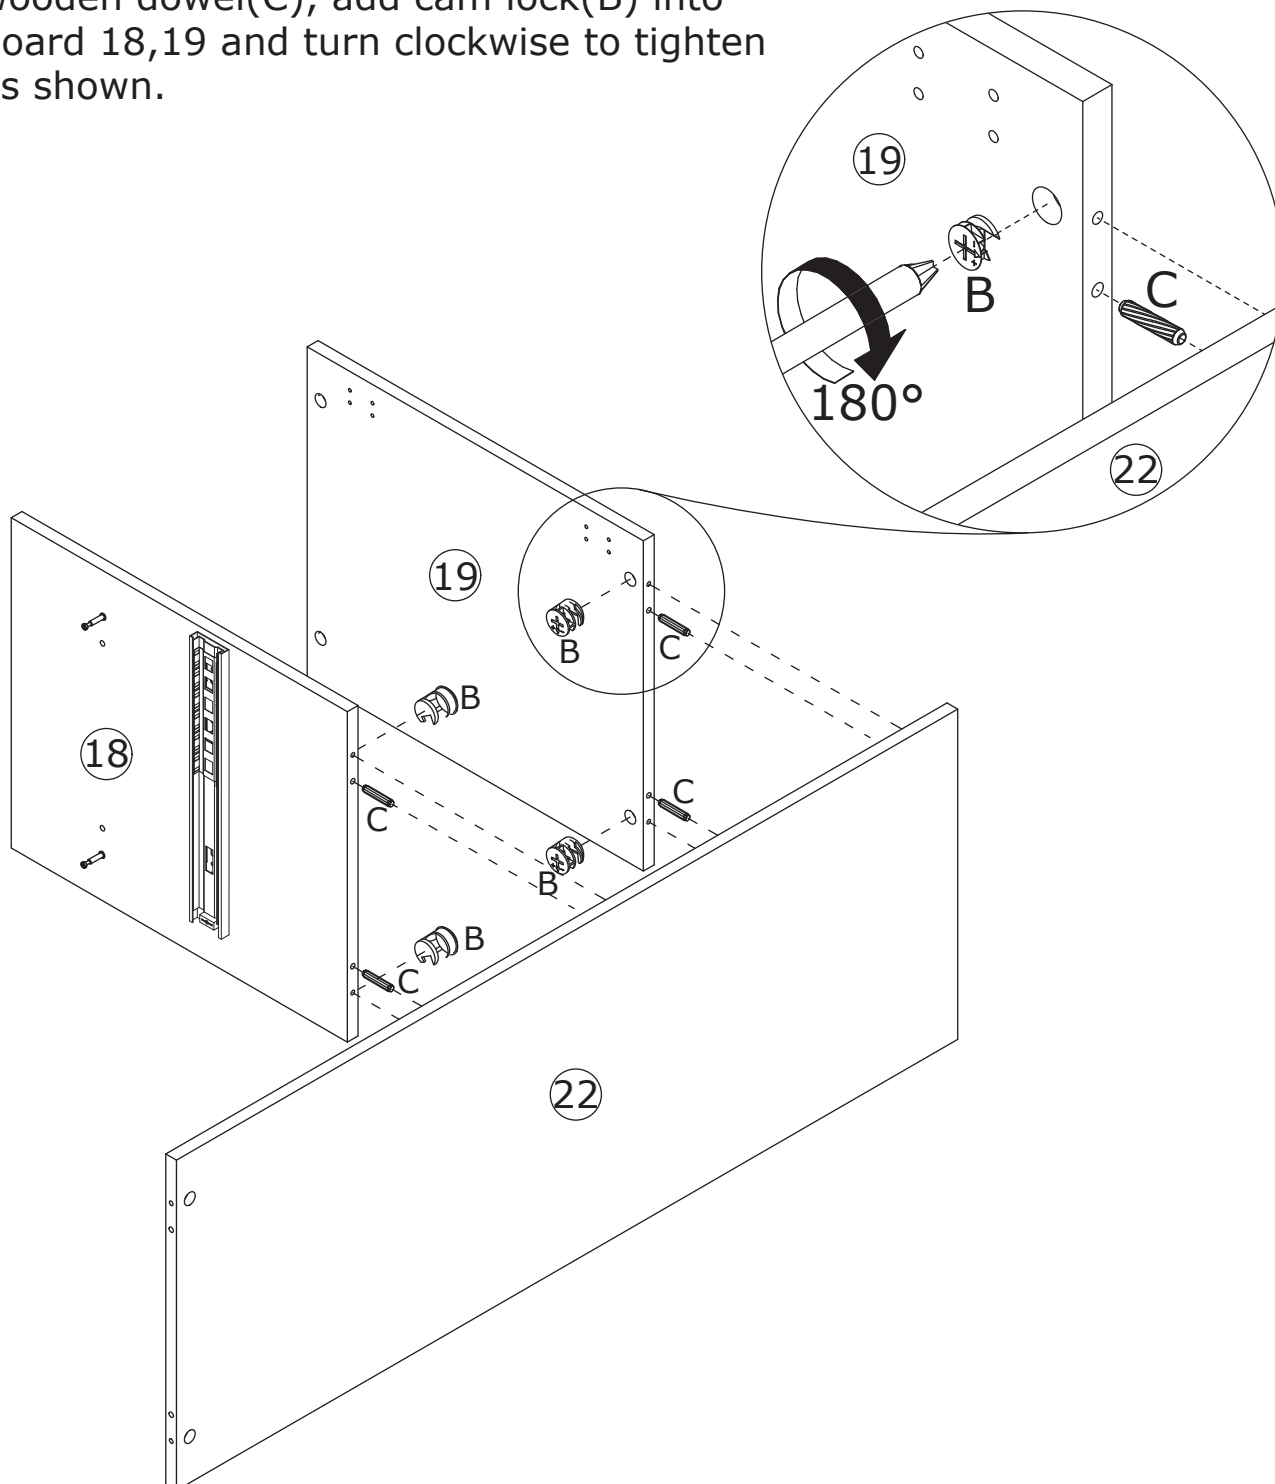



20

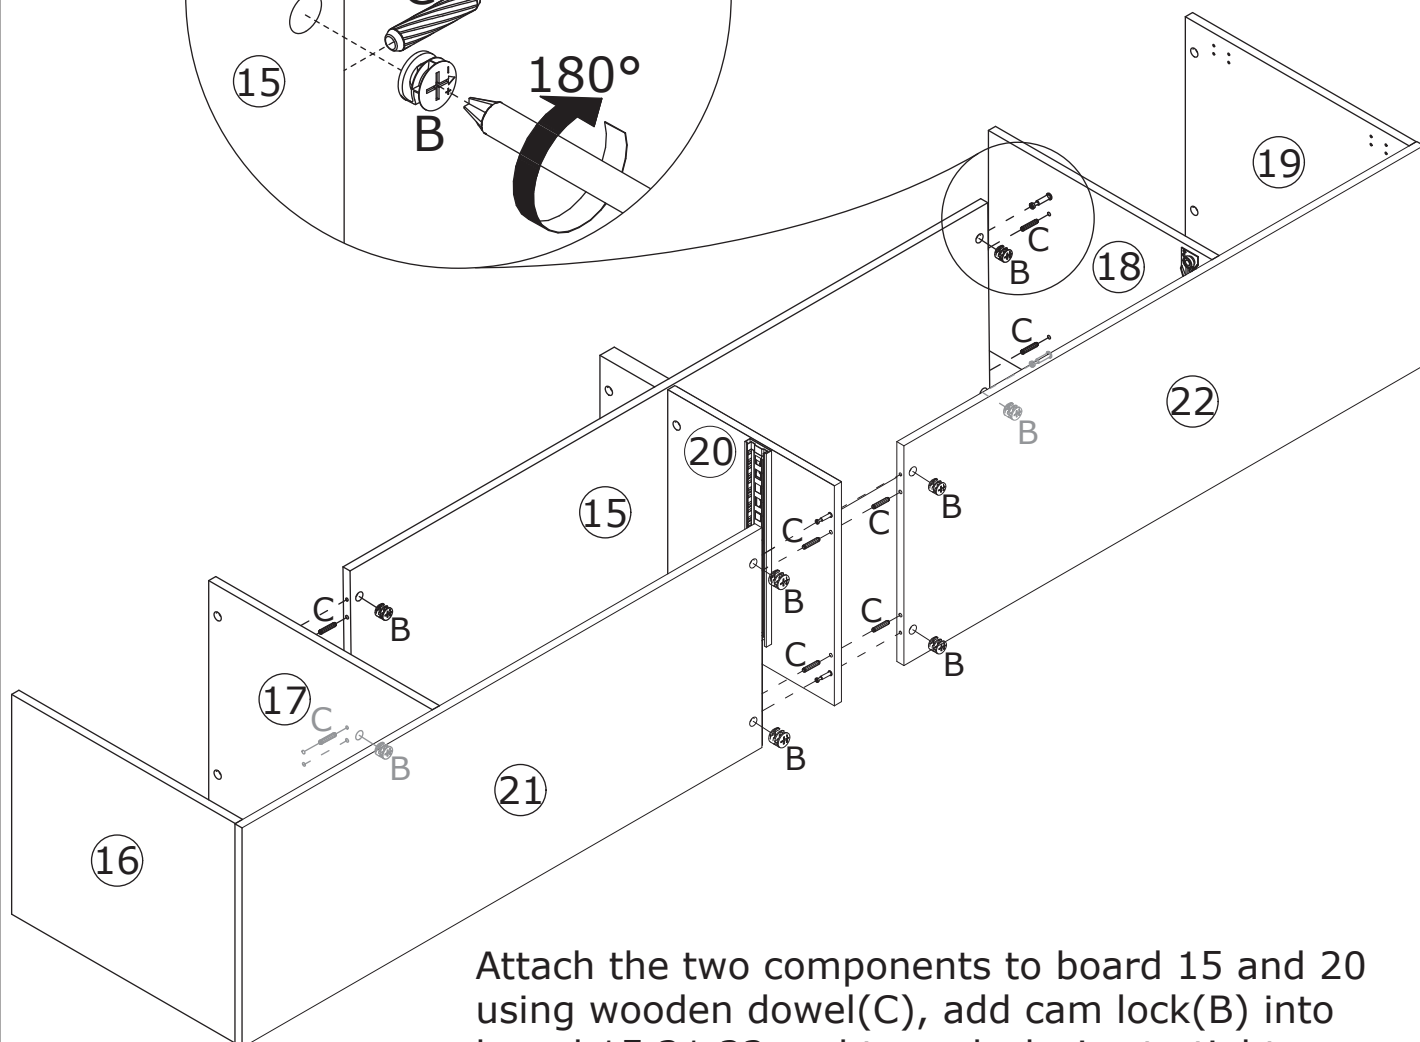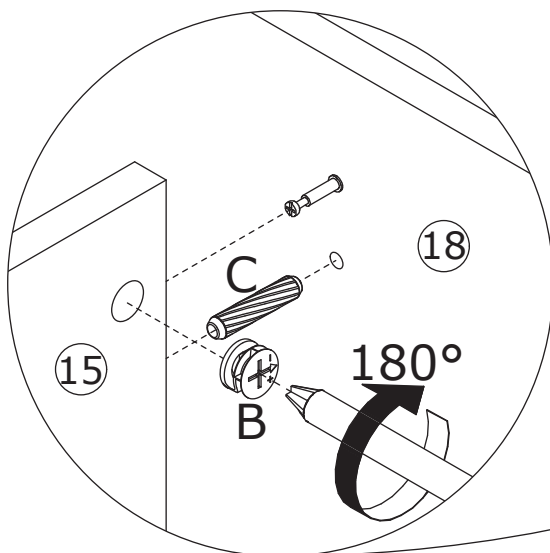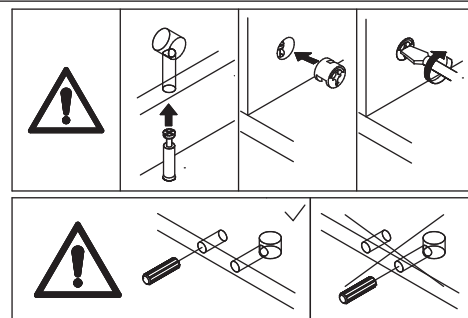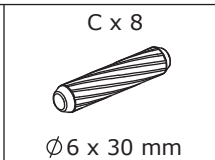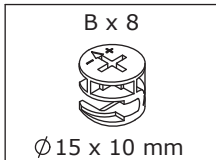      


Attach the two components to board 15 and 20 using wooden dowel(C), add cam lock(B) into board 15,21,22 and turn clockwise to tighten as shown.

  21

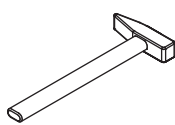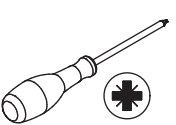B x 12  Ø 15 x 10 mm	C x 12  Ø 6 x 30 mm	L x 10 	 
---	--	---	---

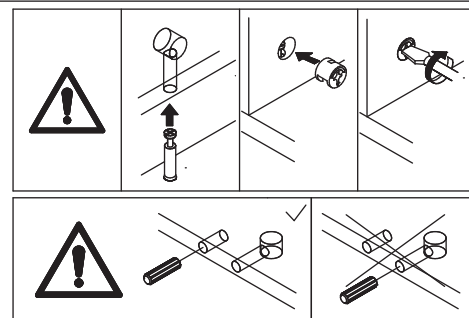 


 Connect the two components using wooden dowel(C),
add cam lock(B) into and turn clockwise to tighten as shown.
Knock foot pad(L) into bottom boards as shown.


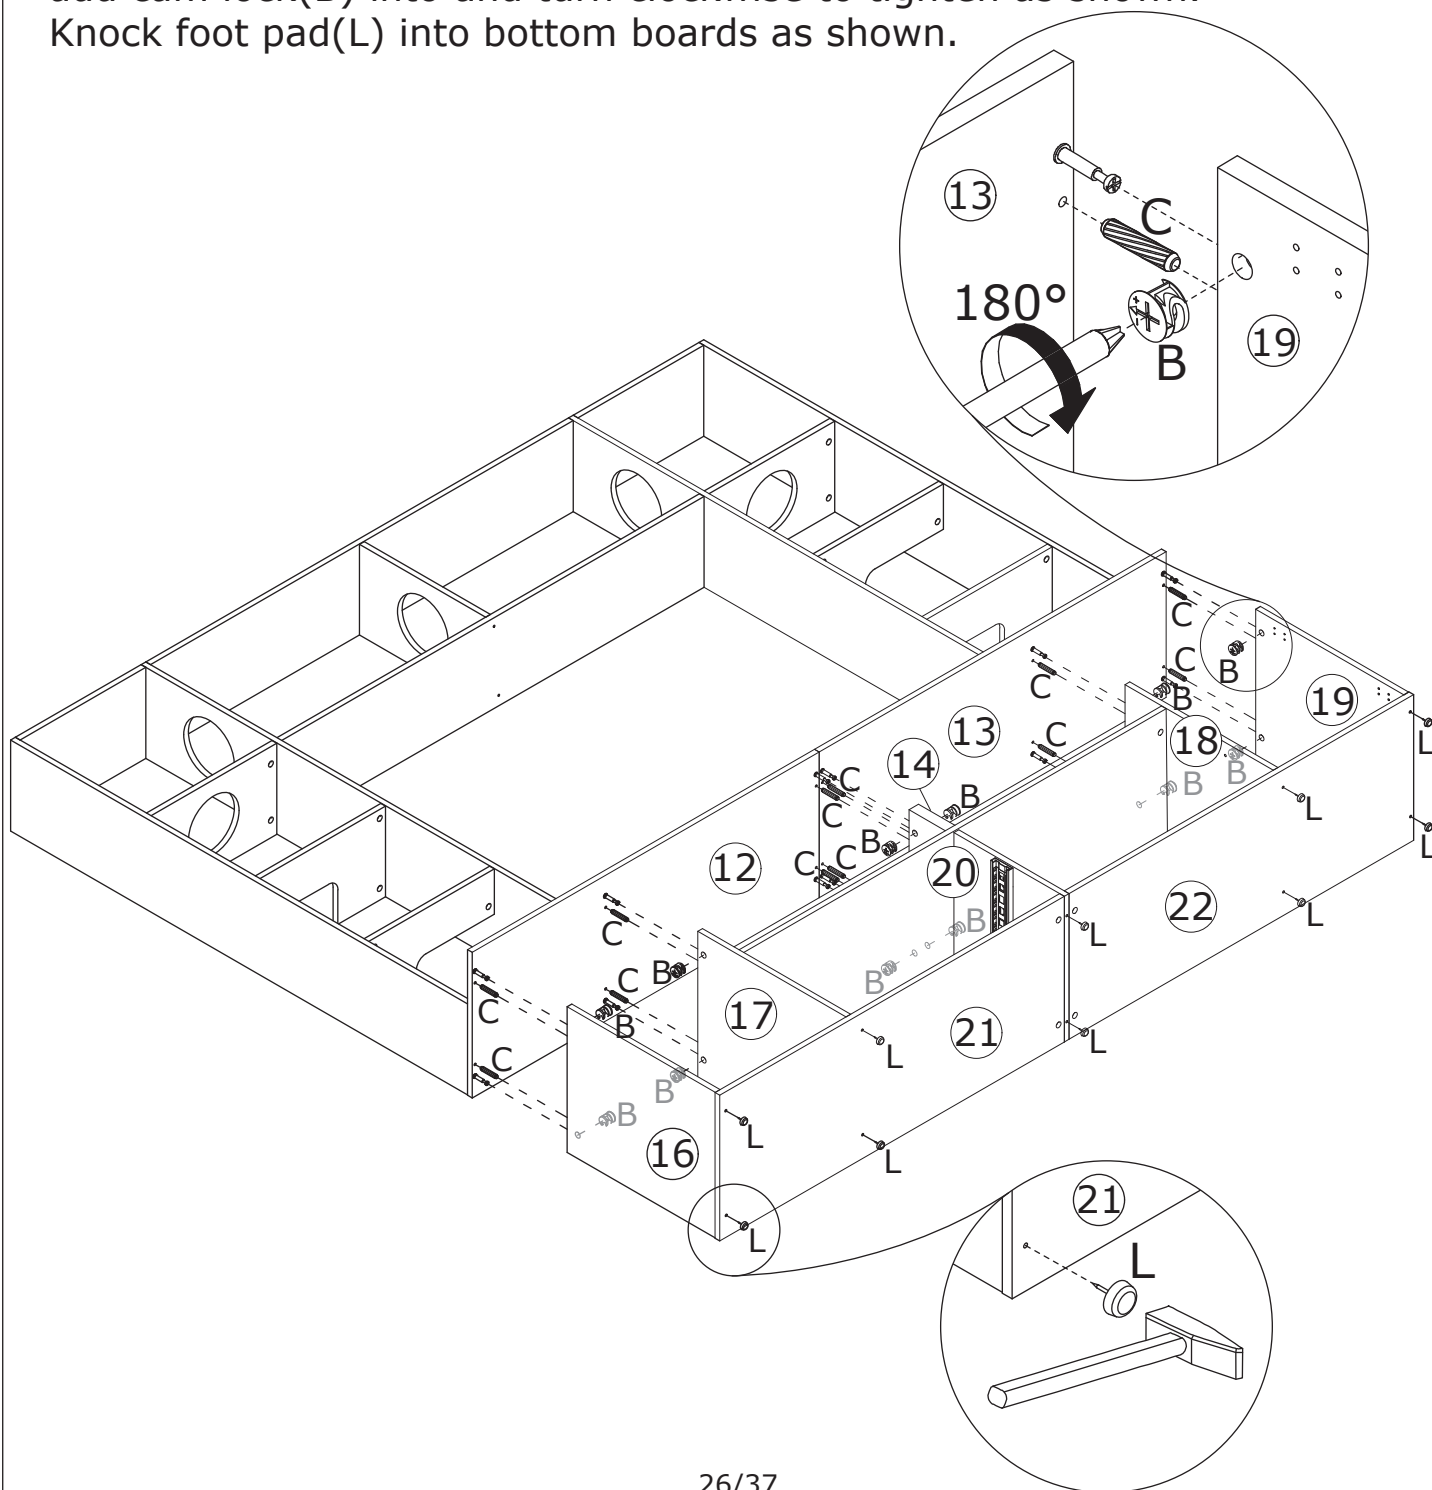


22


 
G x 85





J x 16

  

  
Fix back board 31, 32, 33, 34 and 35 to the cabinet with nail(G) as shown.
Use iron sheet(J) to fix each back boards together with nail(G) as shown.

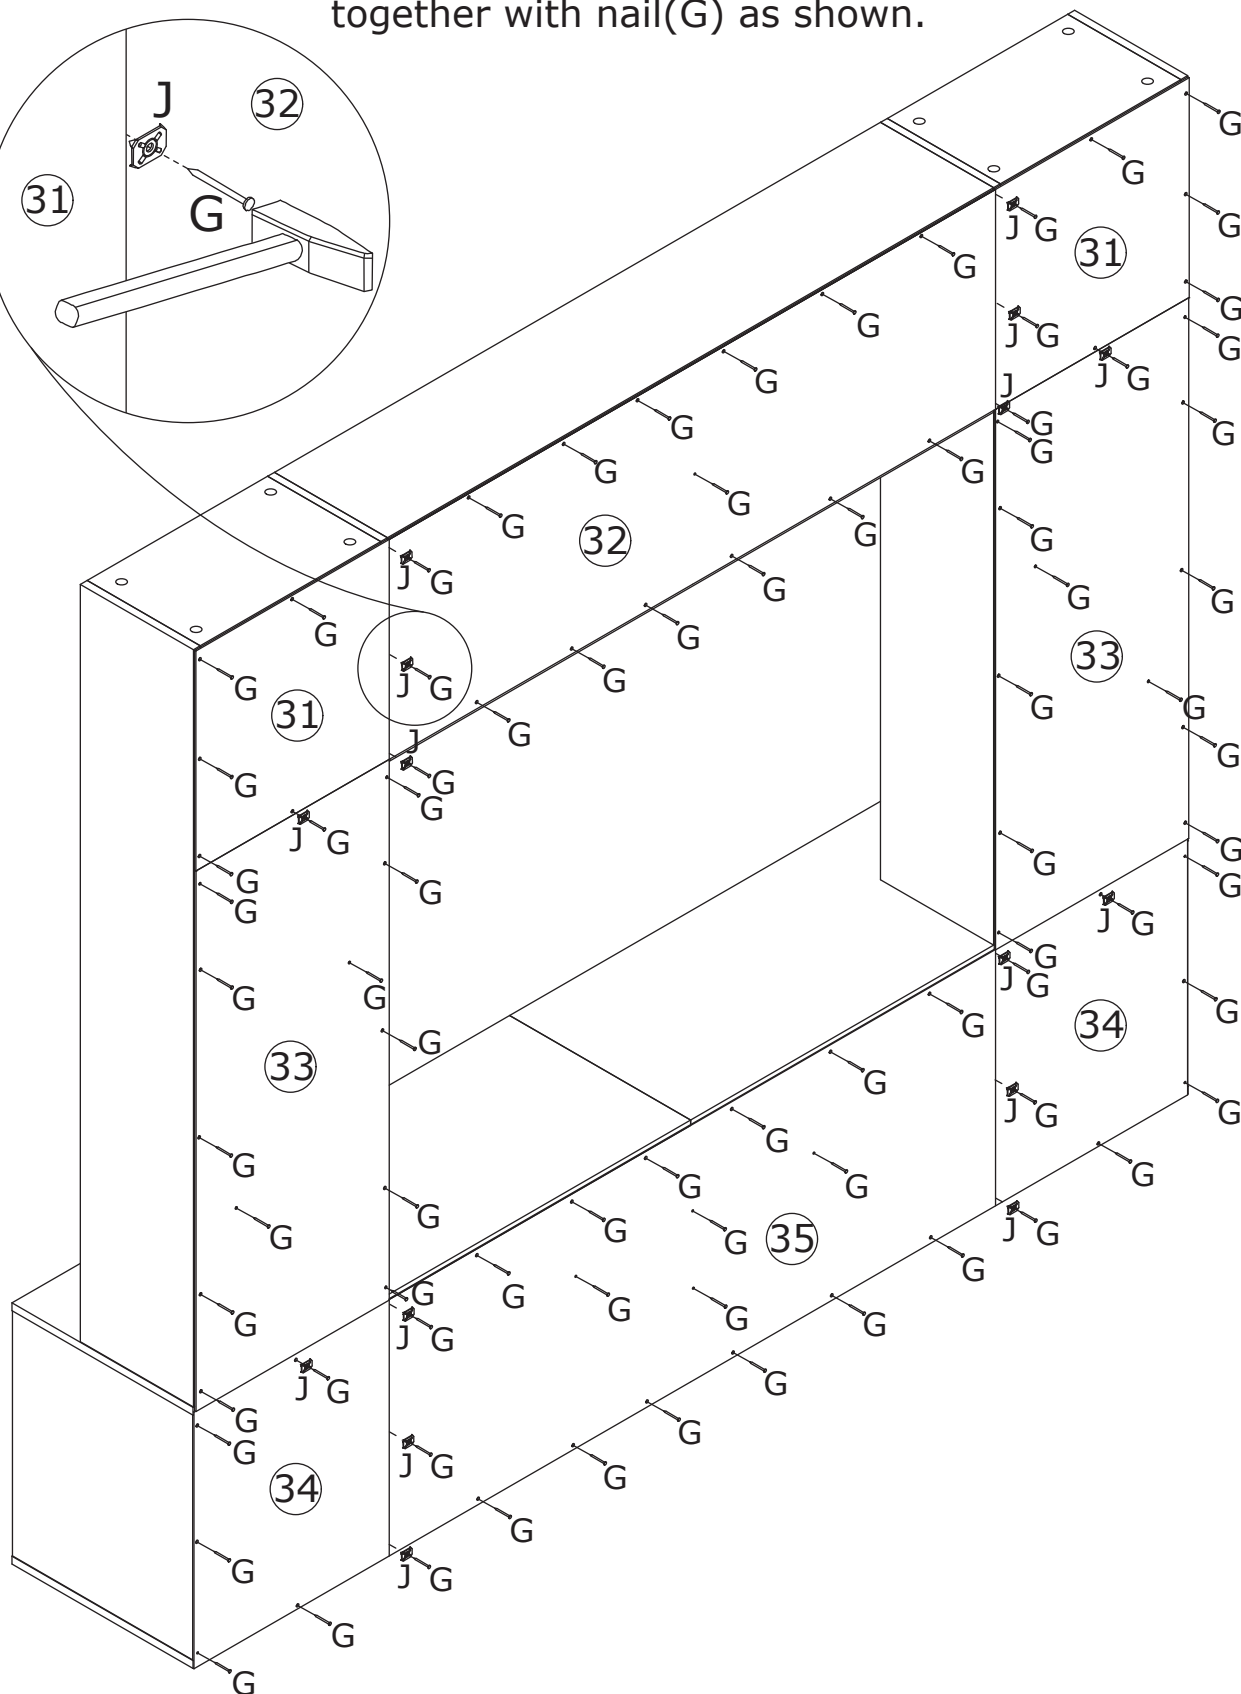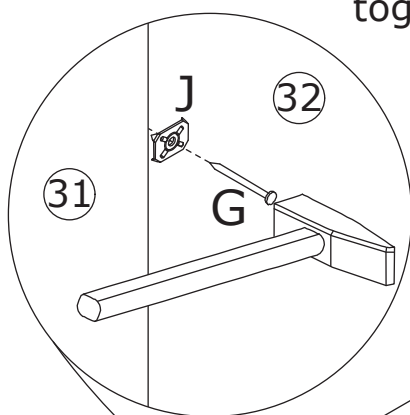

23

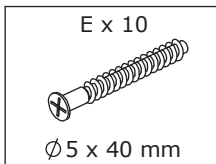  


 Fix board 24, 29 and 25 to board 26 with screw(E) as shown.

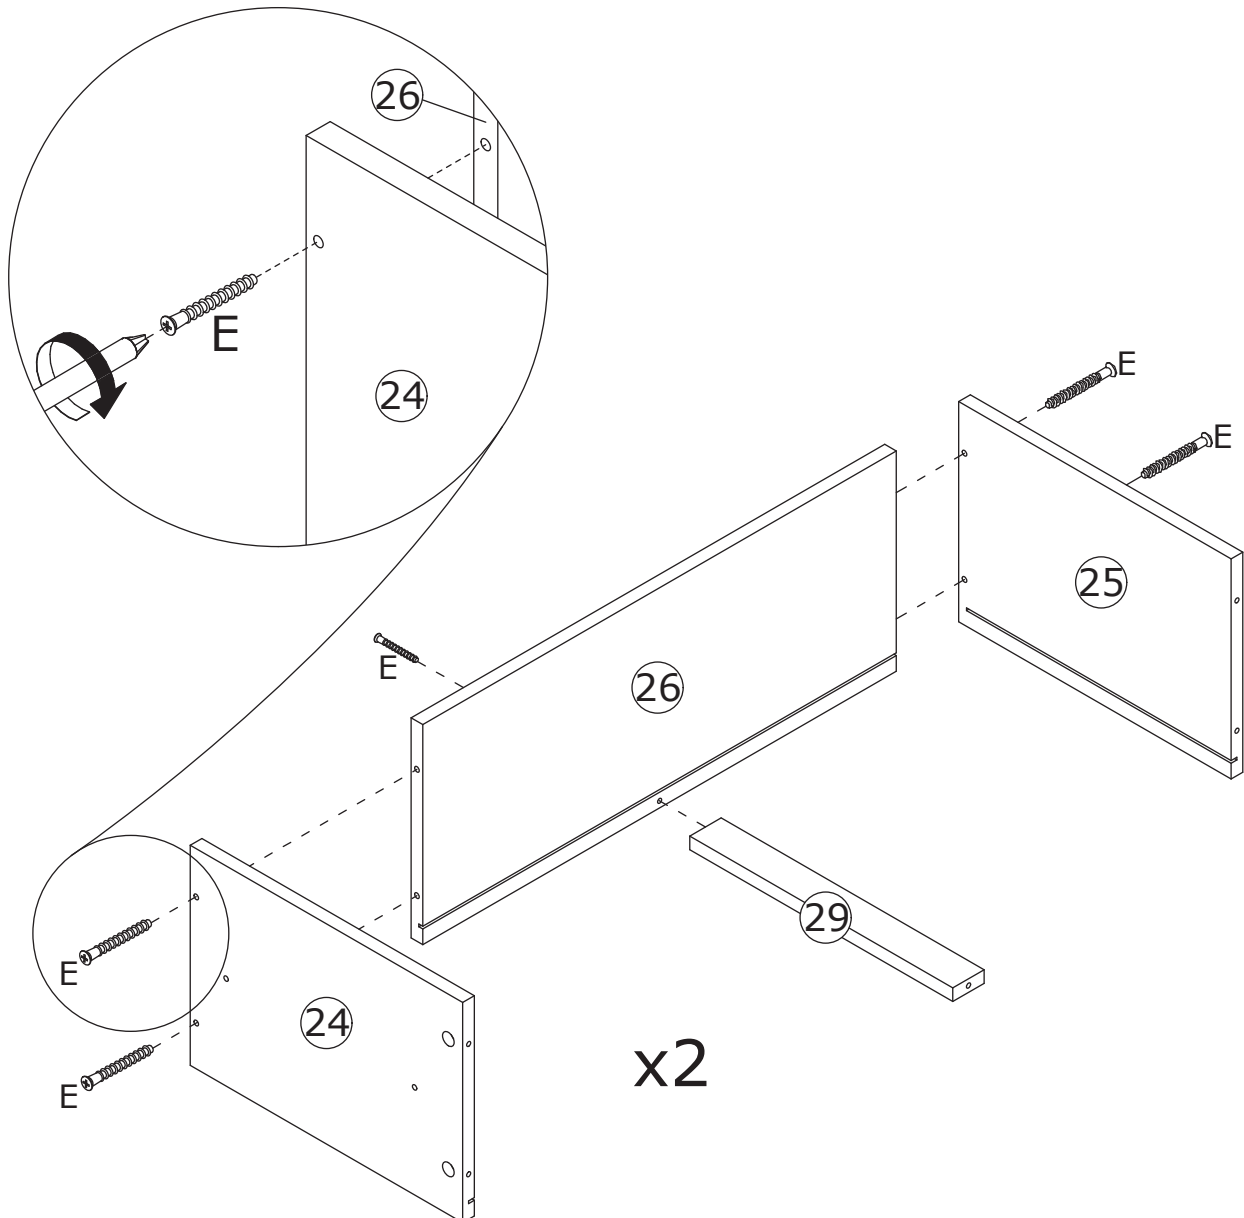





24

 Insert bottom board 28 along available grooves as shown.


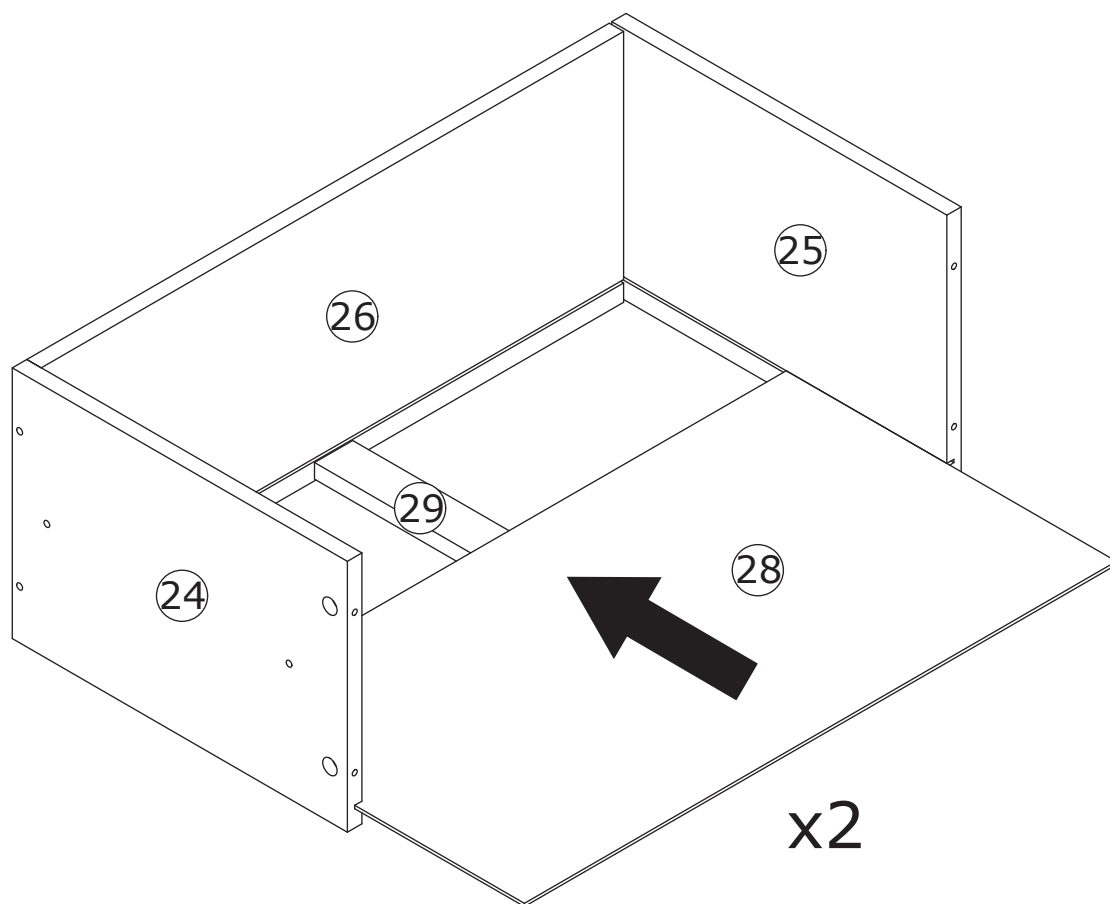


25



 
A x 10

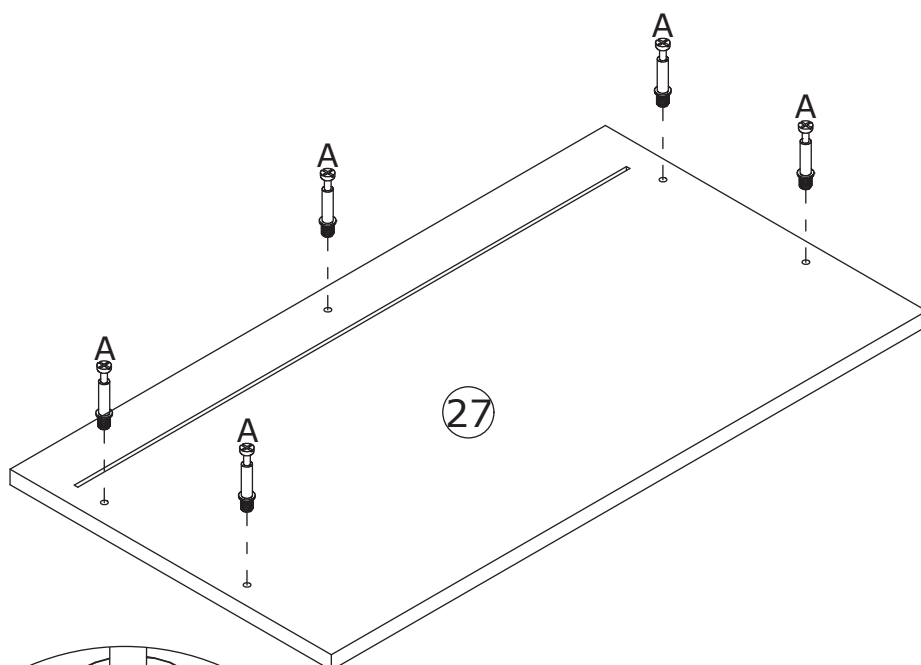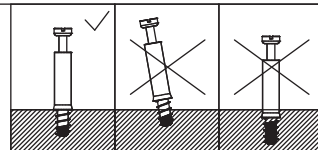    Ø6 x 35 mm

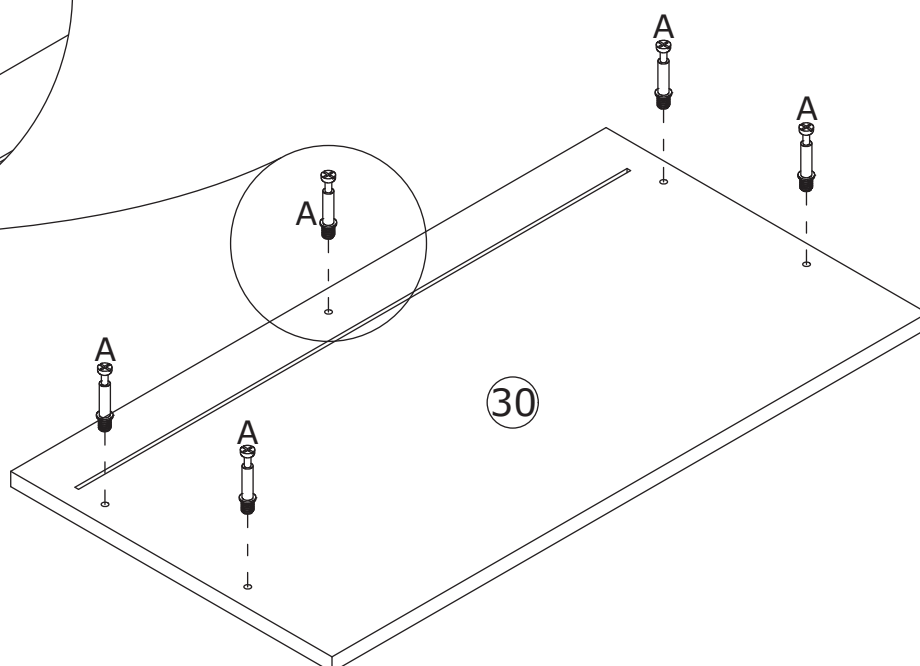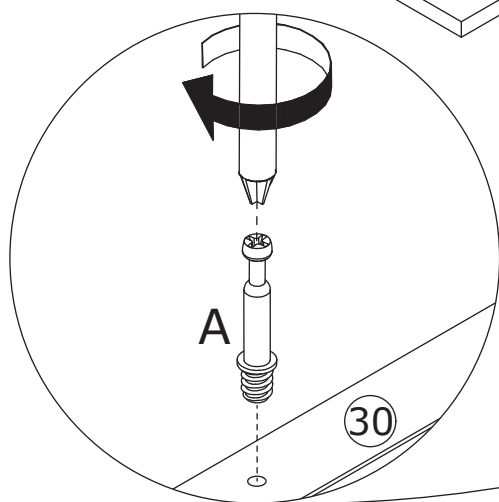  

 
 
 
Screw eccentric rod(A) into board 27 and 30 as shown.

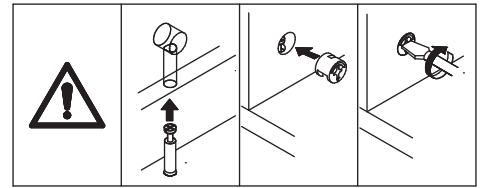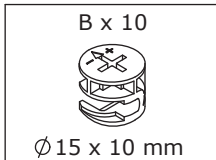


26



   
Attach board 27 and 30 to board 24, 29 and 25,
add cam lock(B) into and turn clockwise to tighten
as shown.

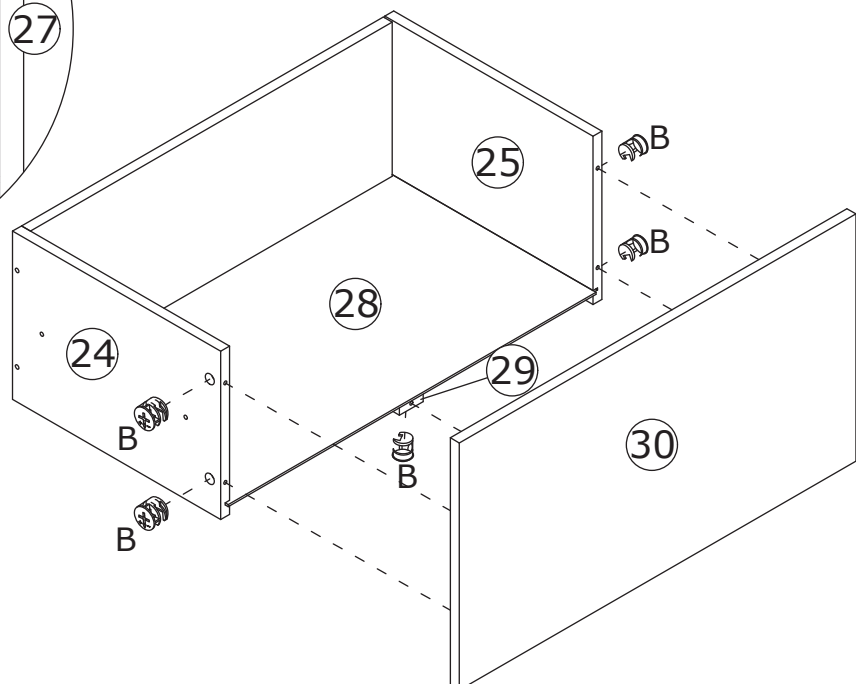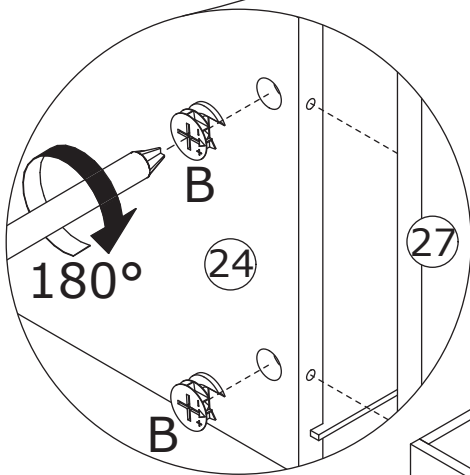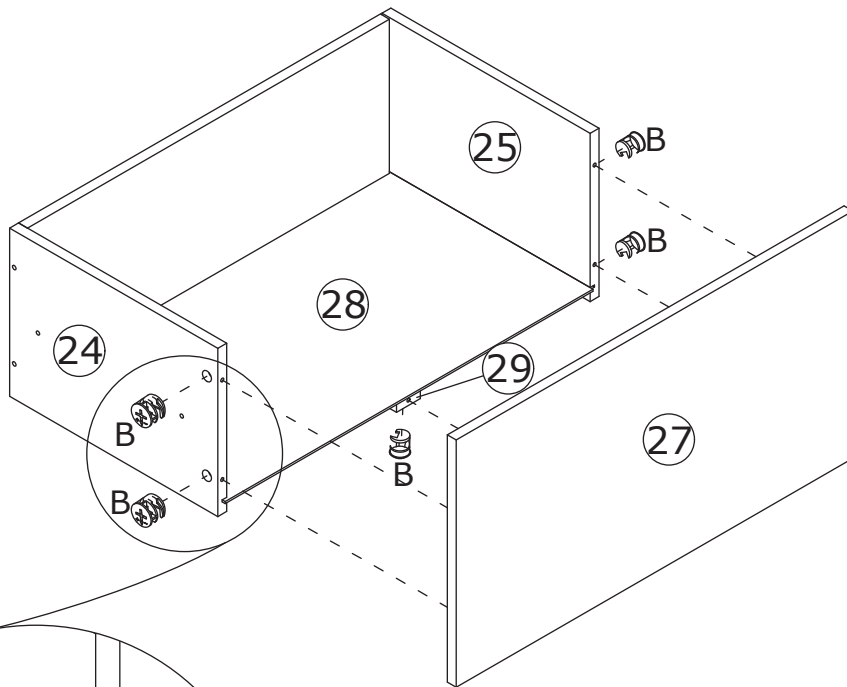

27

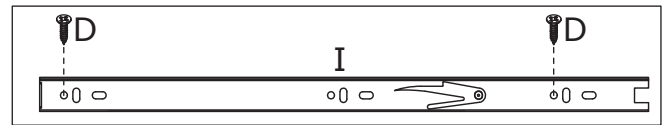 


 Fix runner(I) to board 24 and 25 with screw(D) as shown.

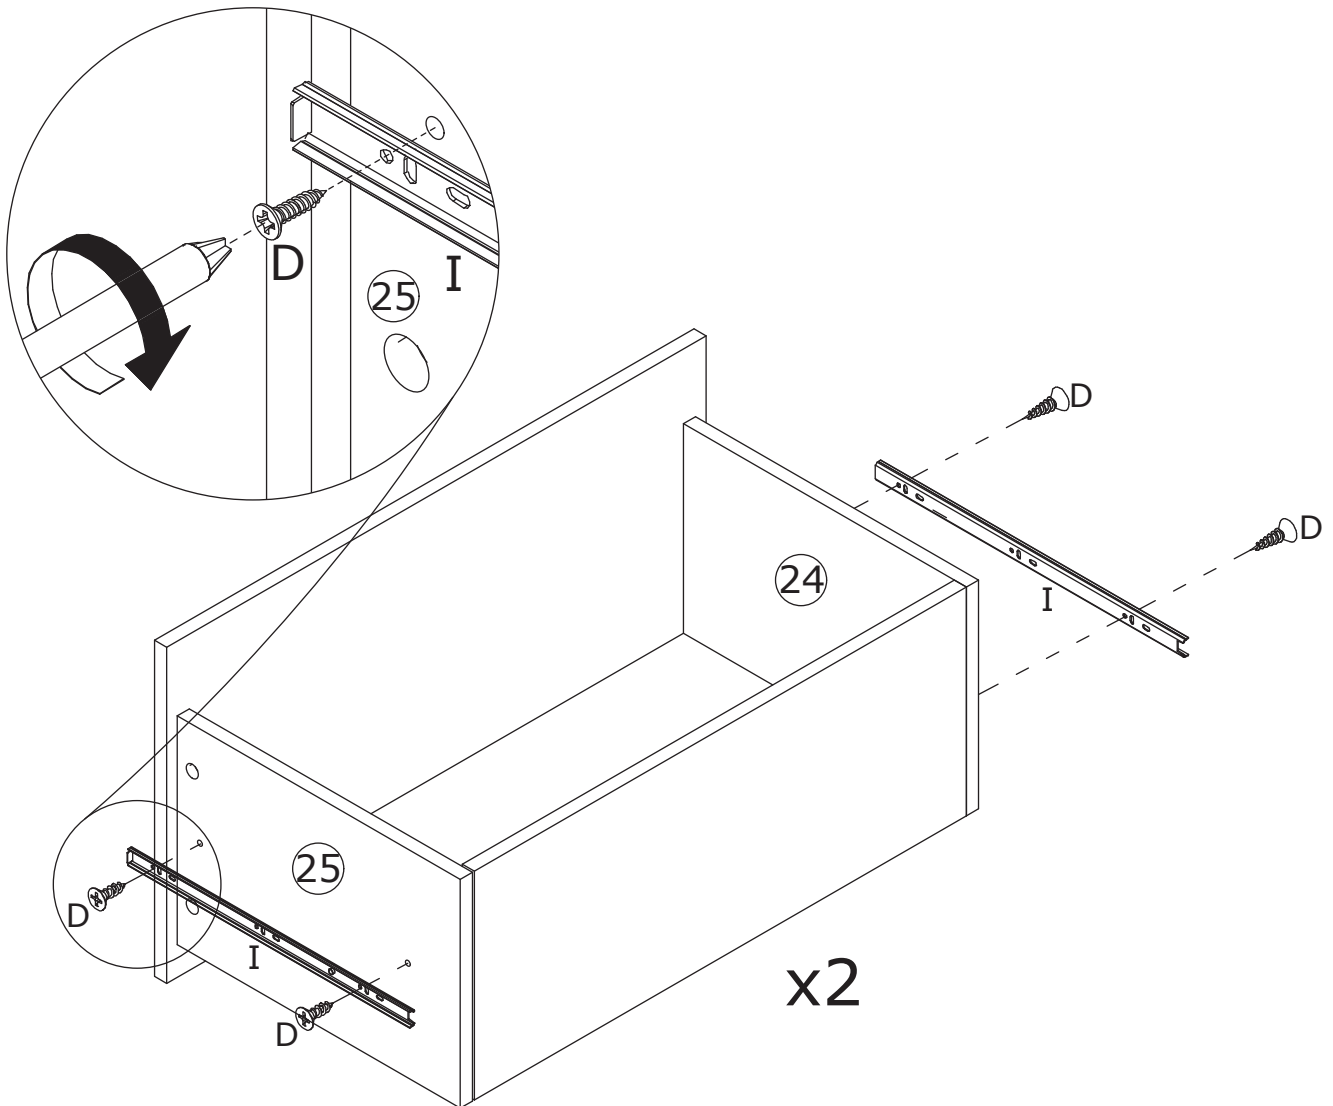


28

 Align rails, insert drawers in.

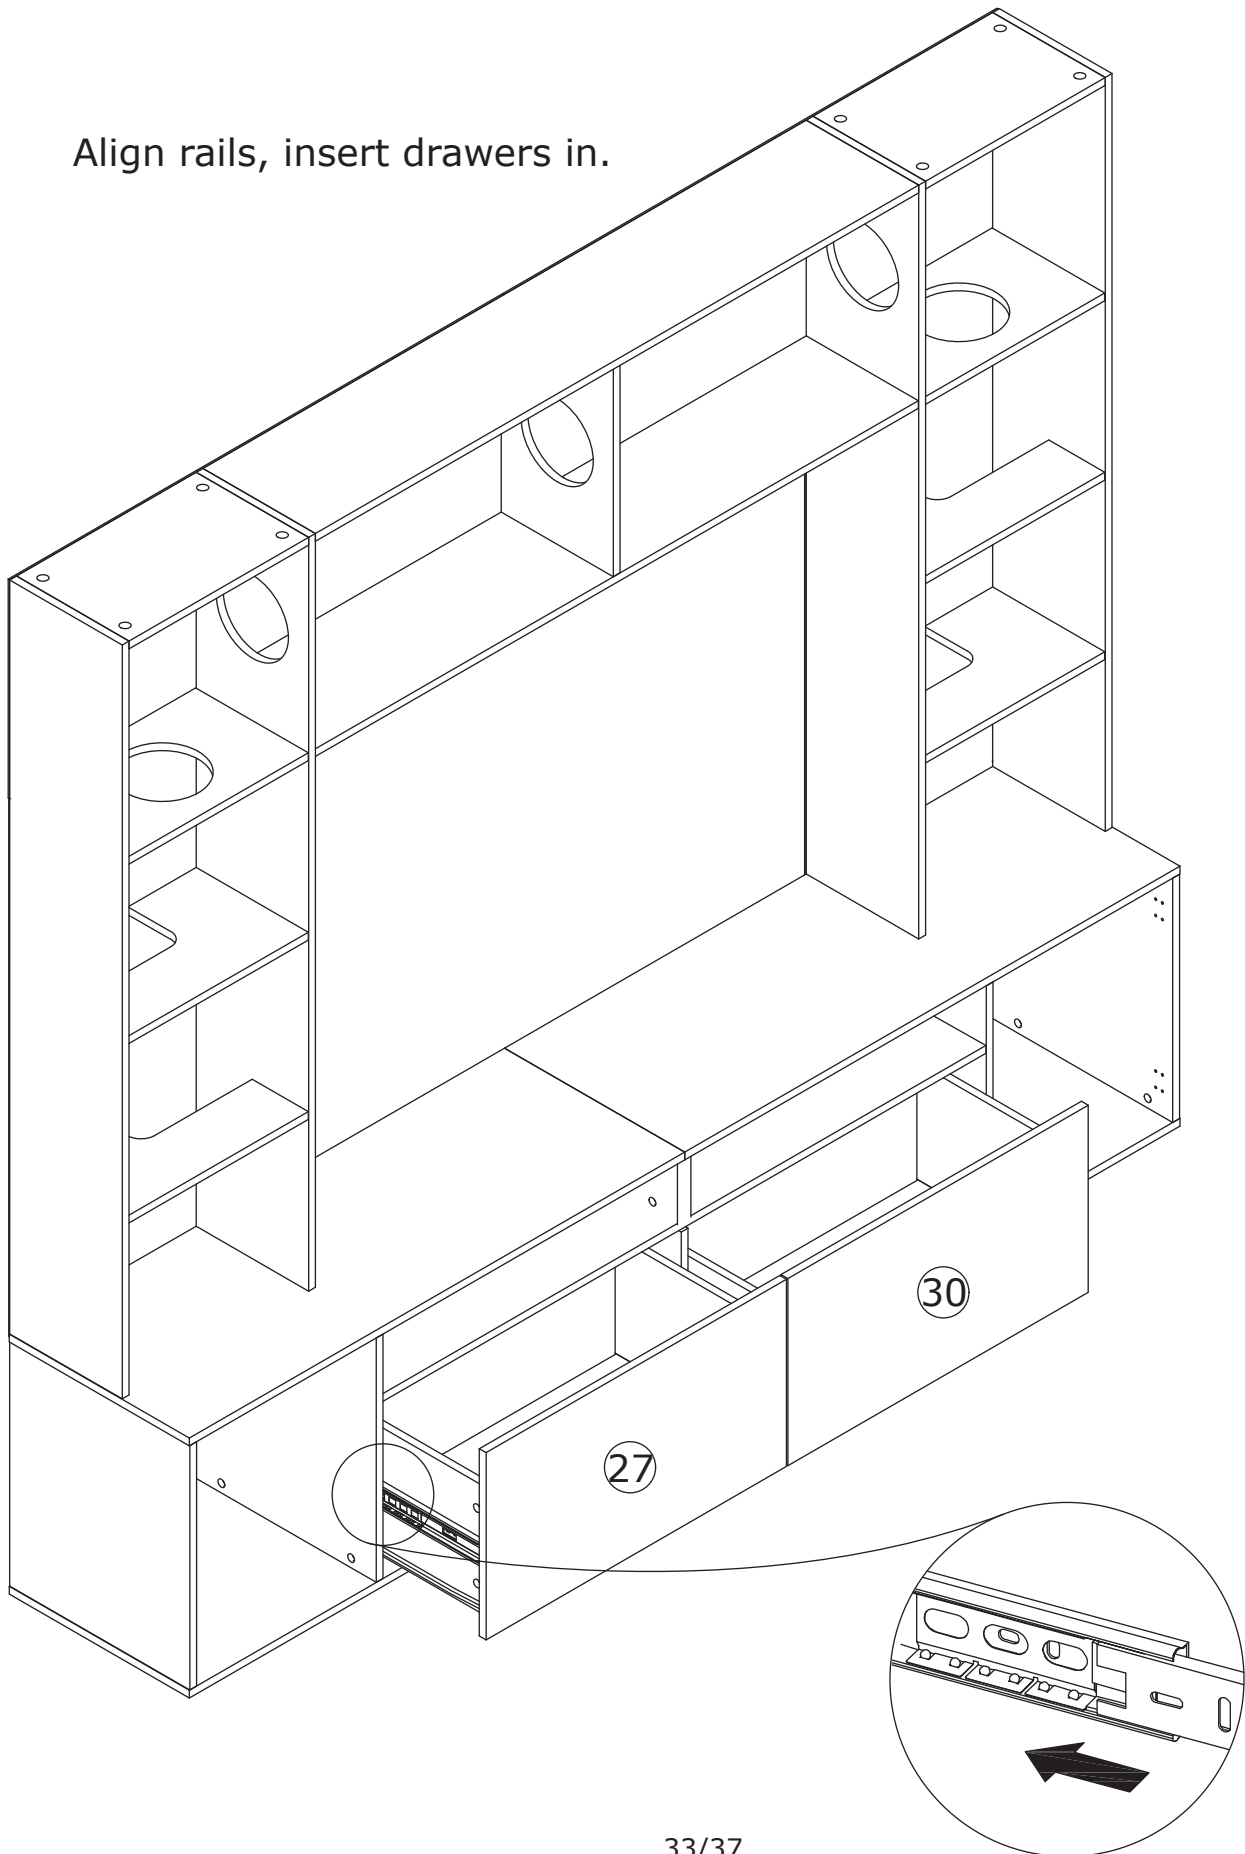

29

 D x 8







Ø 3.5 x 14 mm

H x 4



    ZB

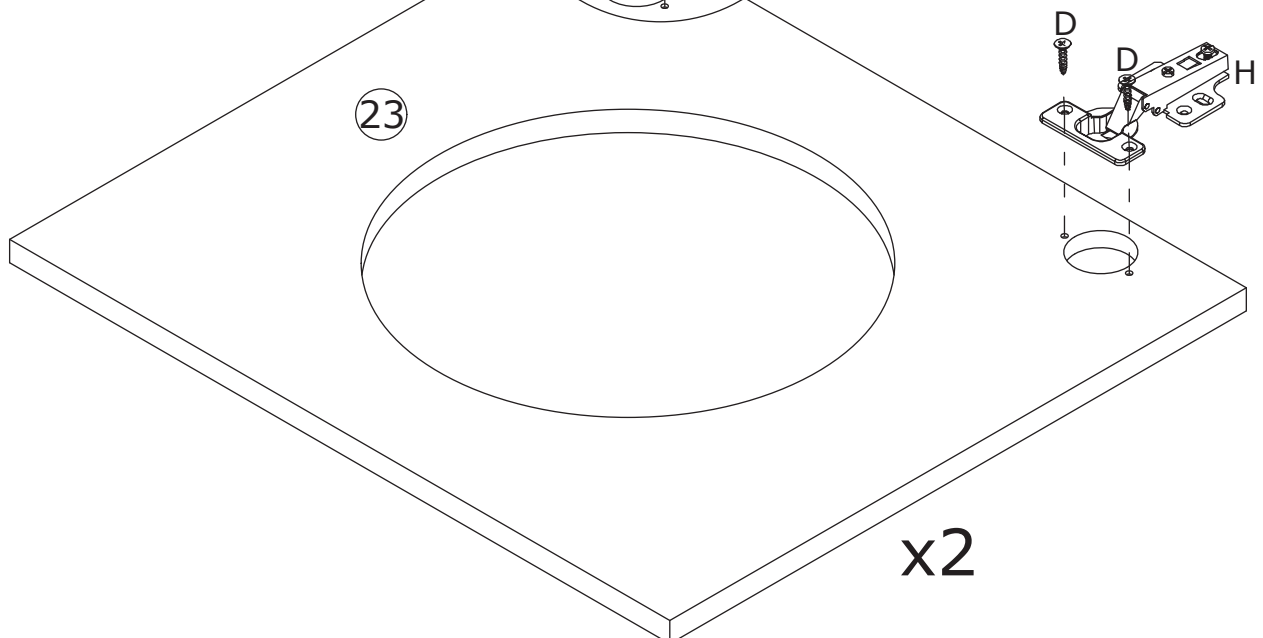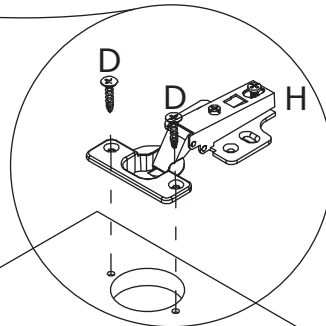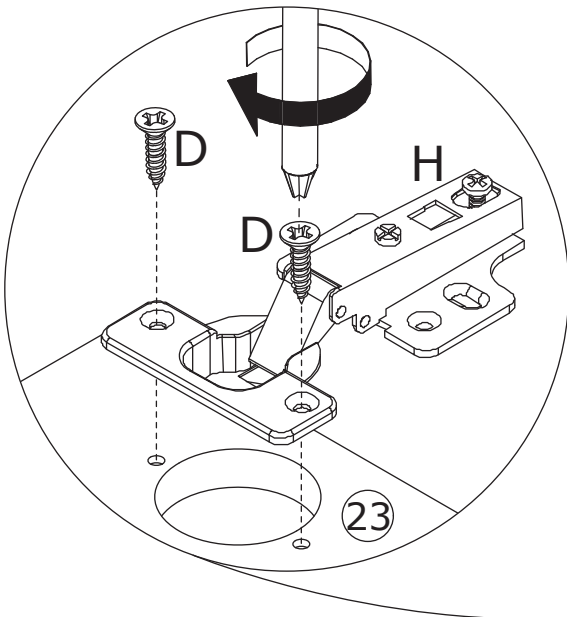


Fix hinge(H) to board 23 with screw(D) as shown.


30

D x 16


 
 Ø 3.5 x 14 mm







 
Assmble door 23 to board 16 and 19
 by fixing hinge with screw(D) as shown.

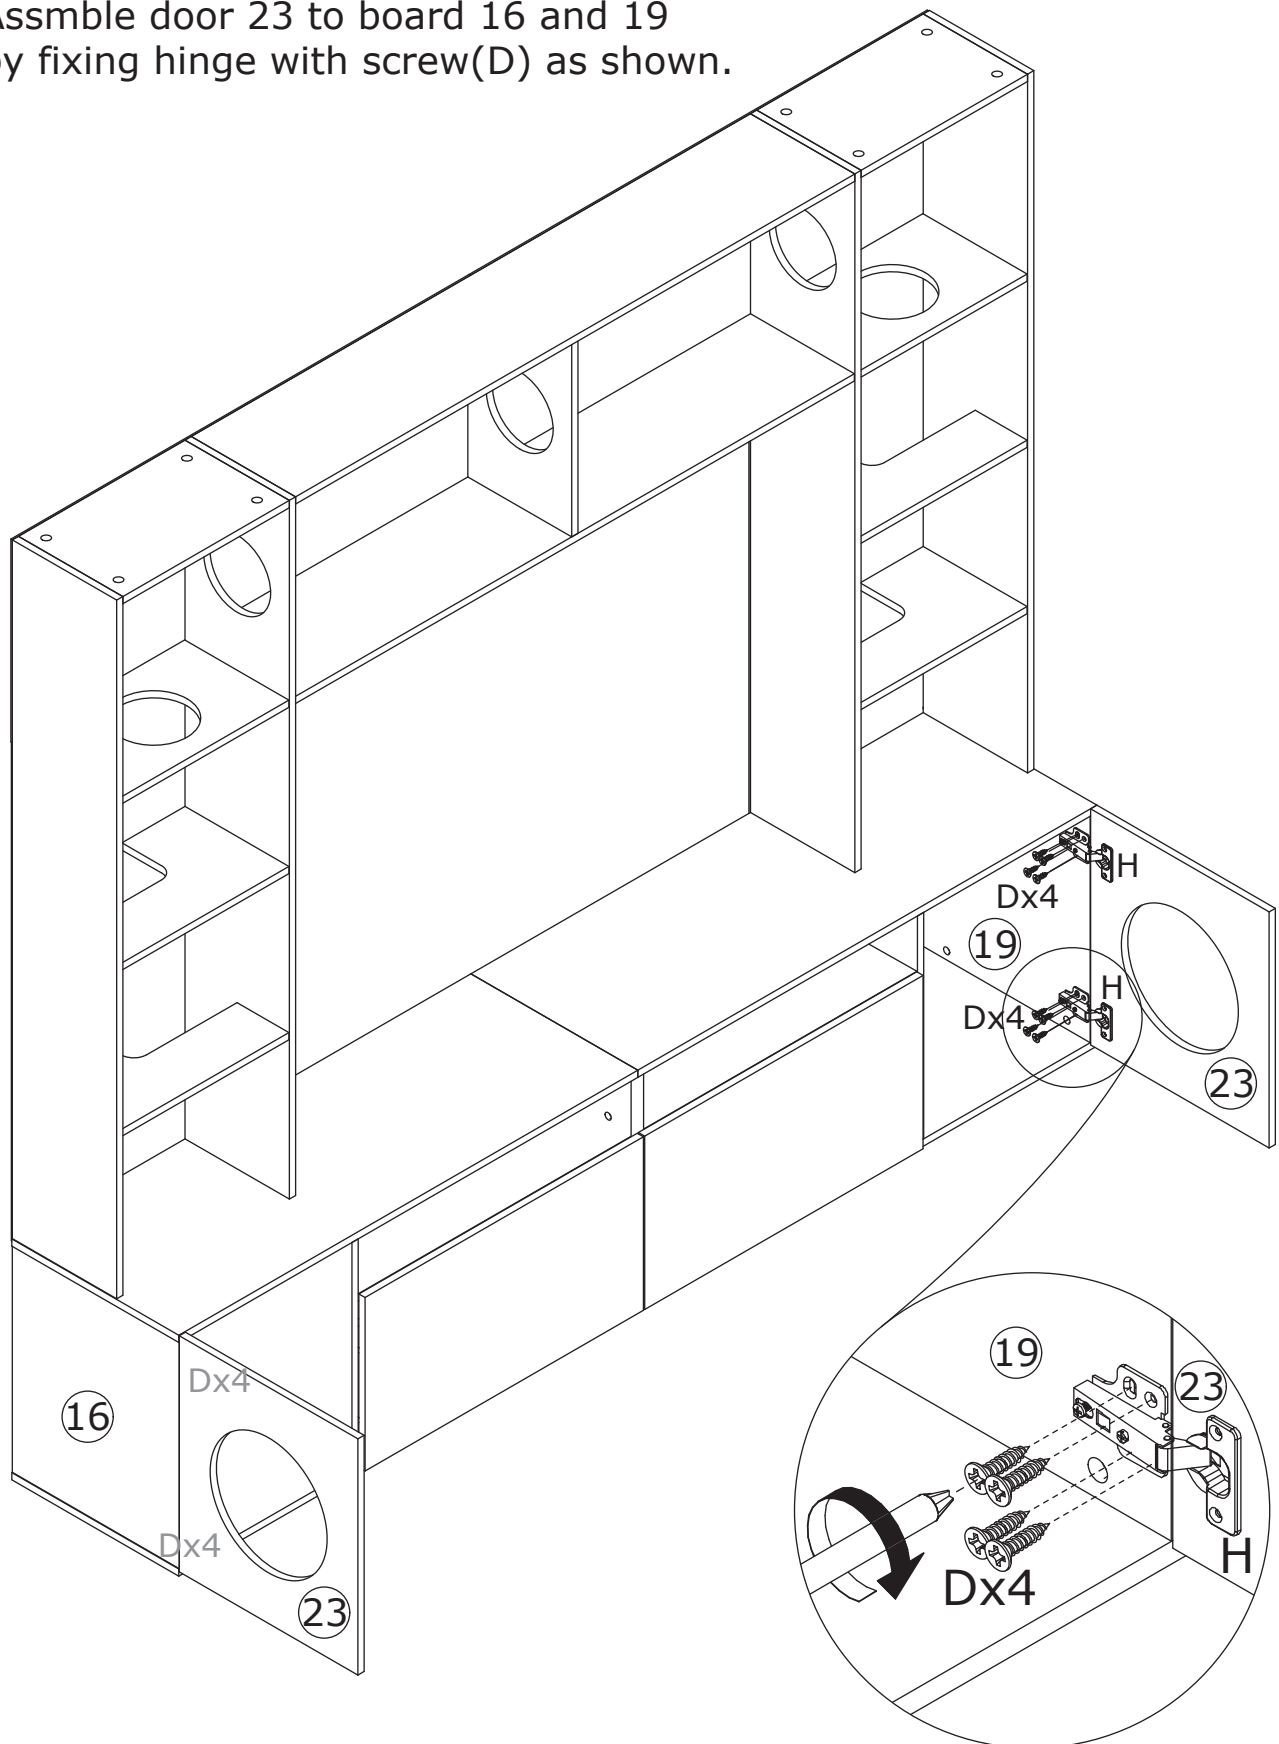


31

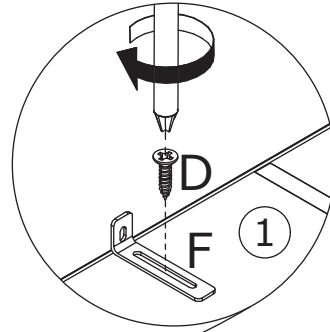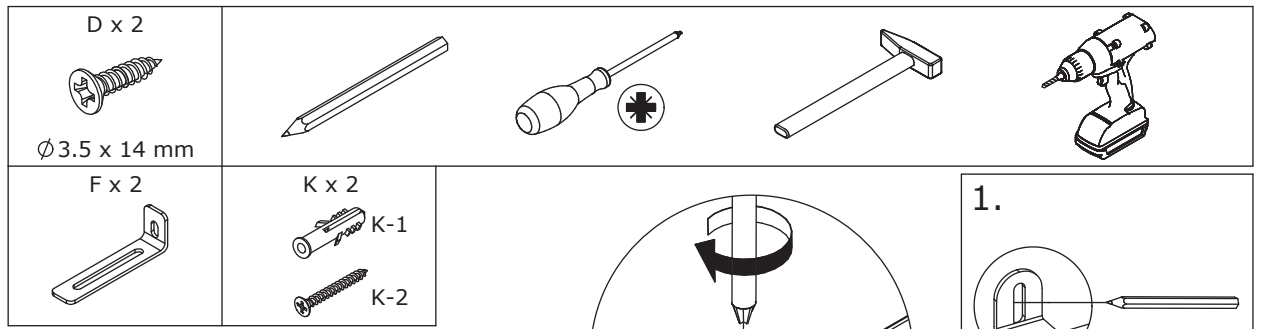  

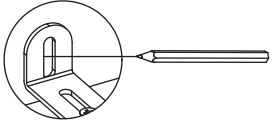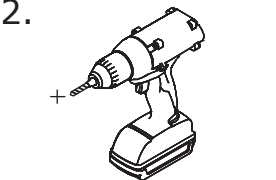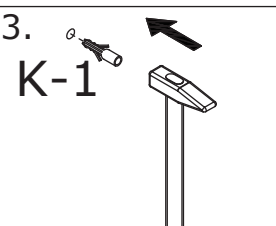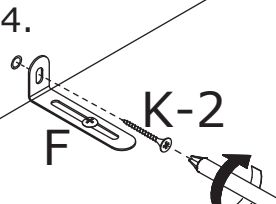    - 
- 
- 
- 

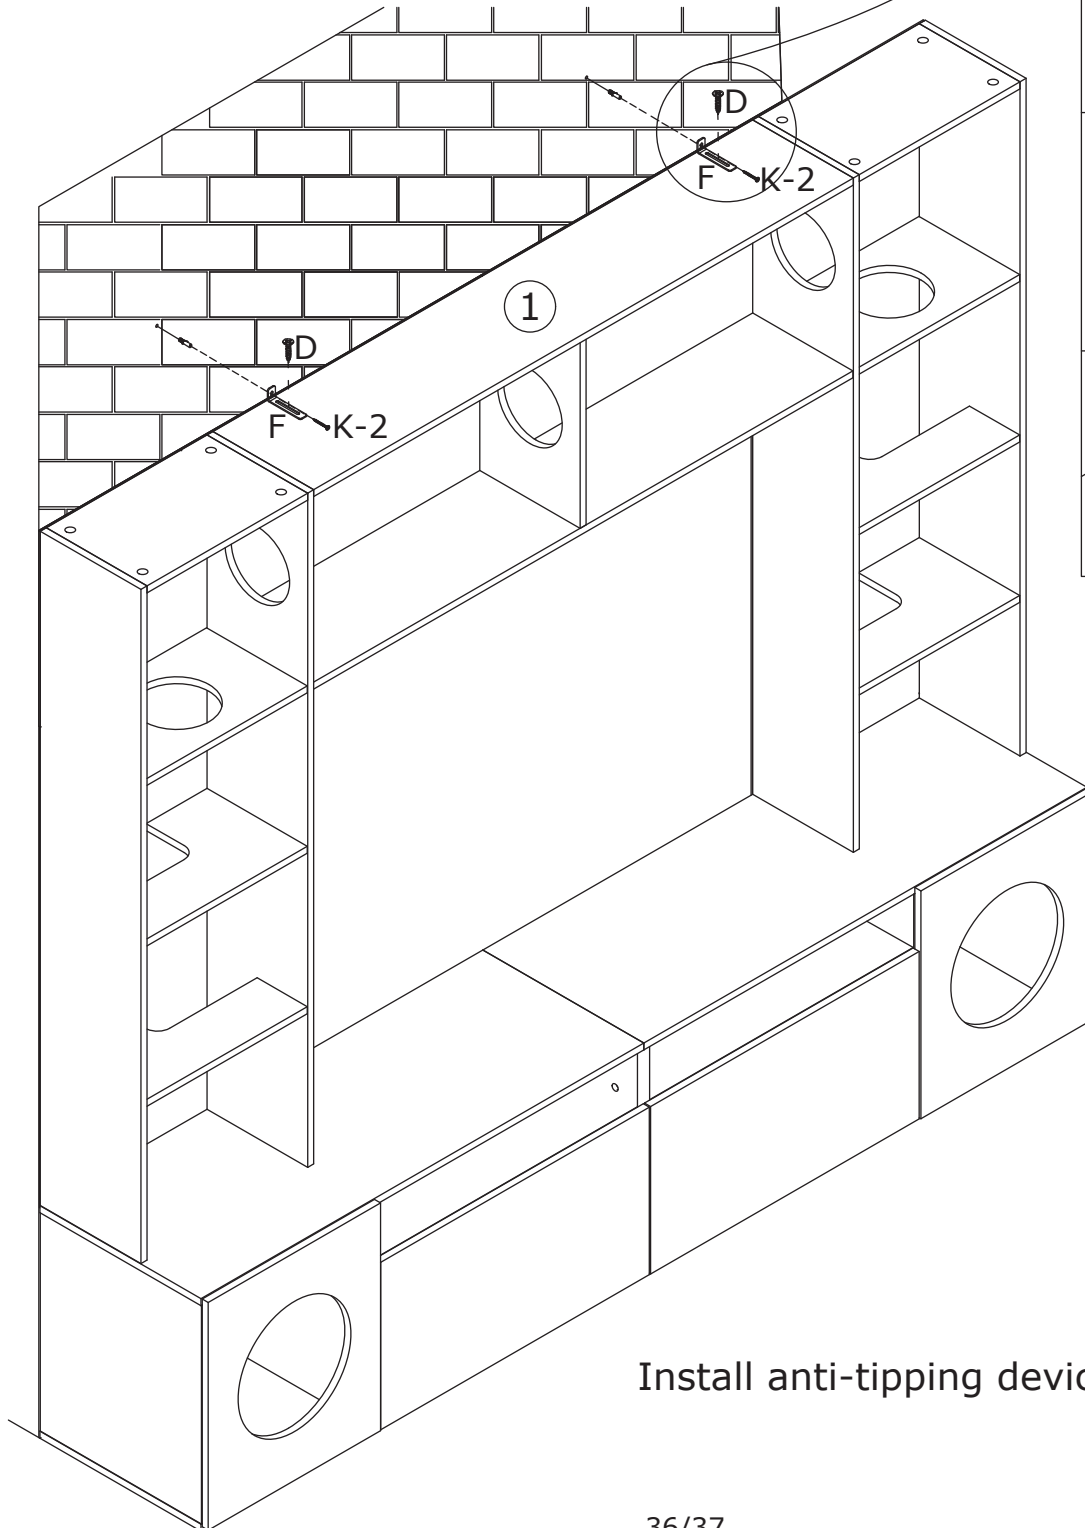 













Install anti-tipping device as shown.

 

If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

            If there is misalignment after you install, adjust the screw to the best condition

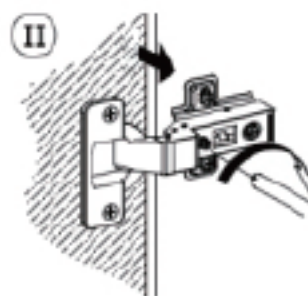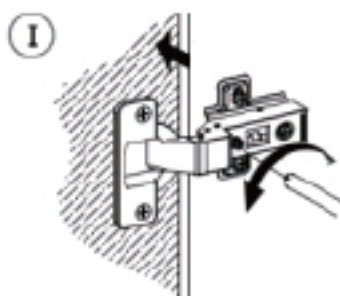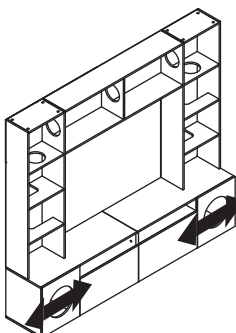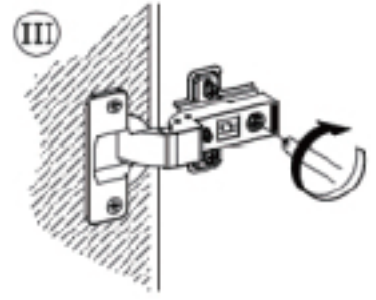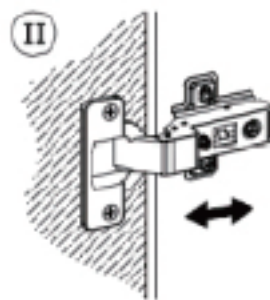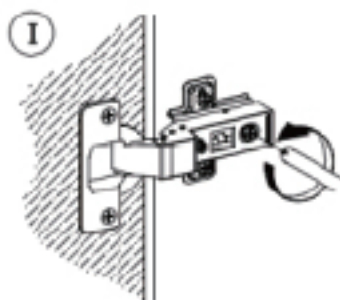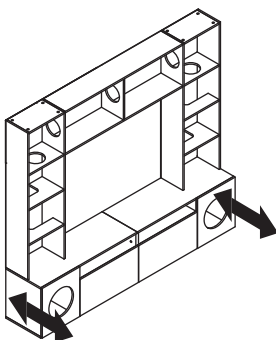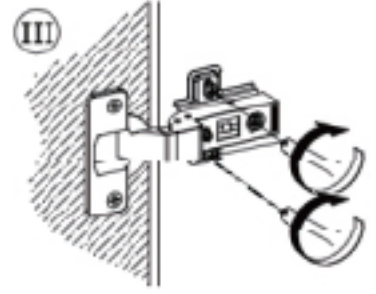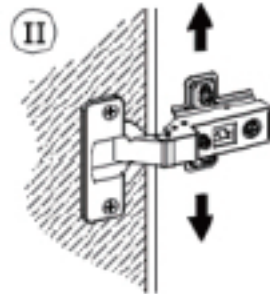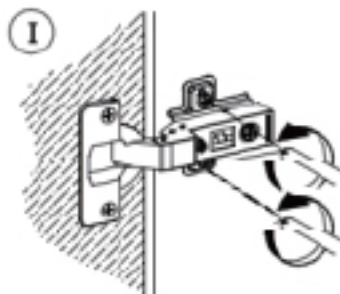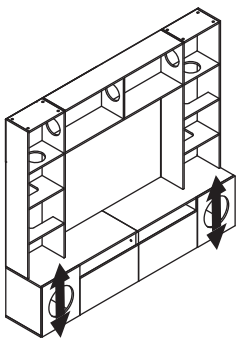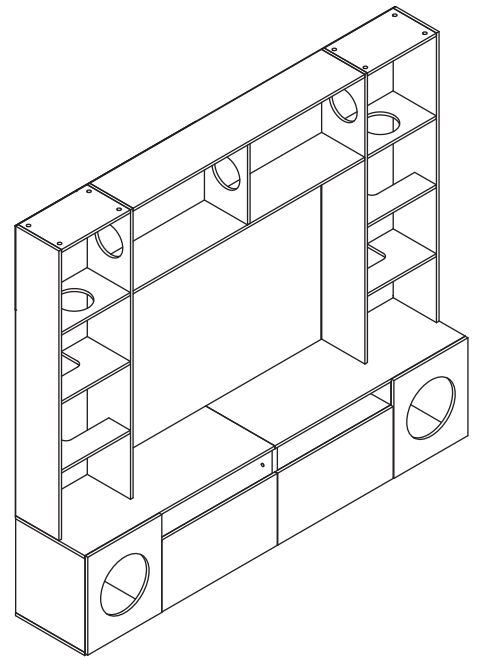

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387