 
 
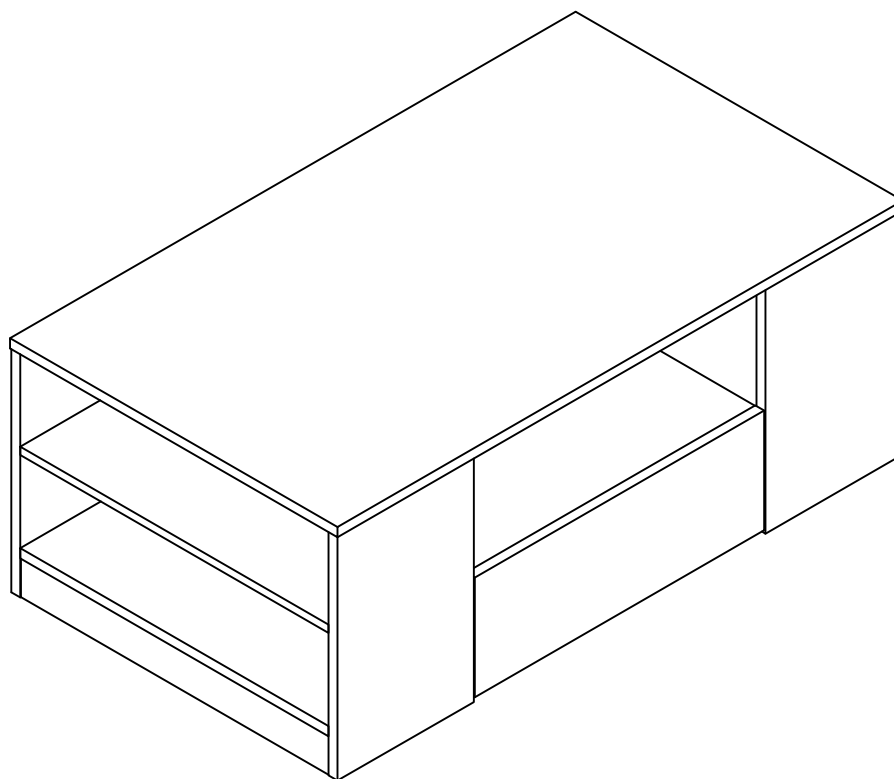 
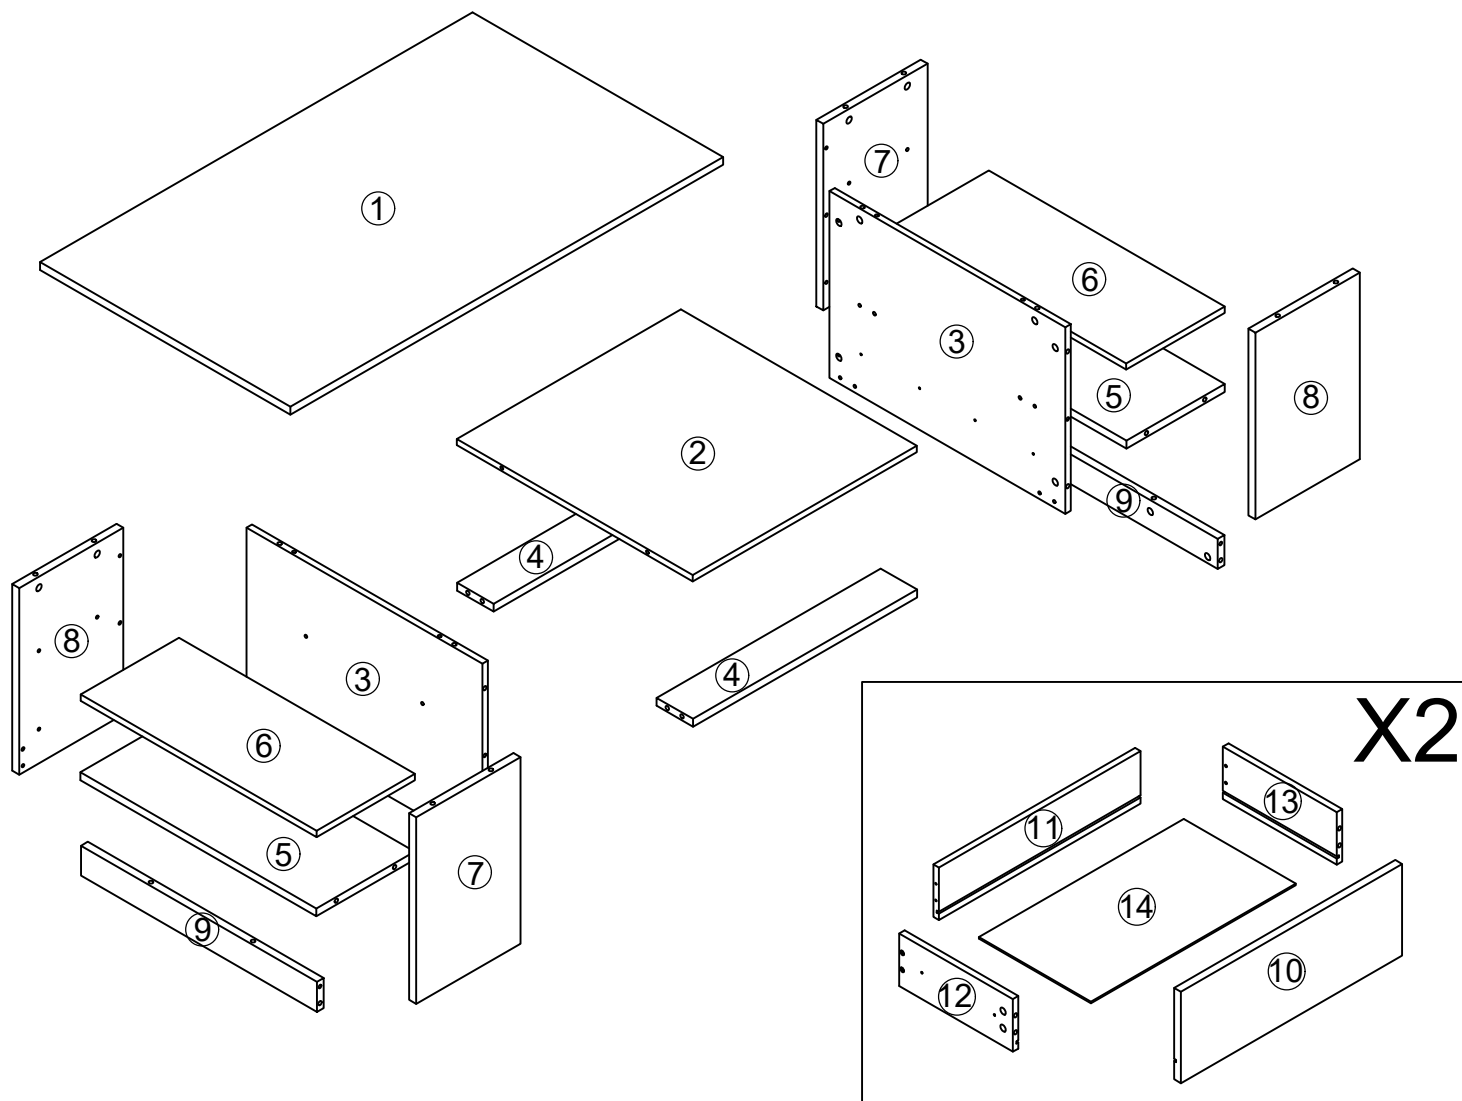 
 
 
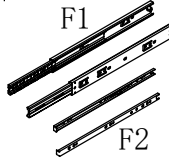 
 
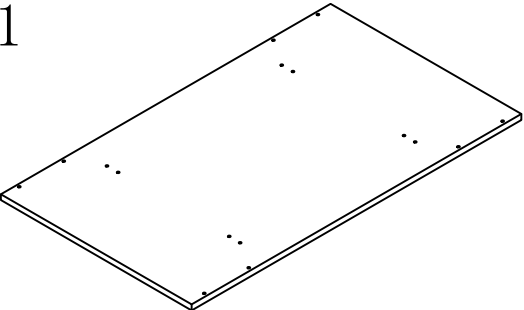 
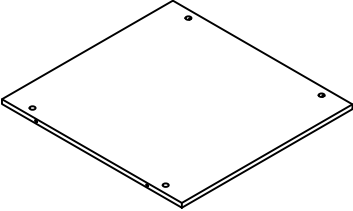 
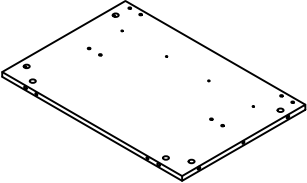 
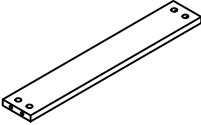 
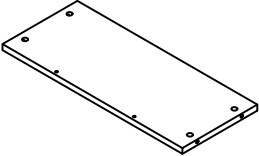 
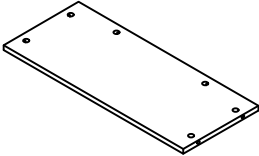 
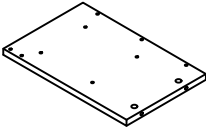 
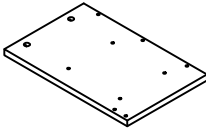 
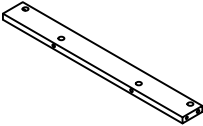 
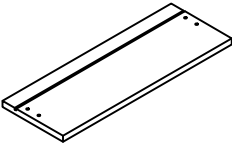 
 
 











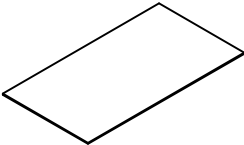

A  68PCS	B 6*30  16PCS	C  8PCS	D 3.5*12  16PCS	E 3.5*30  8PCS	F  2PCS	G  16PCS	LED  1PCS
--	---	--	---	---	--	---	--

1  950*550 1PS	2  492*518 1PS	3  355*518 2PS	4  492*80 2PS
5  518*216 2PS	6  518*216 2PS	7  355*229 2PS	8  355*229 2PS
9  518*57 2PS	10  486*174 2PS	11  443*100 2PS	12  250*100 2PS
13  250*100 2PS	14  450*246 2PS		

       1

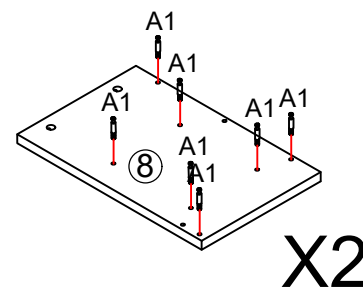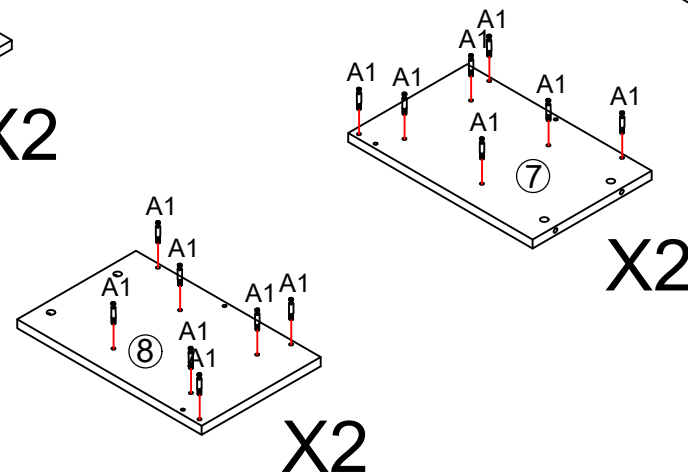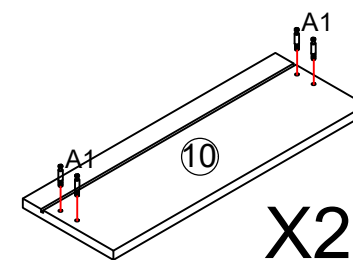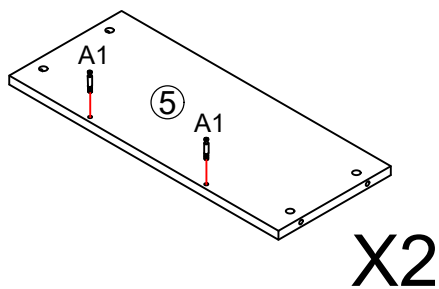
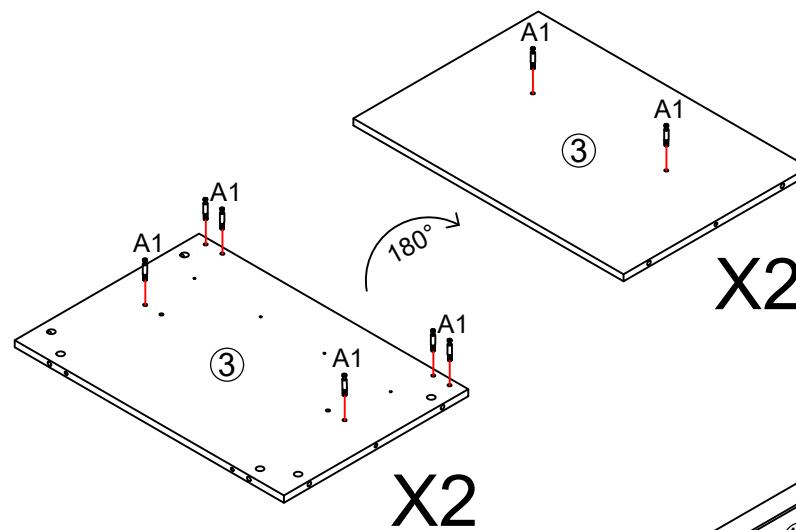
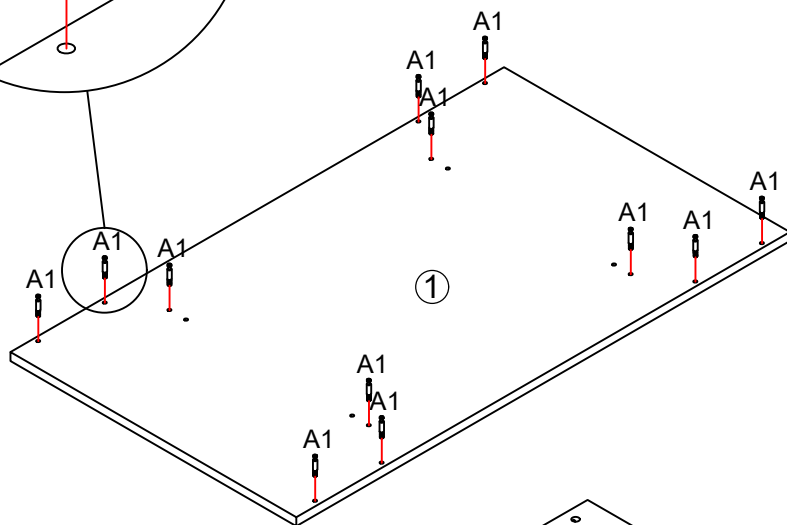
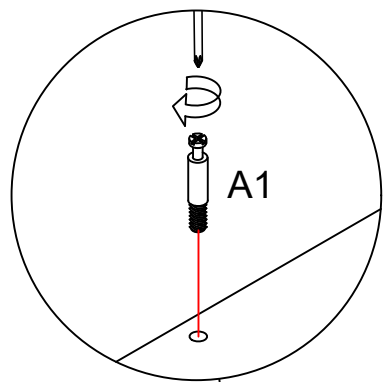


A1*68

2

X2

  
 
 
Make sure the arrow on the screw align to the hole on the side.

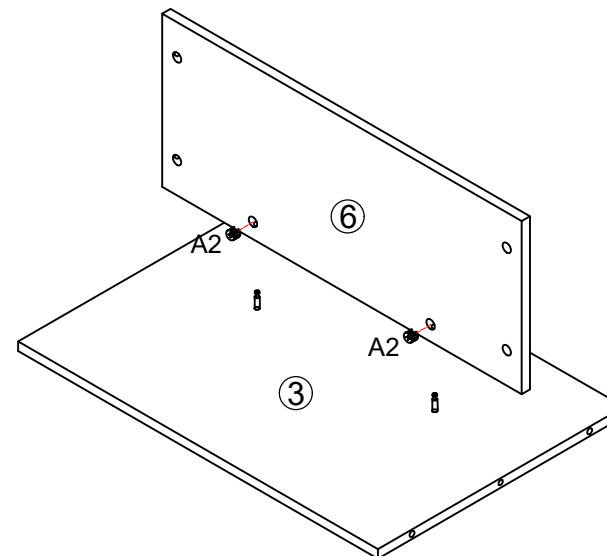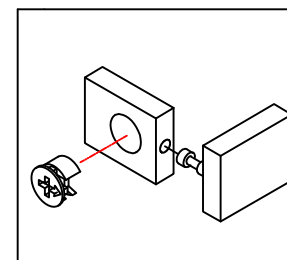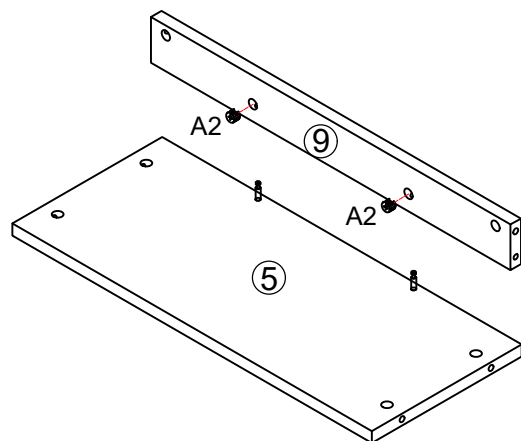

A2*8

3

   X2

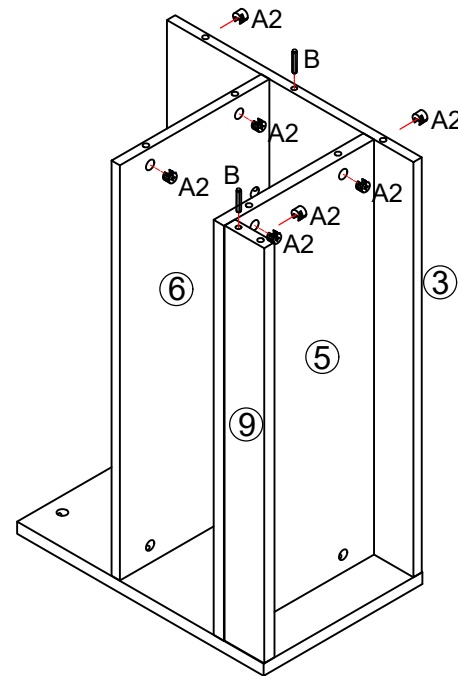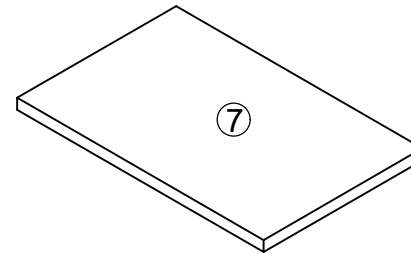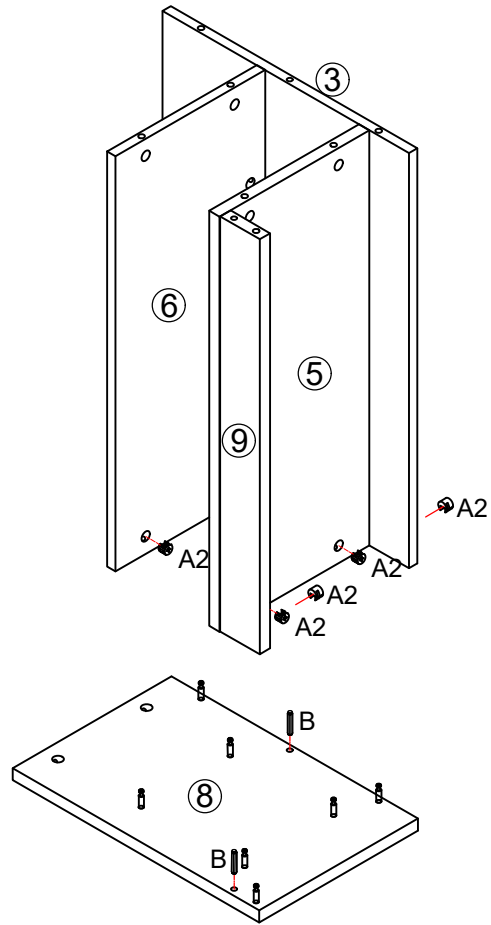





A2*28



B*8

4

    X2

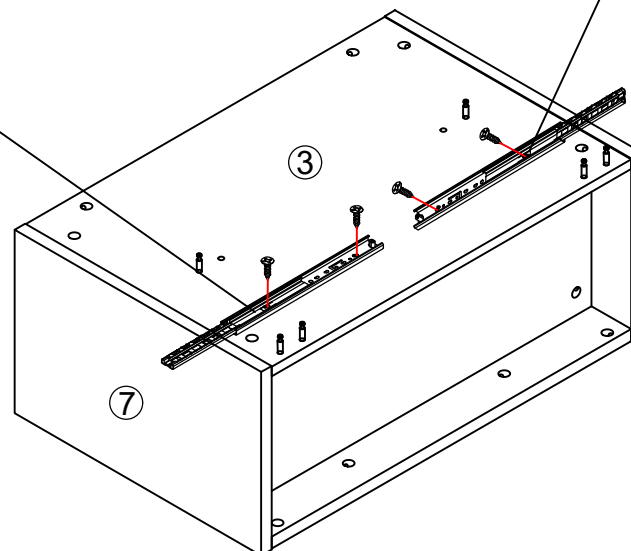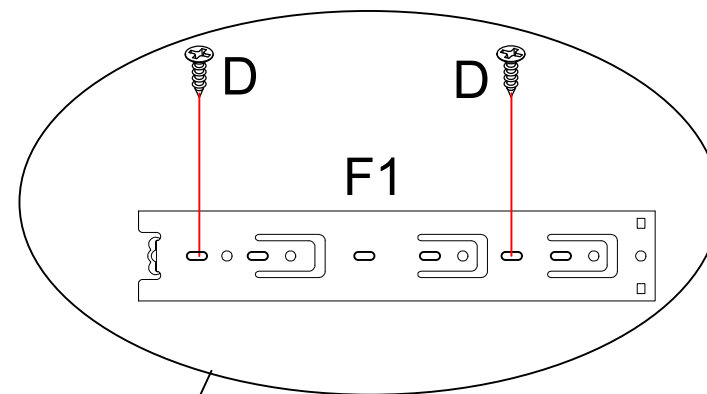
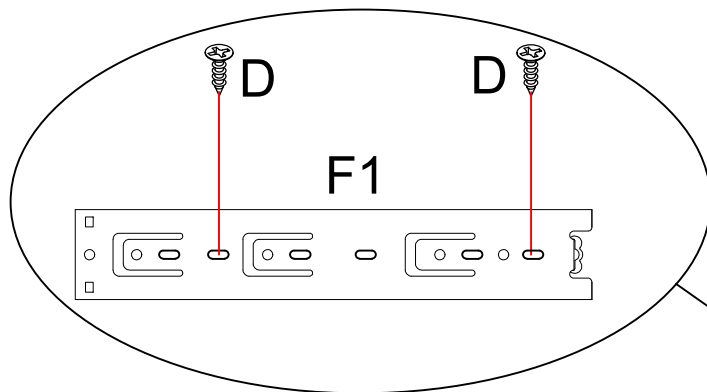
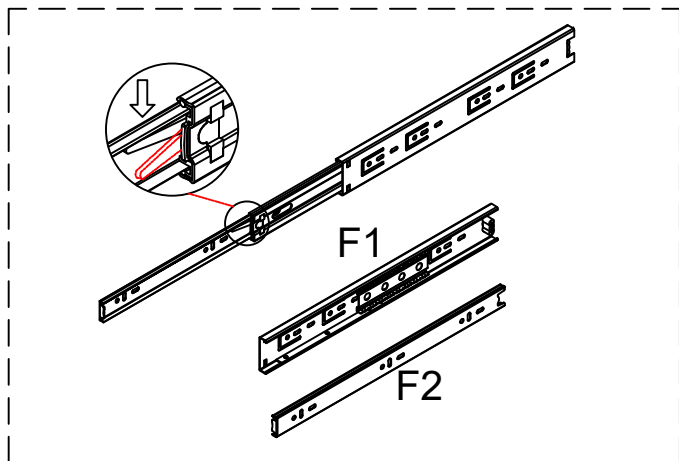


D*8




F1*2

   5

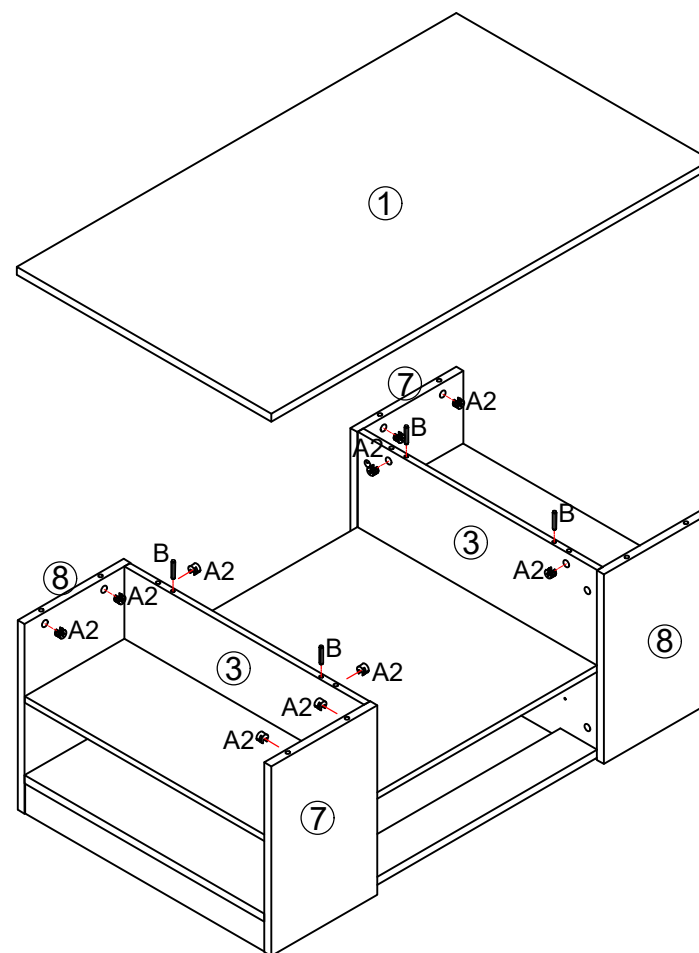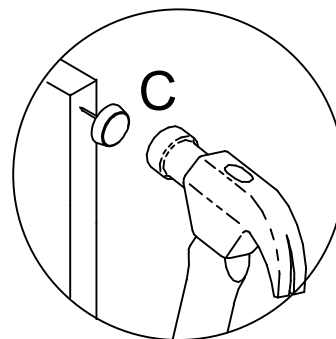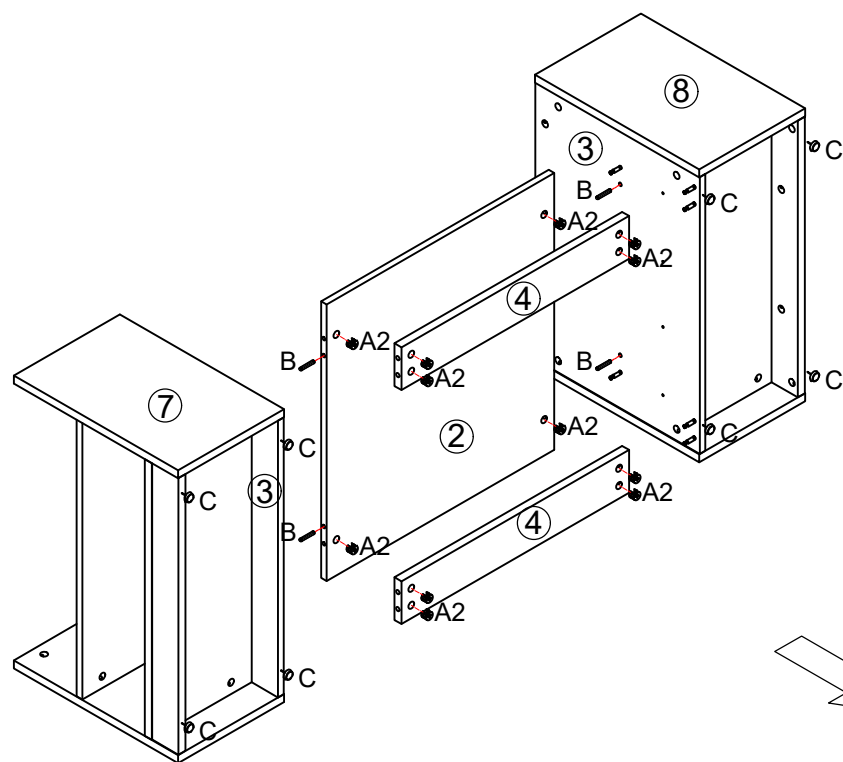

A2*24

 


B*8



C*8

⑥

 X2

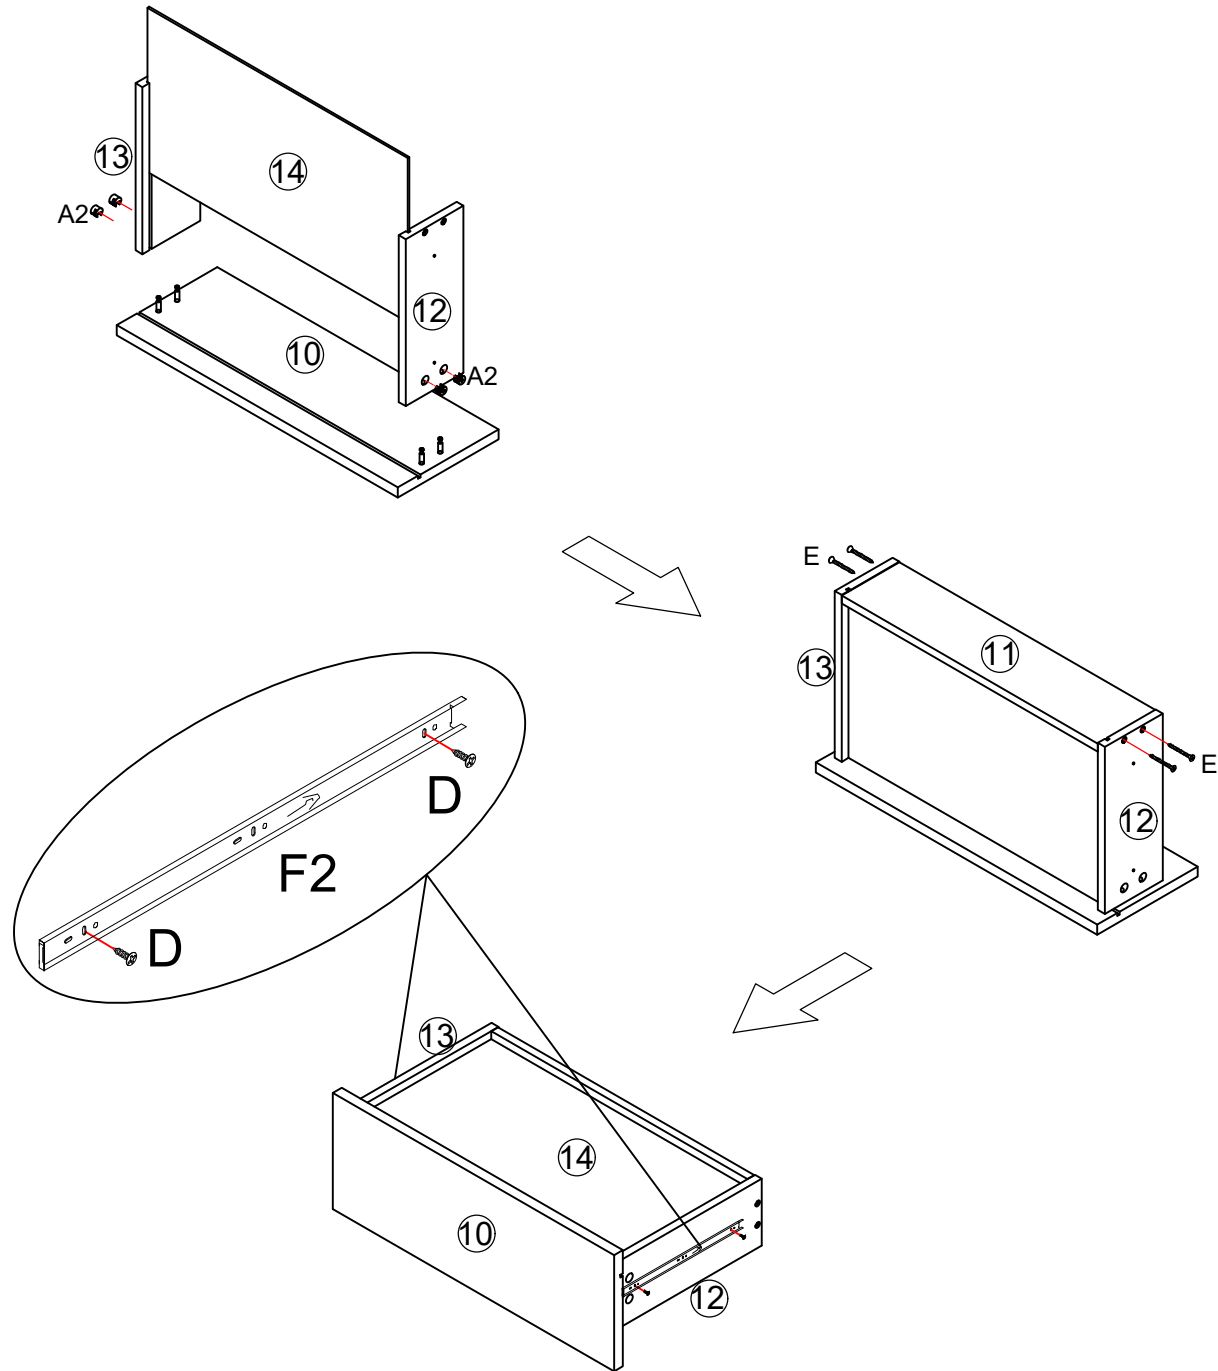

A2*8



D*8

 
 


E*8




F2*2


7

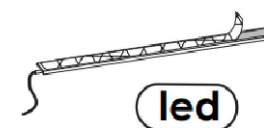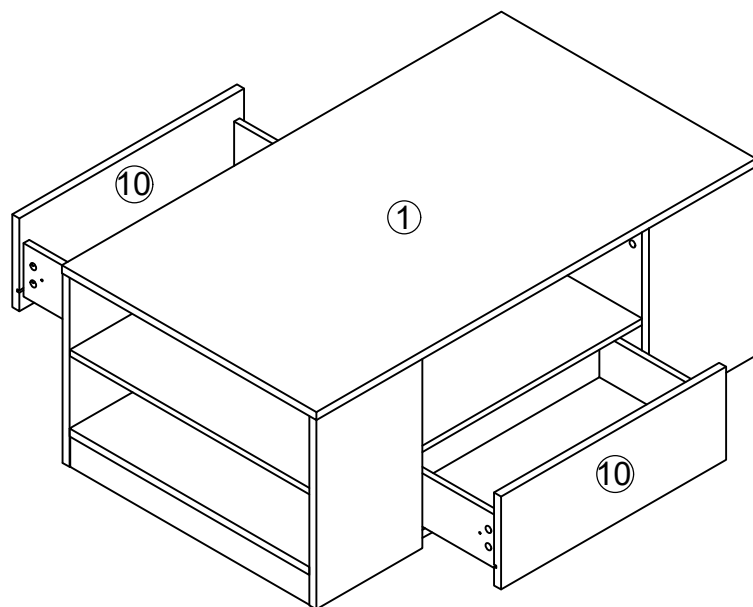

Please stick LED belt under part 1

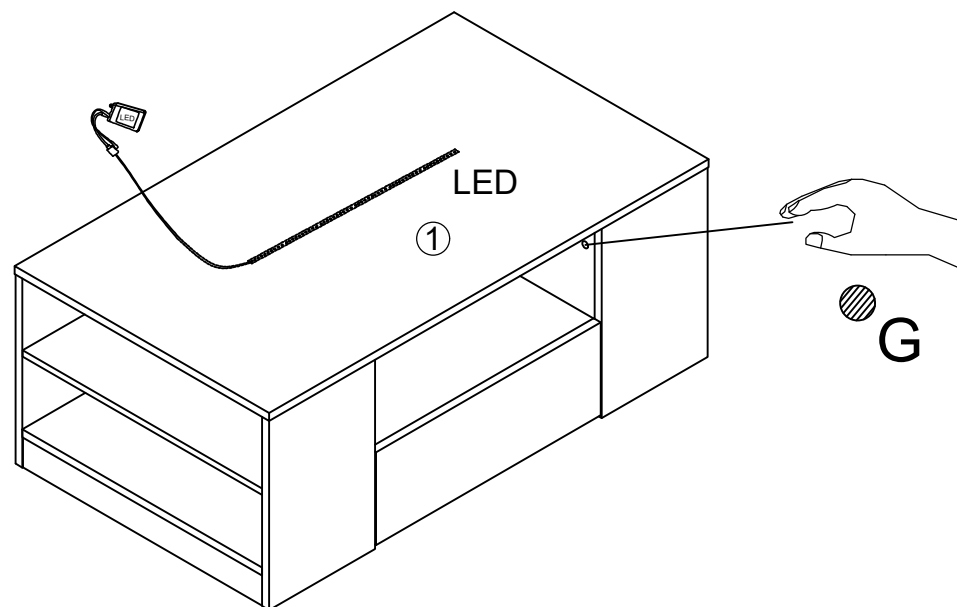 

G*16

 

LED*1

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

