

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate [www.vevor.com/support](http://www.vevor.com/support)

## **FOOD WARMER BOARD USER MANUAL**

**MODEL: YD-302C-J-42+28S YD-302C-J-42+60SJ**


We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.


# VEVOR<sup>®</sup>

## FOOD WARMER BOARD

**YD-302C-J-42+28S**

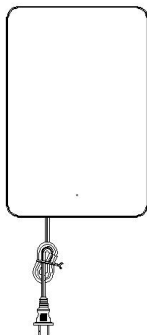

**YD-302C-J-42+60SJ**

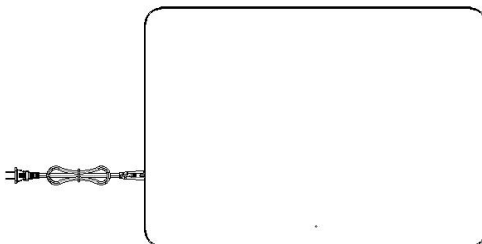

<Picture Only For Reference >

### NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:



**CustomerService@vevor.com**

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

## SAVE THESE INSTRUCTIONS

### IMPORTANT SAFEGUARDS

**When using your Food Warmer Board, basic safety precautions should always be followed:**

- Read all instructions.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not leave the appliance unattended while connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- The power cord must be unplugged after the appliance is used, before cleaning, and during maintenance.
- Close supervision is required when using this appliance near children.
- Never leave the appliance within reach of children.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- This appliance is intended for household use only and should not be used for commercial purposes.
- Do not operate the appliance with a damaged plug or cord after a malfunction or after being dropped or damaged.
- Do not use the appliance for anything other than its intended use.
- Do not touch hot surfaces. Use handle or knobs when working with the unit.
- Ensure the appliance is used on a stable, heat-resistant surface.
- This appliance can be used by children aged from 8 years and above and persons with reduce physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and

knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- Type Y attachment (YD-302C-J-42+28S) : If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Type X attachment (YD-302C-J-42+60SJ) : If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or service agent.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- The Temperature of accessible surfaces may be high when the appliance is operates.



Surface are liable to get hot during use.

## **POLAEIZATION INSTRUCTIONS**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not work, contact a qualified electrician. Do not attempt to modify the plug in any way.

## **SHORT CORD**

A A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk of becoming entangled in or tripping over a longer cord.

B Longer detachable power-supply cords or extension cords are available and

may be used if care is exercised in their use.

C If a long detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Do not cook on broken cook-top, If cook-top should break, cleaning solutions and spillovers may penetrate the broken cook-top and create a risk of electric shock.

Clean cook-top with caution, If a wet sponge or cloth used to wipe spills on a hot cooking area, be careful to avoid steam burn, some cleaners can produce noxious fumes if applied to a hot surface.

## TECHNICAL PARAMETER

Model	Ratings		Keep the temperature range
YD-302C-J-42+28S	120V/60Hz	100W	65°C~90°C(149°F~194°F)
YD-302C-J-42+60SJ		250W	


## OPERATION INSTRUCTION

**Note:** There will be a faint smell when using the food warmer for the first time but this is quite normal and will fade with use.

**WARNING:** This appliance will get hot during use. Please exercise extreme caution.

- Plug the food warmer into the mains power supply and switch it On if switchable. The indicator light will be illuminated red and will turn Off when the desired temperature is reached.

- Switch on the power supply, the switch to “-”, start the boot,the red light is on,into the working state.Protection is triggered when the temperature reaches a set value and the light is off. When the temperature drops to the reset value of the thermostat, the indicator lights up again. At the end of work, turn the switch to “o” and turn it off.

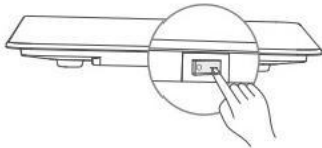

- After use, unplug the appliance from the mains power supply and allow it to cool thoroughly.

CLEANING AND MAINTENANCE


- Caution: Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storing.
- Wash the warming tray in a mild detergent with a soft, moist cloth, do not use any abrasive cleaning agents or allow water to spill or seep into the frame. Never immerse the warming, tray cord or plug in water or any other liquid.
- Store in a cool, dry place.

TROUBLE SHOOTING

Phenomenons	Causes	Solutions
The display screen is not bright	The plug came loose	Check the power plug, socket contact is good
	Display panel failure	Please send it for repair

No heating	Circuit failure	Please send it for repair
	Temperature protector failure	
	Failure of heating wire	

## ENVIRONMENTAL PROTECTION

	<p>This product is subject to the provision of European Directive 2012/19/EC. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked with this symbol cannot be discarded with normal household waste but must be taken to an electrical and electronic equipment collection point for recycling.</p>
--	--

# **VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

**Technical Support and E-Warranty Certificate**

**<https://www.vevor.com/support>**