

# LEDone<sup>®</sup>

## Temp Work Light Series Installation Guide

Operating Temperature: -30°C - 40°C

### SAFETY INSTRUCTIONS: Read instructions carefully before attempting to install fixture.

- All wiring should be performed by a qualified electrician.
- Disconnect power before installing or servicing. This fixture must be wired in accordance with the National Electrical Code and applicable local codes and ordinances.
- Proper grounding is required to ensure personal safety.

### CAUTION: Risk of fire

- **WARNING:** Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.
- **WARNING:** To reduce risk of electric shock and fire, do NOT exceed string maximum wattage including any additional string loads.

**60W:** 10 pcs

**100W:** 6 pcs

**150W:** 4 pcs


- **WARNING:** Disconnect the power to avoid shock when the equipment is wet.
- **WARNING:** This product is NOT intended for use with emergency exits.
- **WARNING:** This lamp should NOT be installed in a hot sealed environment or near corrosive gases.
- **WARNING:** Do NOT override any ignition or explosive materials on the surface, so as not to cause a fire.

### CLEANING & MAINTENANCE:

CAUTION: Be sure the fixture temperature is cool enough to touch. Do NOT clean or maintain while the fixture is energized.

1. Clean glass lens with non-abrasive glass cleaning solution.
2. Do NOT open fixture to clean the LED. Do NOT touch the LED.

Note: These instructions do not cover all details or variation in equipment, nor do they provide for every possible situation during installation, operation or maintenance.

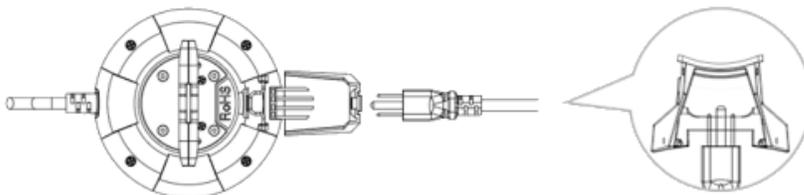

### NOTICE

**Total 5A max in series connection**

## INSTALLATION:

Standard cable length is 6 feet.

1. Turn off the power before installing.
2. Hang on a secure fixed wall or object by the base hook.
3. Ensure the fixed wall or object is strong enough to hold 66lbs.
4. (For 2 or more) Connect the plug and socket to make sure 2 or more lamps are connected. Rotate the buckle 120° to make sure the connection is secure.
5. Close the cap for the last lamp which is not connected to another.
6. Reset fuse in driver in case of overload 5A. Only the first lamp lights up, disconnect the extra, the lamps will light up when the fuse cools down. (about 10 seconds)

