



CALEFORT WINE REFRIGERATOR
INSTRUCTION MANUAL


Who we are ?

Welcome to Ca'Lefort, where we proudly present an exceptional collection of high-end wine and beverage coolers. At Ca'Lefort, we are more than just a brand; we create a lifestyle. Our journey began with a passionate pursuit of excellence, believing that every moment deserves to be enjoyed to the fullest. Every detail of our coolers is carefully designed to provide a superior storage and cooling experience.


Our slogan, "Stay Fresh, Stay Cool," embodies the essence of our brand. It reflects our commitment to offering optimal storage solutions that ensure your drinks remain fresh and perfectly chilled.

Whether you're celebrating special occasions or savoring everyday moments, Ca'Lefort is your ideal companion, elevating your lifestyle with a touch of sophistication.

Experience Ca'Lefort, where timeless design, unparalleled quality, and a relentless pursuit of perfection come together to define a truly exceptional brand.

 facebook.com/calefort.official

 twitter.com/calefortmarket

 
 pinterest.com/calefort_official/

 youtube.com/@calefortmarketing

 instagram.com/calefort_official/


Product

CLF-WSJC46

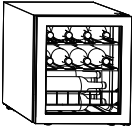


VOLTAGE: 110-120V
CURRENT: 1.3A
FREQUENCY: 60HZ
POWER: 85W
BOTTLE CAPACITY: 14 Bottles
STORAGE CAPACITY: 1.62 cu. ft.
TEMPERATURE RANGE: 37°F~65°F
REFRIGERANT: R600a (0.59 oz)

 CLF-WSJC62

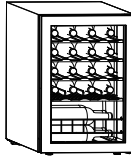


VOLTAGE: 110-120V
CURRENT: 1.3A
FREQUENCY: 60HZ
POWER: 85W
BOTTLE CAPACITY: 20 Bottles
STORAGE CAPACITY: 2.18 cu. ft.
TEMPERATURE RANGE: 37°F~65°F
REFRIGERANT: R600a (1.058 oz)

 CLF-WSJC88

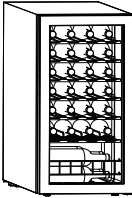


VOLTAGE: 110-120V
CURRENT: 1.3A
FREQUENCY: 60HZ
POWER: 85W
BOTTLE CAPACITY: 28 Bottles
STORAGE CAPACITY: 3.1 cu. ft.
TEMPERATURE RANGE: 37°F~65°F
REFRIGERANT: R600a (1.058 oz)

 CLF-WSJC95

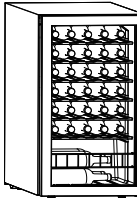

VOLTAGE: 110-120V
CURRENT: 1.3A
FREQUENCY: 60HZ
POWER: 85W
BOTTLE CAPACITY: 34 Bottles
STORAGE CAPACITY: 3,35 cu. ft.
TEMPERATURE RANGE: 37°F~65°F
REFRIGERANT: R600a (1.058 oz)

 CLF-WSJC130

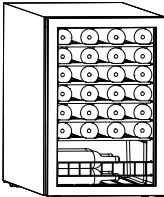

VOLTAGE: 110-120V
CURRENT: 1.3A
FREQUENCY: 60HZ
POWER: 85W
BOTTLE CAPACITY: 46 Bottles
STORAGE CAPACITY: 4.59 cu. ft.
TEMPERATURE RANGE: 37°F~65°F
REFRIGERANT: R600a (1.058 oz)

Significant Feature

Modern Electric Wine Cooler

The glass front door with a stainless steel frame for you to view your wine, beer or soda at a glance. Its blue, amber, white LED interior light illuminates for easy, nighttime selection of your favorite chilled drink, decorates your kitchen, living room, office or bar area.

Small Size, Large Storage Capacity

Enjoy this wine refrigerator with plenty of space to store all your favorite drinks with movable shelves.

Direct Cooling System Wine Fridge

The cooler maintains temperatures between 37°F and 65°F, keeping both red and white wines at the suitably serving temperature, and you can customize what you need.

Double Tempered Glass Door Wine Fridge

Double-layer tempered glass door improves temperature stability, reduces condensation, and keeps your drinks perfect with low electricity consumption.

TABLE OF CONTENTS

SAFETY INFORMATION & WARNINGS	01
PARTS LIST	01
PARTS DIAGRAM	02
ASSEMBLY & INSTALLATION	02
PRODUCT SIZE	03
OPERATING INSTRUCTIONS	04
Optimizing Performance & WARNING	05
CLEANING & MAINTENANCE	07
TROUBLESHOOTING GUIDE	08
LIMITED MANUFACTURER'S WARRANTY	09
CUSTOMER SERVICE	10

SAFETY INFORMATION & WARNINGS



When using any electrical appliance, basic safety precautions must be followed in order to reduce the risk of fire, electrical shock and/or injury to persons or property. Be sure to read all instructions before using this appliance and observe the following safety tips:

Attention:Child Entrapment Risk!

To prevent the risk of child entrapment, do not allow children to operate, play with, or crawl inside the unit. If the unit will not be used for an extended period of time, remove the door and leave the shelves in place so that children cannot crawl inside. Also remove the door when disposing of the unit.



Shock Hazard-Electrical Grounding Required

- Never attempt to repair or perform maintenance on the unit until the electricity has been disconnected.
- Never remove the round grounding prong from the plug and never use a two-prong grounding adaptor.
- Altering or cutting of power cord, removal of power cord, removal of power plug, or direct wiring can cause serious injury, fire, loss of property and/or life, and will void the warranty.
- Never use an extension cord to connect power to the unit.
- Avoid operating this wine cooler in excessively moist or humid environment.



Important Precautions

- Do not lift unit by door handle.
- Never install or operate the unit behind closed doors.
- Failure to clean the condenser every six months can cause the unit to malfunction.
- Allow unit temperature to stabilize for 24 hours before use.
- Do not block any internal fans.
- Keep the wine cooler away from hazardous materials or combustible/flammable substances.
- Use only genuine supplier's replacement parts. Imitation parts can damage the unit, affect its operation or performance, and may void the warranty.

PARTS LIST

 
When you receive your unit, carefully remove the exterior and interior packaging. It is recommended that you retain the packaging for future use.

Check to make sure the following parts are included:

- User Manual
- Removable Shelves
- Left Door Hinge & Screws

PARTS DIAGRAM

(Taking CLF-WSJC95 as an example)

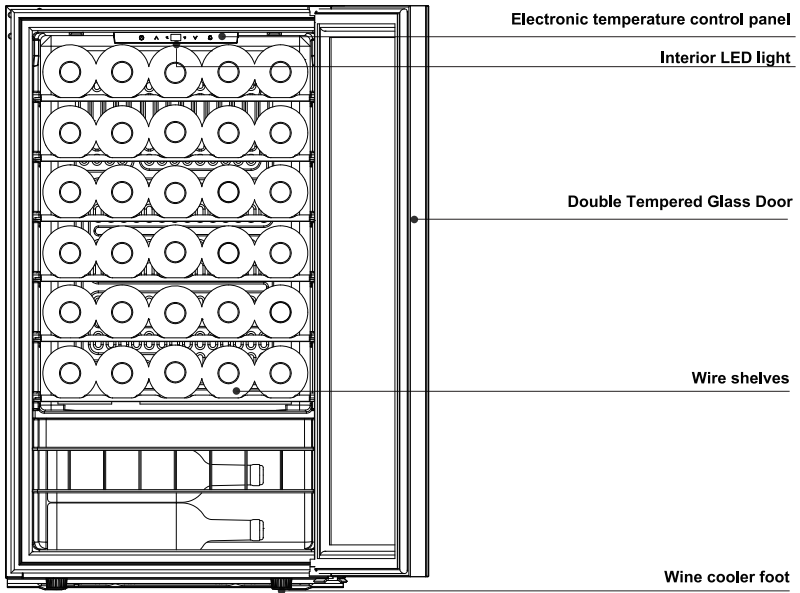

ASSEMBLY&INSTALLATION



Before connecting the appliance to a power source, let it stand upright for approximately 24 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.

This wine cooler is a freestanding unit and should not be built into surrounding cabinetry. Allow for proper air clearance around the cooler.


The recommended clearances are as follows:

Sides: ¾" (19 mm) | **Top:** 4" (100 mm) | **Back:** 2" (50 mm)

Before operating your wine cooler for the first time, follow these steps:


1. Clean the interior surface of the unit with lukewarm water and a soft cloth.
2. Place the cooler on a level surface that will be strong enough to support the unit when it is fully loaded.
3. Install the cooler away from direct sunlight and heat sources such as stoves, heaters, or radiators. Direct sunlight may affect the unit's acrylic coating, and nearby heat sources can increase electrical consumption. Extreme cold or hot ambient temperatures may also prevent proper performance.
4. Once the cooler is plugged in, let the wine cooler run for at least 30 minutes. Do not change the temperature or adjust any settings at this time.

 PRODUCT SIZE

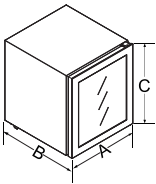


CLF-WSJC46

 Overall Width (in.) A 16.9"
 Overall Depth (in.) B 18.9"
 Overall Height (in.) C 20.3"

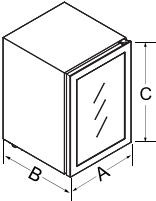


CLF-WSJC62

 Overall Width (in.) A 16.9"
 Overall Depth (in.) B 18.9"
 Overall Height (in.) C 25.4"

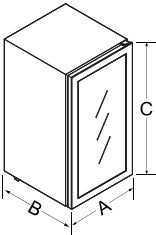


CLF-WSJC88

 Overall Width (in.) A 16.9"
 Overall Depth (in.) B 18.9"
 Overall Height (in.) C 32.7"

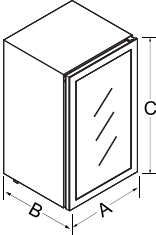

CLF-WSJC95

 Overall Width (in.) A 18.9"
 Overall Depth (in.) B 18.5"
 Overall Height (in.) C 32.9"

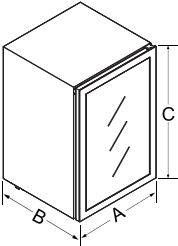


CLF-WSJC130

Overall Width (in.) A 21.7"
 Overall Depth (in.) B 22.4"
 Overall Height (in.) C 32.7"

OPERATING INSTRUCTIONS

 Control Panel



ON/OFF:

Short press: No response.

Long press for 5 seconds to power off:

After shutdown, the power button remains steadily illuminated.

Long press for 5 seconds to power on:

The unit automatically powers on upon initial power connection.

After shutdown, all buttons except the power button are disabled. All indicator lights and the display turn off, and the control ports stop outputting signals.

Upon the next startup, the unit will retain the previous temperature setting and default unit from before shut down.


INSIDE LIGHTING:


Short press: Controls the top light switch.



Each short press changes the top light color inside the cabinet for amber / white / blue. On the fourth press, the top light turns off.

Long press (3 seconds): Entering or exiting constant illumination mode.

In constant illumination mode, both Celsius and Fahrenheit temperature icons will illuminate simultaneously. (Color selection functionality remains active in constant illumination mode.)

 **[+] BUTTON:** To increase the temperature by 1°C or 1°F

 **[-] BUTTON:** To decrease the temperature by 1 °C or 1 °F

Press and hold “” and “” for 5 seconds to switch between Celsius and Fahrenheit.

Infrared sensor:

a. When the infrared LED receives a signal, the infrared indicator light is high level, the door is opened by default, and the LED light in the box is on;

b. When the infrared LED receives a signal, the infrared indicator light is low level, the door is closed by default, and the LED light in the box is off.

If the door is opened for more than 1 minute, the E0 alarm will be issued and the BB alarm sound (synchronized with flashing) will be sounded continuously for 10 seconds per minute.

OPERATING INSTRUCTIONS

 
* NOTE

- It is recommended you install the wine cooler in a place where the ambient temperature is between 66-75°F (19-24°C). If the ambient temperature is above or below recommended temperatures, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate. The range of 37-65°F(3-18°C) may not be reached.
- If the unit is unplugged, if the power is lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the wine cooler will not start.
- When you use the wine cooler for the first time or restart the wine cooler after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the wine cooler is running for a few hours everything will be back to normal.


Optimizing Performance

- To ensure maximum performance and efficiency, be sure to place your wine cooler in an area where there is proper air circulation. (See installation instructions above for proper clearances).
- For proper internal air circulation, do not overfill your wine cooler. When storing drinks, keep them away from the rear wall. To allow free circulation of cold air, don't pack drinks too tightly on the shelves.
- Do not place the unit in direct sunlight.
- Do not place heated food in your cooler.
- Do not store perishable food in your wine cooler. The unit's interior temperature may not be low enough to prevent spoilage.
- Do not place heavy objects on top of the wine cooler.


Installing Reversible Door

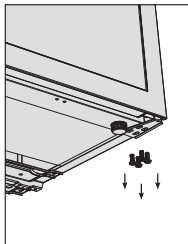

 
1. Twist down the screws of the lower door hinge.

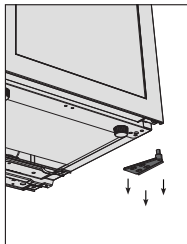

 
2. Remove the lower door hinge.

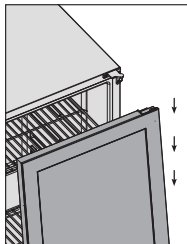

 
3. Remove the door.

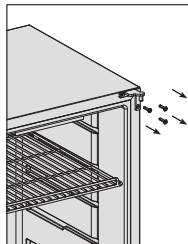

 
4. Twist down the screws of the upper door hinge.

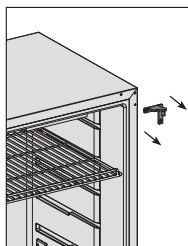

 
5. Remove the upper door hinge.

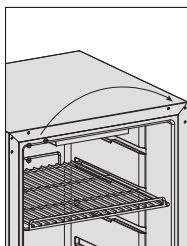

 
6. Remove the hole plugs from the left holes to the right holes.

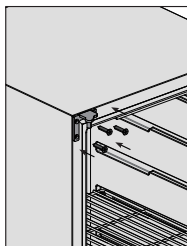

 
7. Install the upper left door hinge.

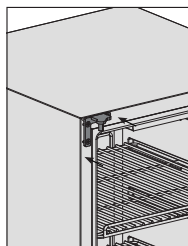

 
8. Tighten the screws of the upper left door hinge.

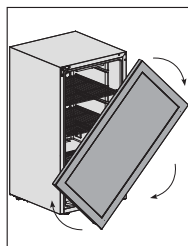

 
9. Turn the door 180 degrees.

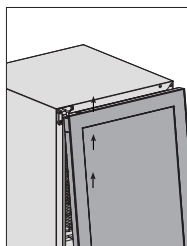

 10. Install the door upwards.

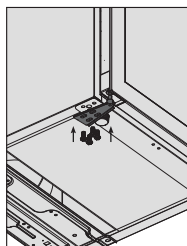

 11. Install the lower left door hinge.

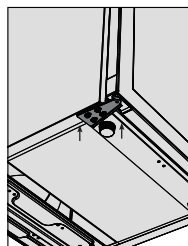

12. Tighten the screws of the lower door hinge.

CLEANING & MAINTENANCE

Cleaning Your Cooler

How to clean your cooler:

- Unplug the cooler and remove anything inside.
- Wash the inside of the unit with a solution made of warm water and neutral detergent.
Do not use abrasive cleaners.
- Use mild, soapy water to clean the unit's door seal.
- To ensure efficient operation, also thoroughly clean the back and bottom of the wine cooler.
- To clean the outside of the unit, use a mild detergent and warm water.

Moving Your Cooler

To move your cooler:

- Remove anything stored inside.
- Securely tape down all loose parts located inside the unit.
- Turn the leveling feet up to the base in order to avoid damage.
- Tape the door shut.
- Be sure the cooler stays in an upright position during transportation.

TROUBLESHOOTING GUIDE

Problem	Possible Causes	Solution
The wine cooler does not cool.	The unit may be plugged in using a different voltage.	Check if using the wrong voltage.
	The circuit breaker may be tripped or there is a blown fuse	Reset the circuit breaker or check for a broken fuse.
The wine cooler is not cold enough.	The external environment may require a higher setting.	Lower the temperature of the cooler.
	The cooler may be placed too close to a heat source.	Keep the cooler away from direct sunlight or other heat sources.
	There is insufficient ventilation.	Place the wine cooler in an area with proper ventilation and clearances.
	The door is not completely closed or the door seal is not working properly.	Close the door tightly. Do not open the door frequently and do not keep the door open for extended periods of time. Replace the sealer the door if necessary.
The wine cooler seems to make too much noise.	The unit is not leveled.	Adjust the unit's feet and ensure the product is level.
	There is insufficient ventilation The unit is too close to a wall or another surface.	Allow sufficient clearance around the unit.
An interior red light is flashing.	The set temperature is too low.	Adjust the set temperature so that it is higher than the wine cooler's interior temperature.
Frost is building up in the unit.	There is excess humidity or the interior temperature is too low.	Turn off the wine cooler, unplug it, and remove the frost buildup manually. Reconnect the power once the ice has thawed.

LIMITED MANUFACTURER'S WARRANTY

1 Year Warranty Parts

For a year (12 months) from the purchase by the original owner, we would provide accessories to replace any part of the unit which proves to be defective in material or workmanship, with installation video or online guide. You could also contact us by email to get a solution.

During this period we will provide all parts necessary to correct such defects free of charge, so long as the unit has been installed and operated in accordance with the written instructions in this manual.

3 Year Warranty Compressor

For the 2nd through the 3rd year from date of original purchase, we will provide a replacement compressor free of charge due to a failure. You are responsible for the service labour and freight charges. Cost to move the wine cellar to the servicers' shop and back to the user's home, as may be required, are the user's responsibility.

What Is Not Covered

Damage due to such things as accident, misuse, abuse, mishandling, neglect, acts of God, fires, earthquakes, floods, high winds, government, war, riot or labour troubles, strikes, lockouts, delay of carrier, or any cause beyond the control of the Seller whether similar or dissimilar to the foregoing.

Content losses due to spoilage. Incidental or consequential damages. Parts and labour costs for the following will not be considered as warranty:

- Door springs, and/or frames.
- Inner door panels, door rails and/or door supports.
- Light bulbs and/or plastic housing.
- Plastic cabinet liners.

Punctured evaporator that voids the warranty on the complete sealed system.

Repairs performed by unauthorized servicers. Damage caused by external influences.

Excess wear and tear by the user. Service calls that do not involve defects in material or workmanship such as customer education, door reversal, or proper installation.

Service calls that are related to external problems, such as abuse, misuse, inadequate electrical power, accidents, fire, floods, or acts of God. Replacement of house fuses or resetting circuit breakers. Failure of the product if it is used for other than its intended purpose.

This warranty does not apply outside Canada or the Continental USA.

Purchaser understands and acknowledges that the goods purchased are wine refrigerator, which store wines.

Purchaser assumes all risk of using this unit, including risk of spoilage, humidity variations, temperature variations, leaks, fire, water damage, mold, mildew, dryness, and similar perils that might occur.

CUSTOMER SERVICE

Read This Guide Carefully.

It is intended to help you operate and maintain your new appliance properly. Keep it handy to answer your questions.

Keep proof of original purchase date (such as your sales slip) with this guide to establish the warranty period. Save time and money. Before you call for service, check the Troubleshooting Guide. It lists causes of minor operating problems that you can correct by yourself.

Purchase Date :

Model Number :

Serial Number :

Contact Us

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are some steps to follow for further assistance.

First, contact the people who serviced your wine cooler.

Explain why you are not pleased. In most cases, this will solve the problem.

Please feel free contact us by after-service email address (**service@calefort.com**)

Next, if you are still not pleased, fill in all the detailed information, including your telephone number and send it to us :

Address	
Phone	
Fax	
Email	
Online	

Important Reminder for Returns

To facilitate any potential returns, please retain the original packaging (including the box and all protective materials). Regardless of the return reason, we require items to be shipped back in their original packaging to ensure safe transit. We appreciate your cooperation!

Activate Warranty & Join Us

VISIT: <https://calefort.vip/>
or scan the QR code



Email: service@calefort.com

*Activate Product Warranty

*VIP Exclusive Service

*Personalized product care & records

Just let us know if you have any questions about our products!