

 
INSTRUCTIONS

SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

WARNING

ELECTRIC PRODUCT. Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

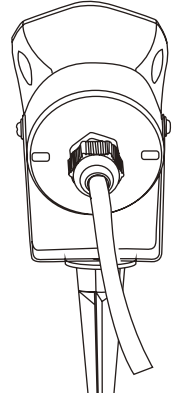

WARNING

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

WARNING

The light is very bright. Do not shine directly into eyes.

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING(THIS FURNISHING)

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Do not hang ornaments or other objects from cord, wire, or light string.
12. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
13. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace.
14. Read and follow all instructions that are on the product or provided with the product.

CAUTION:

To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

SAVE THESE INSTRUCTIONS.

FEATURES

- Plastic housing with 3 pieces high power LEDs.
- UL power cord operated.
- Easy installation.
- High quality, long product life.

TECHNICAL SPECIFICATIONS

Material:	PC
Light sourcing:	1W LEDs * 3
Rating	120VAC 60Hz 0.06A 5.8W
Fuse	2pcs
Stake	1 pc

ASSEMBLY INSTRUCTIONS

1. Gently remove contents from packaging and lay out in a clear area.
2. Secure the stake with handle together. Insert the stake into the ground.
(See illustration 1)

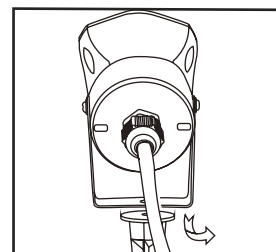 


illustration 1

3. Plug power cord into standard wall socket. (See illustration 2)
4. Unplug when not in use.

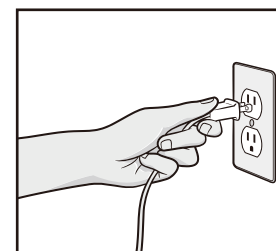 


illustration 2

 
USER SERVICING INSTRUCTIONS

Fuse Replacement

WARNING: **Risk of Fire:** Replace only with same size and type of fuse.

WARNING: **Risk of Fire:** Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)
3. Remove fuse carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt fuse (provided with product)
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

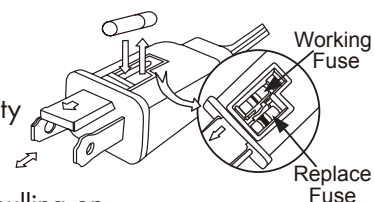

OPERATING DETERMINATIONS

This product was designed for indoor and outdoor use.

Do not shake the device. Avoid brute force when operating the device.

Keep away from direct insulation (particularly in cars) and heaters.

Do not permit operation by persons not qualified to operating the device. Most damages are the result of

unprofessional operation!

Never use solvents or aggressive detergents in order to clean the device! Rather use a soft and damp cloth.

Please use the original packaging if the device is to be transported.

Unauthorized modifications on the device are unacceptable due to safety reasons!

If this device is operated in any way different from the ways described in this manual, the product may suffer damages and the guarantee becomes void.

OPERATION

- Insert the plug into socket.
- Set this device as a projector.
- Extract the plug if not in use. Be careful with the power cord!

WARNING

- The device is for indoor and outdoor use!
- Suitable for outdoor use!
- Please keep away from heaters and other heating sources!

IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Keep away from heaters and other heating sources! If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. Leave the device switched off until it has reached room temperature. Please note that damages caused by manual modifications on the device or unauthorized operation by unqualified persons are not subject to warranty. Keep young children and amateurs away from the device!

USE AND CARE INSTRUCTIONS

1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THESE INSTRUCTIONS ARE FOR THESE ITEMS

11126	13773	13847	14112	16669	18211	18313
19918	19919	31599	35072	35074	35279	35479
35488	35526	35546	35547	35549	35589	35592
35624	35863	35864	35954	35955	35956	36399
36468	36469	36470	37077	37296	37379	37409
37410	37411	37412	37413	37414	37564	37571
37886	38220	38377	38378	38384	38387	38406
38481	38482	38657	38692	38693	38694	38846
38848	38850	38862	39054	39628	39629	39630
39631	40019	40025	40698	45478	47006	47007
47008	47037	47038	47454	47943	47982	48056
48238	48239	48240	48241	48314	48323	48352
48353	48354	48363	48364	48365	48459	48460
48461	48462	48463	48464	48469	48482	48484
48485	48537	48538	48539	48555	48558	48560
48616	48940	48941	49176	49178	49180	49181
49584	49586	49592	49596	49629	54178	56351
56353	56356	56366	56368	56372	56374	56376
56721	56777	57267	57270	57272	57274	57331
57416	57418	57423	57685	58171	58453	58889
58910	59254	59256	59438	59444	59462	59481
59565	59667	59670	59701	59713	59718	59720
59723	59775	59928	59929	59931	59975	70233
70234	70884	71386	71402	71921	72331	72332
73043	73172	73271	73279	73425	73426	73492
73548	73549	73600	73601	73766	73940	74022
74023	74024	74025	74130	74132	74133	74136
74144	74145	74223	74225	74227	74229	74243
74248	74250	74266	74281	74297	74299	74316
74317	74760	74799	74872	75649	82556	83334
83344	87524	87549	88579	88610	88619	89629
89733	89734	110497	110562	110567	110568	110569
110570	110660	111445	112510	112512	220156	220157
220158	220354	220355	220694	220916	220932	330034
330054	445001	445023	445024	445025	445029	445030
445031						



Visit WWW.GEMMY.COM for more information.

©2018 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.
1 (877) 250-9032
MADE IN CHINA
PRINTED IN CHINA