



Measurement Guide – GenTent Extra Large (XL) Kit

- This model can fit an open frame generator with perimeters between 104" – 128".
- Perimeter = (Length x 2) + (Width x 2) (not including handles or wheels)


How to measure your generators perimeter for a GenTent?

Measure the length of your generator as well as your width.

Example Generator: (Length) 30.2" (Width) 22.7"

Length $30.2" \times 2 = 60.4"$ Width $22.7" \times 2 = 45.4"$

Perimeter total: $60.4" + 45.4" = 105.8"$

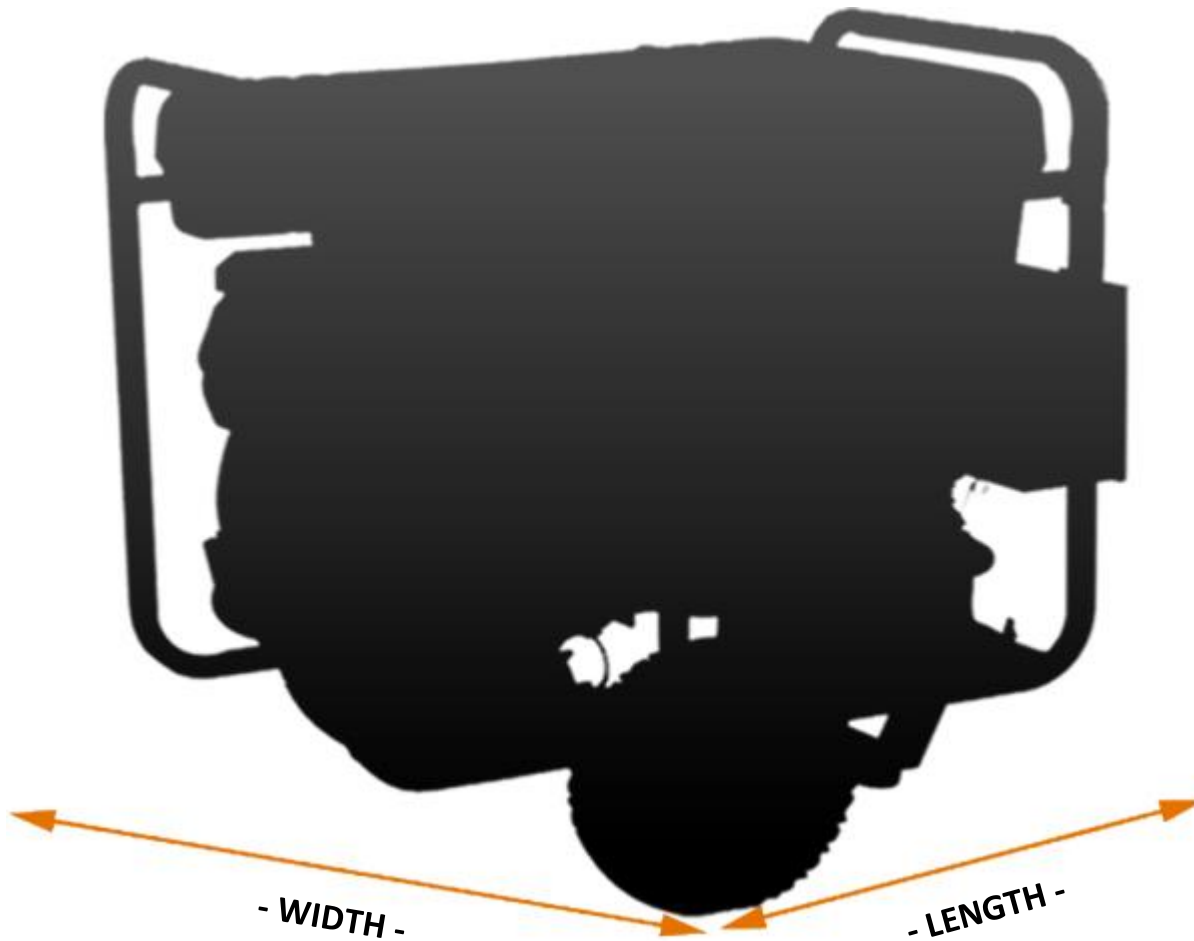

Questions fitting your GenTent Running Cover?

Do not hesitate to contact us; we are here to help!

e. customercare@gentent.com

p. 781.334.8368