


INSTALLATION



Product Manual

Version: 330166US-01-25A-XX

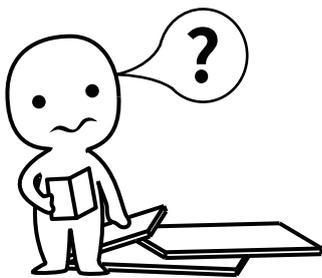


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

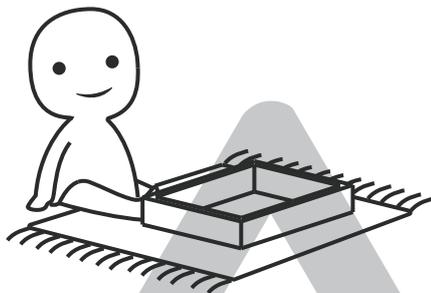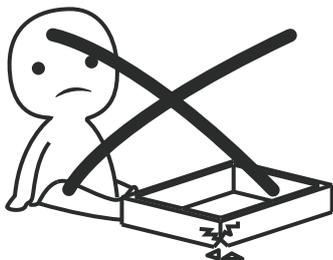


AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

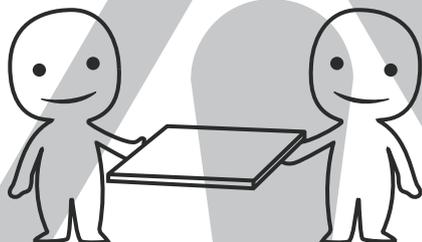

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

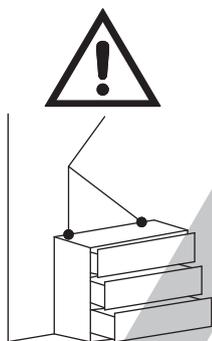

ANTI-TOPPLE WARNING !


Overturnd furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

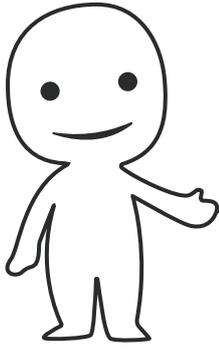


Please prepare the following tools

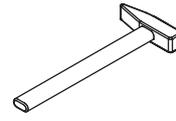 


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 71+3

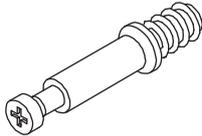


Ø 6.5 x 35 mm

B x 71+3

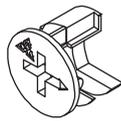


Ø 15 x 9 mm

 C x 28+2



Ø 8 x 30 mm

 D x 18+1




Ø 6 x 30 mm

E x 54+3




Ø 4 x 32 mm

F x 18+2

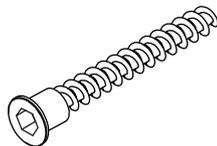


Ø 6 x 50 mm

 G x 4



H x 9

 

J x 8+1



 
Ø 4 x 18 mm

K x 18+1



Ø 4 x 6 mm

L x 8




Ø 35 mm

M x 8+1



 N x 2



P x 10+1



Ø 4 x 14 mm

Q x 160+5




Ø 3.5 x 14 mm




R x 8+1



Ø 3 x 14 mm

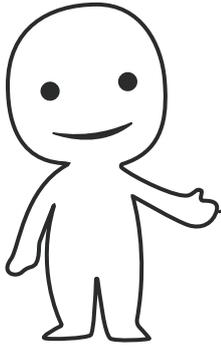


Please prepare the following tools

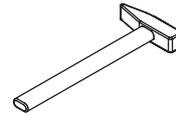  

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 S x 2



Ø4 x 40 mm

S x 2




Ø4 x 12 mm

S x 2




Ø8 x 29 mm

S x 2

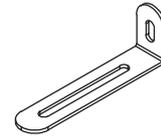


73 x 15 x 24 mm

T x 1

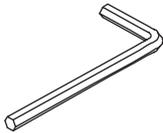

M4

 U x 2



29 x 17 x 8.5 mm

V x 24+1




W x 8+1




Ø20 mm

CL x 9

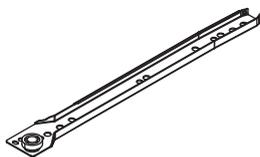


14"

CR x 9

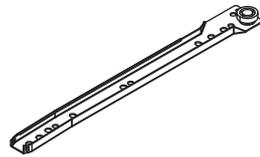


14"

DL x 9

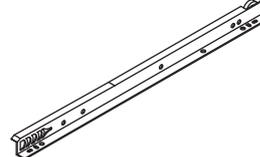


14"

DR x 9

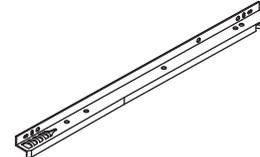


14"


① x1

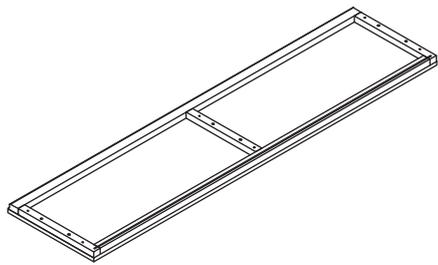


② x1

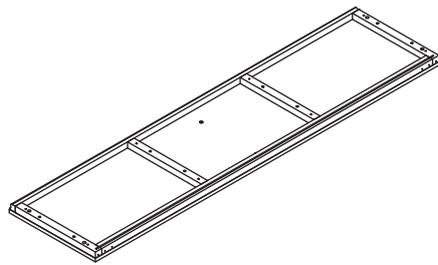


③ x1

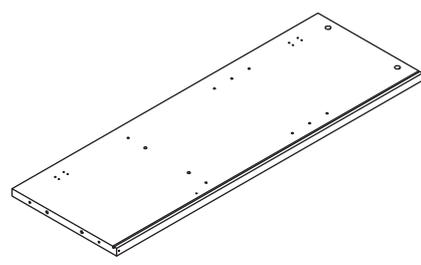


④ x1

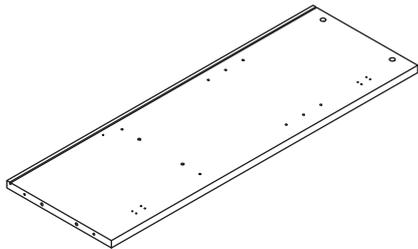


⑤ x1

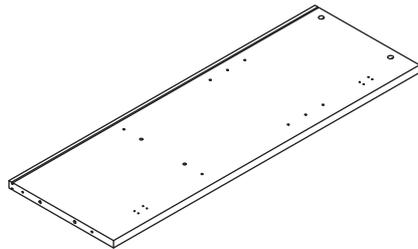


⑥ x2

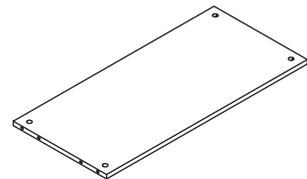


⑦ x2

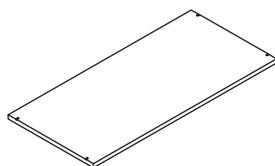


⑧ x1

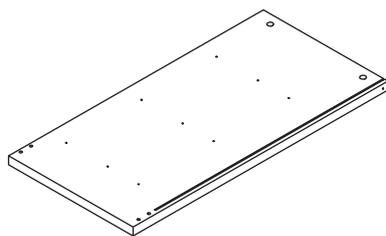


⑨ x1

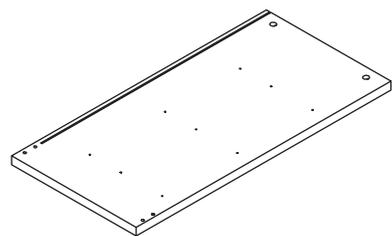


⑩ x2

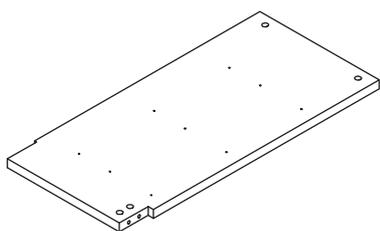


⑪ x1

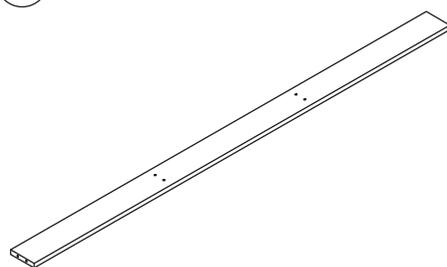


⑫ x1

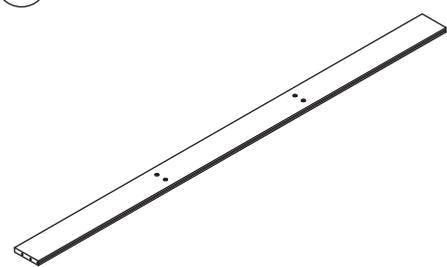


⑬ x2

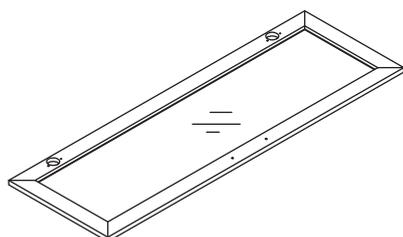


⑭ x2

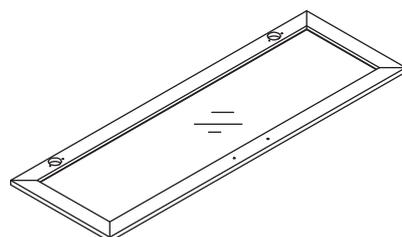


⑮ x9

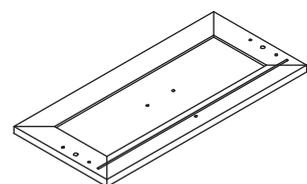


16x9

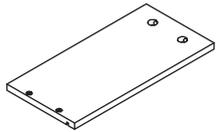


17x9

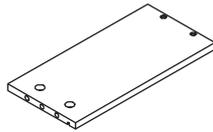


18x9

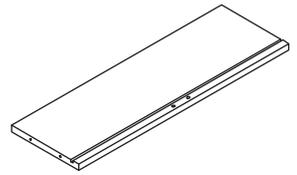


19x9

 


20x1

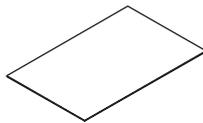


21x1

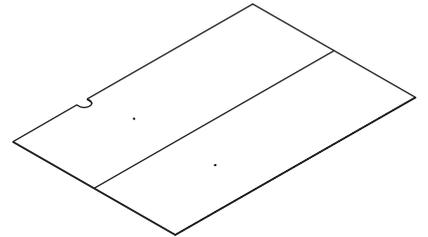


22x1

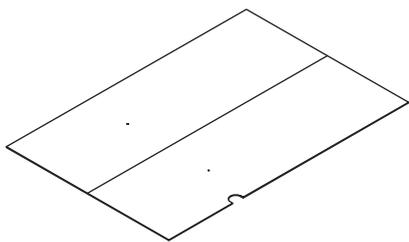

23x1

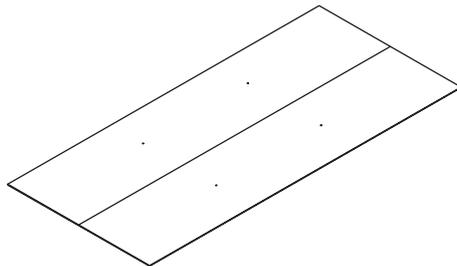

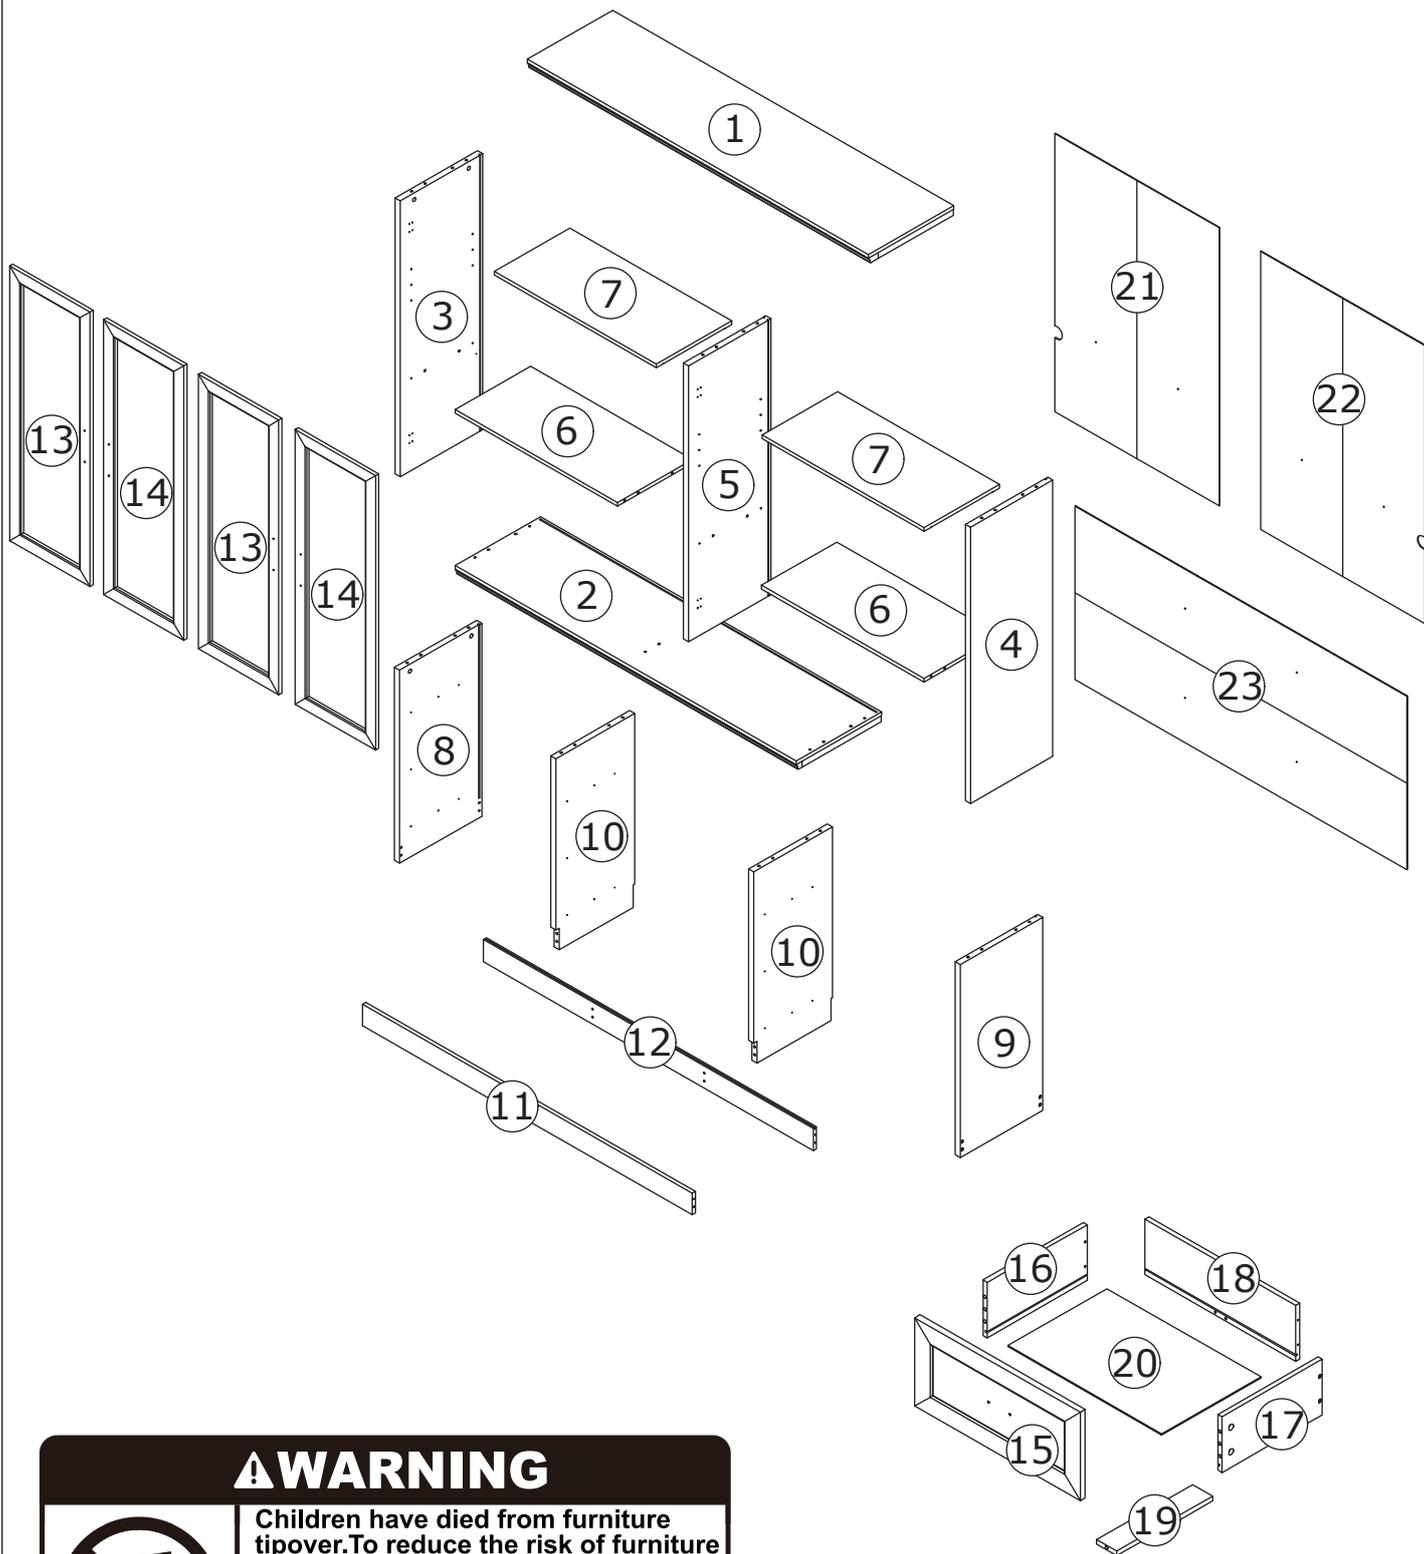



⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:



- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

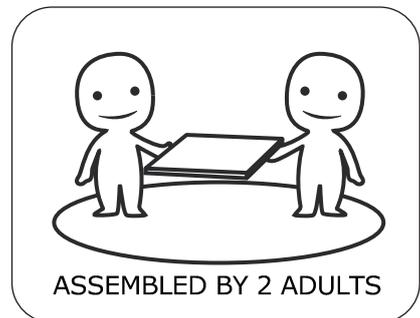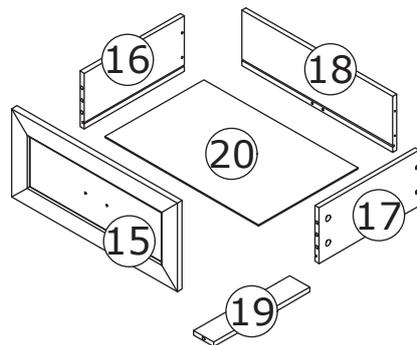


1

 E x 54
Ø4 x 32 mm

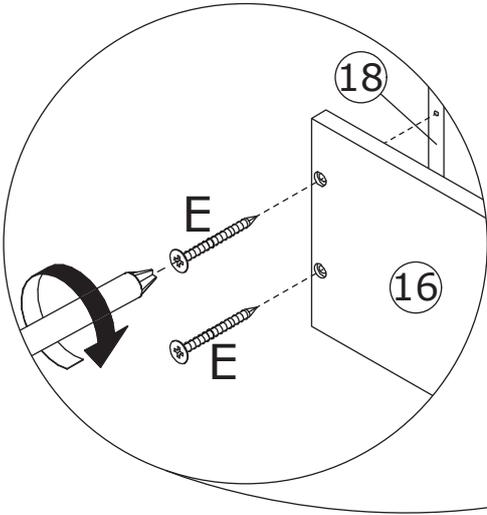


Connect parts 16, 17, 18, and 19 using screw (E).

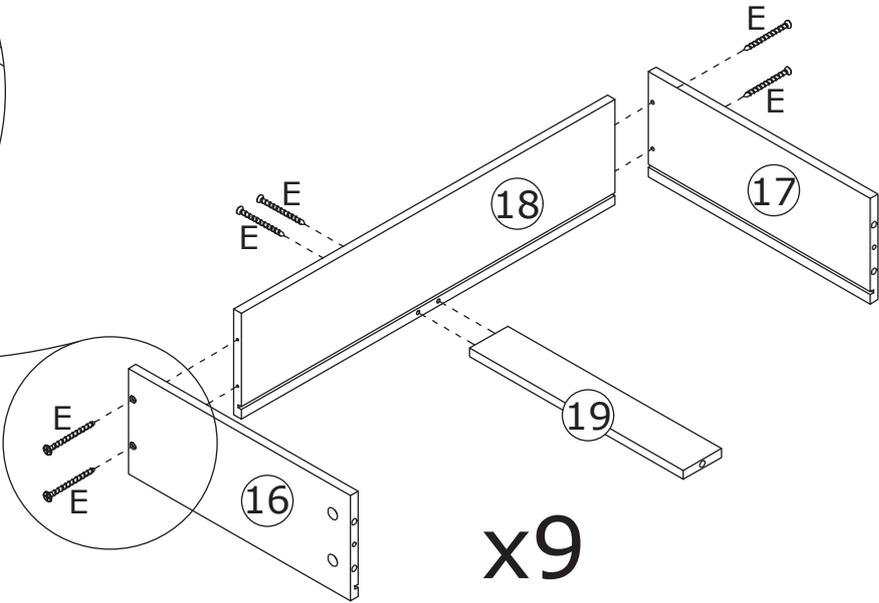





2

Insert part 20 into the available slot.

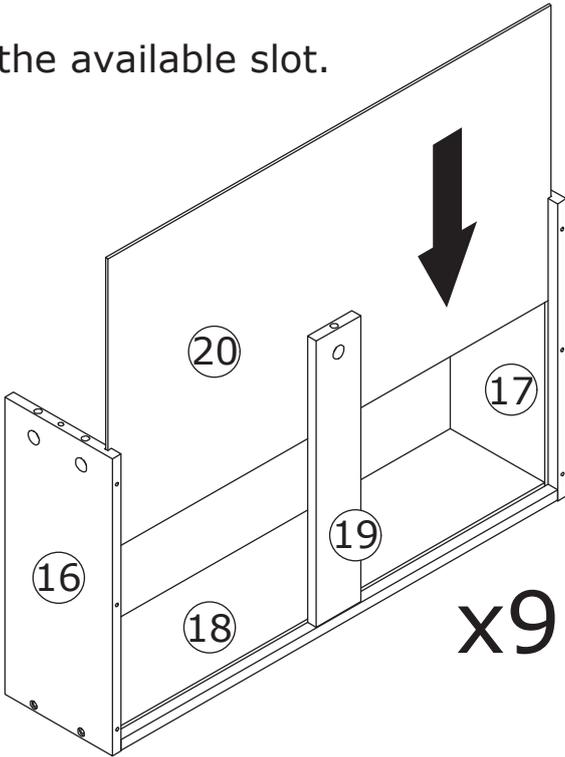



3

 A x 45
Ø6.5 x 35 mm

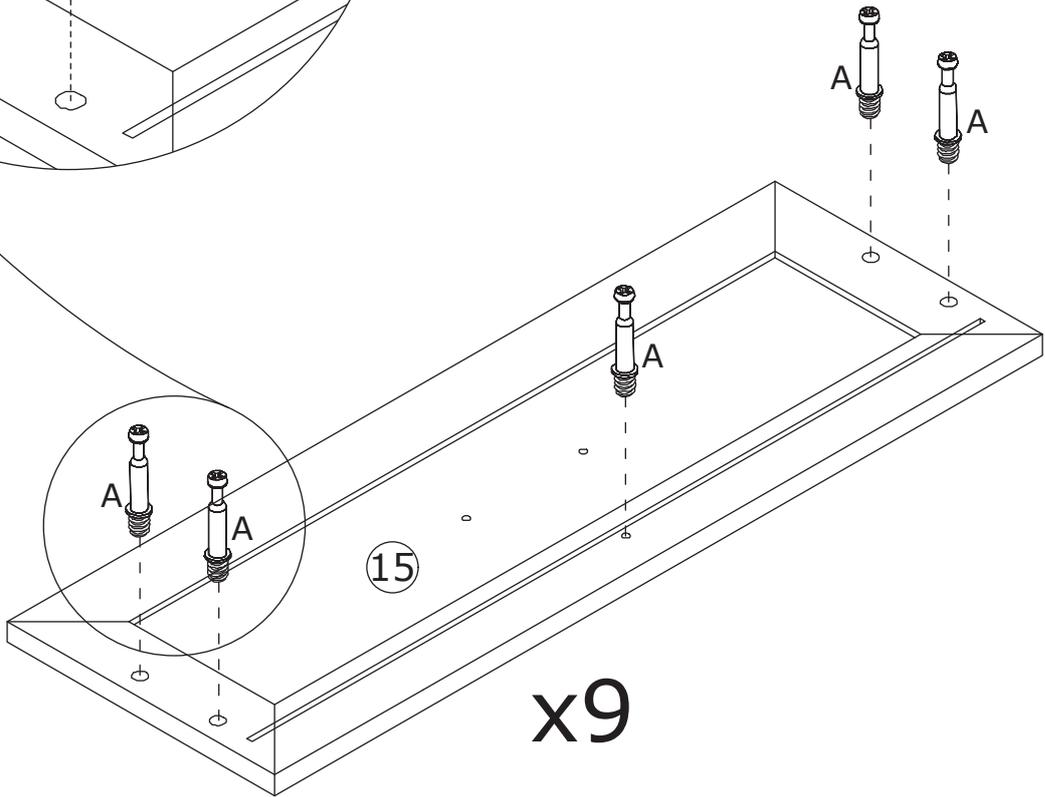
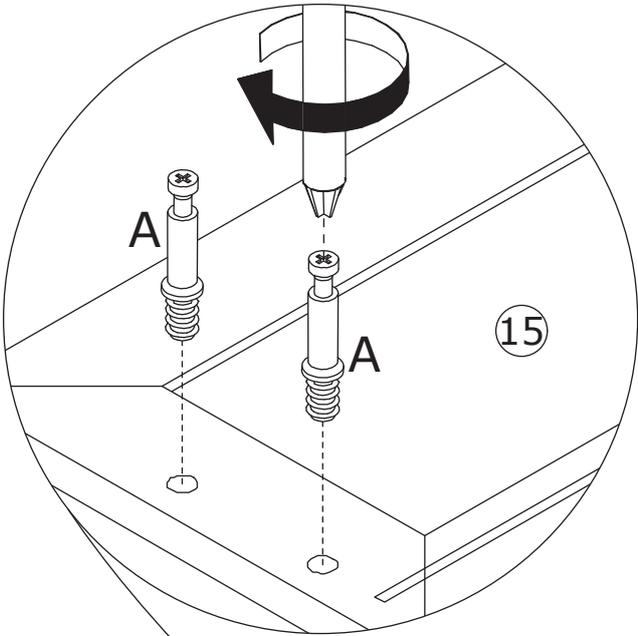
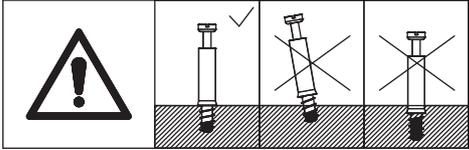



Insert quick-release screw (A) into part 15.





 
 
4

| | | | | |
|---|---|--|---|---|
| <p>B x 45</p>  <p>Ø15 x 9 mm</p> | <p>D x 18</p>  <p>Ø6 x 30 mm</p> | <p>H x 9</p>  <p></p> | <p>K x 18</p>  <p>Ø4 x 6 mm</p> |  |
|---|---|--|---|---|

Insert dowel (D) into parts 16 and 17, and connect with 15, then lock with cam lock (B) by rotating clockwise. Install handle (H) onto part 15 and secure with screw (K).



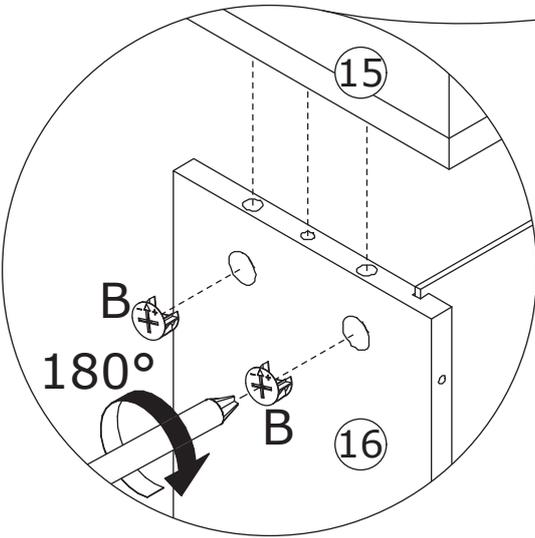
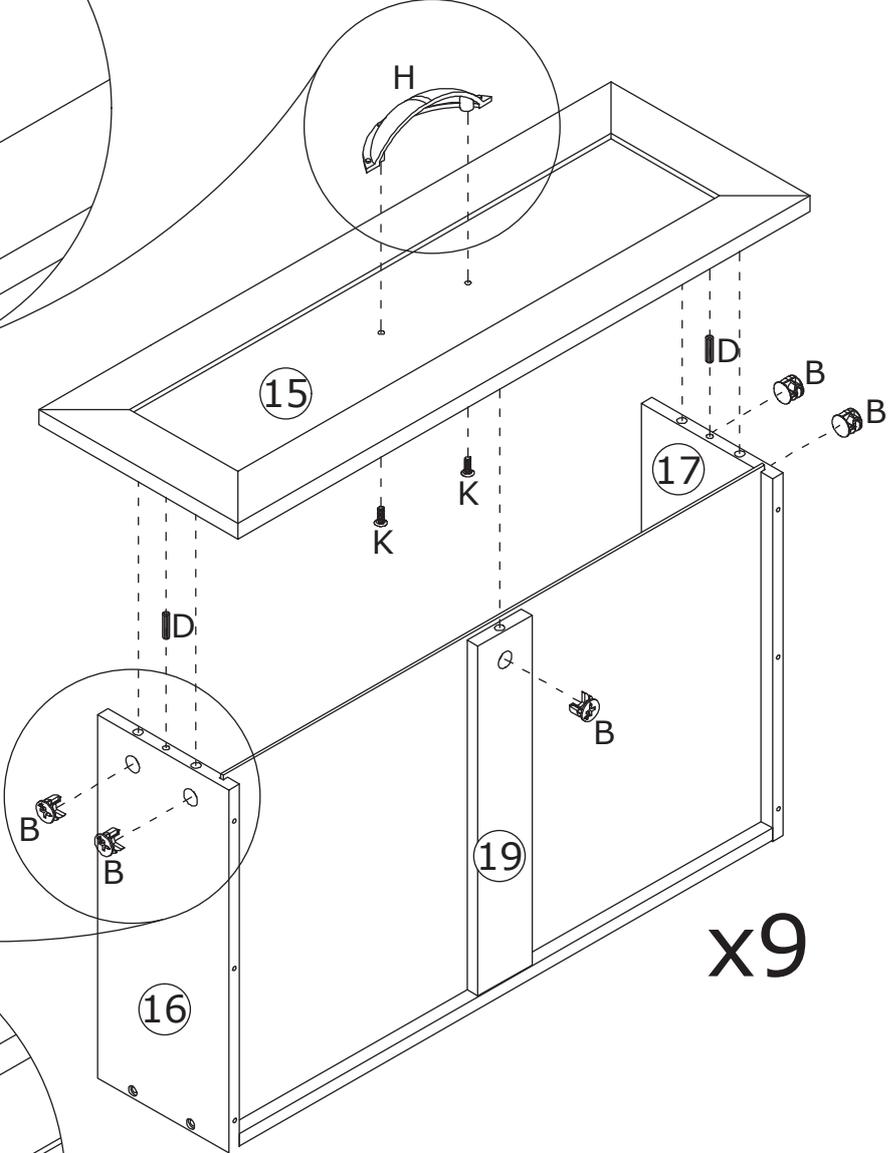
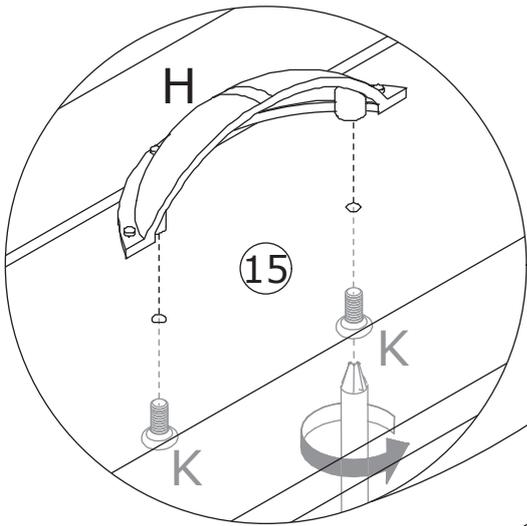
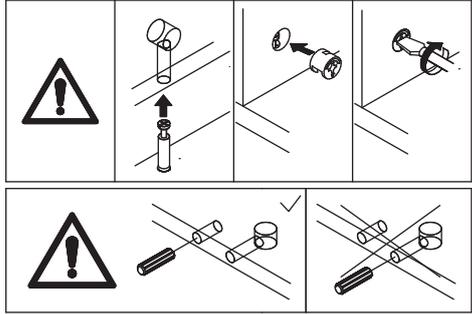


5

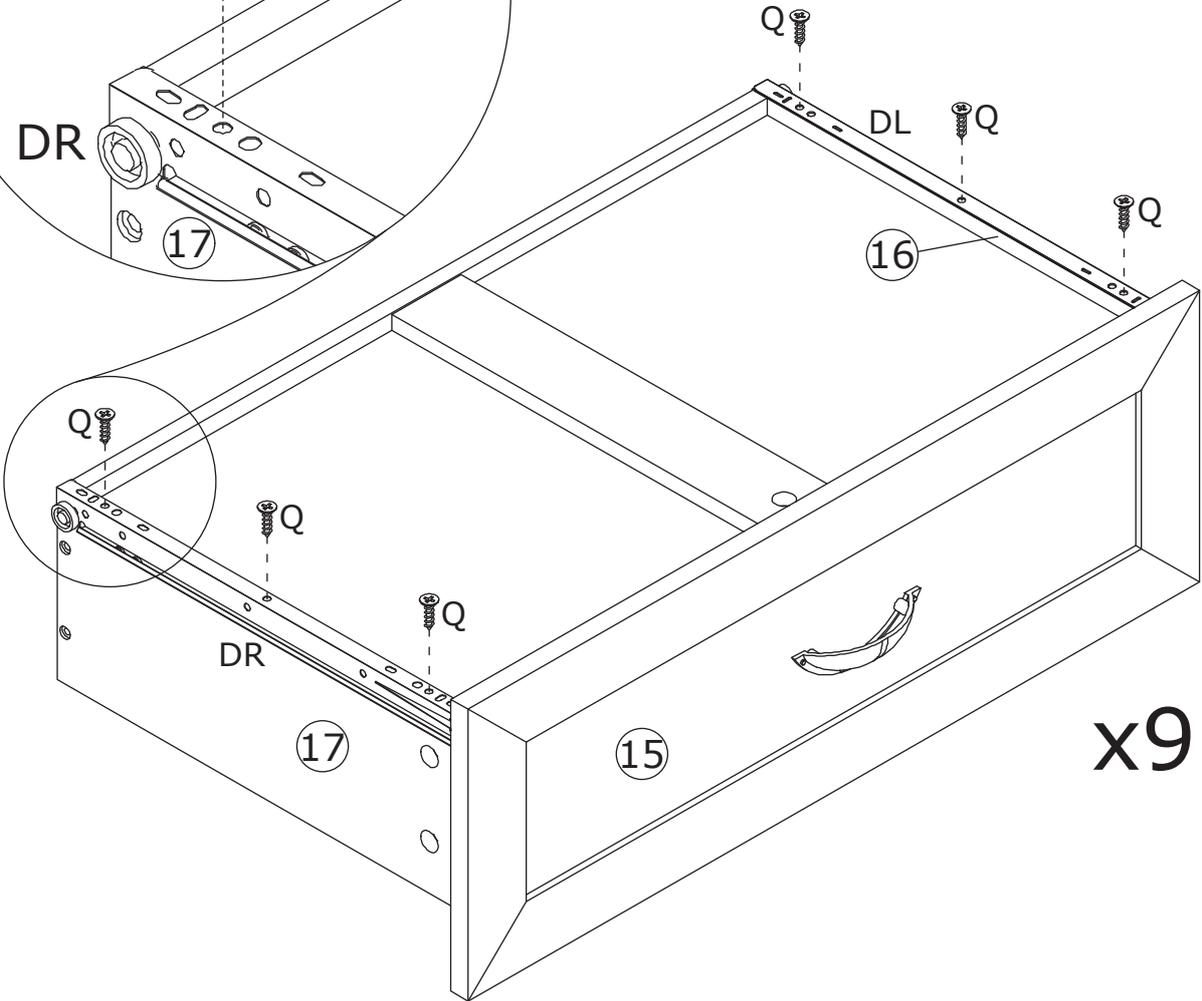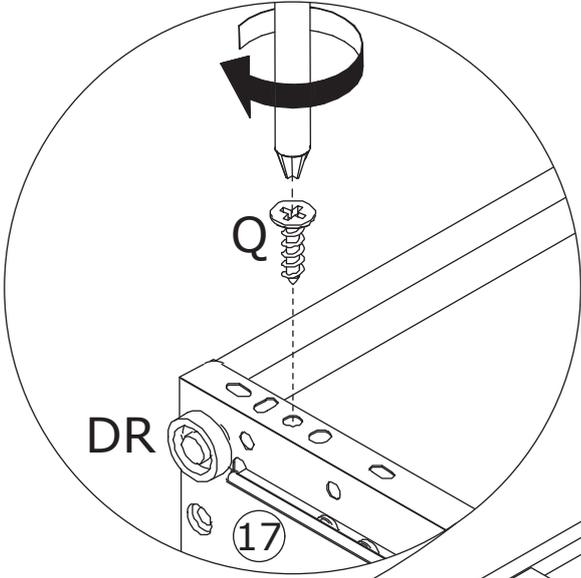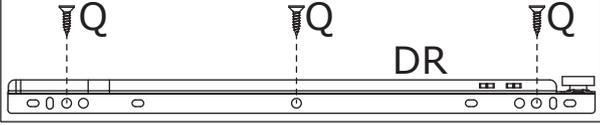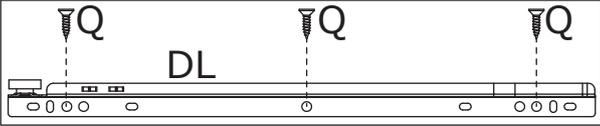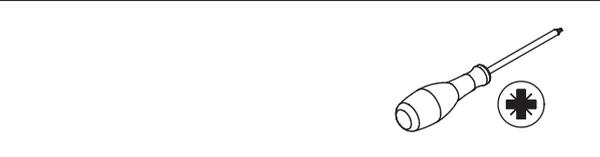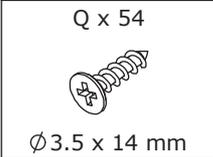


Attach left slide rail (DL) and right slide rail (DR) to parts 16 and 17 using screws (Q).

6

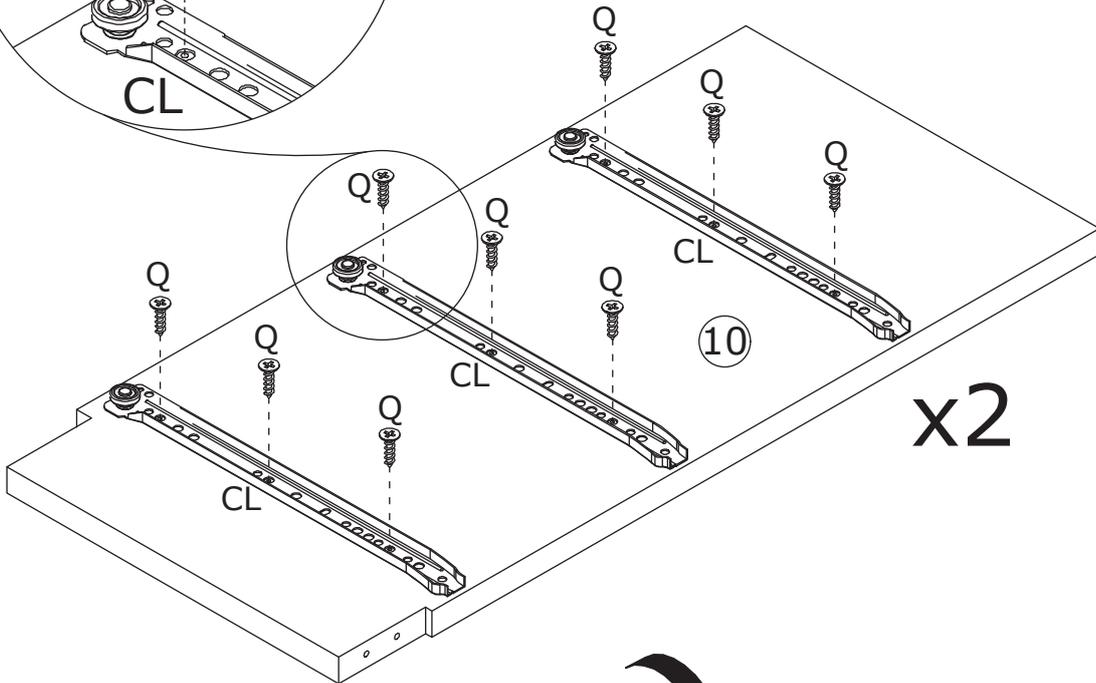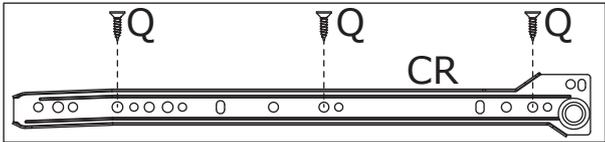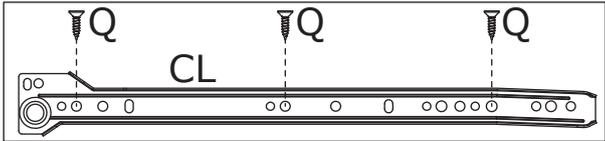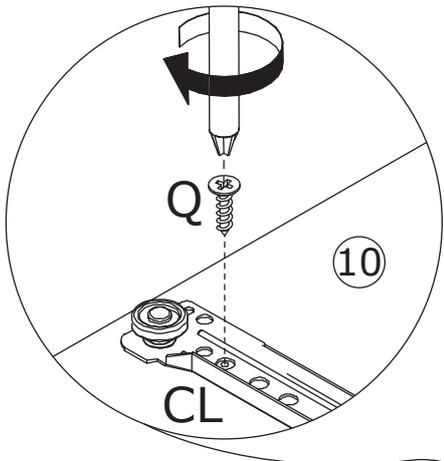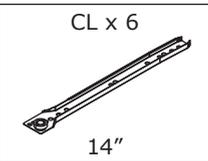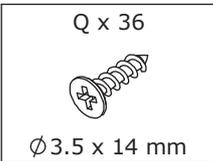

Fix the left slide rail (CL) to part 10 using screws (Q). **Flip 180°** and attach the right slide rail (CR) using screws (Q).




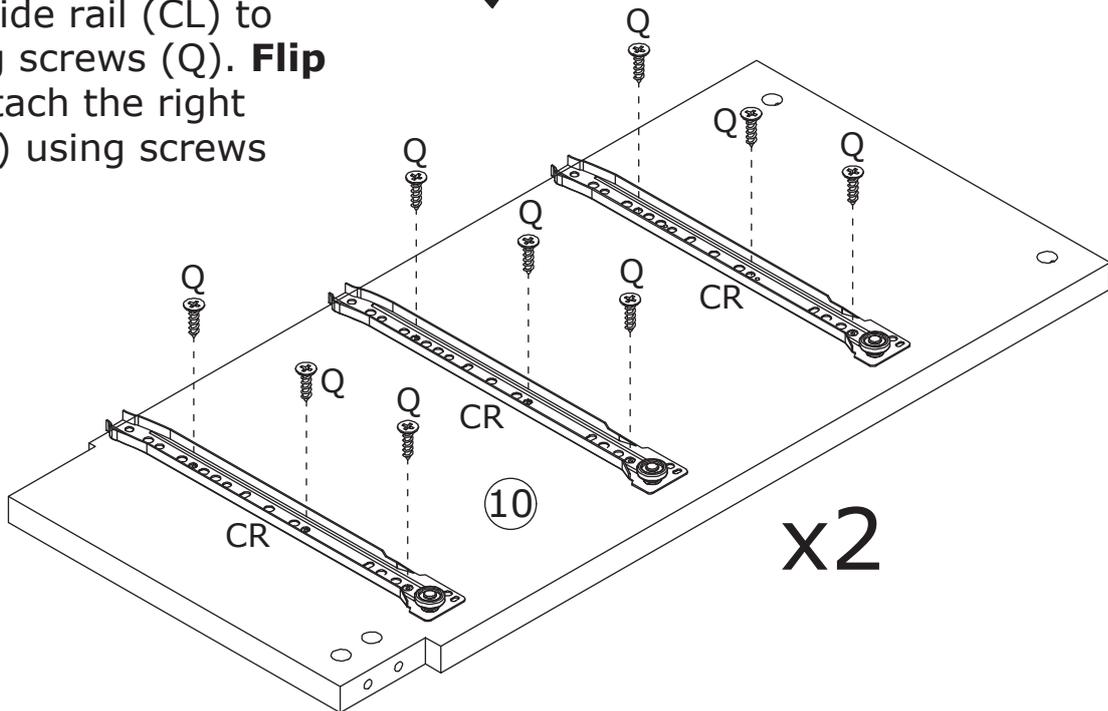


7


Q x 18
Ø 3.5 x 14 mm

CL x 3
14"

CR x 3
14"

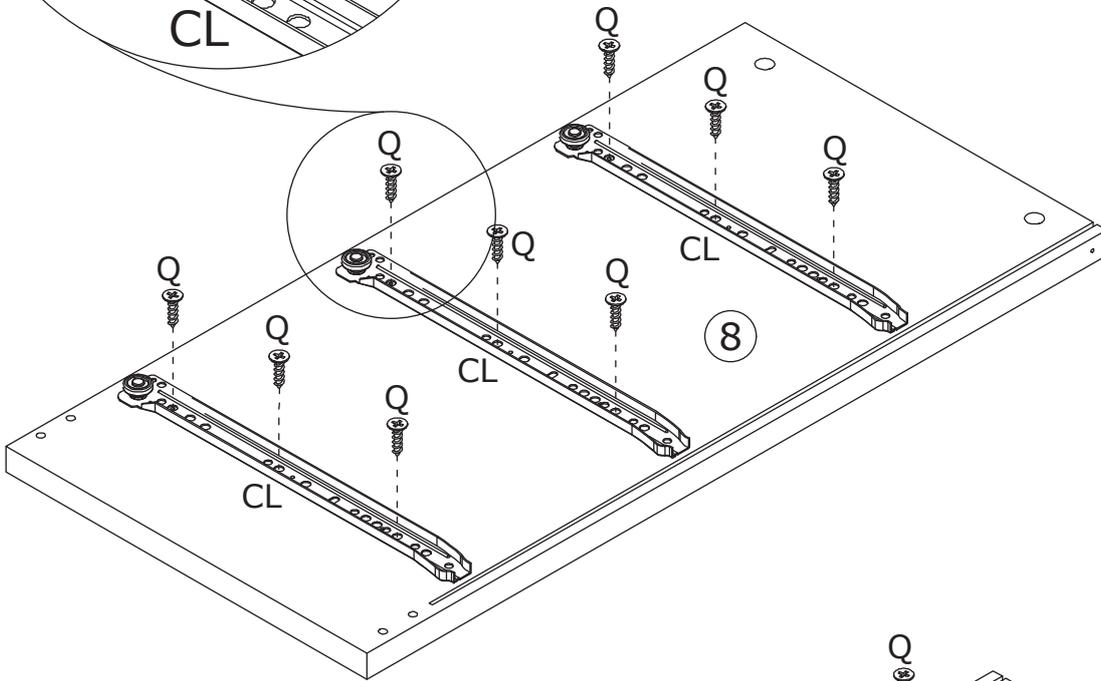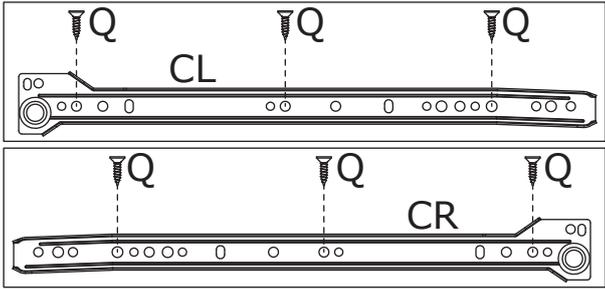
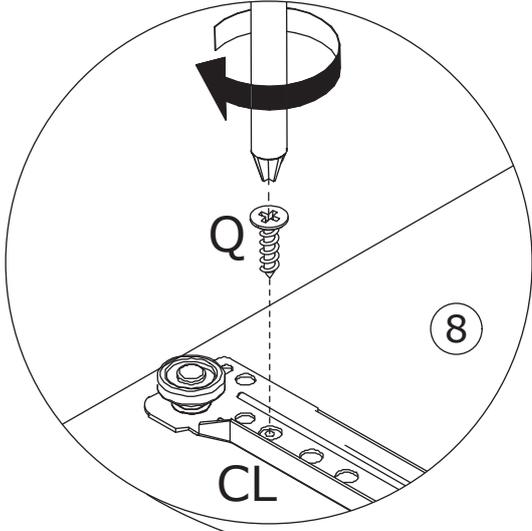
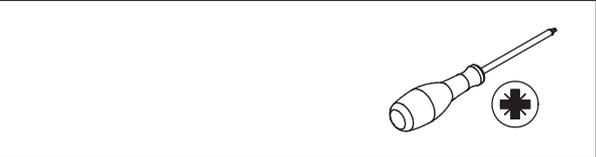


Secure the left slide rail (CL) to part 8 using screws (Q).
Fix the right slide rail (CR) to part 9 using screws (Q).

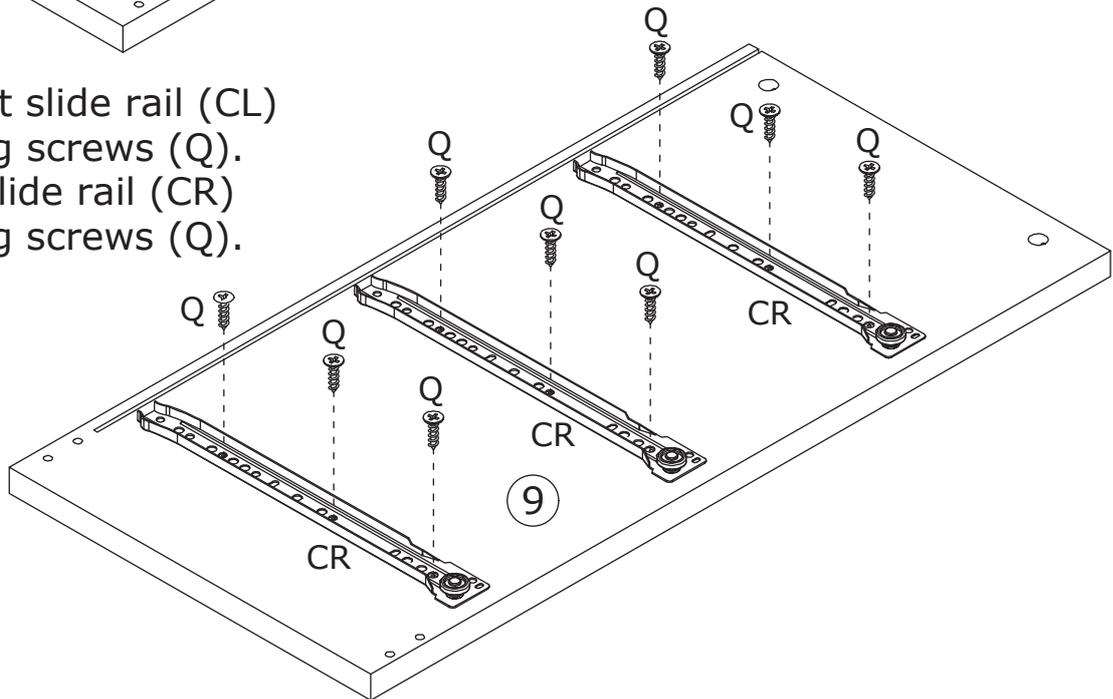




8

 A x 4
Ø6.5 x 35 mm

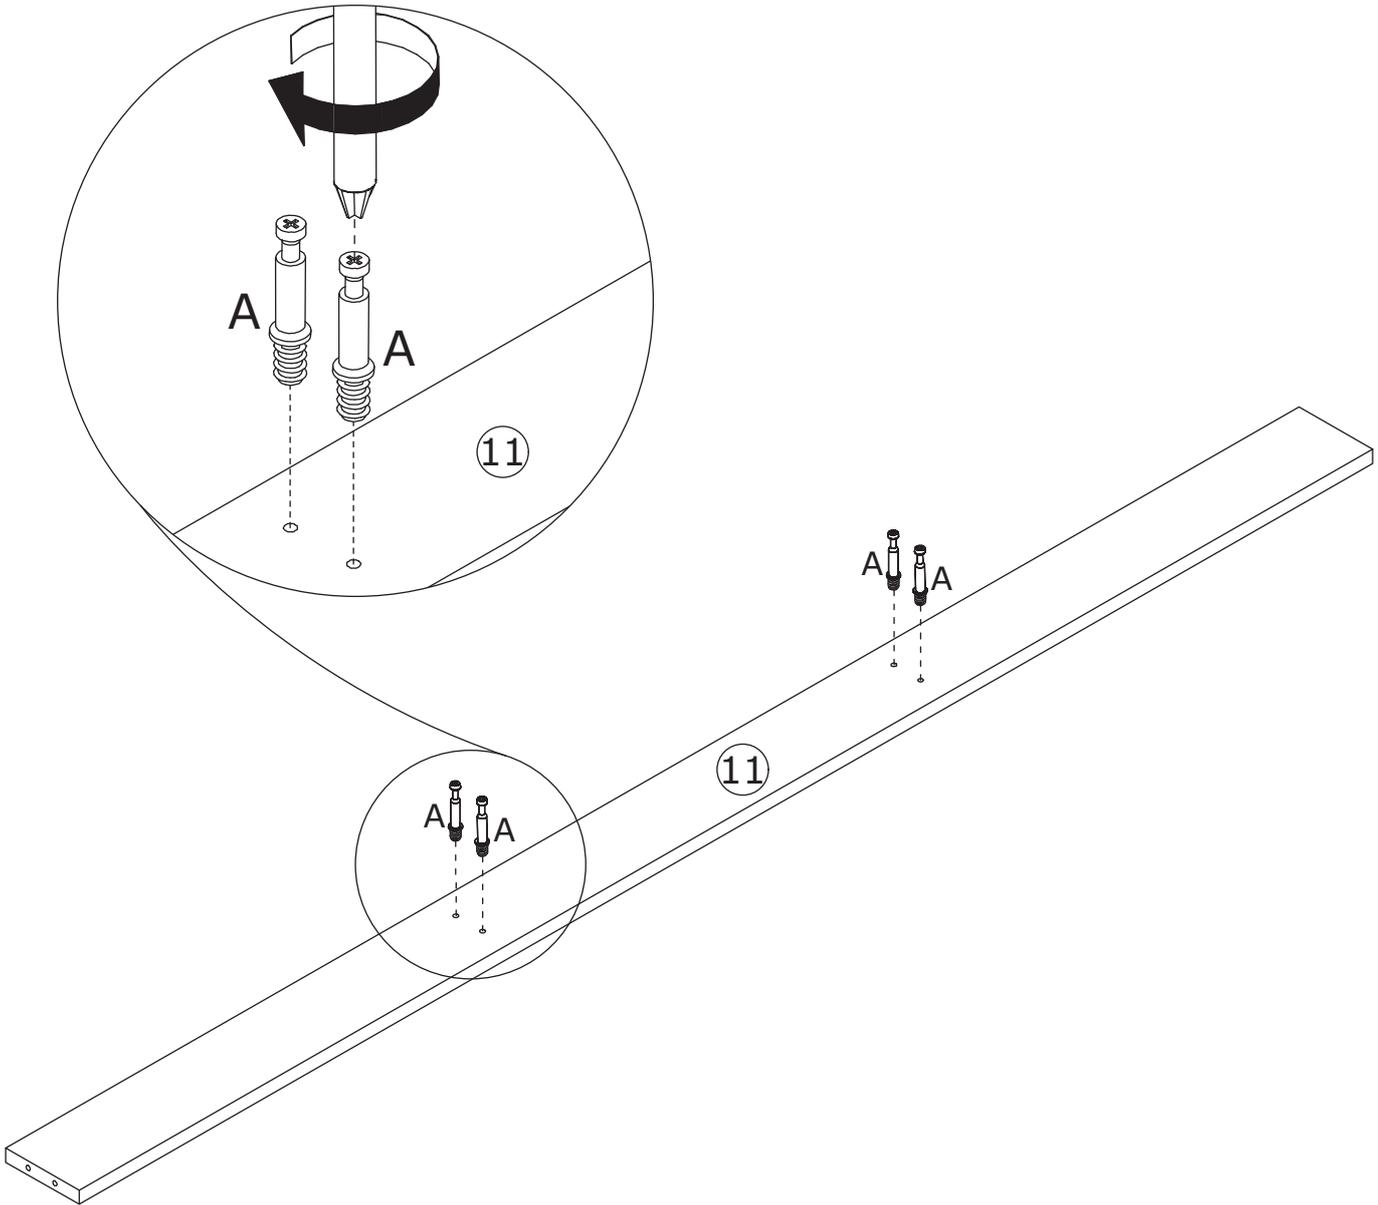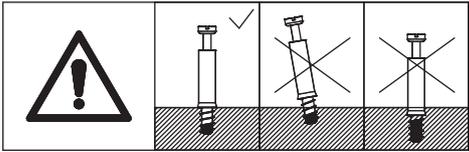



Insert quick-release screw (A) into part 11.

 9

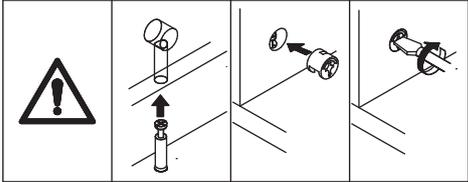
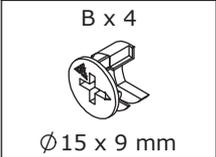


Connect parts 10 and 11, then lock with cam lock (B) by rotating clockwise.

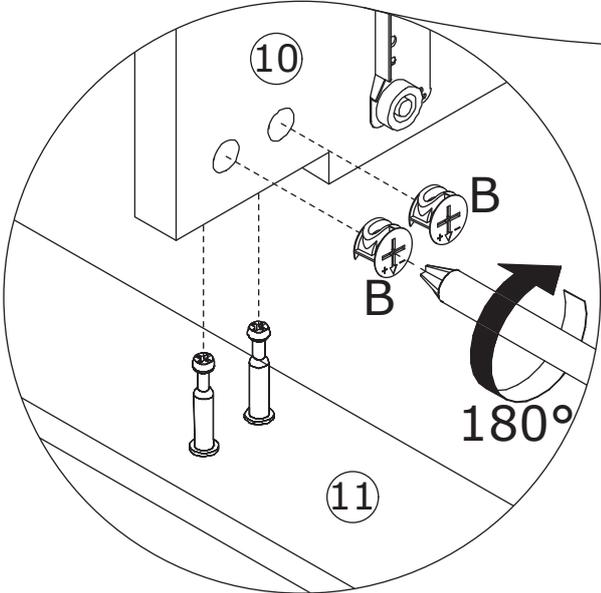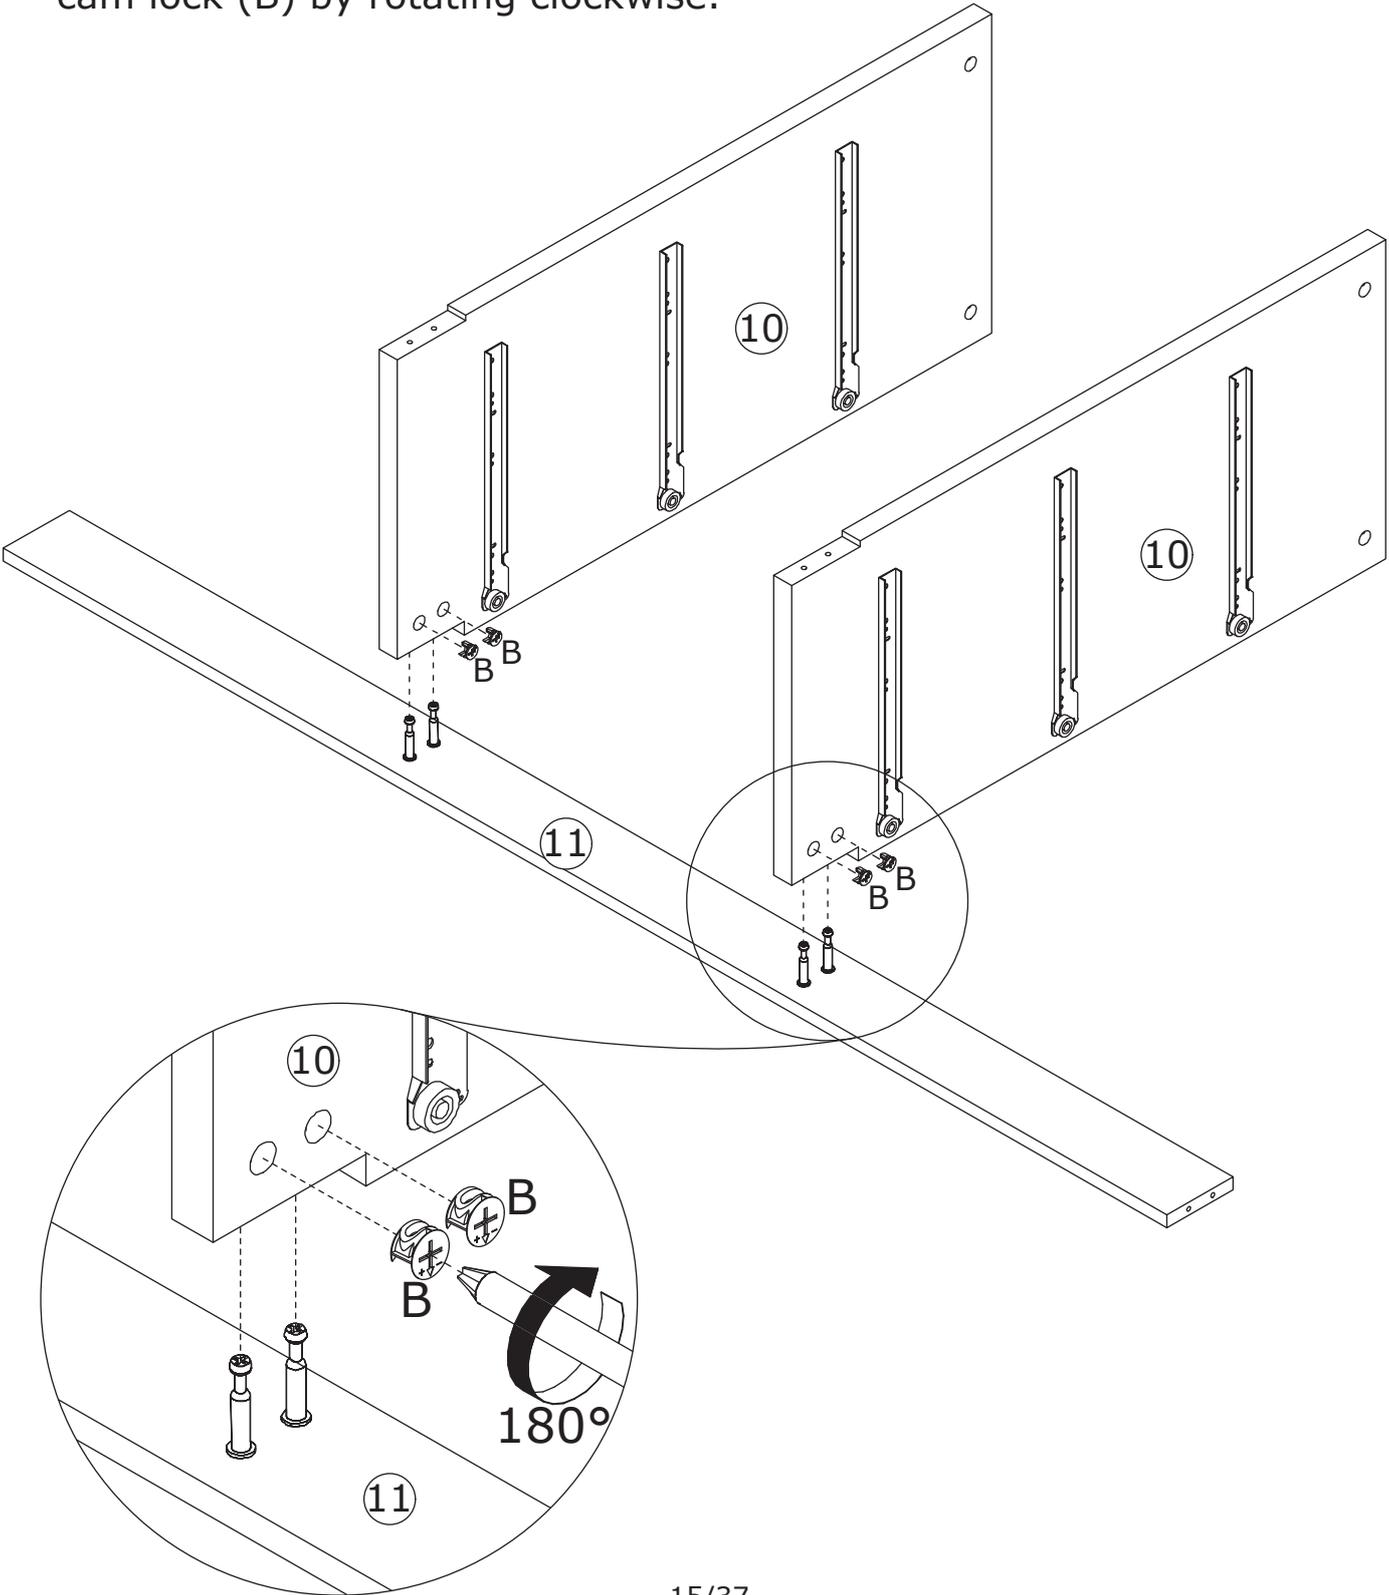



10

| | | |
|--|--|--|
| <p>F x 4</p>  <p>Ø6 x 50 mm</p> | <p>T x 1</p>  <p>M4</p> | |
|--|--|--|

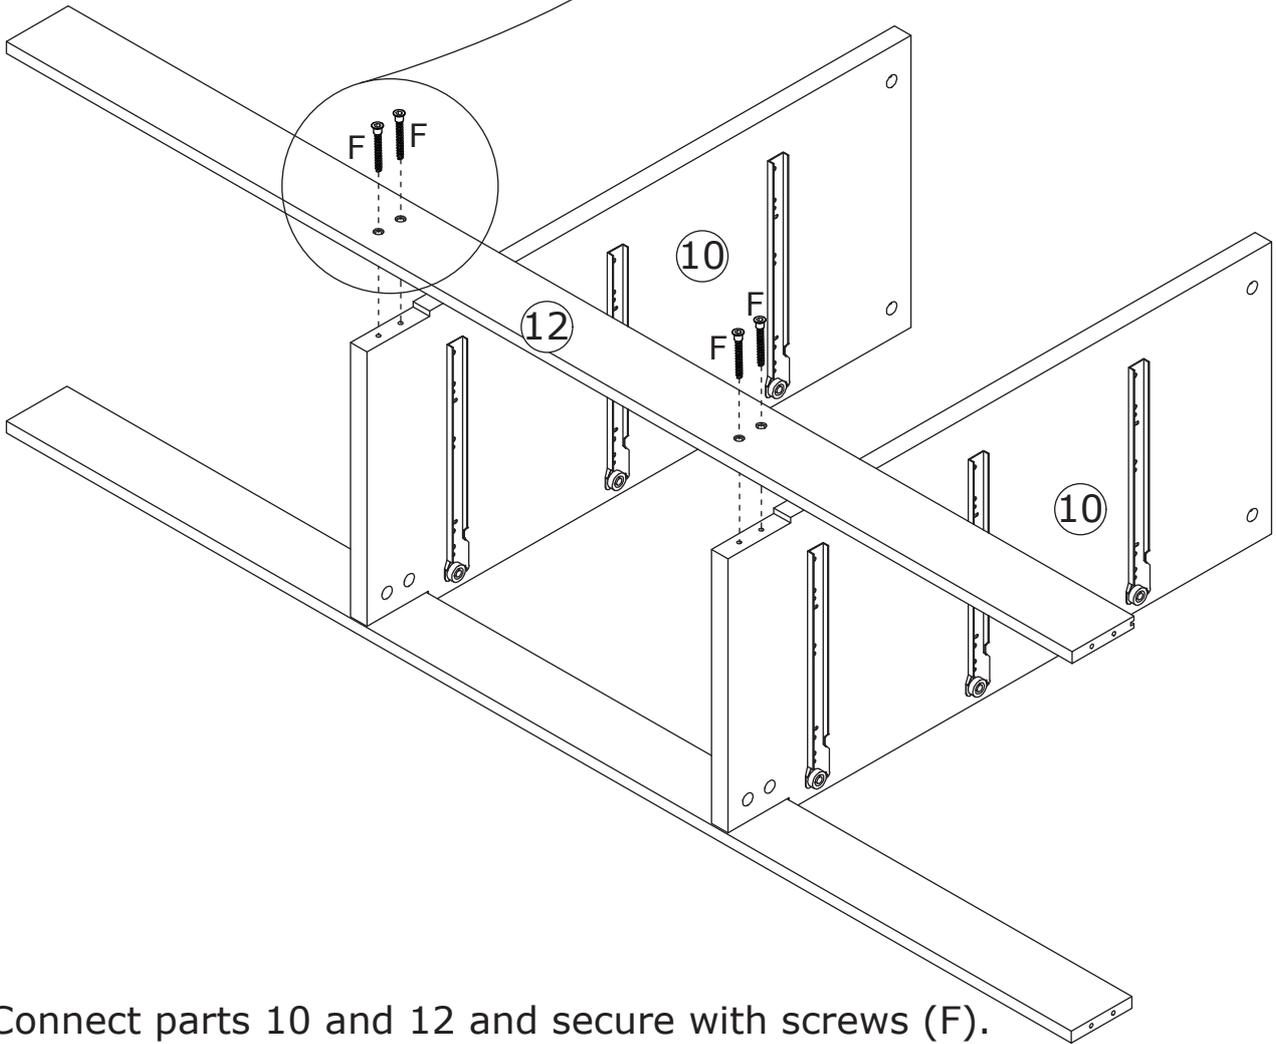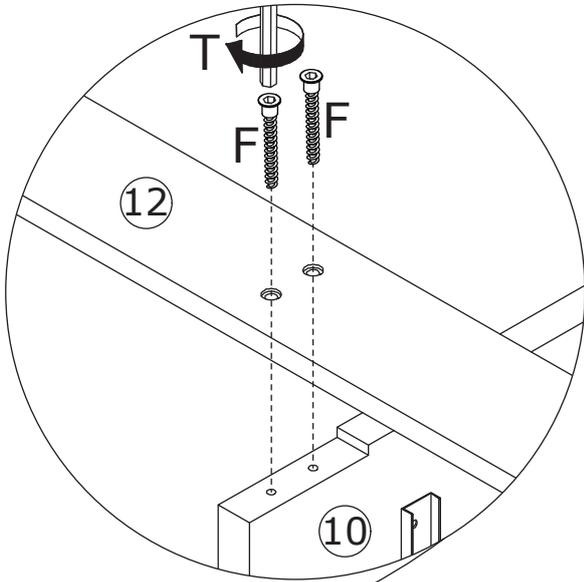


Connect parts 10 and 12 and secure with screws (F).

11

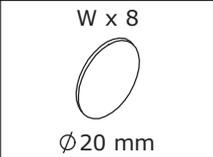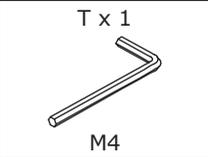


Connect parts 8, 9, 11, and 12 using screws (F).

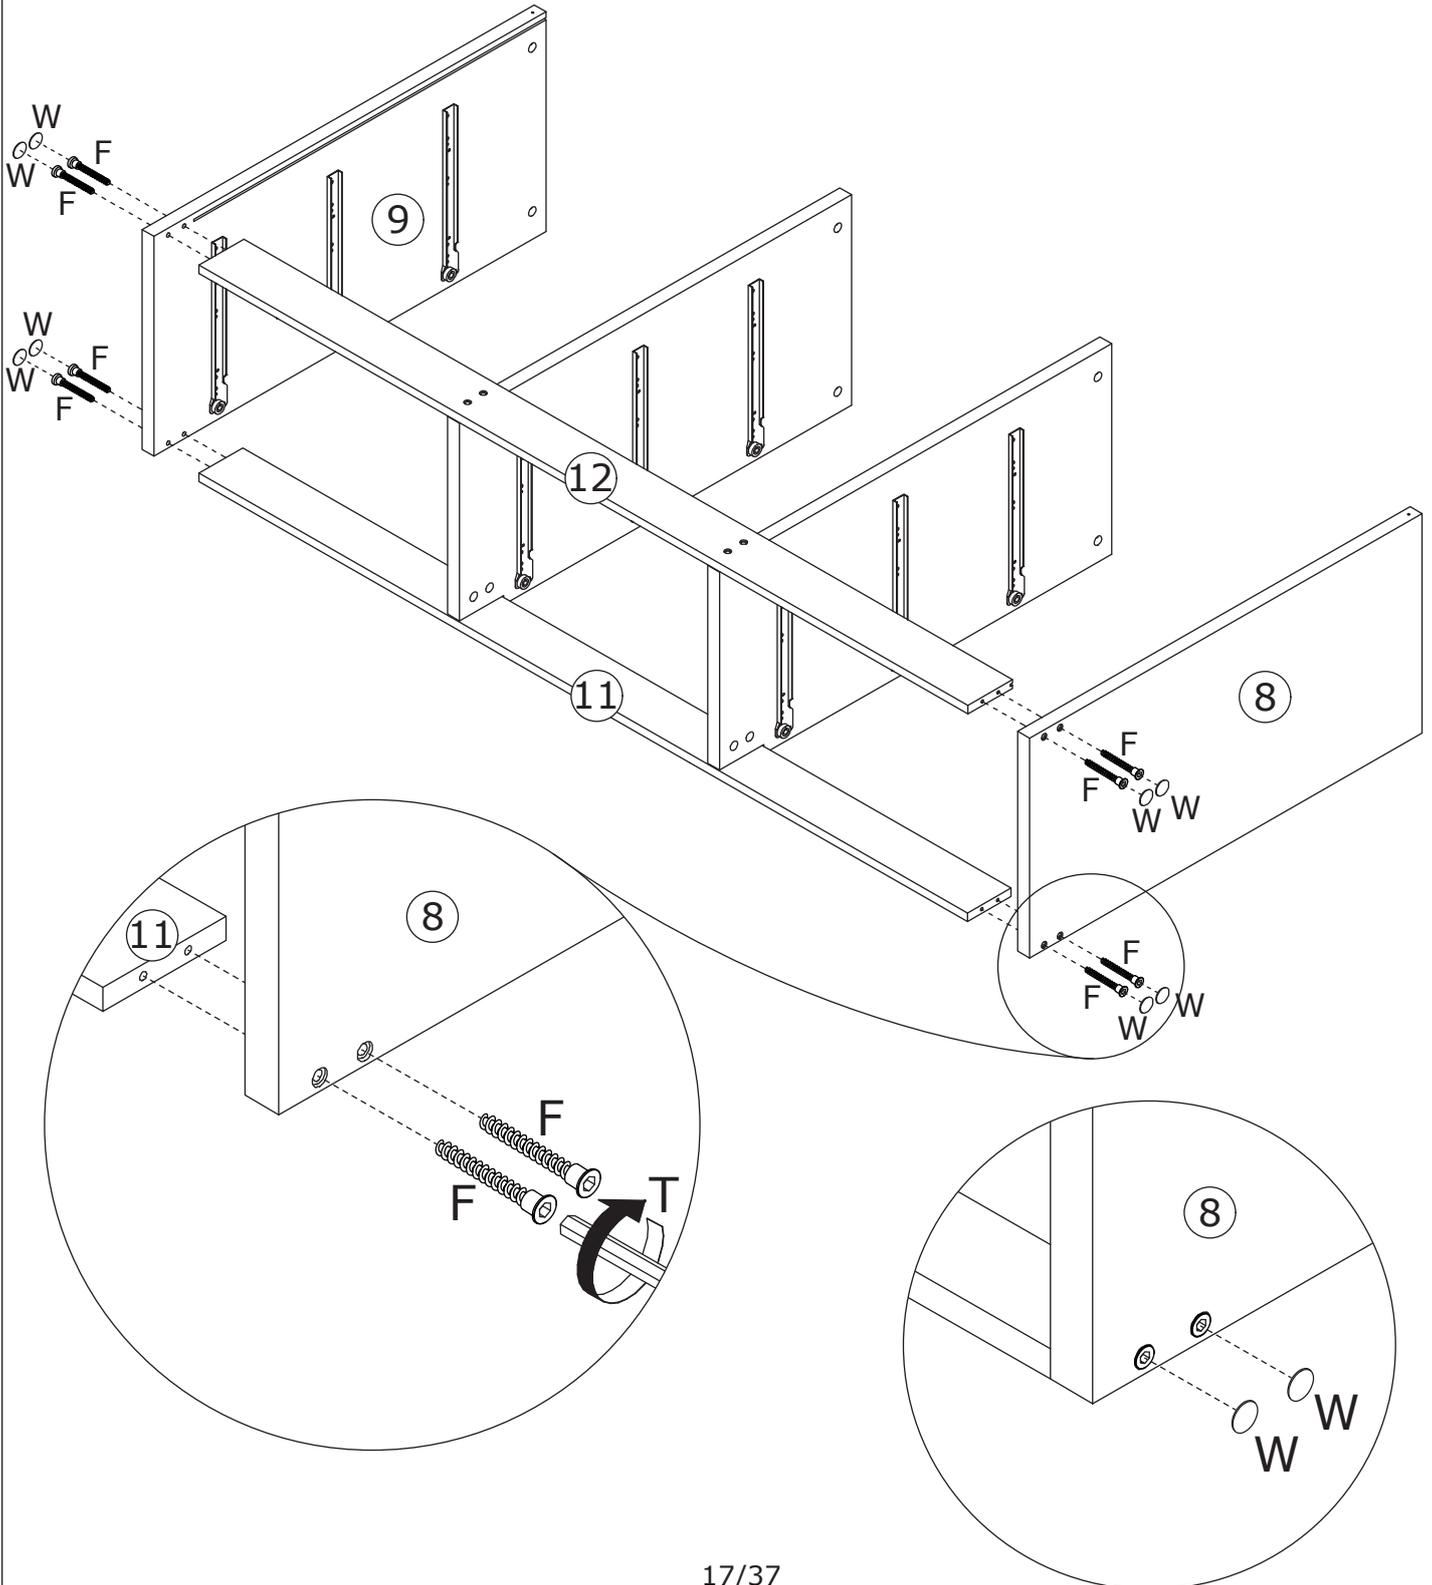




12

Insert part 23 into the available slot.

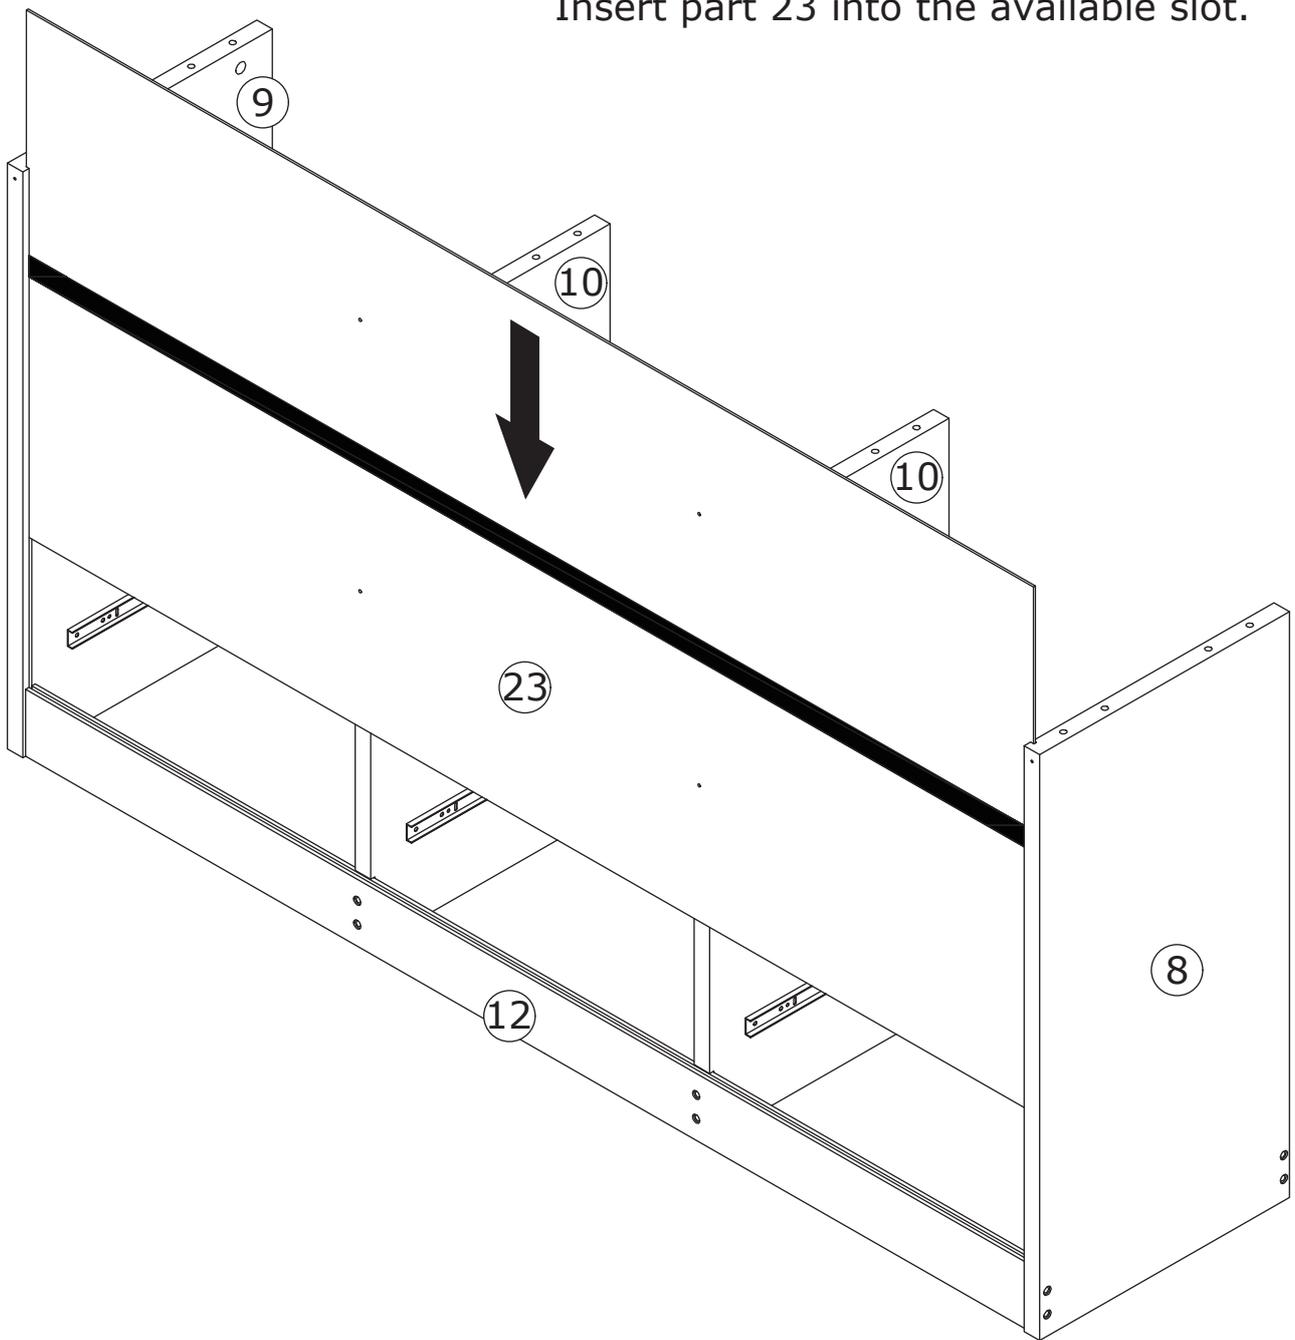


13

 
A x 4
Ø 6.5 x 35 mm

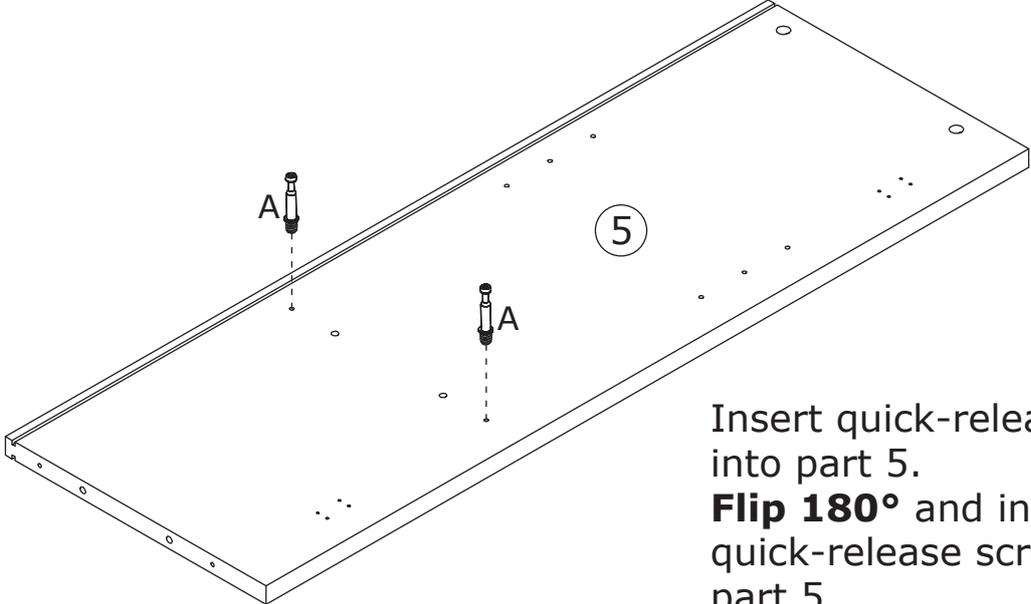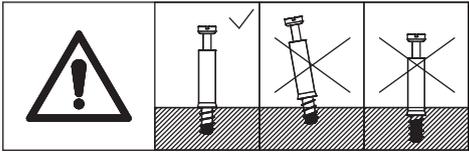





Insert quick-release screw (A) into part 5.
Flip 180° and insert another quick-release screw (A) into part 5.

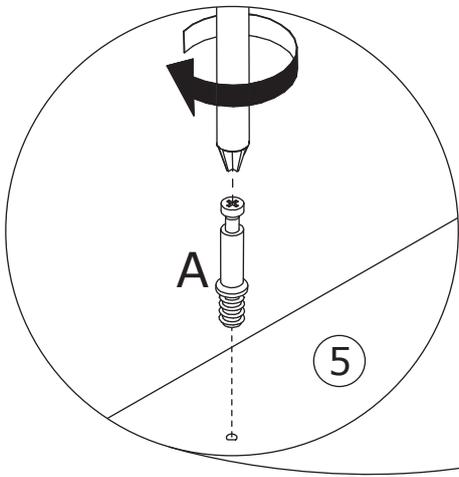


180°

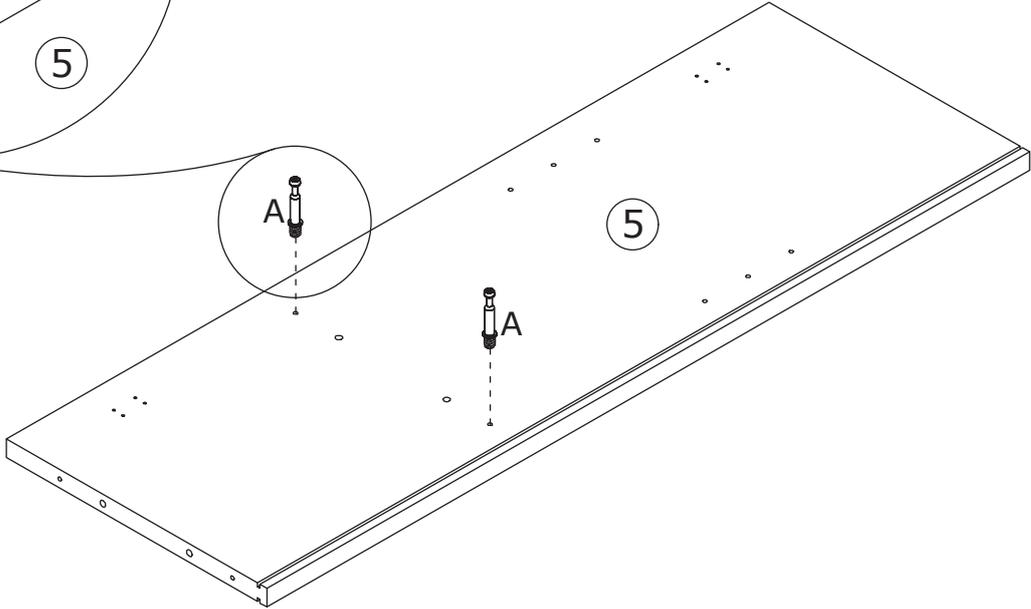



14

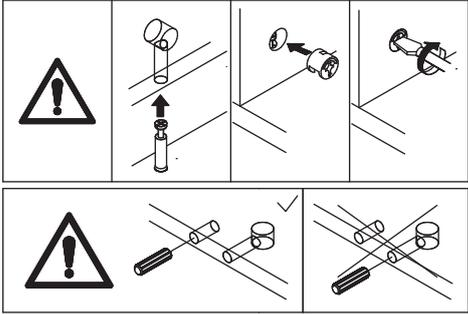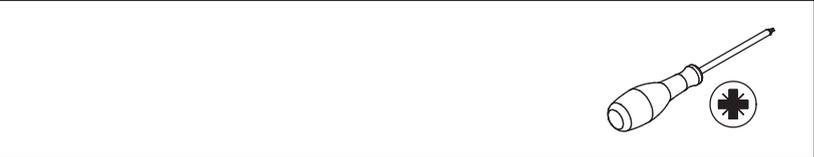
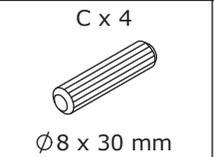
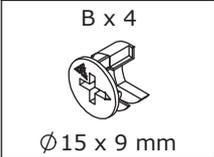


Insert dowel (C) into part 5, then connect with part 6, lock with cam lock (B) by rotating clockwise.

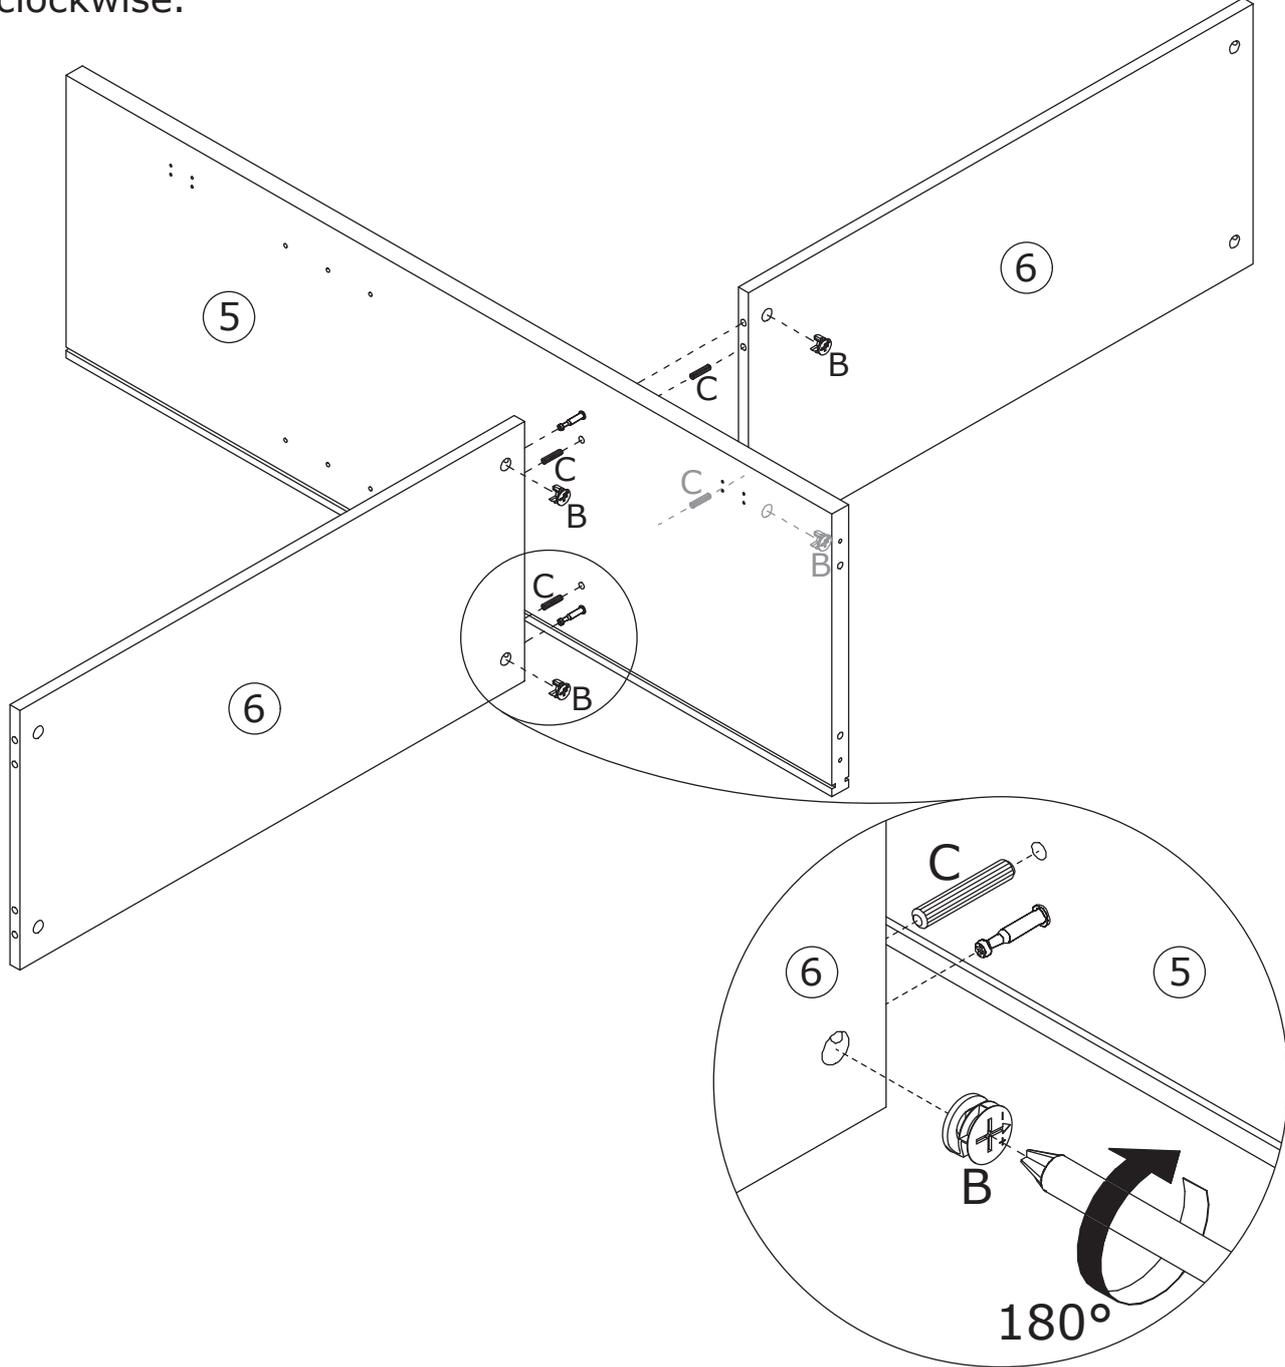


15

  
| | | | |
|--|--|---|---|
| <p>A x 4</p>  <p>Ø6.5 x 35 mm</p> | <p>S x 2</p>  <p>Ø4 x 12 mm</p> | <p>S x 2</p>  <p>73 x 15 x 24 mm</p> |  |
|--|--|---|---|

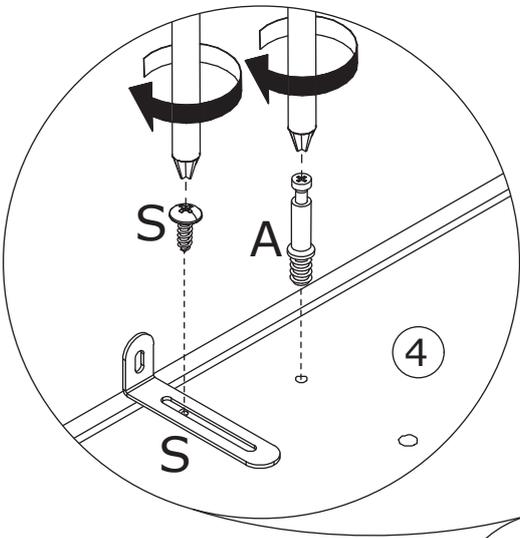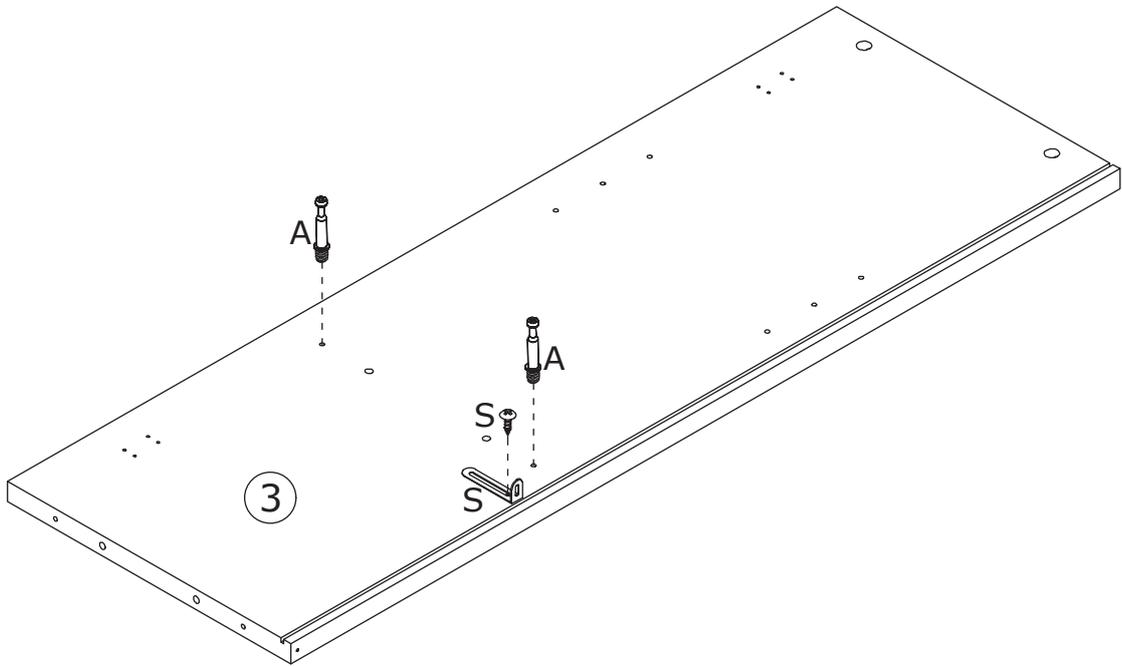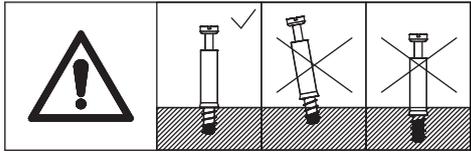


Insert quick-release screws (A) into parts 3 and 4.
Insert anti-tip bracket (S) into parts 3 and 4.

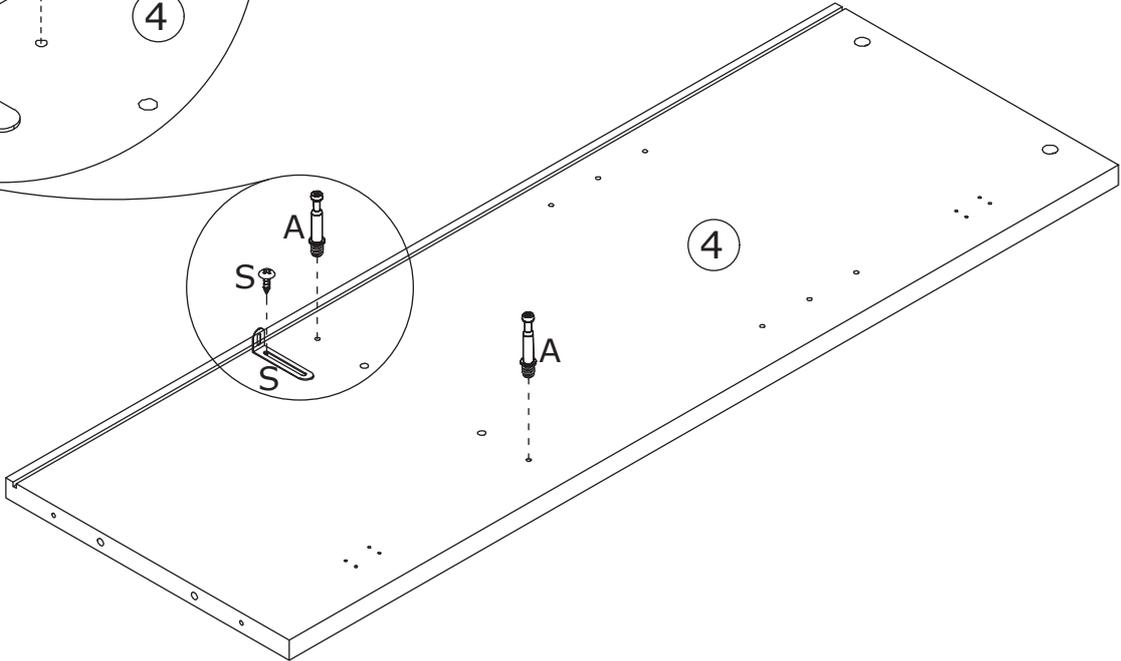




16

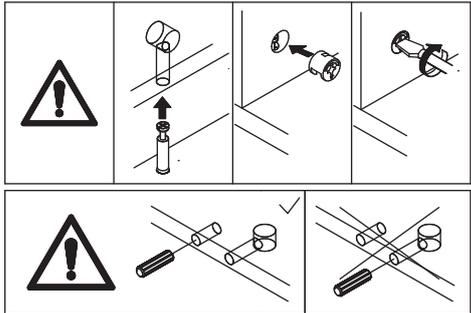


Insert dowel (C) into part 6, then connect with parts 3 and 4, lock with cam lock (B) by rotating clockwise.

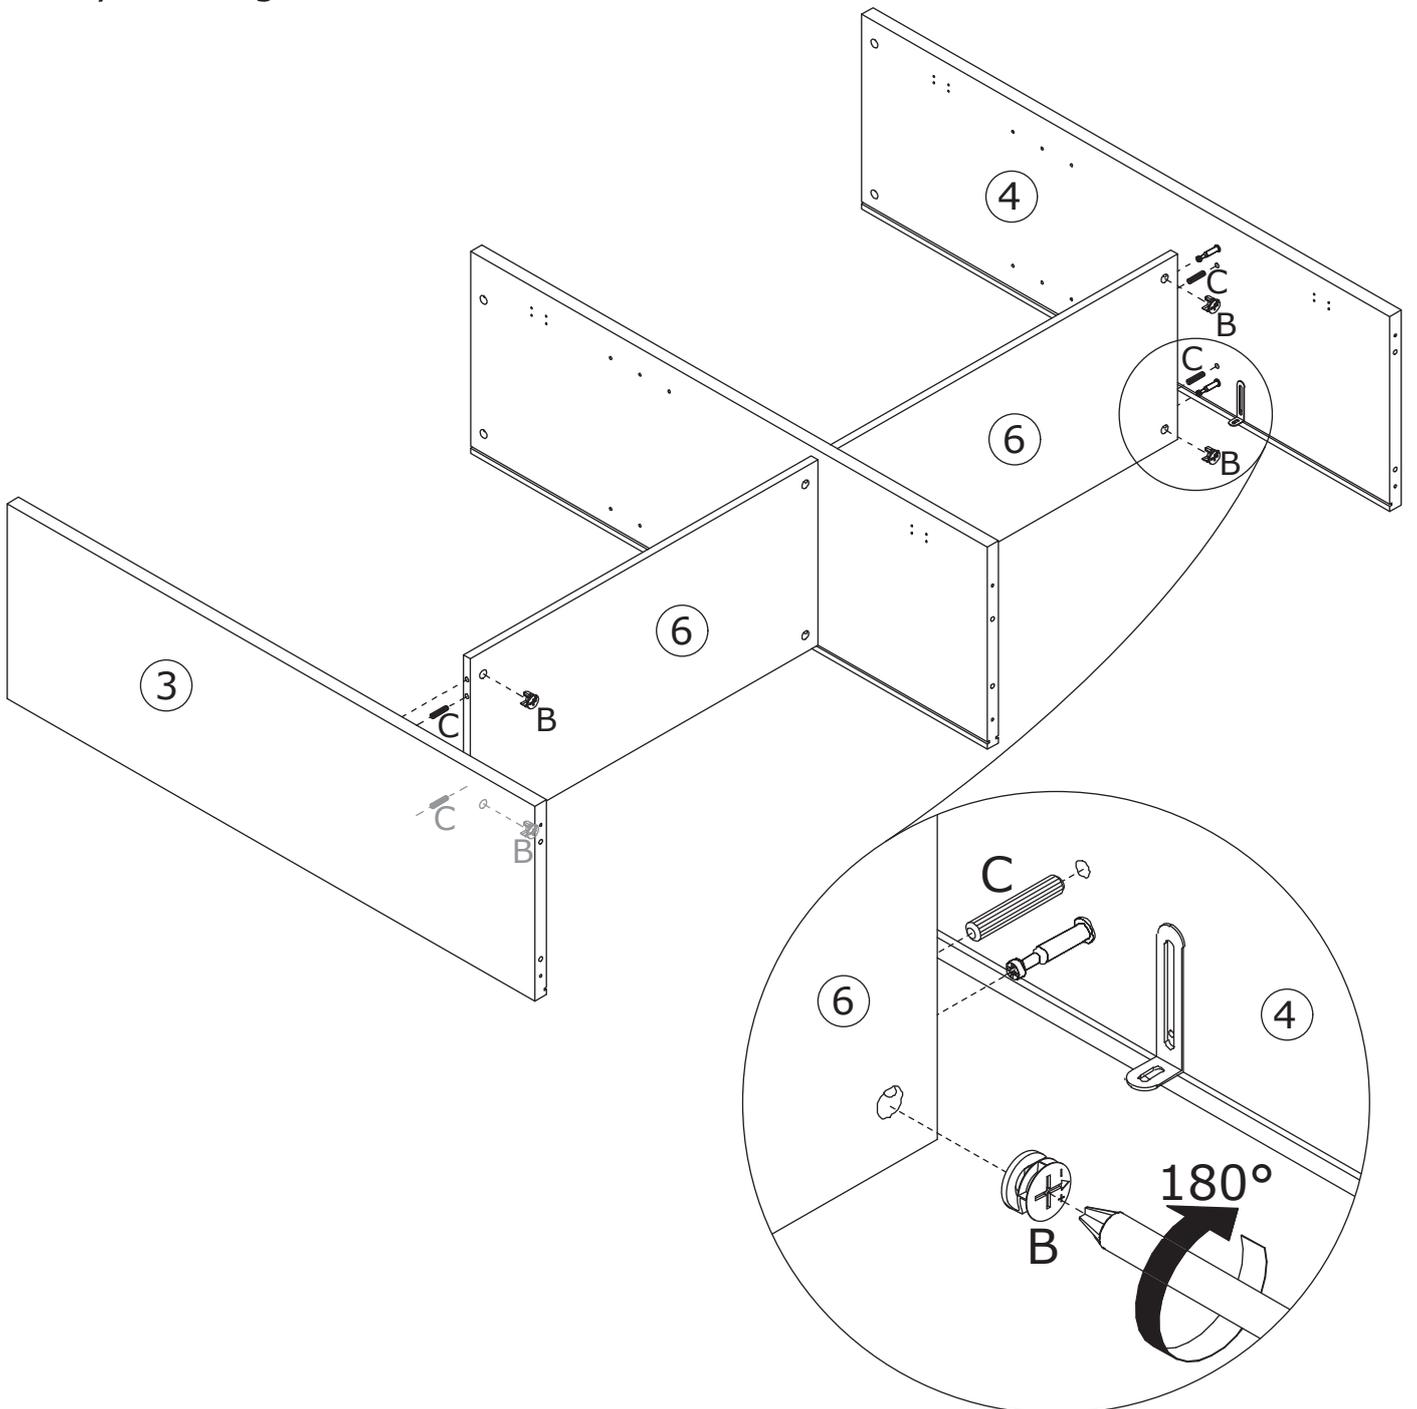


17

  
 
| | | | |
|---|---|--|---|
| <p>A x 6</p>  <p>Ø 6.5 x 35 mm</p> | <p>Q x 4</p>  <p>Ø 3.5 x 14 mm</p> | <p>U x 2</p>  <p>29 x 17 x 8.5 mm</p> |  |
|---|---|--|---|

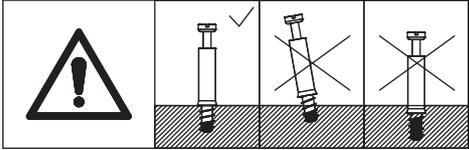


Insert quick-release screw (A) into part 1.
Attach the door stopper (U) to part 1 and
secure with screw (Q).

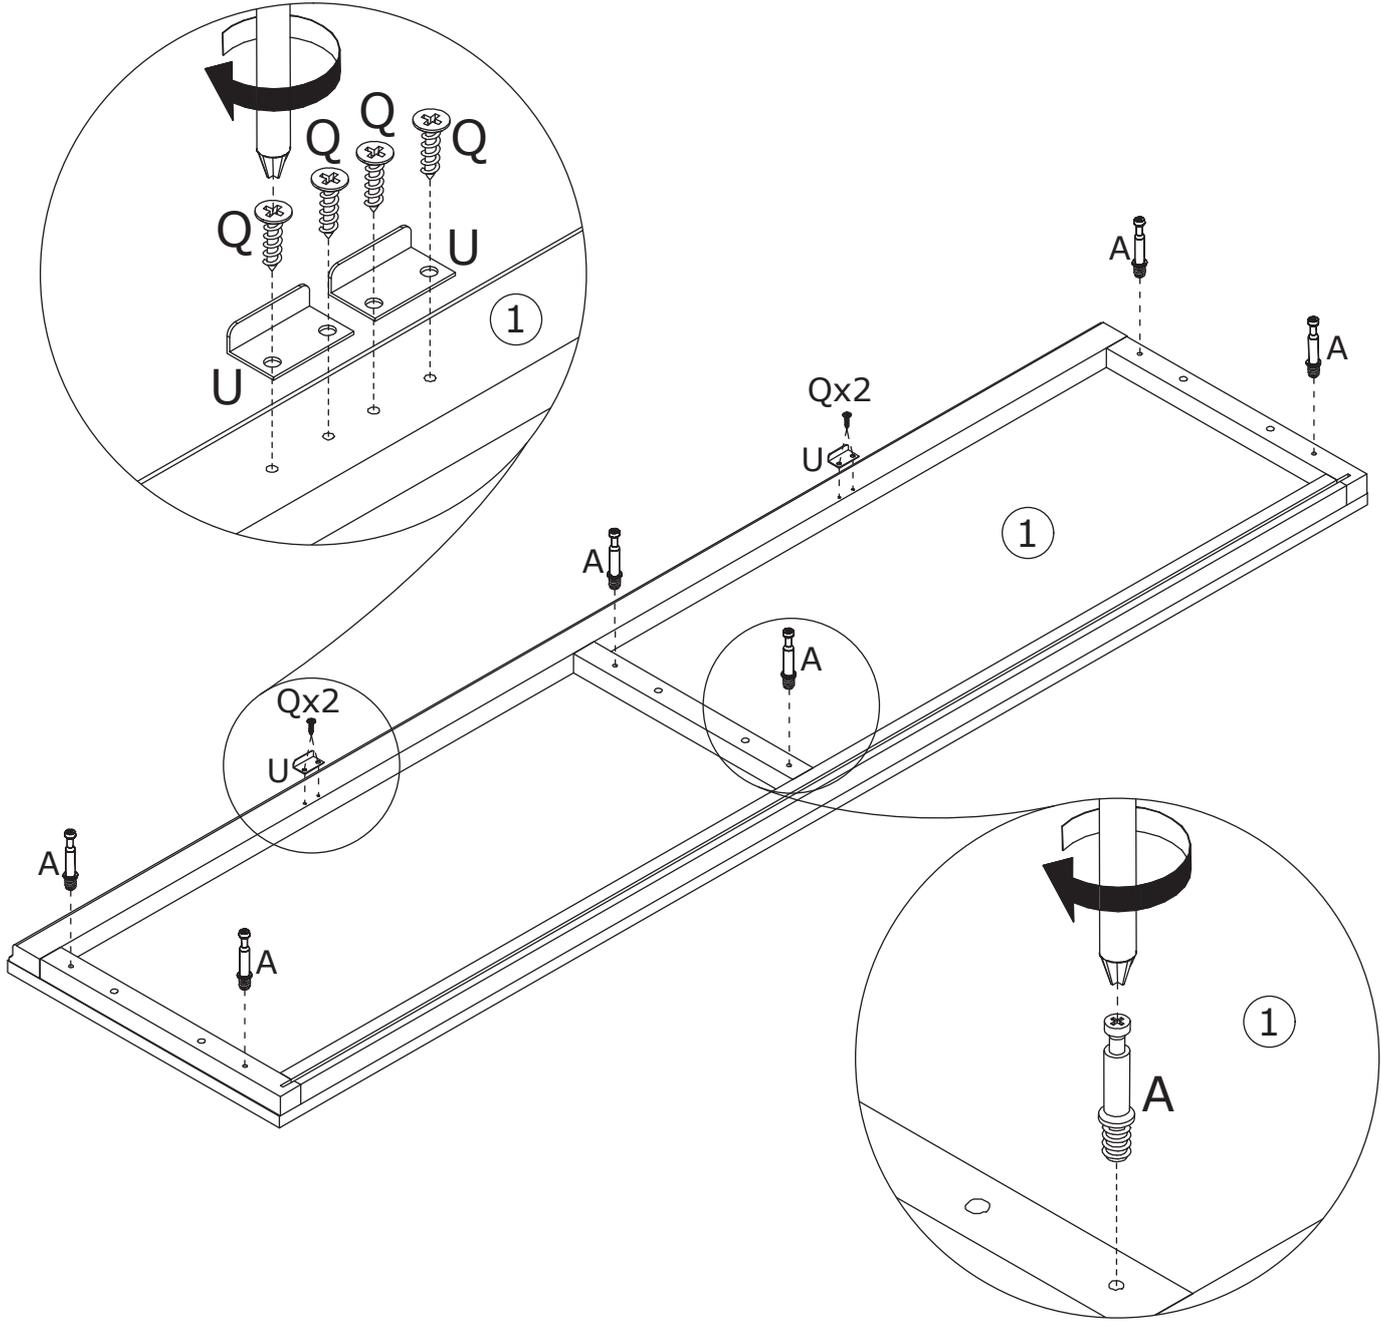

18

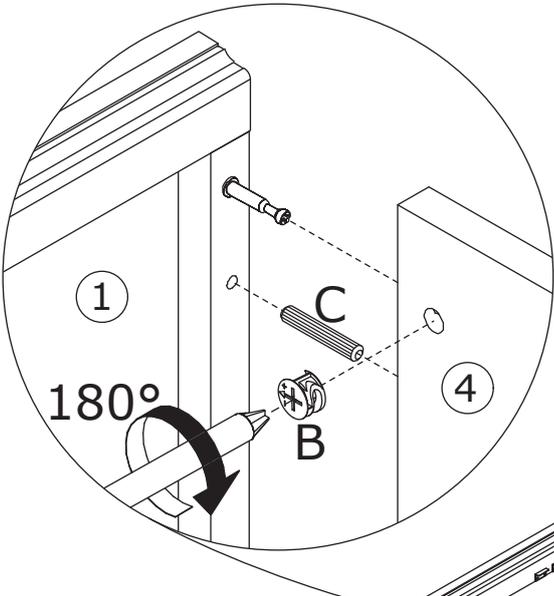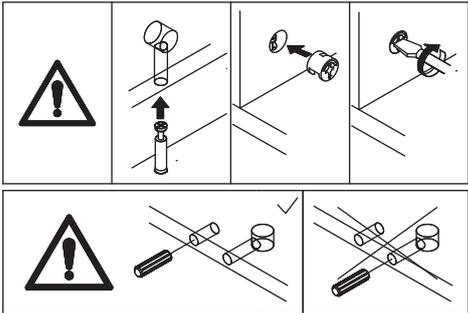


Insert dowel (C) into parts 3, 5 and 4, then connect with part 1, lock with cam lock (B) by rotating clockwise.



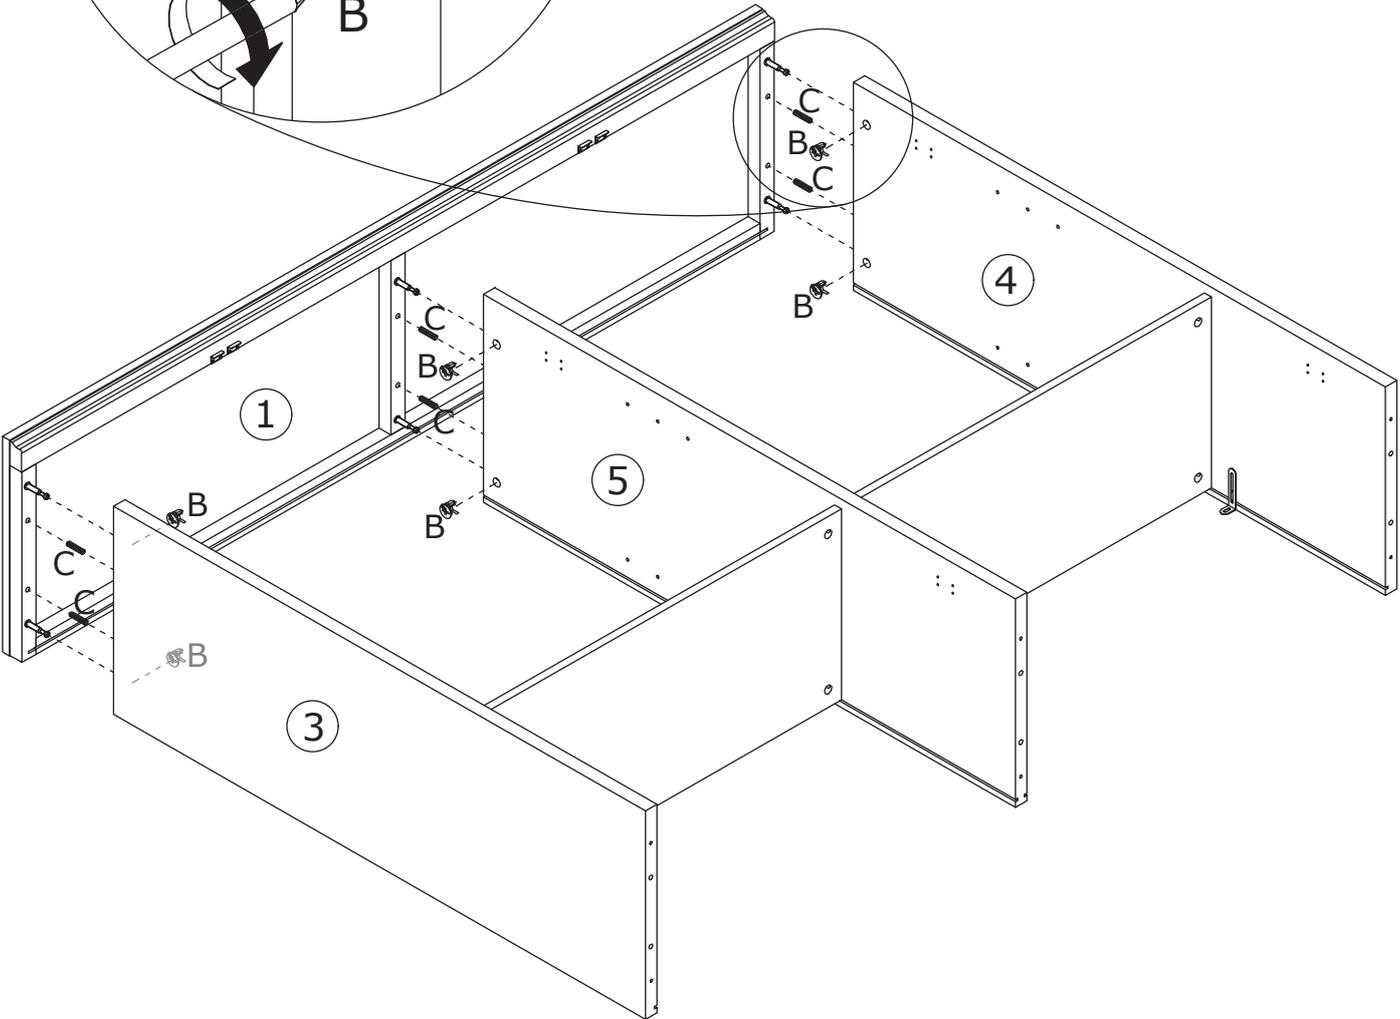


19


Insert parts 21 and 22 into the available slots.

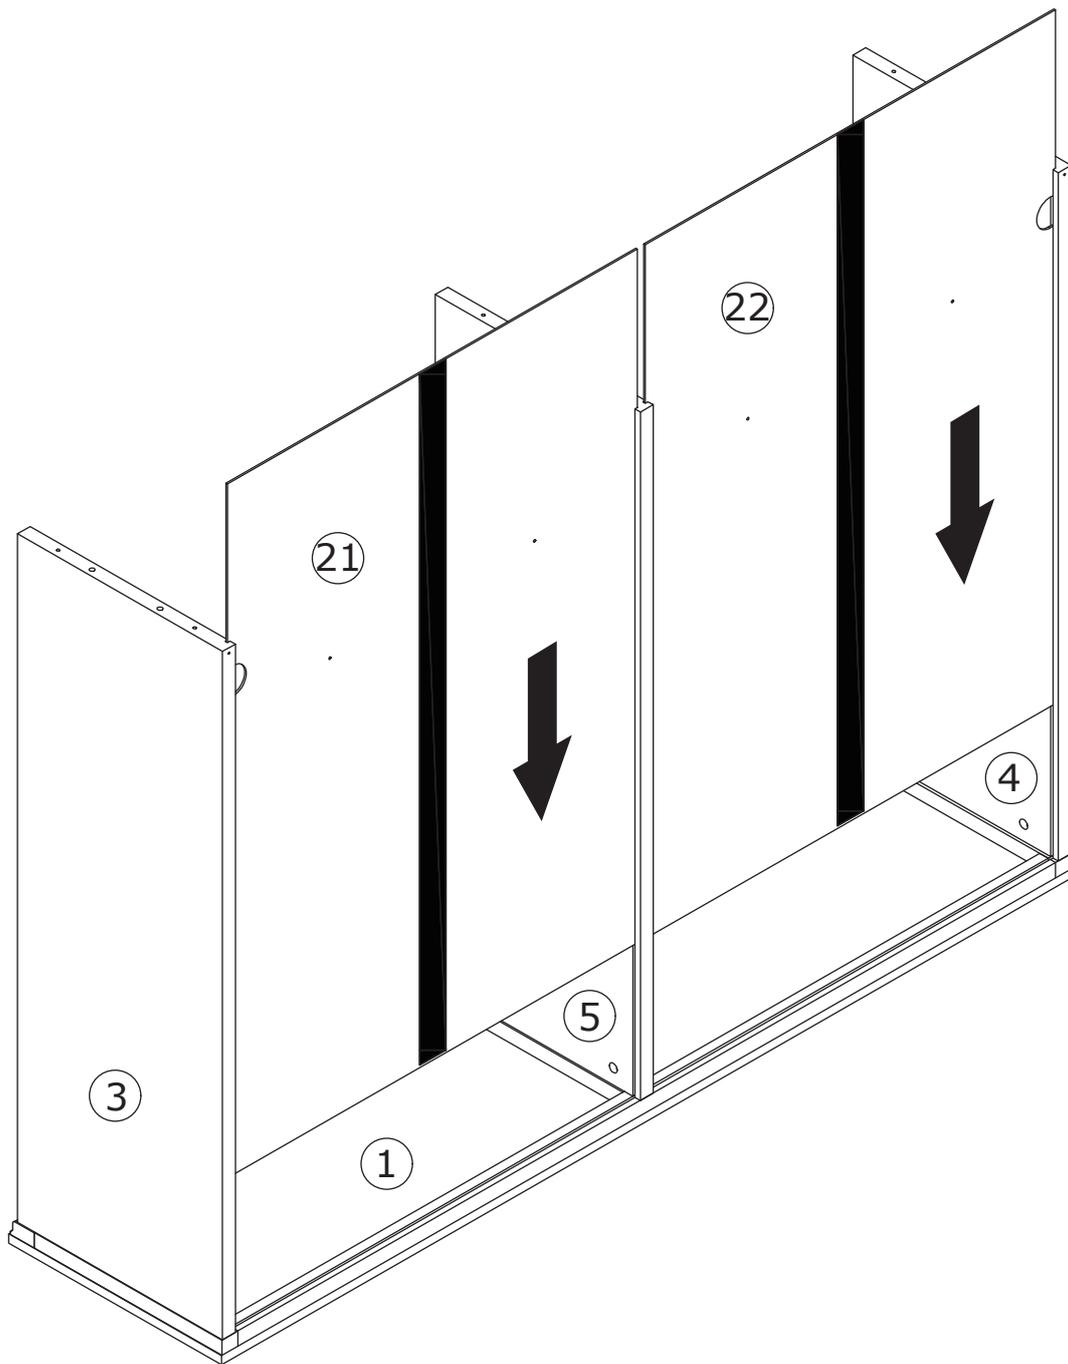



20

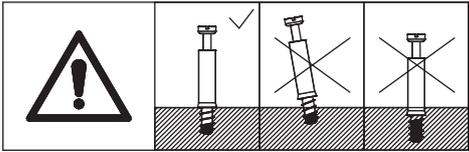 
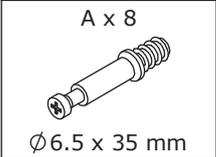


Insert quick-release screw (A) into part 2.

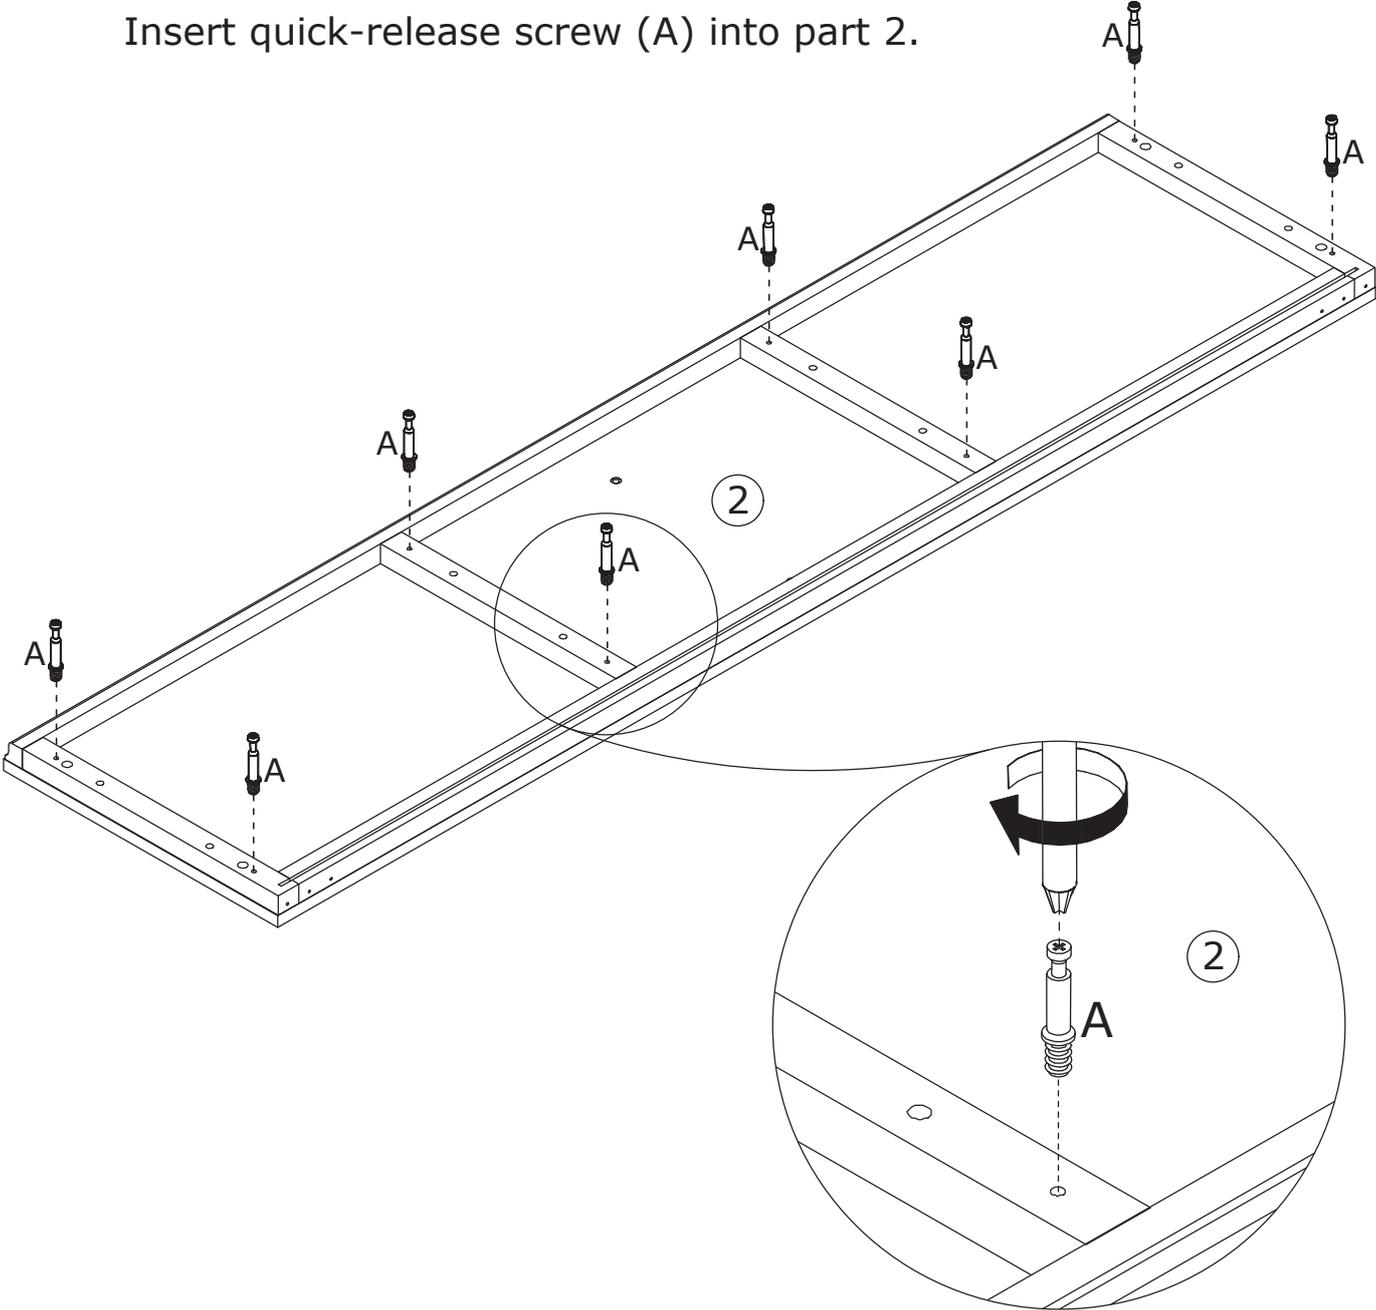


21





 
 
| | | | |
|--|--|--|--|
|  C x 6 Ø8 x 30 mm |  F x 6 Ø6 x 50 mm |  T x 1 M4 | |
|--|--|--|--|

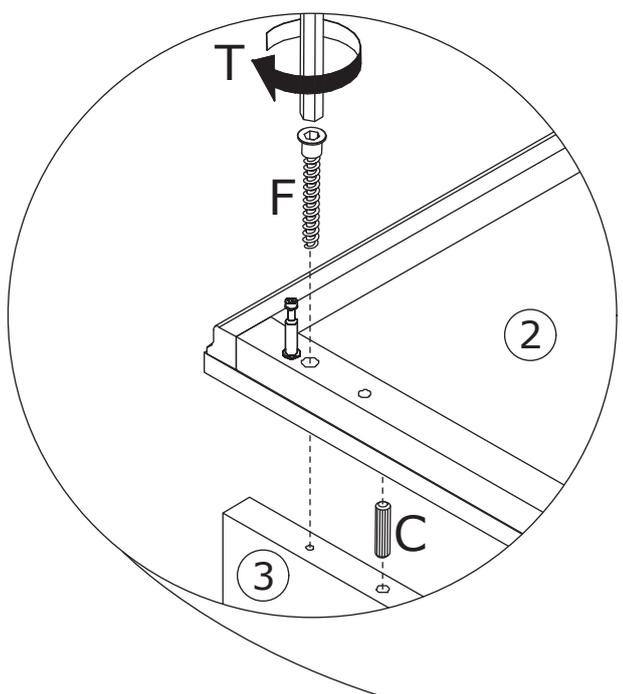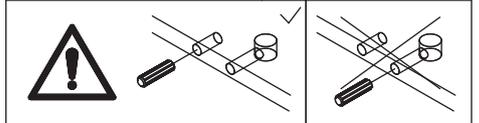

Insert dowel (C) into parts 3, 5, 4, then connect with part 2, secure with screws (F).

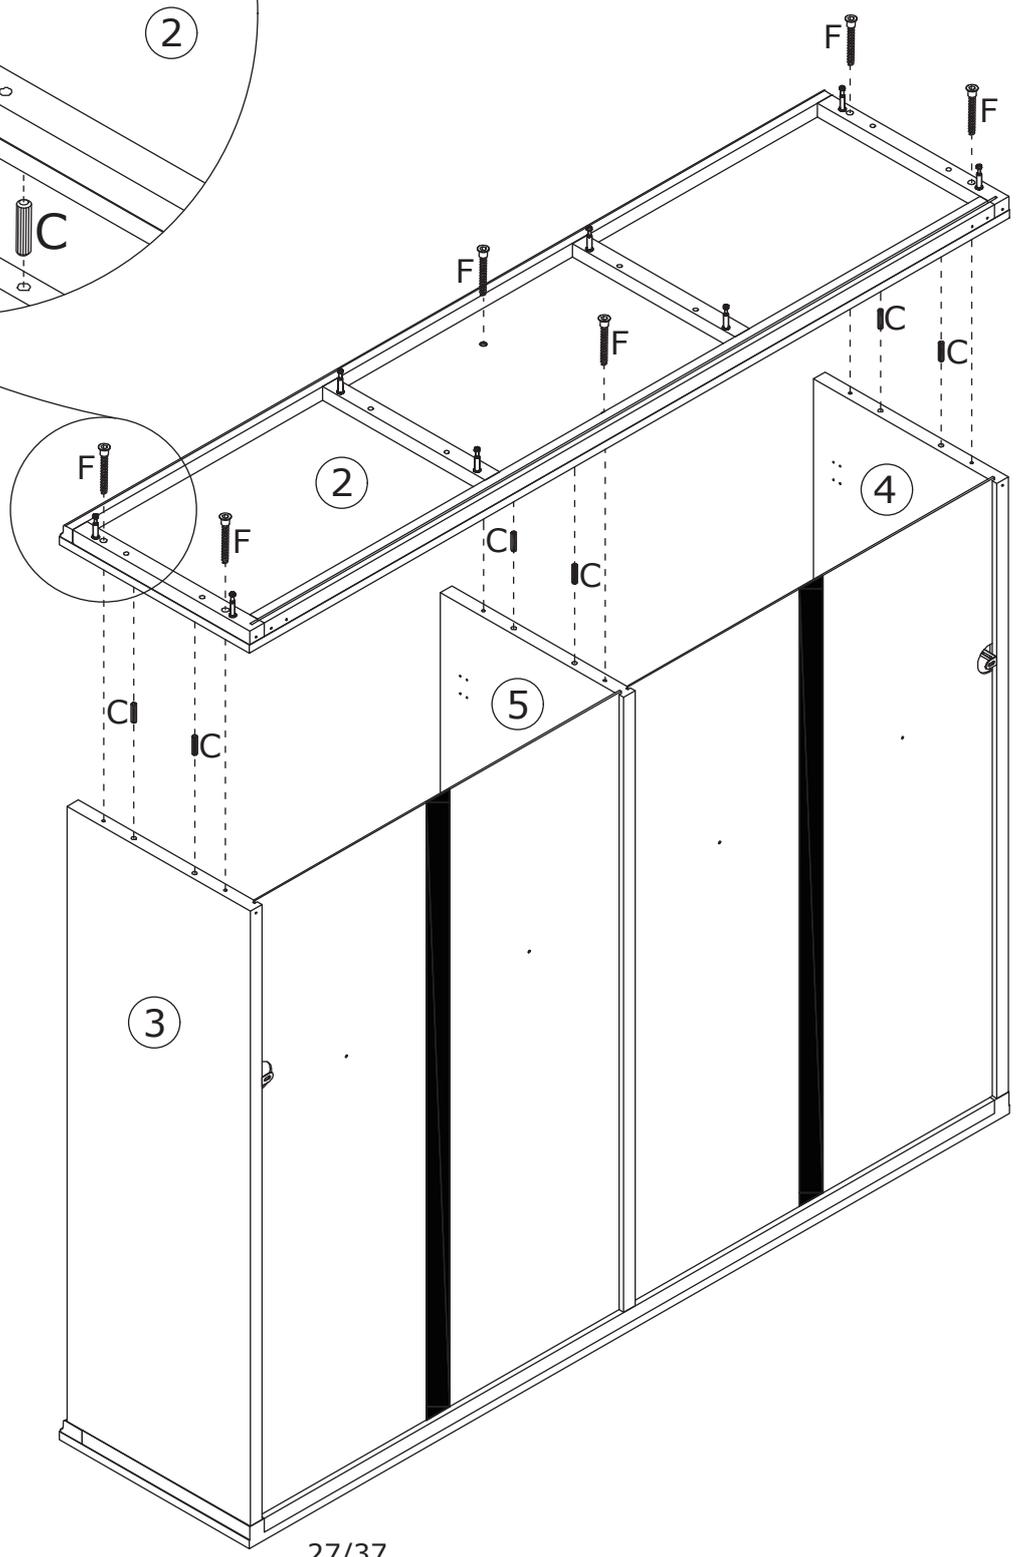

22

 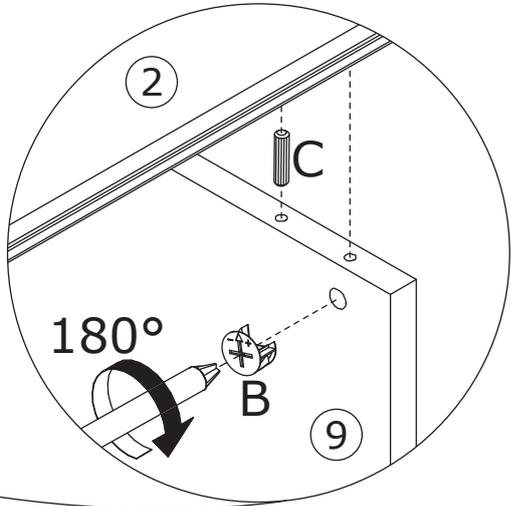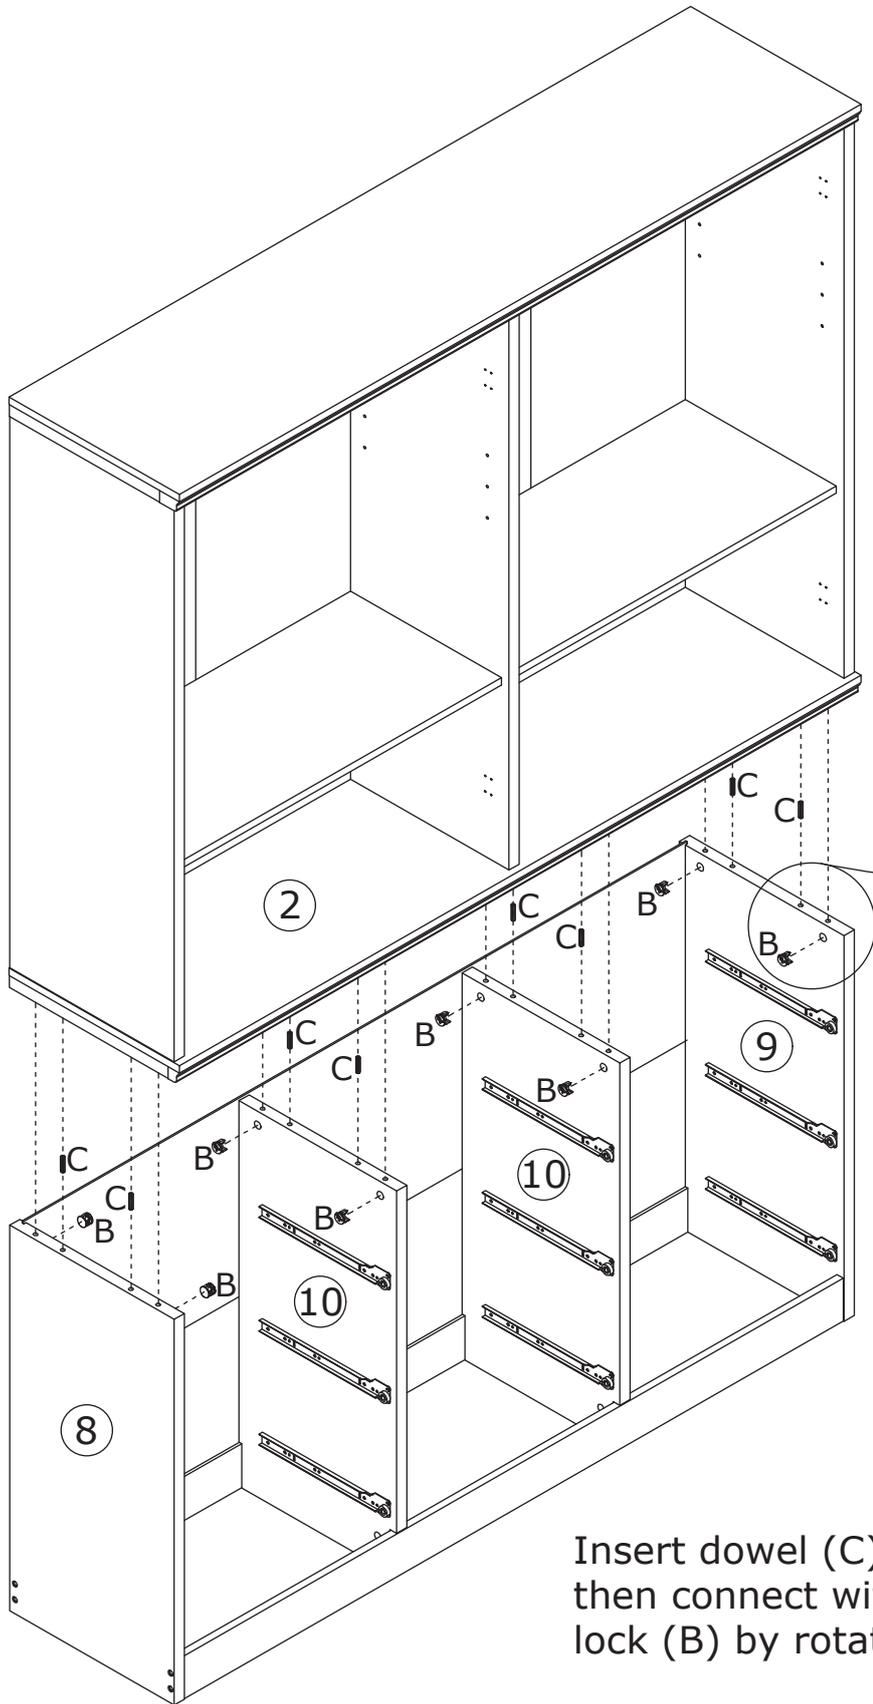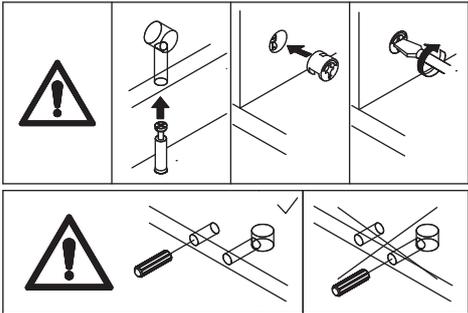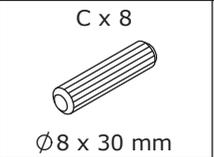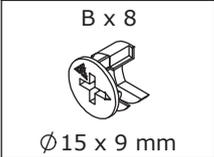


Insert dowel (C) into parts 8, 9 and 10, then connect with part 2, lock with cam lock (B) by rotating clockwise.



23




Secure the metal plates (N) to parts 4, 9, 3, and 8 using screws (P).

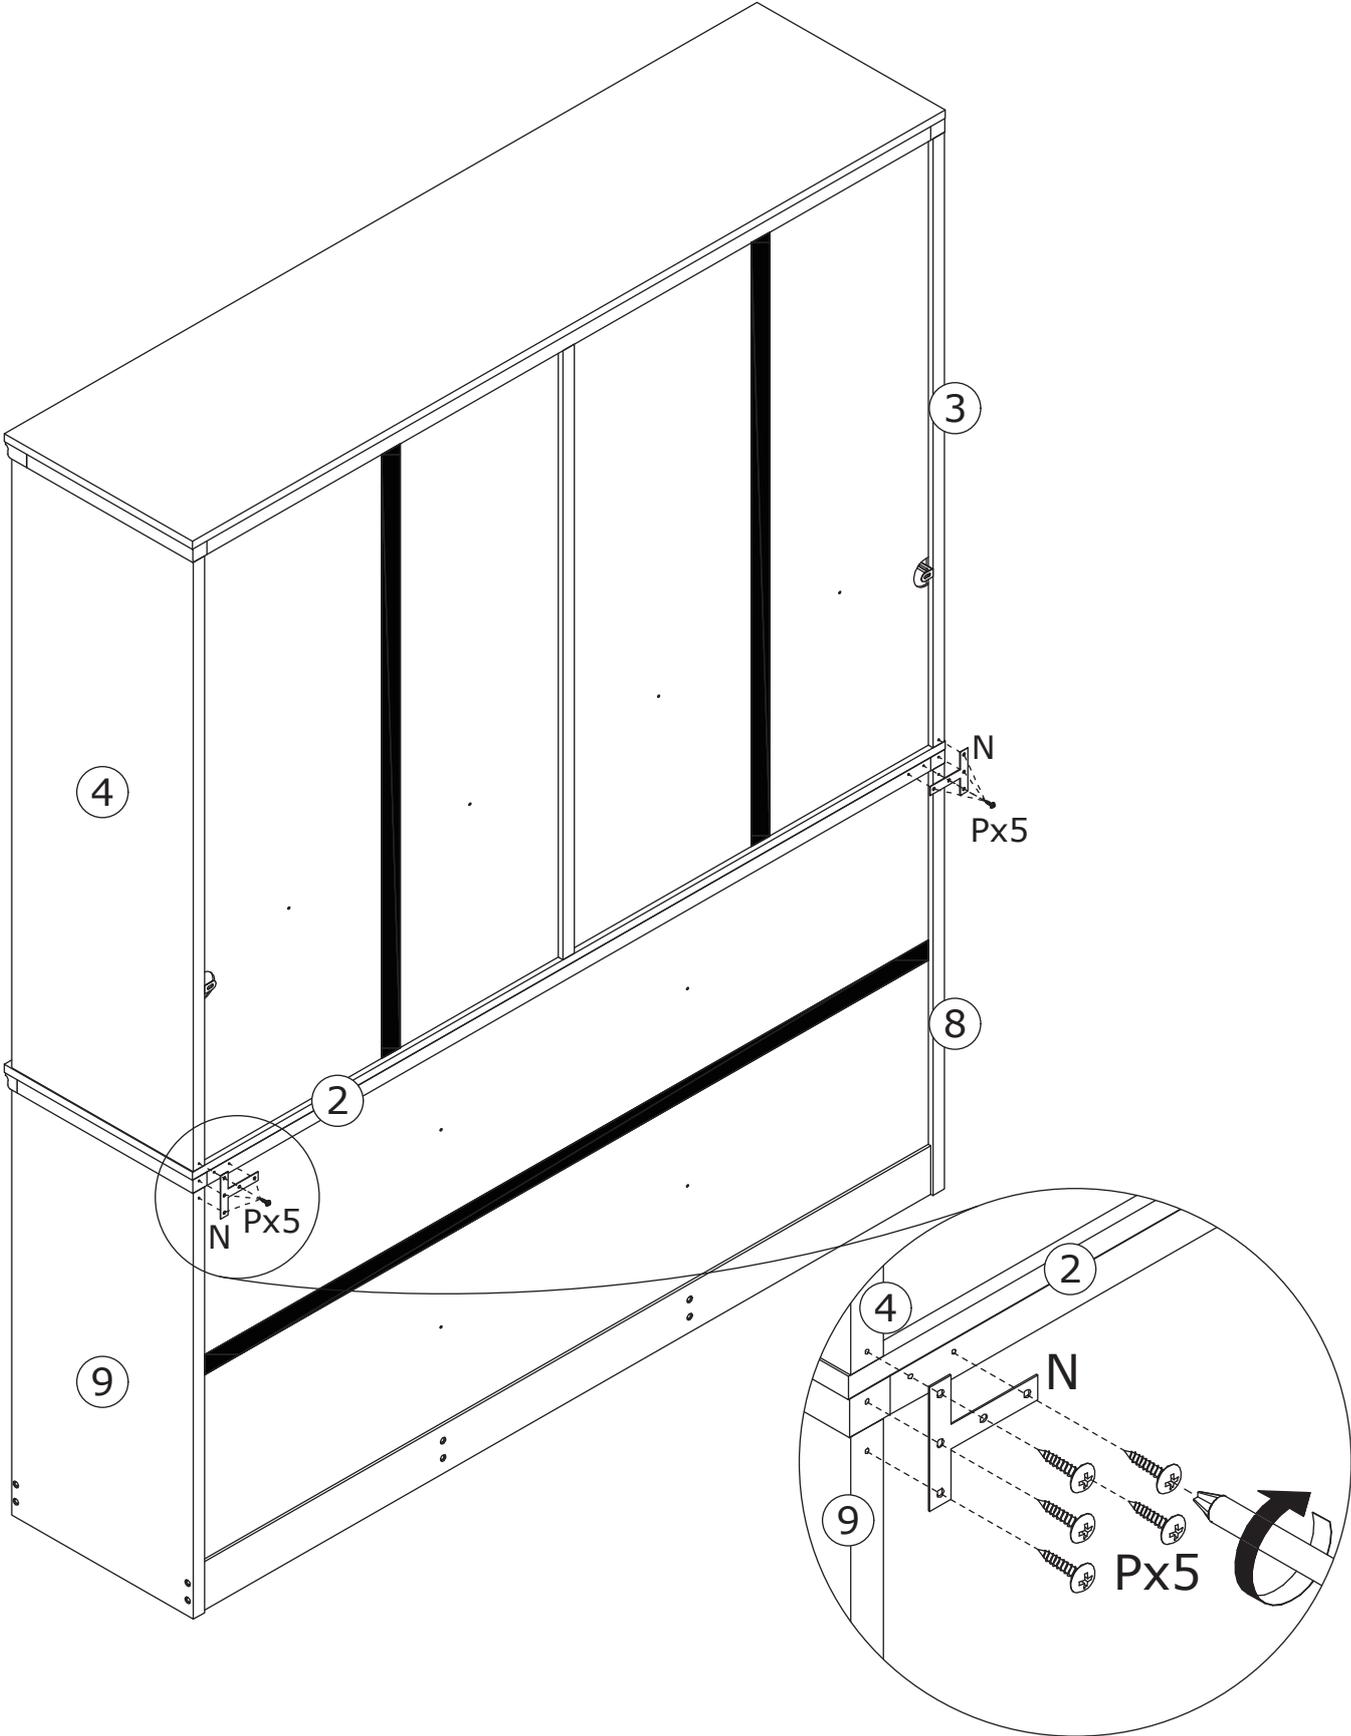







24

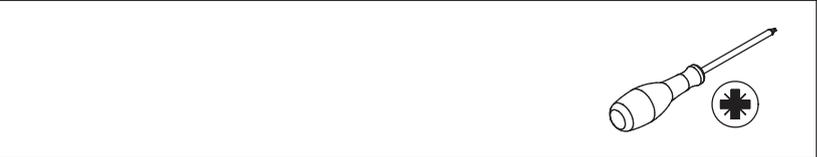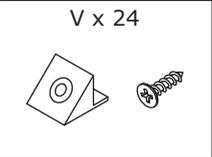


Insert the back panel clips (V) into the gaps and secure with screws (R).

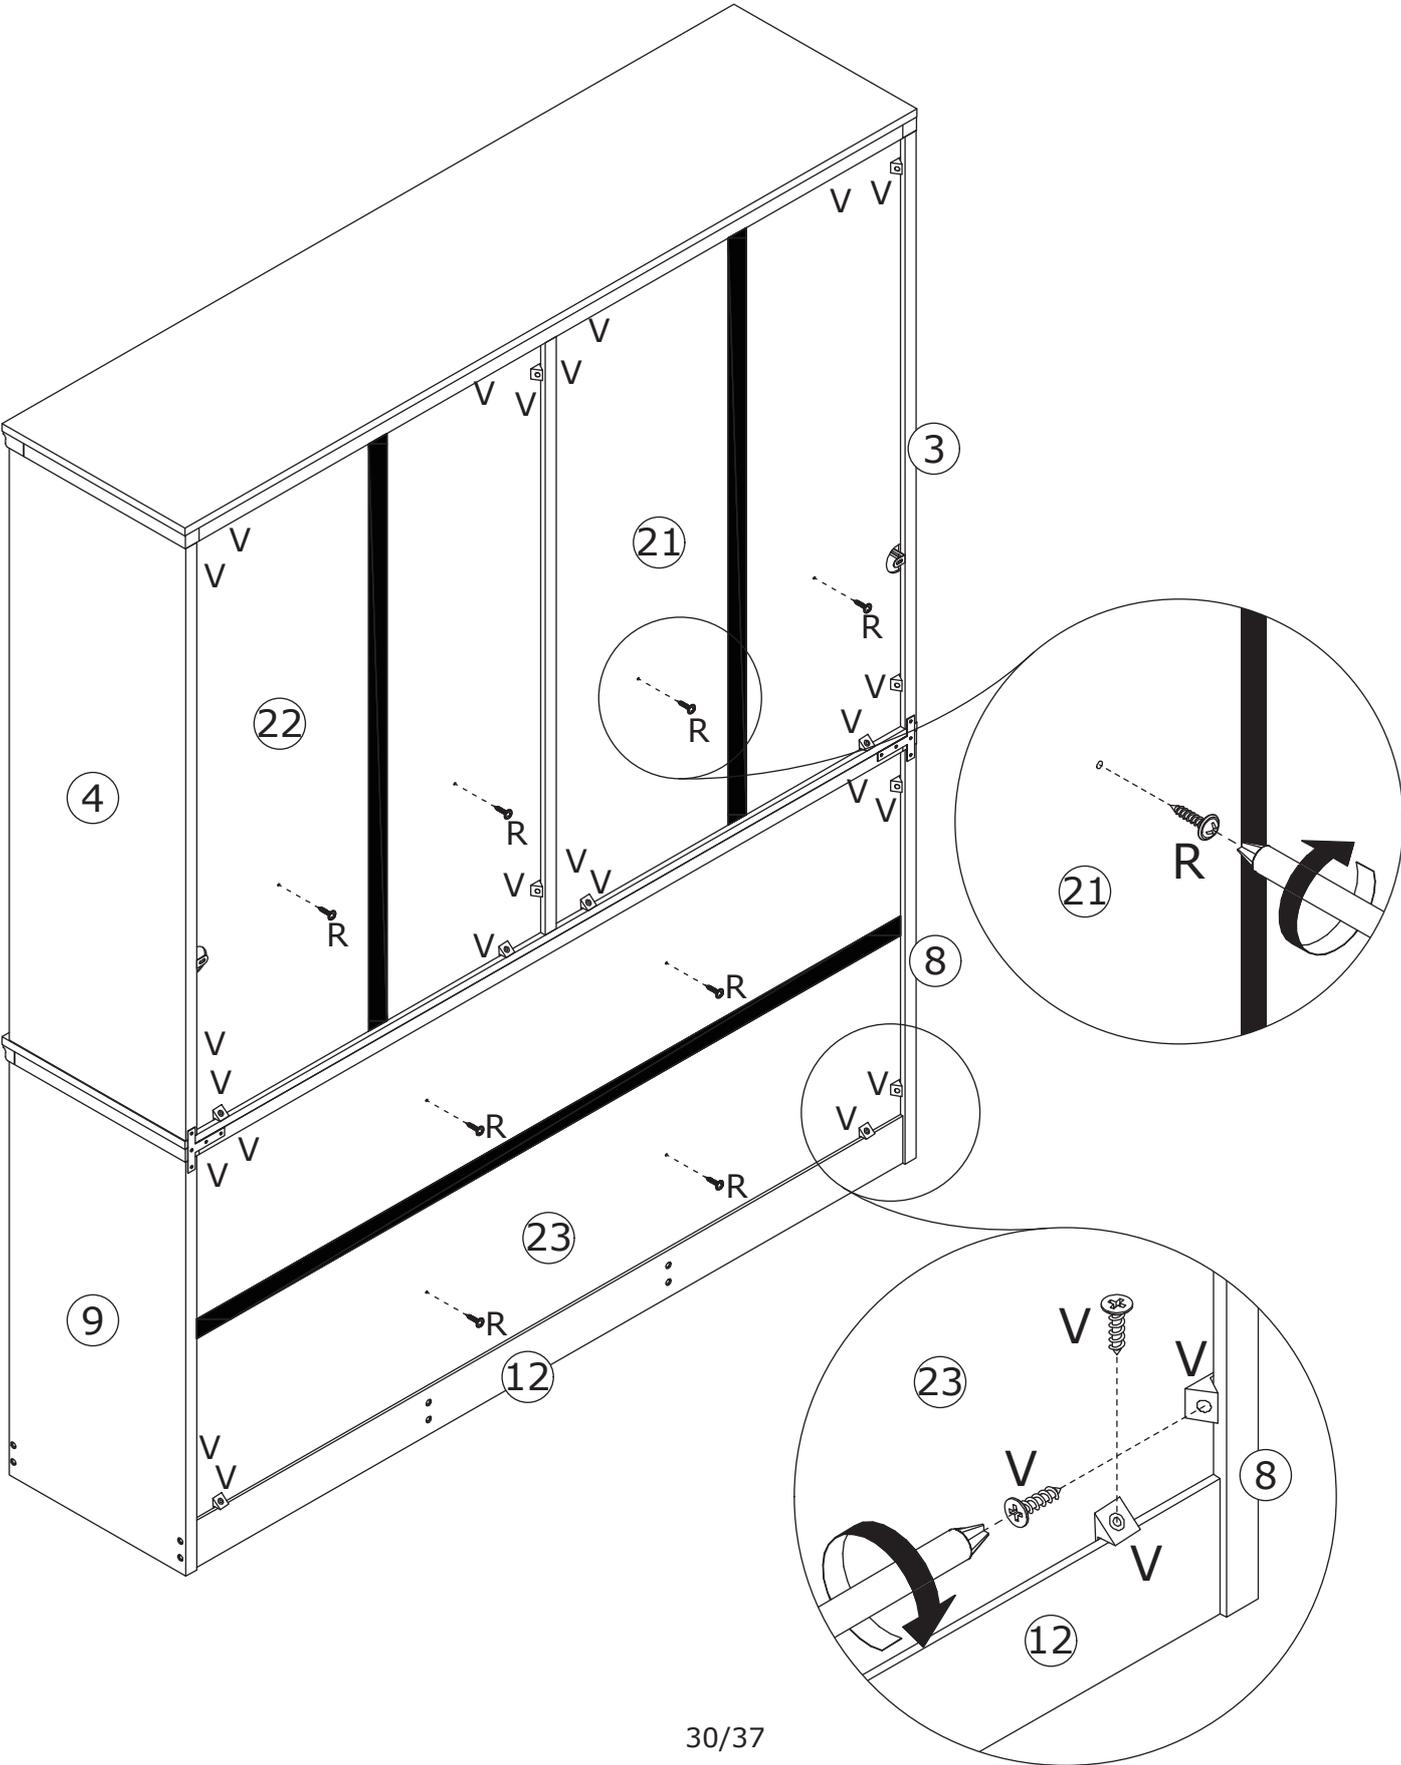


25

  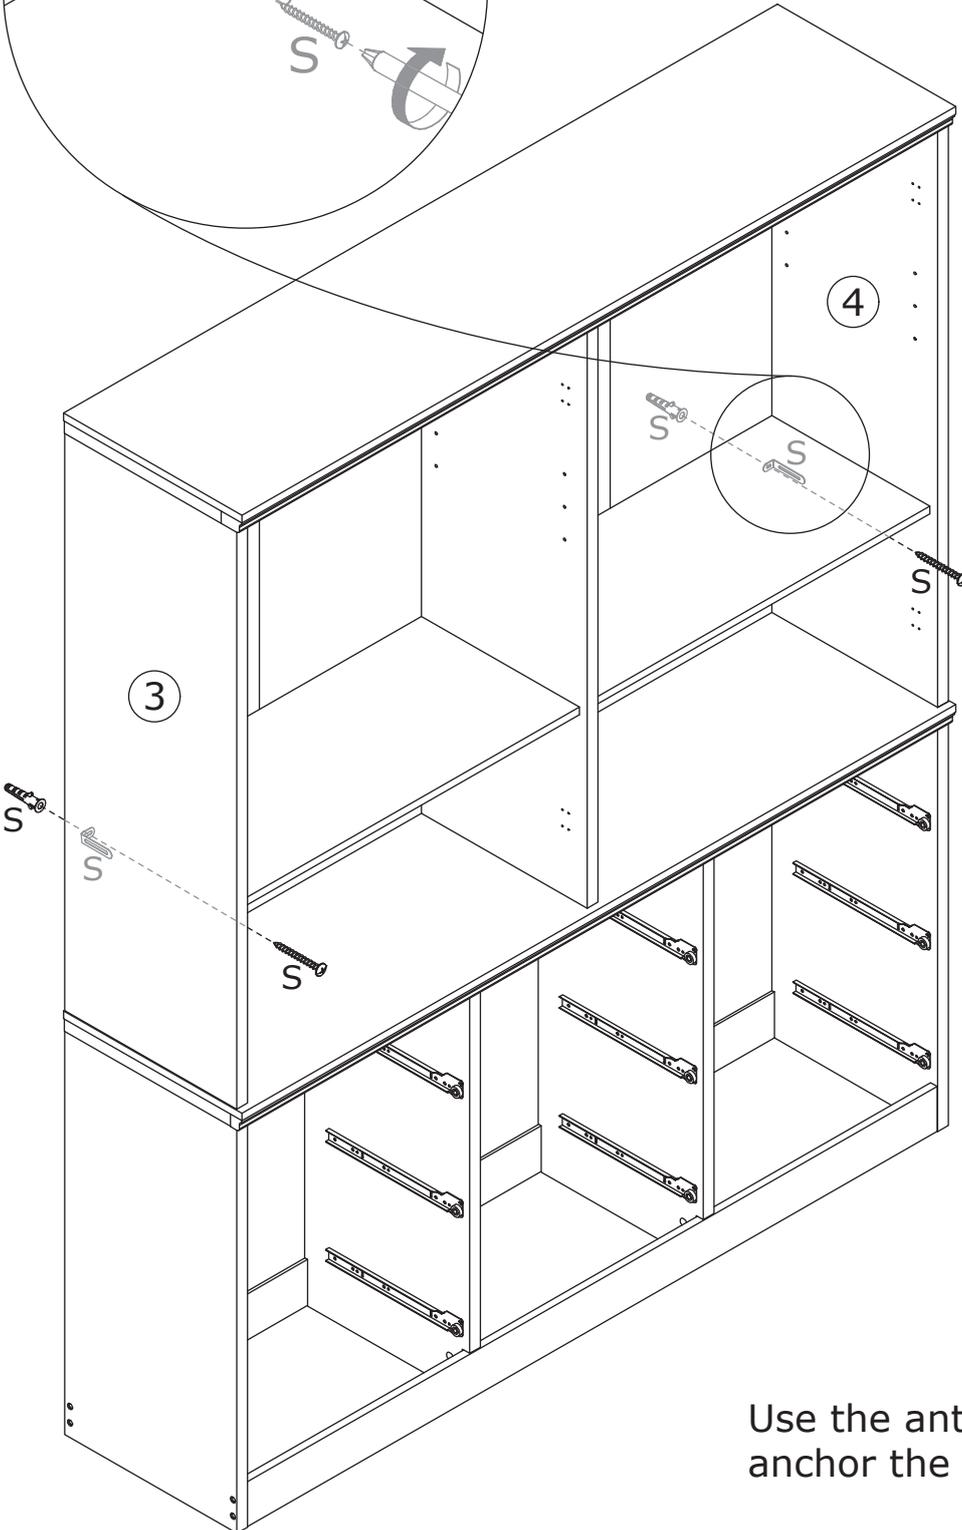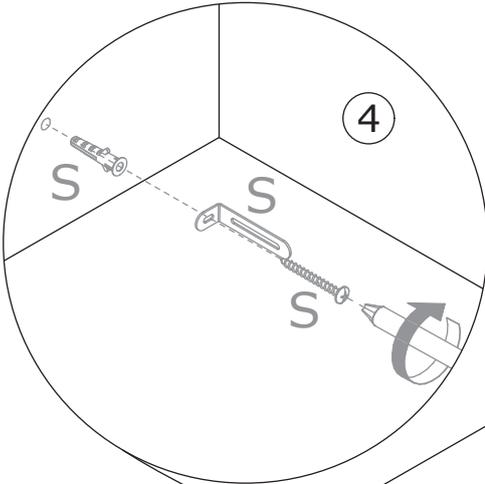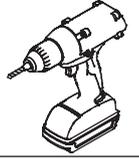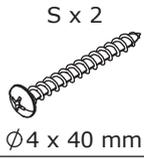


1.

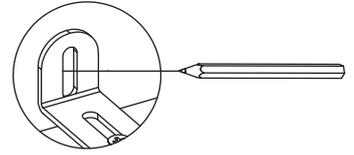


2.

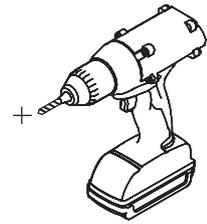

3.

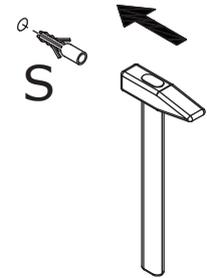




4.

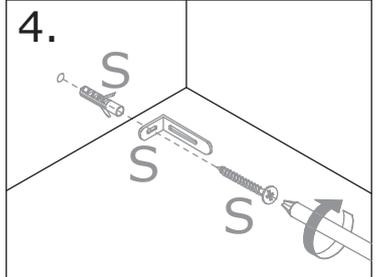

Use the anti-tip bracket (S) to anchor the product to the wall.


26

 
M x 8

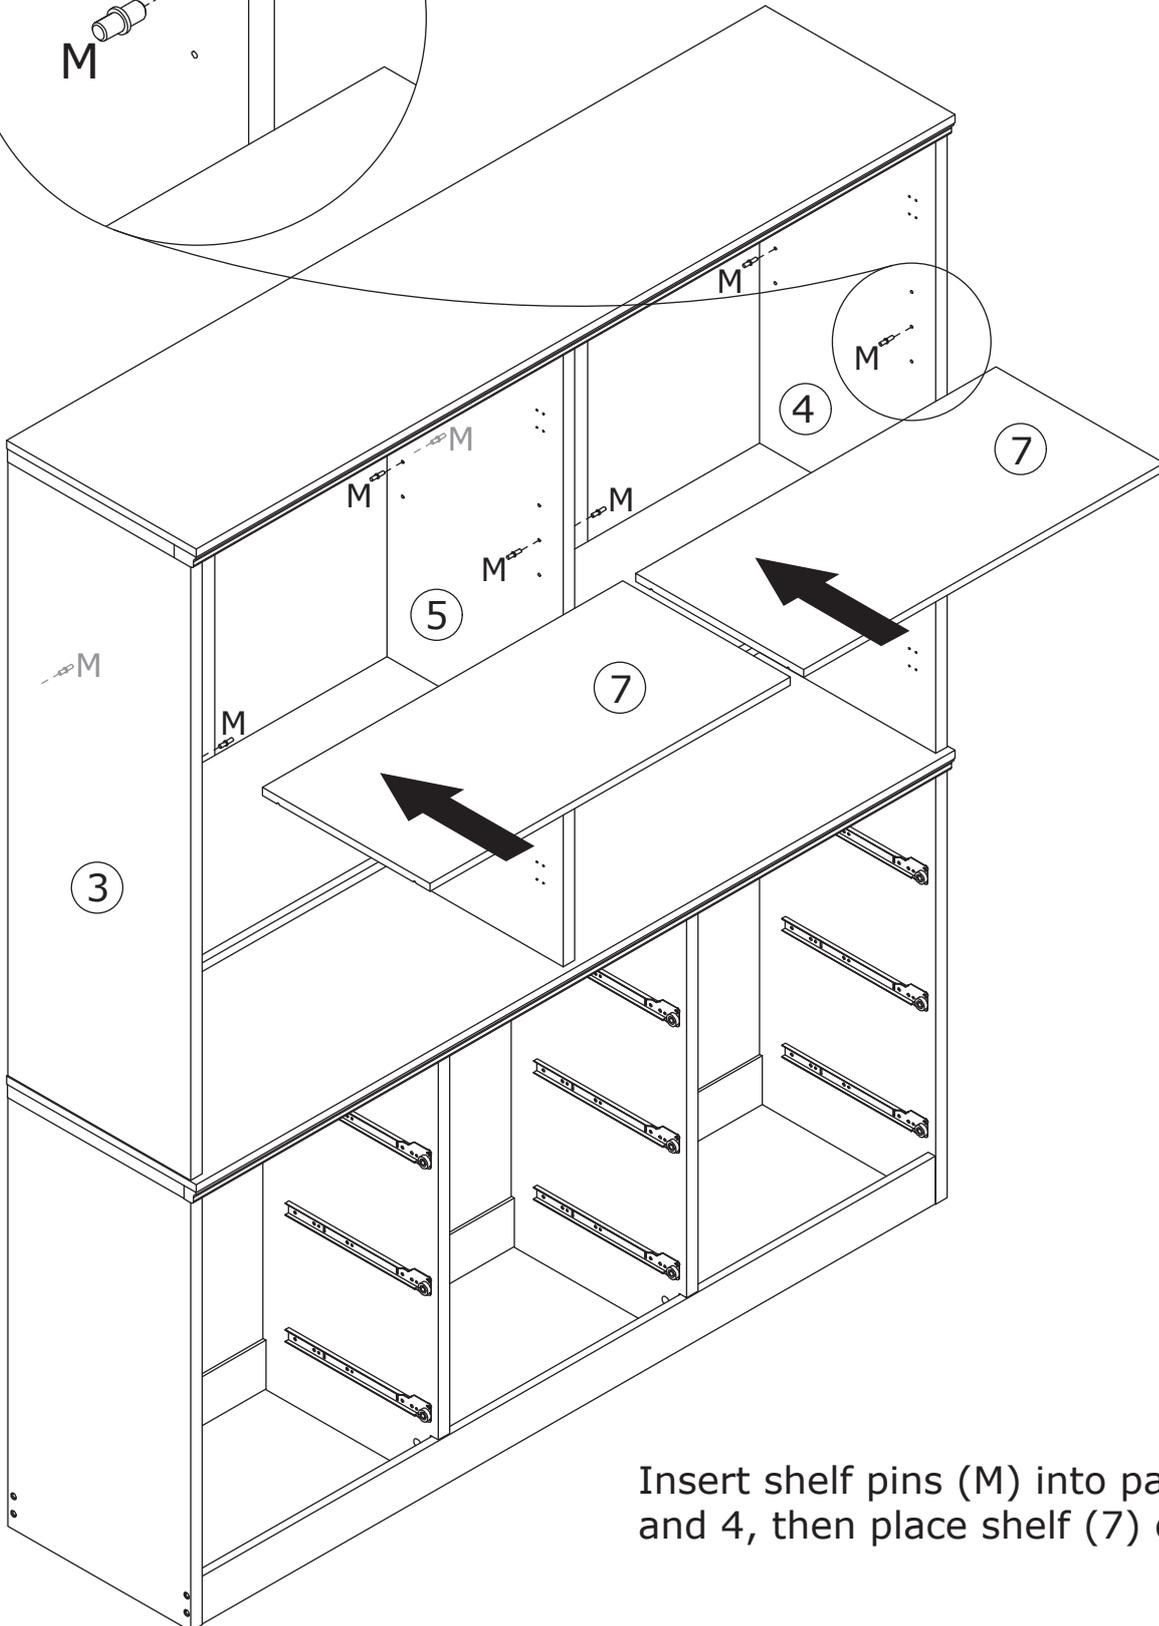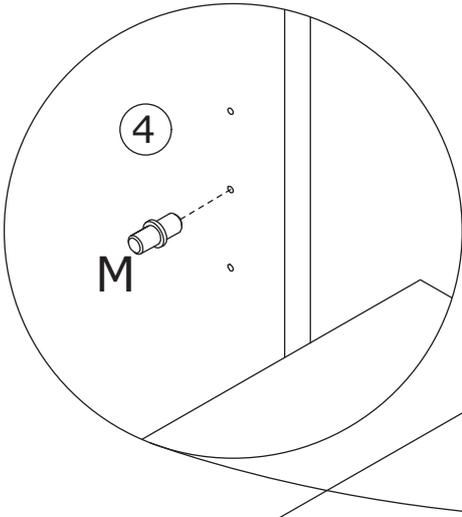

Insert shelf pins (M) into parts 3, 5, and 4, then place shelf (7) on top.

 27


| | | | | |
|--|--|--|--|---|
| G x 4  | J x 8 Ø4 x 18 mm  | L x 8 Ø35 mm  | Q x 16 Ø3.5 x 14 mm  |  |
|--|--|--|--|---|

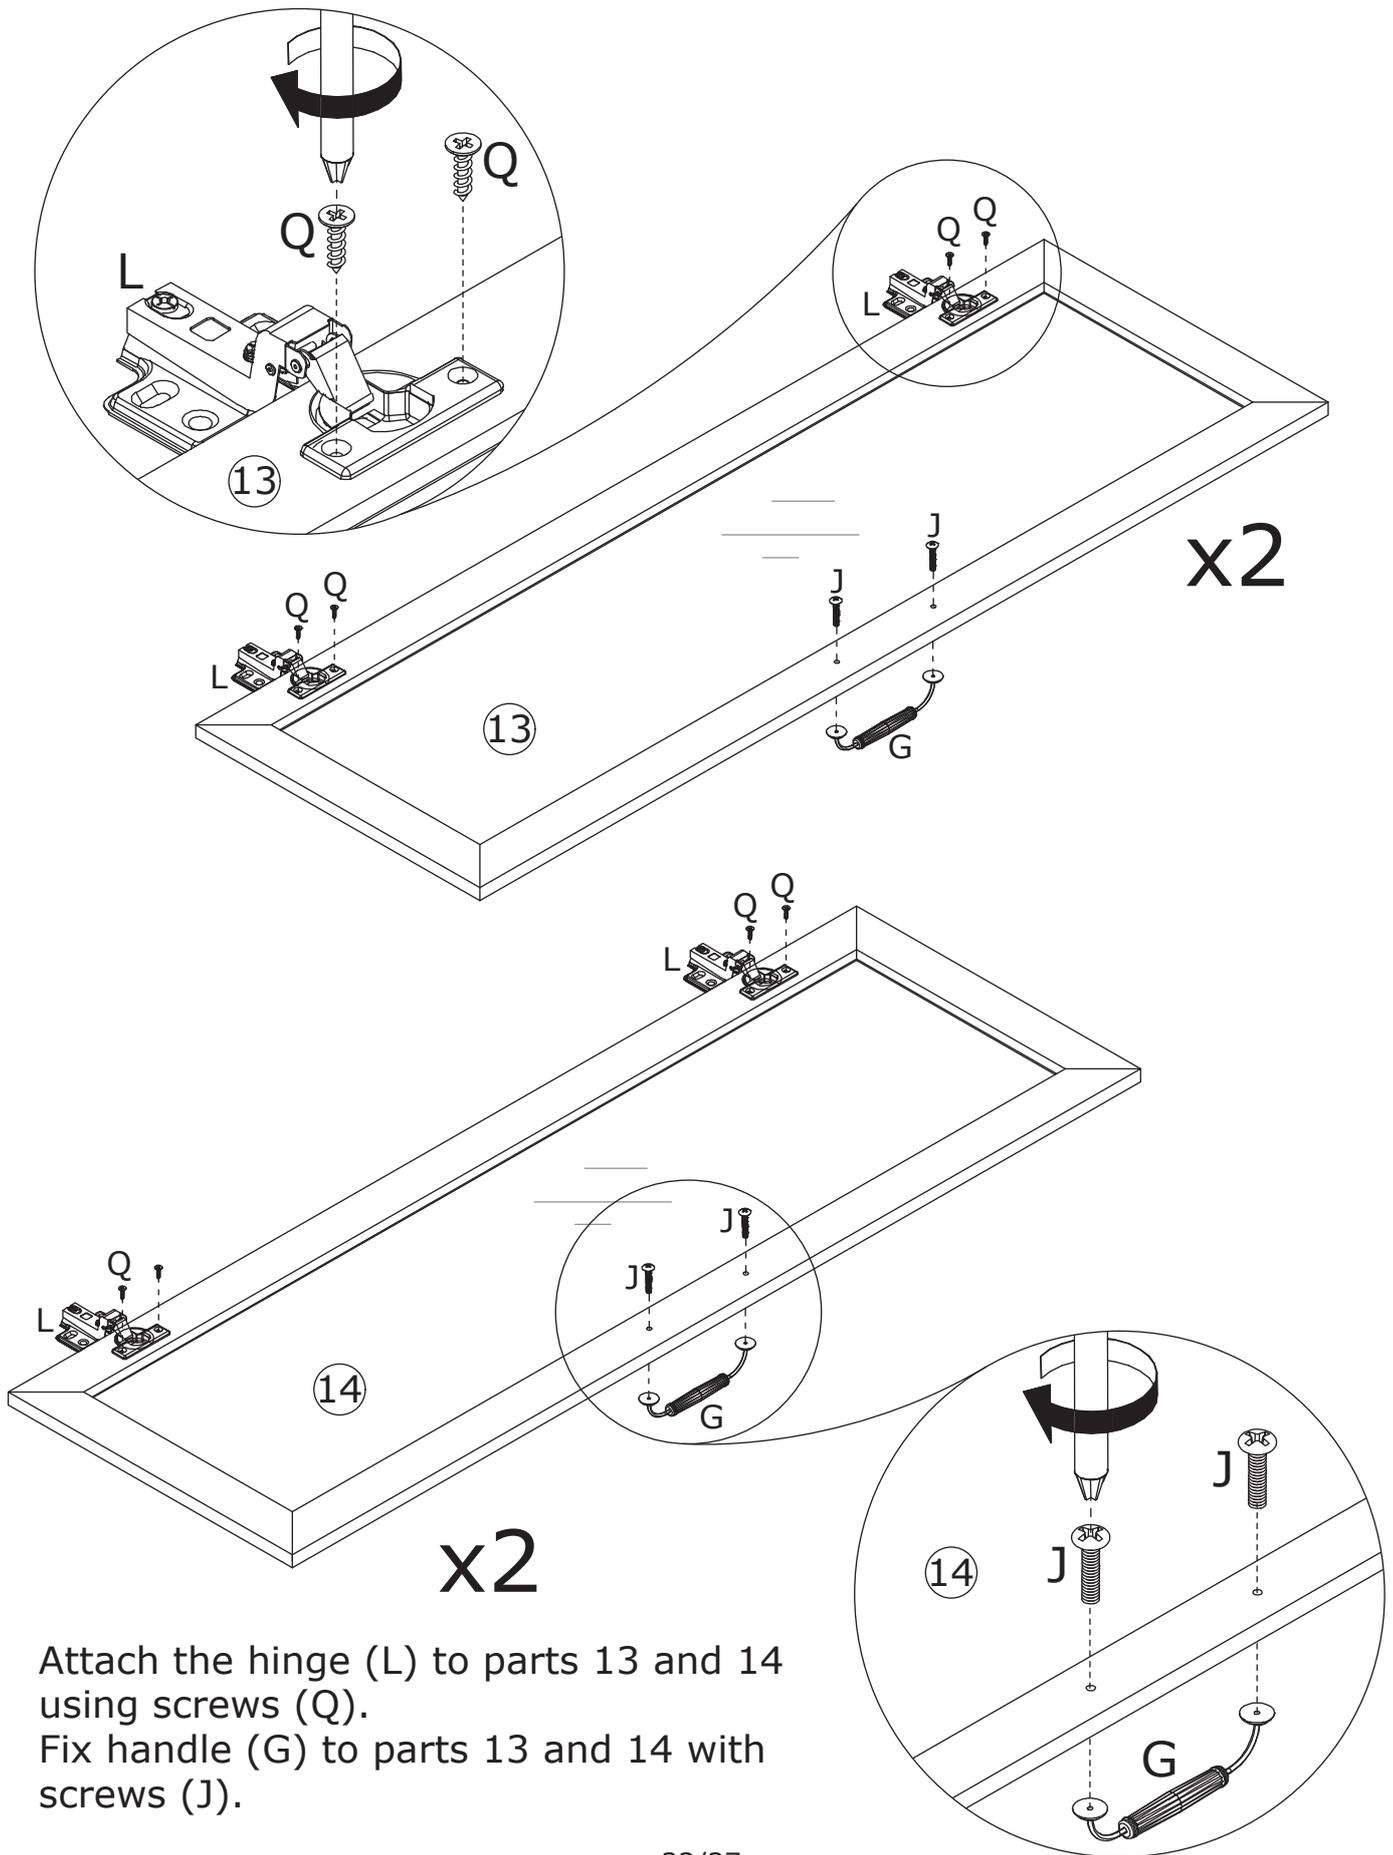


Attach the hinge (L) to parts 13 and 14 using screws (Q).
Fix handle (G) to parts 13 and 14 with screws (J).

28

 Q x 16
Ø 3.5 x 14 mm




Secure parts 14, 13 to part 5 using screws (Q).


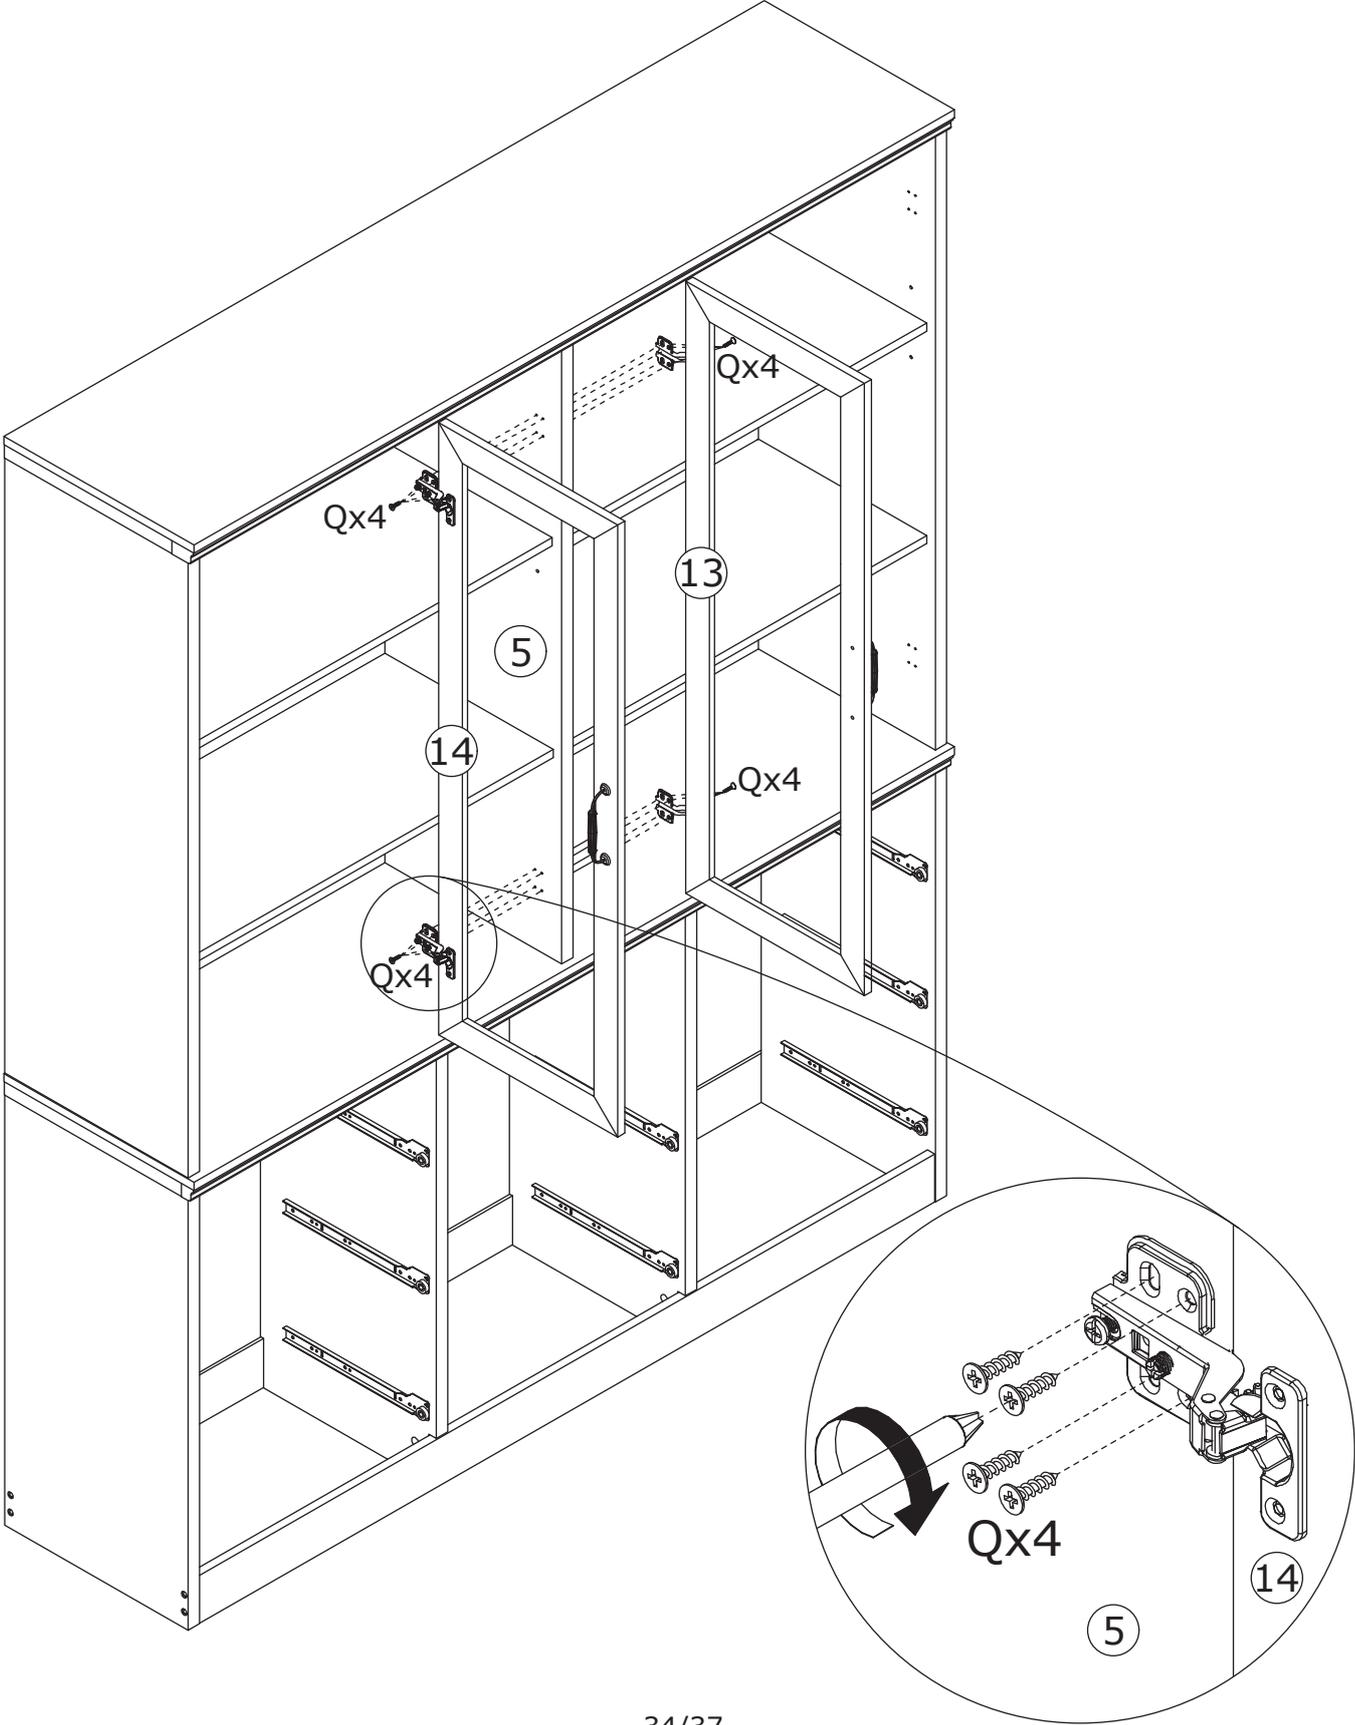


29


 
Q x 16
Ø 3.5 x 14 mm




Secure parts 13 and 14 to parts 3 and 4 using screws (Q).

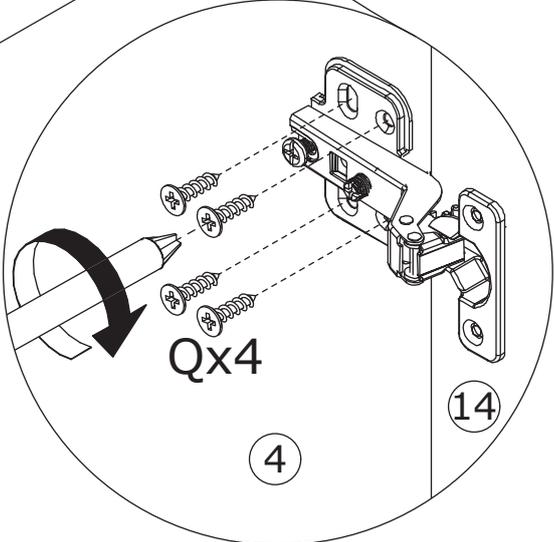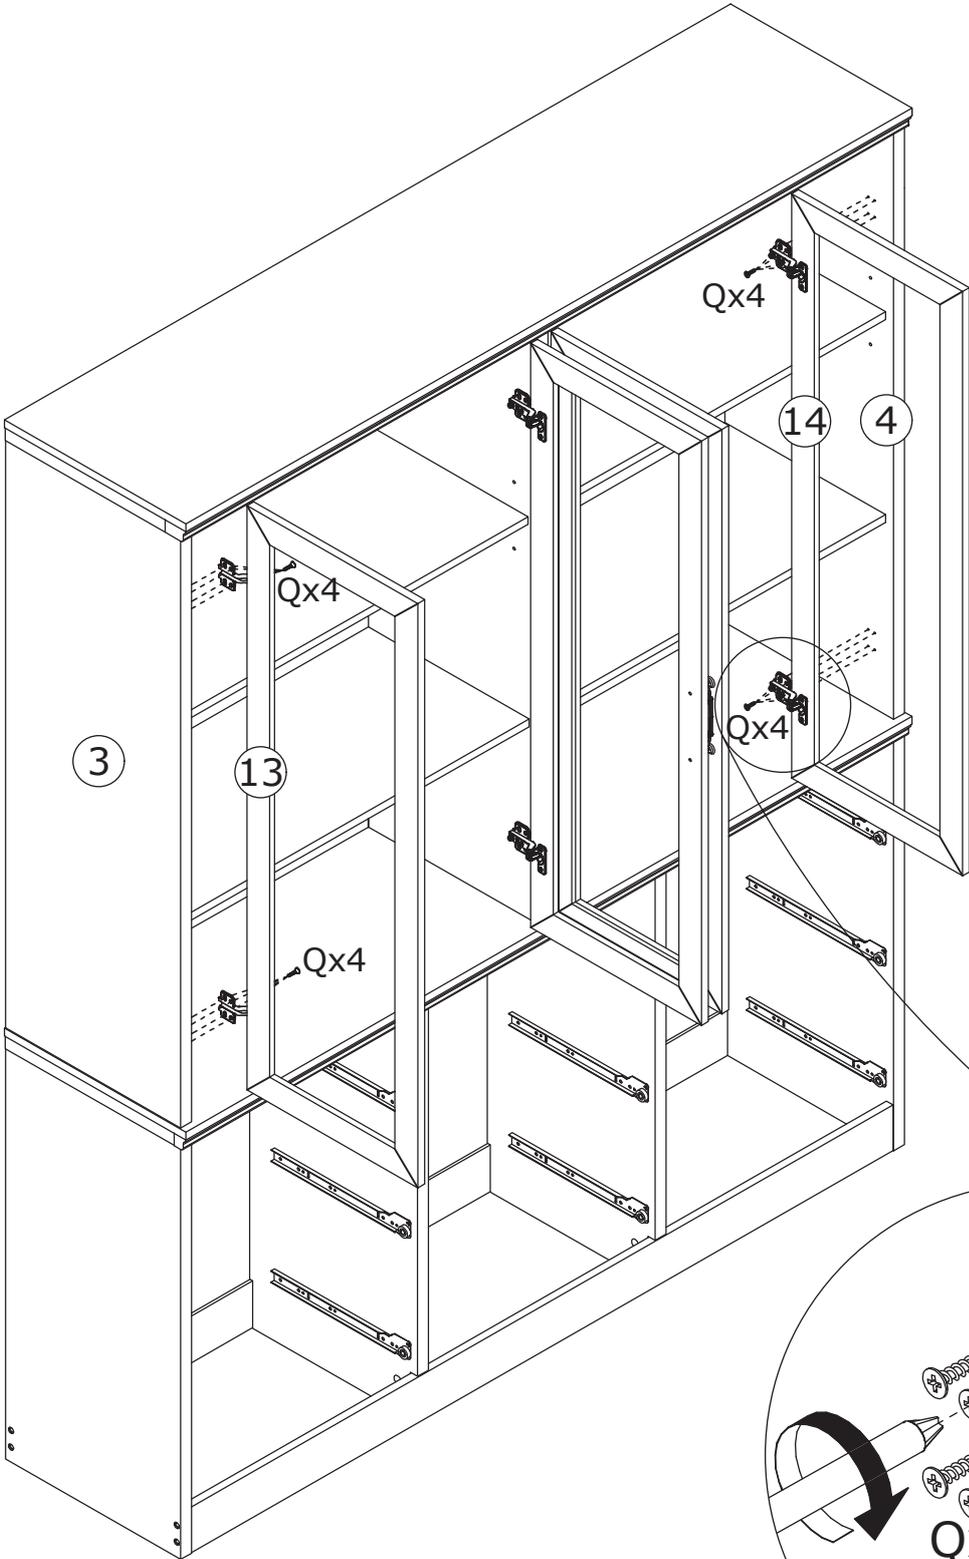













30

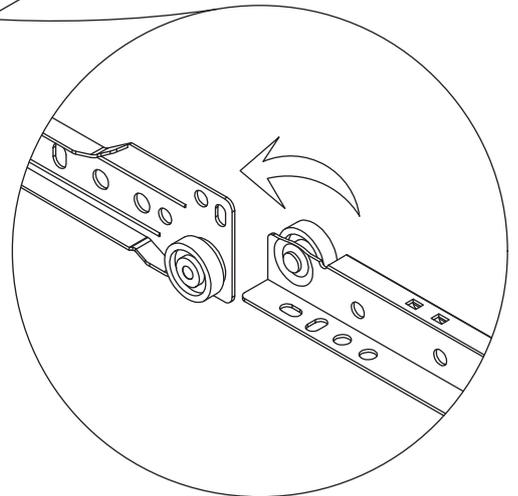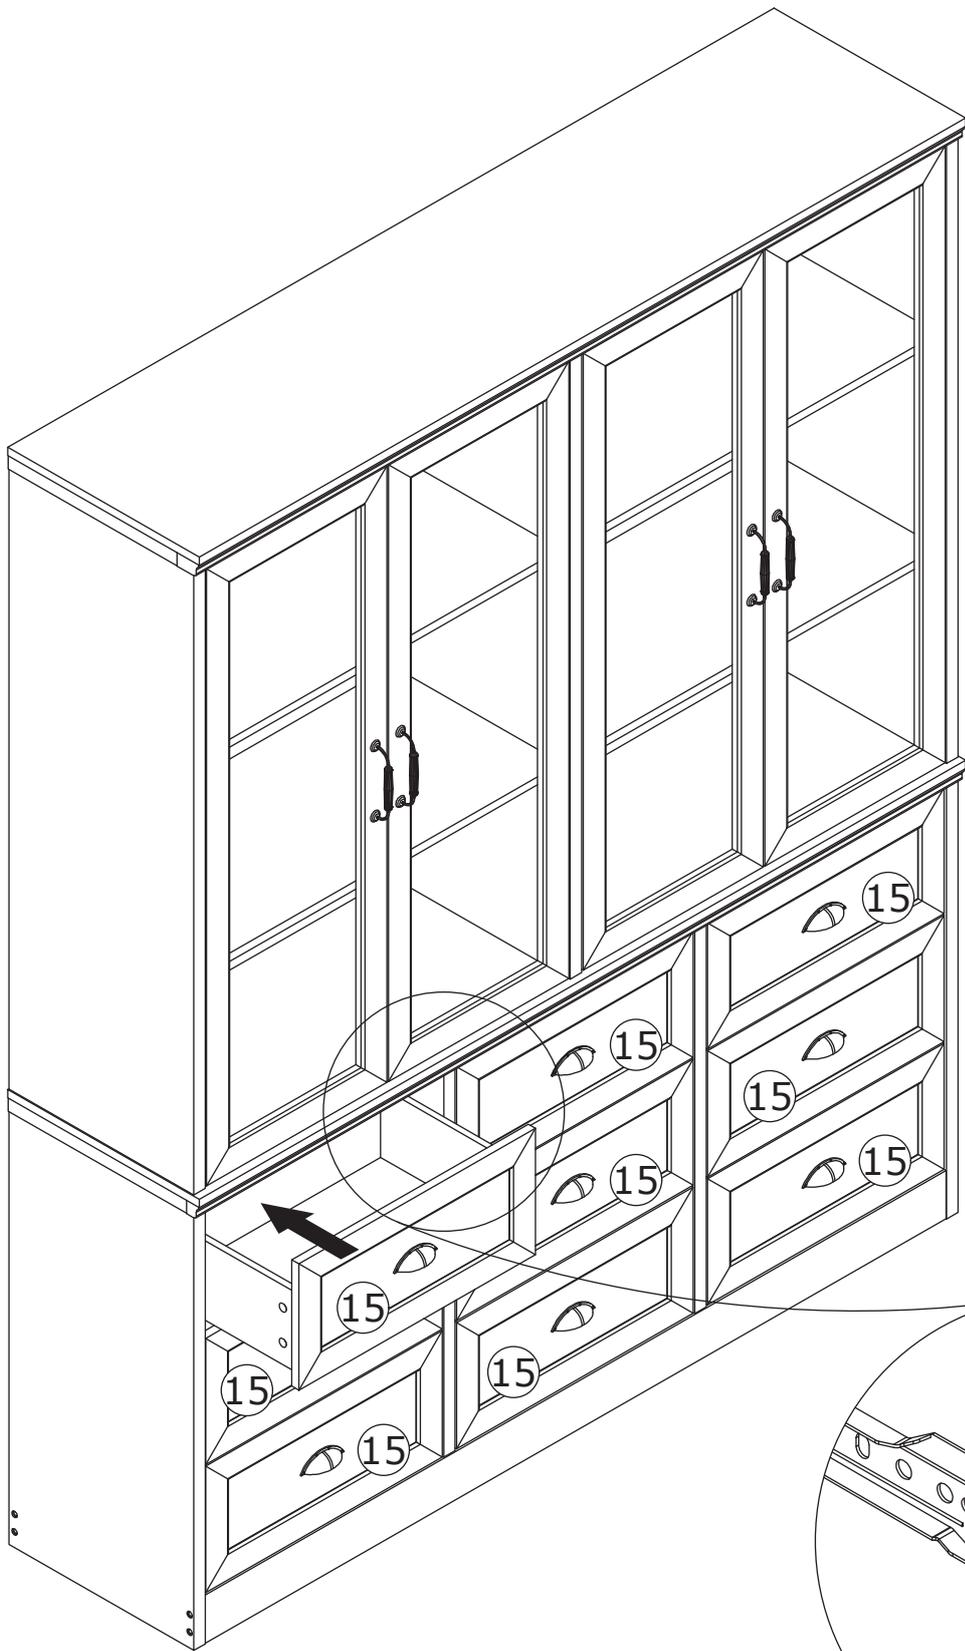

 

If doors are still not aligned if the hinges are properly correctly, please watch the video.

<https://youtu.be/n0Lb36SoODM>

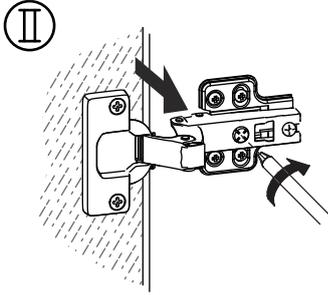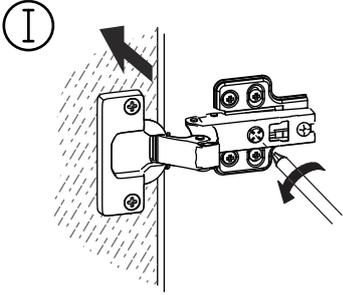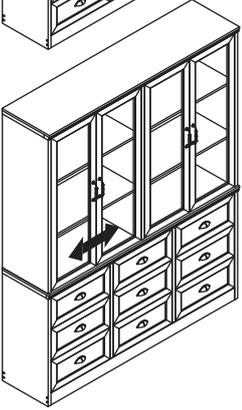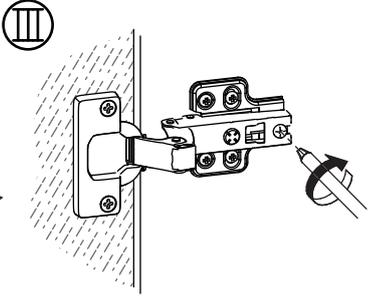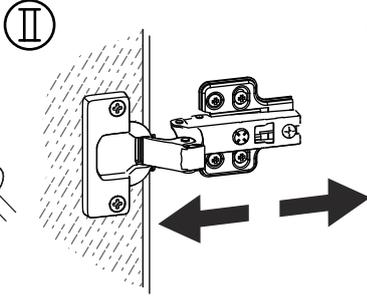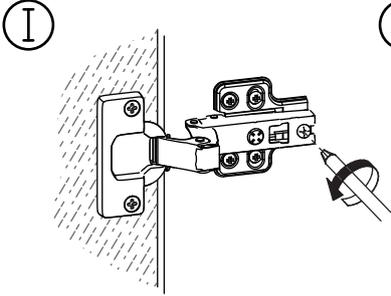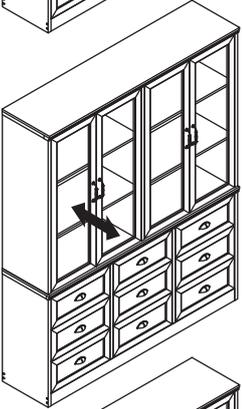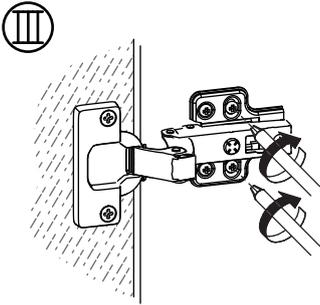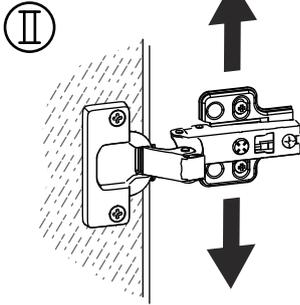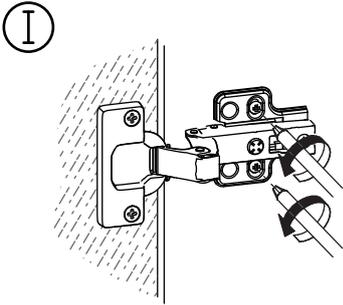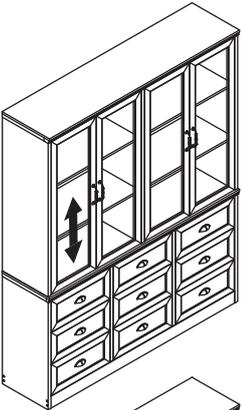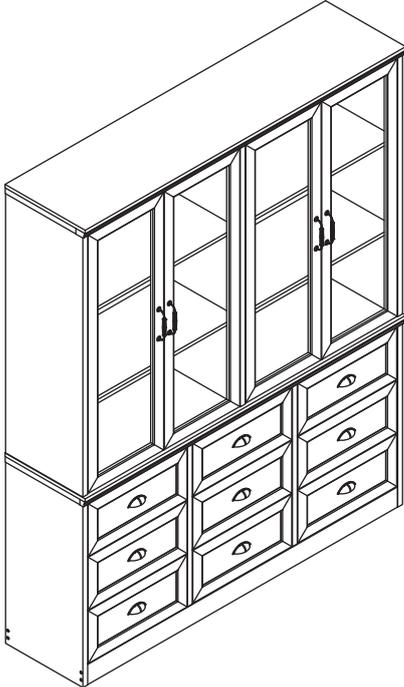

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOU ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068