


HOW TO MEASURE THE RIGHT INSTALLATION DISTANCE?

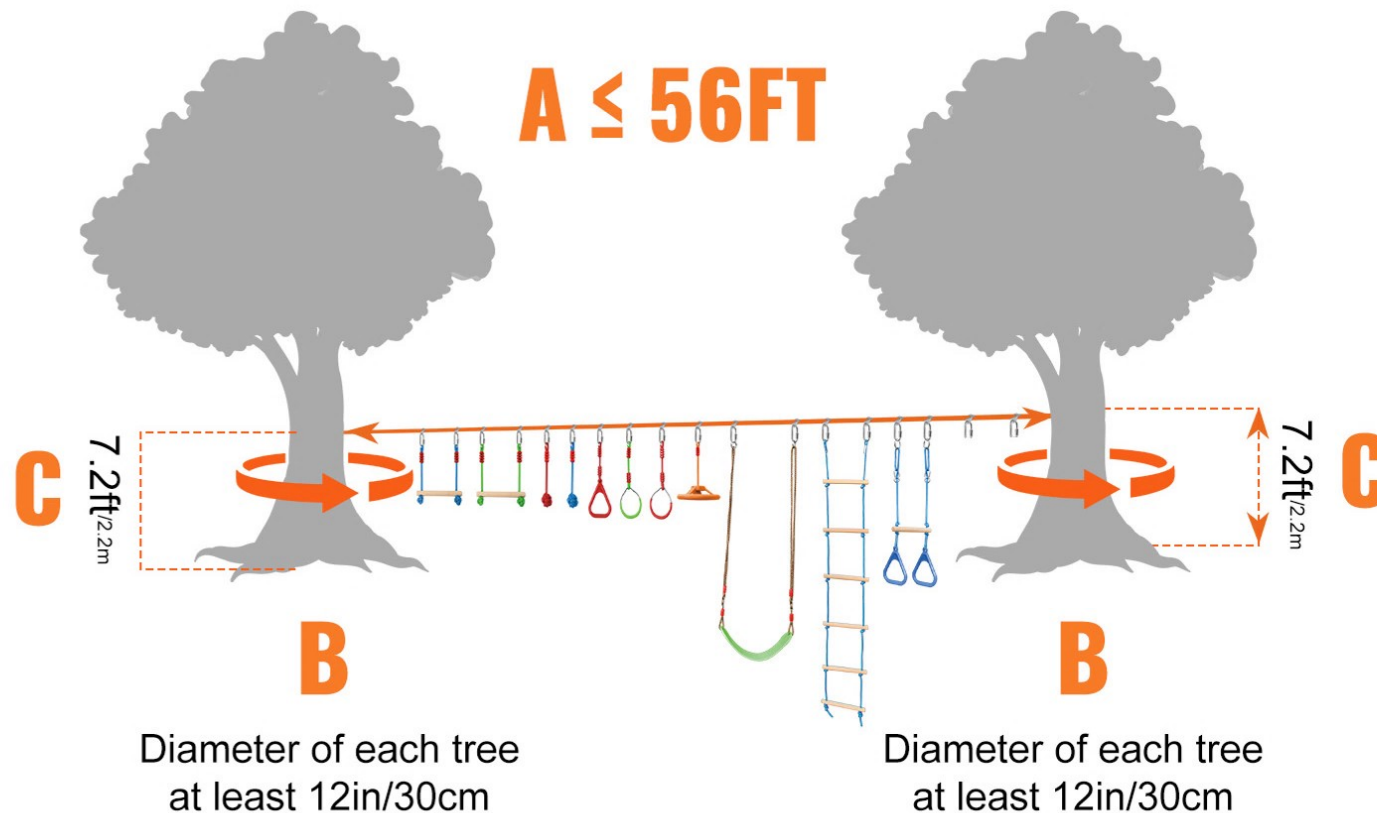

- A.** Distance between two trees less than **56ft/17m**
- B.** Diameter of each tree at least **12in/30cm**
- C.** Hanging height minimum of **7.2ft/2.2m**