

Figure 1: To open Cam, point arrow toward Cam Pin hole. To lock Cam, turn clockwise.



Flip Flop Desk - HDSKF3121 1 CARTON: HDSKF3121

Organize your parts and hardware. You will need (1) people and a Phillips head screwdriver. Hardware :

A: Cam Pins(4) • B: Cam Locks(4) • C: Dowel Rods(4) • D: Allen Key • E: Inserts(4) • F: Glue



STEP 2: Fold out the legs on the Desk Shell(G). Place 4 Cam Locks(B) in the Desk Shell with the arrow on the locks facing up. (see fig 1)





STEP 3 : Attach Desk Top(H) to the Desk Shell(G) by inserting cam pins into locks and locking them tight using Allen Key(D). (see fig 1)



IMPORTANT NOTICE:

Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Check to be sure that you have all parts and hardware.

Remove all wrapping materials, including staples & packing straps before you start to assemble.

Do not tighten all screws/bolts until completely assembled.

Keep all hardware parts out of reach of children.