



## OWNER'S MANUAL

# CERAMIC UTILITY HEATER

---

10" | 1500 / 750W



---

MODEL 1VAHCU10

## TECHNICAL DATA

---

**Model:** 1VAHCU10

**Voltage:** 120V~ / 60Hz

**Watts:** 750W Low / 1500W High

**BTUs:** 5120

**Features:**

- Adjustable Thermostat
- Three Settings: High / Low / Fan Only
- Top Mounted Control Panel
- Power and Caution Indicator Lights
- Safety Overheat Protection
- Convenient Stay Cool Carry handle
- Quiet High Efficiency Fan
- Sturdy Metal Body

## CONSUMER PRODUCT INFORMATION

---

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: \_\_\_\_\_

Location: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

# CONTENTS

Safety Guidelines .....	4-6
Usage .....	7-8
Assembly Instructions .....	7
Heater Operation .....	7
Power / Caution Lights.....	7
Turning Heater On.....	8
Power Control Dial .....	8
Setting Thermostat.....	8
To Operate Fan Only .....	9
Turning Off .....	9
Important Safety Features.....	9
Care and Maintenance .....	10

## **IMPORTANT NOTE:**

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

# SAFETY GUIDELINES

## INTENDED USE:

---

This product is intended for indoor residential and office use only, not for industrial or other commercial application. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. This heater must be plugged in to a 120V AC, 15 Amp. (or larger) circuit. Do not plug anything additional into the same circuit. If you have any questions whether your wiring is adequate, consult a qualified electrician. Risk of fire, overheating, malfunction, property damage, injury or even death may result if not adhered to.

Use your heater/fan only with a working smoke detector located in the vicinity of your heater/fan.

While using your heater/fan, you should follow the IMPORTANT INSTRUCTIONS listed below. As part of those instructions, we have used the word **"WARNING"** to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

## READ AND SAVE THESE INSTRUCTIONS

### IMPORTANT INSTRUCTIONS

---

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Read all the instructions before using this heater/fan.
- This heater/fan is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use provided handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater/fan and keep them away from the sides and rear.
- Do not use heater unattended. Use of extreme caution is necessary when any heater is used by or near children, invalids, disabled persons or pets.
- Do not operate the heater with a damaged power cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment or repair.
- Do not use heater outdoors.

- Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use in damp environments such as flooded basements.
- Do not place the heater on a small, unlevel, uneven or any surface which might allow heater to tip or fall.
- For proper operation, heater should be placed on a smooth, non-combustible surface. Do not place on rugs, carpet, vinyl flooring or other plastic surfaces. Not for use outdoors or in wet areas
- This heater is not designed as a primary heat source.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Always unplug heater when not in use.
- Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange cord away from traffic area where it will not be tripped over.
- To disconnect heater, turn controls off then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons or property.

## **WARNING: SHOCK HAZARD**

Use your heater only in dry environments. This heater is not intended for use in a bathroom, laundry area, or similar locations, or near sinks, washing machines, swimming pools or other sources of water. Never locate heater where it may fall into a bathtub or other water container. Do not use heater outdoors. Do not use in damp environments such as flooded basements.

## **WARNING: HOT SURFACES**

---

Do not touch body of heater when in use. This heater is hot when in use, to avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater.

## **WARNING: FIRE HAZARD**

---

Heater has hot and arcing or sparking parts inside. Do not use near combustible materials or flammable gases or sources of heat. DO NOT USE in areas where gasoline, paint or flammable materials are used or stored. Keep combustible materials such as furniture, pillows, bedding, papers, clothes and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage the heater.

## **WARNING: ELECTRICAL SHOCK HAZARD**

---

Do not use with damaged cord or plug. Use with adequate electrical system that is up to code. The supply cord has a polarized plug. As a safety feature this plug will fit in a polarized outlet only one way. To prevent electric shock, match wide blade of plug to wide slot, fully insert plug. If the plug does not fit contact a qualified electrician. Do not operate any heater with a damaged cord or plug or after heater malfunctions, has been dropped or damaged in any manner. Do not operate heater with a broken heating element or ceramic cone or any visual imperfections.

## **PET OWNERS NOTE**

---

The health of birds and some small pets are extremely sensitive to the fumes given off during the initial use of many appliances. Although these fumes are not harmful to humans, it is recommended that this heater not be used around birds and small pets during its initial use until the manufacturing corrosion coatings burn off.

# USAGE

 
## ASSEMBLY INSTRUCTIONS

---


Simple assembly is required before you use this heater.

1. Remove Screw "A" on both sides of heater using a phillips screwdriver.
2. Rotate base cradle to align Hole "B" with new open hole from screw "A".
3. Replace screw "A" through screw hole "B" on both sides of heater.
4. Heater is now ready for use.

BEFORE

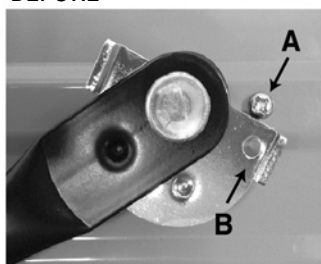

AFTER

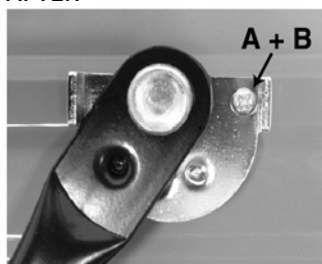 

## HEATER OPERATION

---

Always operate the heater in the upright position following all instructions and recommendations listed in this manual. **HEATER LOCATION:** Place the heater in the area of the room that is coldest. **HEATER CONNECTION:** Plug heater directly into 120 Volt AC, 60Hz wall outlet. Be sure plug fits tightly in outlet. A loose connection may cause overheating and damage to the plug or heater. **NOTE:** To prevent overloading a circuit, do not plug the heater into a circuit that is servicing other electrical needs.

 
## POWER/CAUTION LIGHTS

---

This heater is equipped with Power and Caution Lights. The power light will illuminate when the unit is plugged in. The Caution Light will illuminate when the unit overheats. When the Caution Light is illuminated, turn off and unplug the heater. Follow the "Important Safety Features" located in this manual.

## TURNING HEATER ON

To start the heater, turn the On/Off Power Level Control from the OFF position to the LOW or HIGH setting. Then rotate the Thermostat Control clockwise to the HIGH THERMOSTAT position as described below. (During the heaters initial use, you may experience a slight odor or smoking. This is the result of the heating element lubrication "burning off". This is normal and will go away after a few minutes of use.)

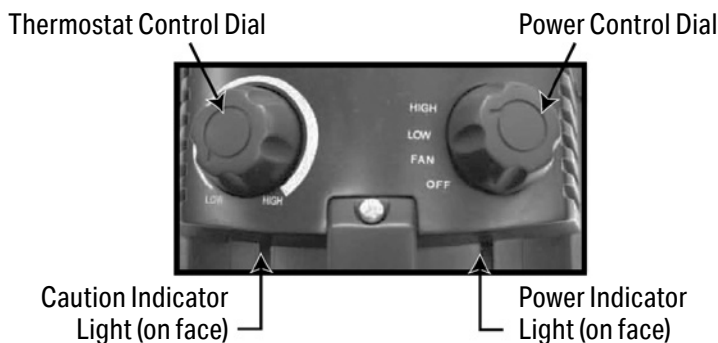

## POWER INDICATOR

The Power Indicator Light will illuminate when the heater or fan is turned on.

## POWER CONTROL DIAL

This heater has two heat settings: High and Low. Use the higher setting (1500 watt) to raise the room temperature quickly. When the desired temperature is reached use the Low setting. It is usually sufficient to maintain a comfortable temperature.

## SETTING THERMOSTAT

After heater has been turned on and the room has reached the desired temperature, slowly rotate the thermostat knob counter-clockwise until the heater shuts off (you should hear a faint "click"). By leaving the thermostat at this setting it will automatically maintain this temperature. To lower temperature, rotate the knob further counter-clockwise (towards the LOW position). To raise the temperature, rotate the thermostat knob clockwise (towards the HIGH position).



## TO OPERATE FAN ONLY

---

Turn the On/Off Power Level Control dial to the Fan setting. Turn thermostat fully clockwise so the fan will run continuously

## TURNING OFF

---

Turn the center dial to the OFF position before unplugging or plugging in the heater. Heater should be unplugged when not in use.

## IMPORTANT SAFETY FEATURES

---

The power indicator light, located near the control panel, lights whenever the heater or fan is turned on. The heater is equipped with an automatic overheat protection device located inside the body of the heater. If the heater grille is obstructed, or if the heater gets too hot for any reason, the automatic overheat protection device will turn the heater off. To reset the heater, simply turn power off and unplug the heater for 10 minutes until it cools down, and then you may plug the heater in and restart. Be sure that the heater is on a smooth level surface with no obstructions.

# CARE AND MAINTENANCE

## CLEANING

---

**CAUTION**-Before cleaning the heater be sure to disconnect power cord and allow the heater to cool completely. This heater should be cleaned at least once a year to maintain proper performance. Clean the outside surface with a clean, damp cloth. Do not use harsh chemical or abrasive cleaners. **DO NOT IMMERSE THE HEATER IN WATER.** Allow heater to dry completely before use.

## REPAIR

---

**DO NOT OPERATE THE HEATER WITHOUT THE GRILLE IN PLACE. DO NOT USE THE HEATER IF IT HAS MALFUNCTIONED OR BECOME DAMAGED IN ANYWAY.**

## STORAGE

---

Keep original carton for storage of the heater. Coil and tie the power cord to avoid damage during storage.





4560 W. 160th Street  
Cleveland, OH 44135

833-950-1185 | [support@visionairproducts.com](mailto:support@visionairproducts.com)  
[www.visionairproducts.com](http://www.visionairproducts.com)