



Rolling Elevated garden Planter with Under Shelf

Installation Guide

Thank You!

You're only a few steps away from your perfect vegetable garden or elevated planter. We hope you enjoy!

Model# E333618WU

Dimensions 36" L x 18" W x 36" H

Before You Start

Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble your new Elevated Garden Bed.

You need at least 37" x 19" (94 x 49 cm) for the finished product. A flat and firm area (like a garage floor or flat yard space) is perfect! The only tools you may need are a rubber mallet and a scissor.

Important Notes

Small parts are included; we advise you to keep them away from children and pets.

We also suggest having another person help you assemble. Maximum Load capacity: approximately 2.2 cu. ft. of soil



★ **Subscribe at www.everbloom-garden.com for extra savings and upgrading information!**

Everbloom-Garden.com

 
 
 
 

Questions or Comments?

Email us at service@everbloom-garden.com

Copyright © 2023 Dynaforge Trading LLC.

Parts List 1


Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

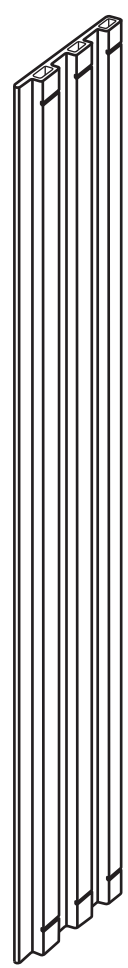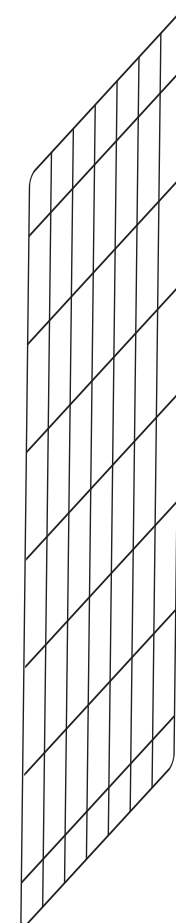Left Corner Post X 2	Right Corner Post X 2	Long Support Board X 2	Steel Wire Panel X 1	Short Board X 2
Top	Top			
				
Bottom	Bottom	900mm	35.4 x 15in (900 x 380mm)	380mm

Parts List 2

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

 
Bottom Tray
with End Caps
X 3

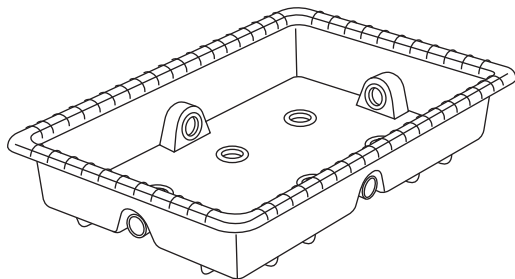

Black
Tape
X 1




 Post Cap
X 4

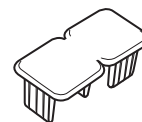

+ 2pc
replacement

 Caster Wheel
X 4




Bolt
X 8



Nut
X 8



 Nut Driver
X 1



Hex Key
X 1



Connector
Washer
X 8




Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Start by making sure each corner post is oriented correctly, as shown in Image 1. Slide one short board into the corner brackets from above.

Note: The short boards need to be placed in the inward "U" shape of the brackets, as shown in Image 1.

 IMAGE 1

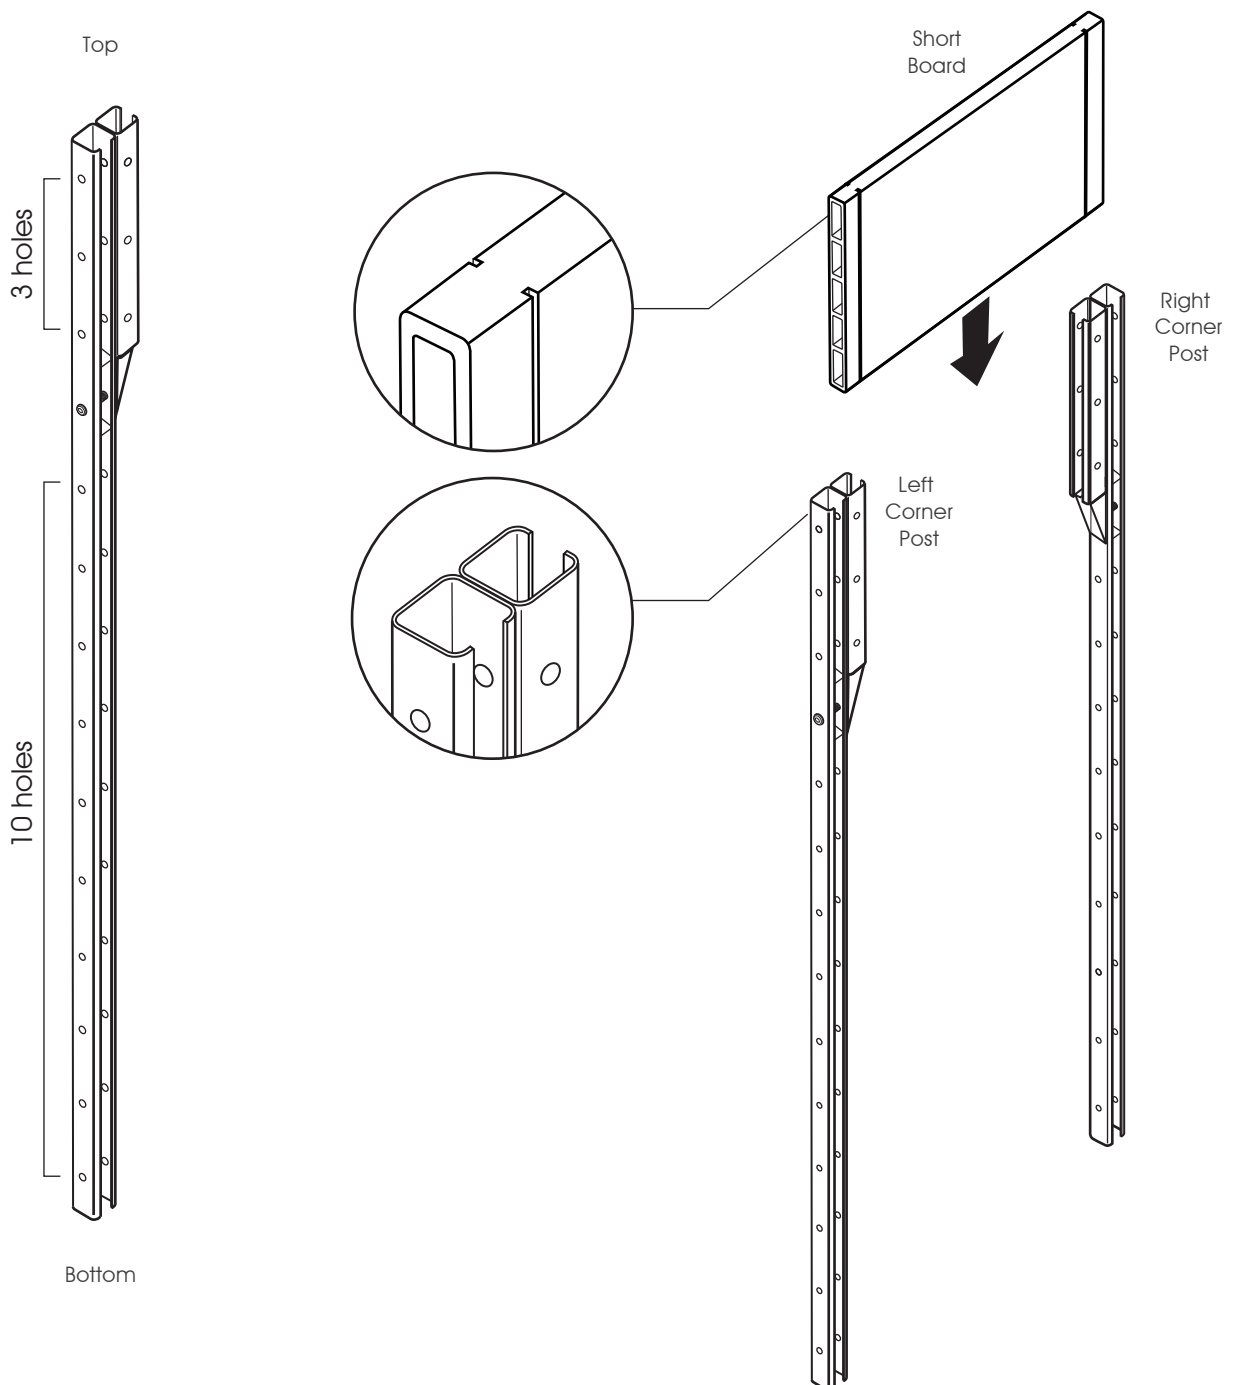


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Slide another short board into the other two corner brackets from above, as shown in Image 2.

IMAGE 2

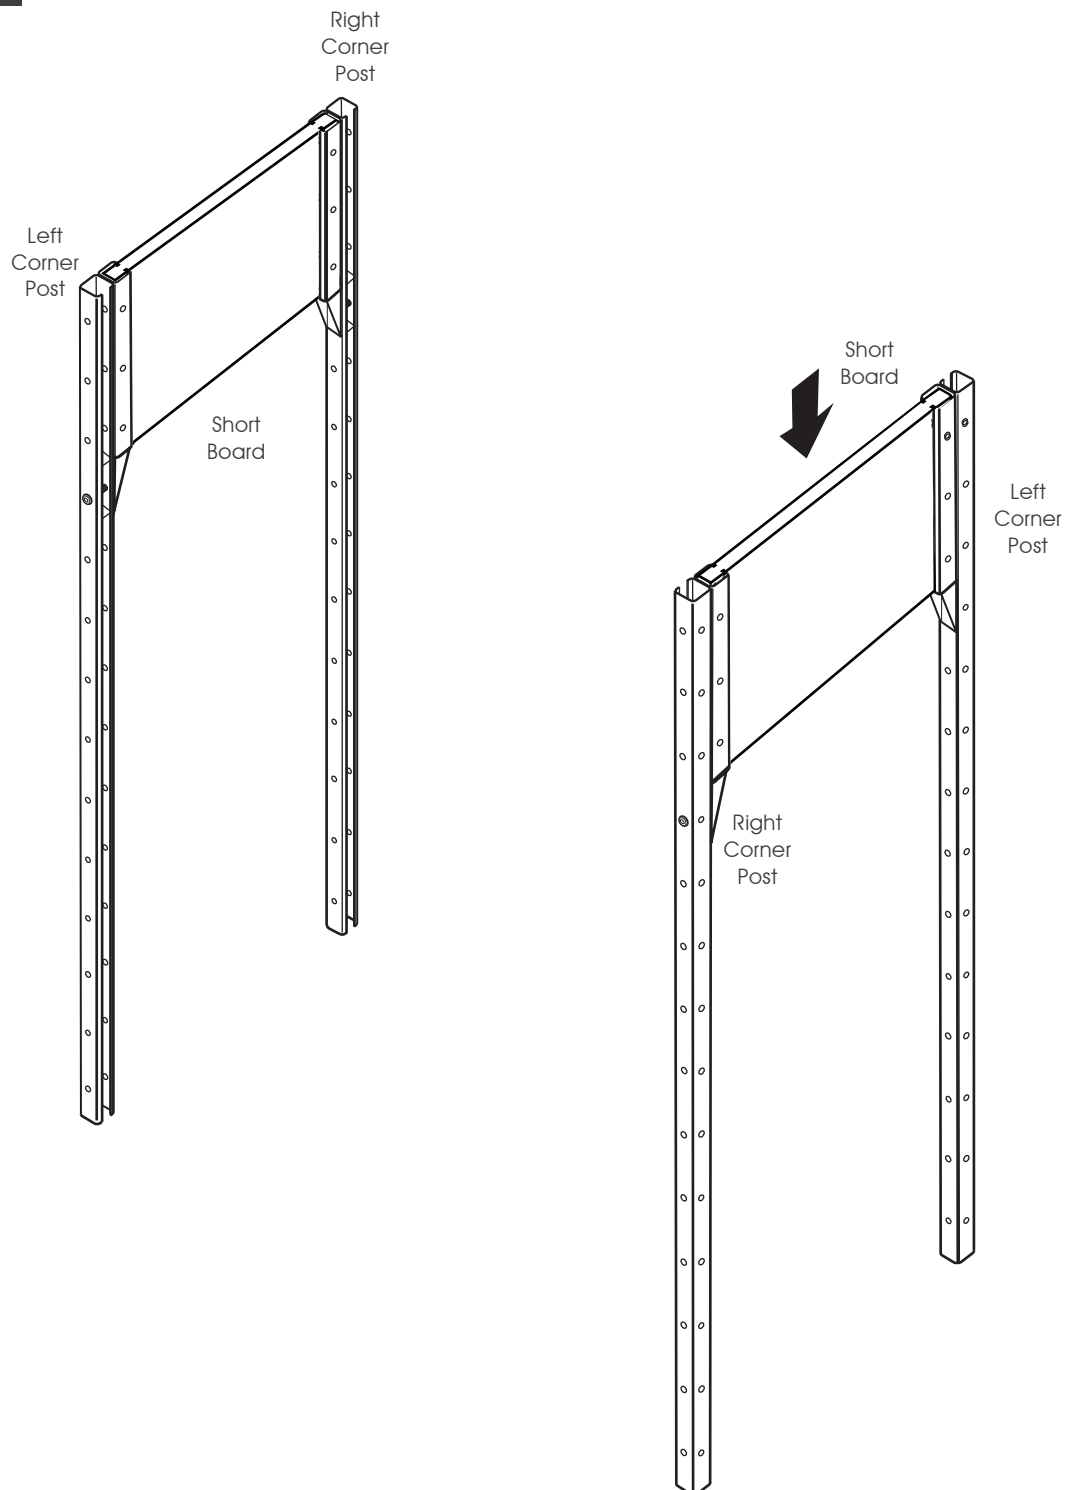


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

With the help of another person holding the 2 assembled parts, slide the 2 long supporting boards into the brackets from above. Make sure that one support board goes straight to the bottom, while the other one stays in the middle of the way (don't push to the bottom), with the bottom edge between the 2nd and 3rd holes of the post, as shown in Image 3.

IMAGE 3

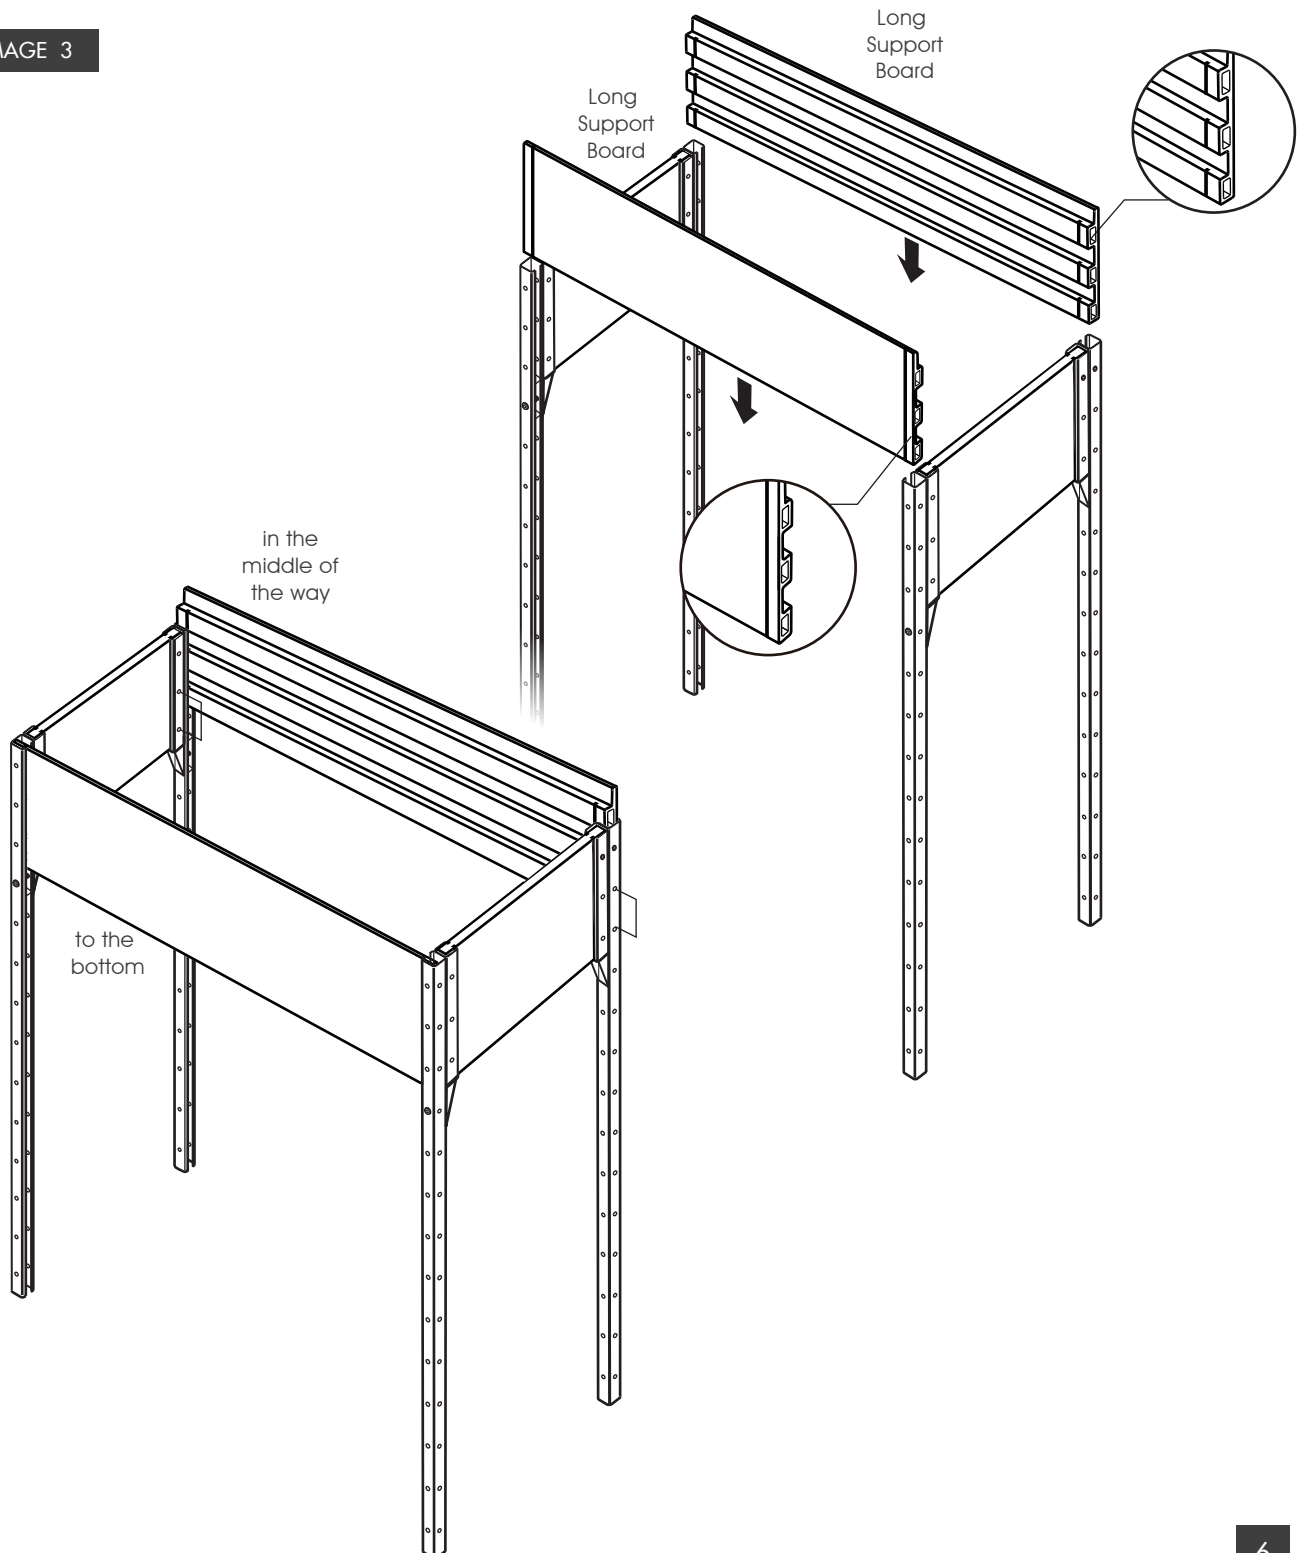


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Put the bottom trays on lower slots of long support boards. Make sure the 2 ends of these bottom trays go into the lower slots and rest in them with enough contact as shown in Image 8. Adjust the height of the higher long support board slightly to hold these bottom trays if necessary.

IMAGE 8

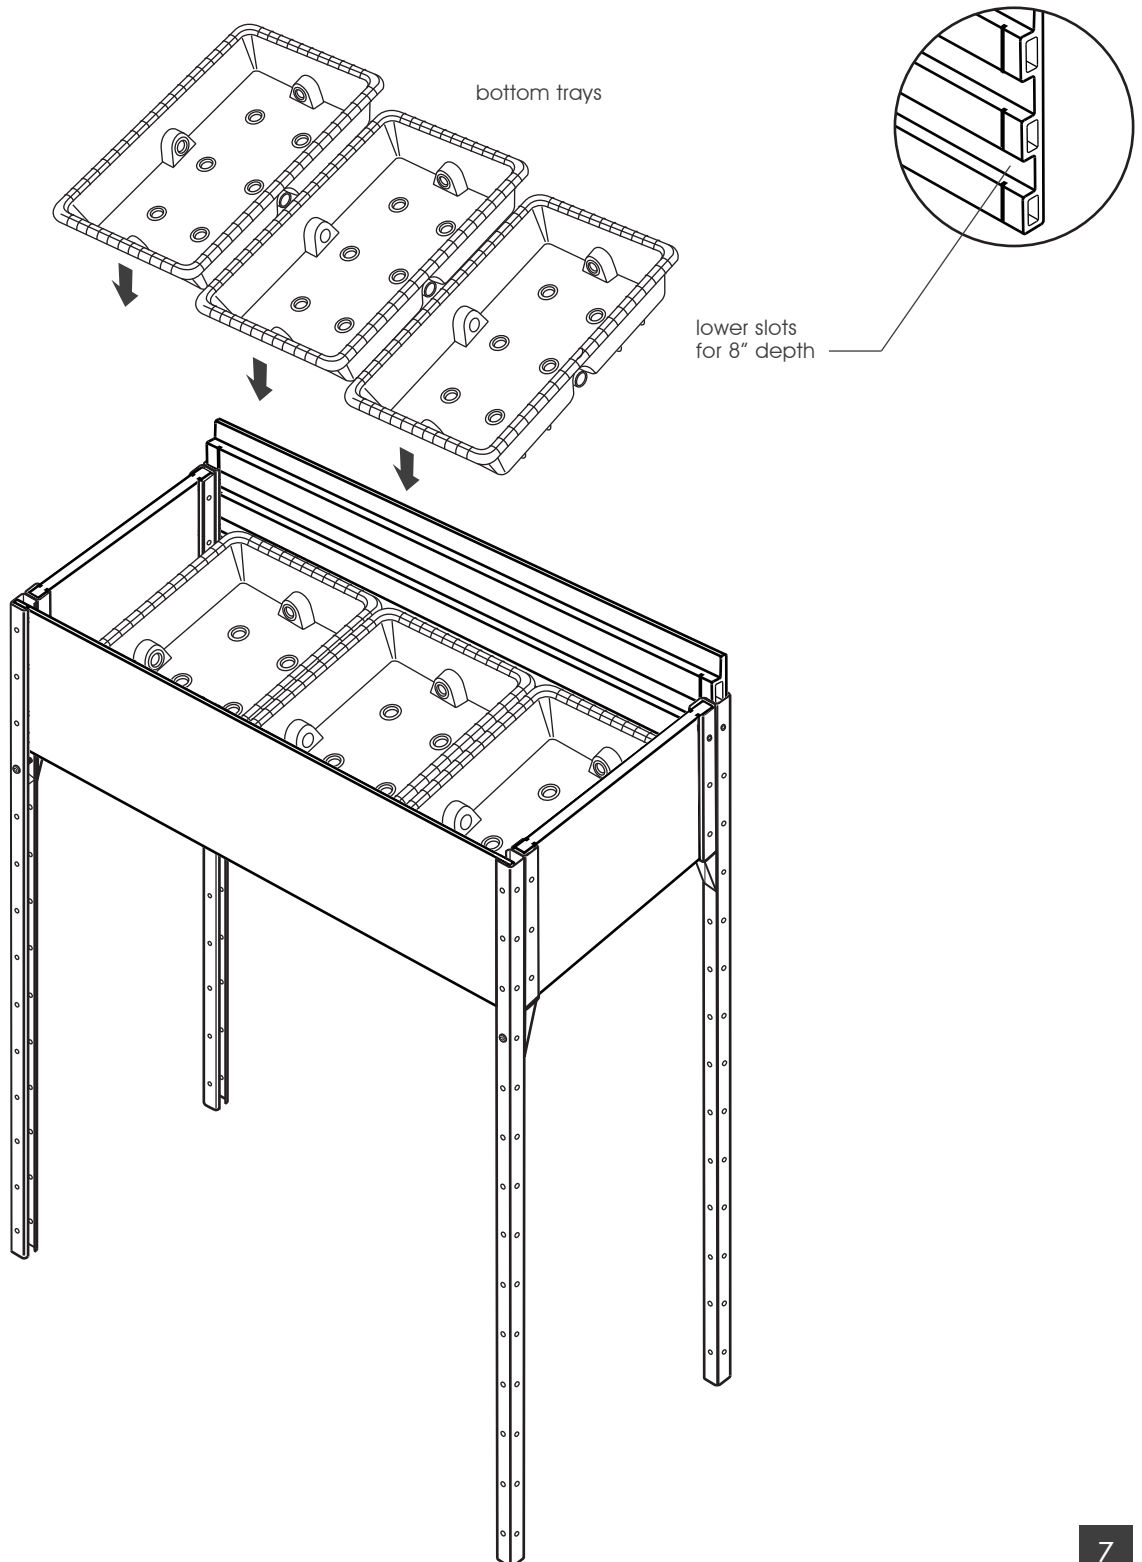


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Push down the higher long support board to the bottom, as shown in Image 9.

IMAGE 9

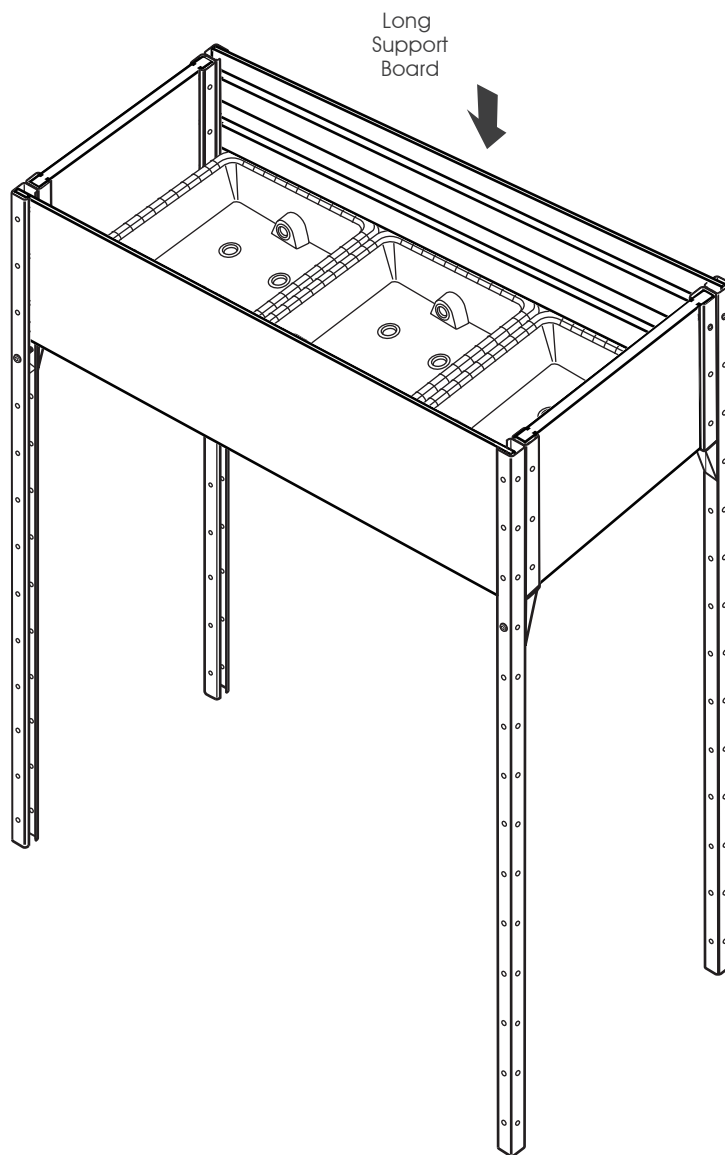


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Carefully flip over the planter so that it lays flat with the short boards pointing towards the sky, as shown in Image 10.

IMAGE 10

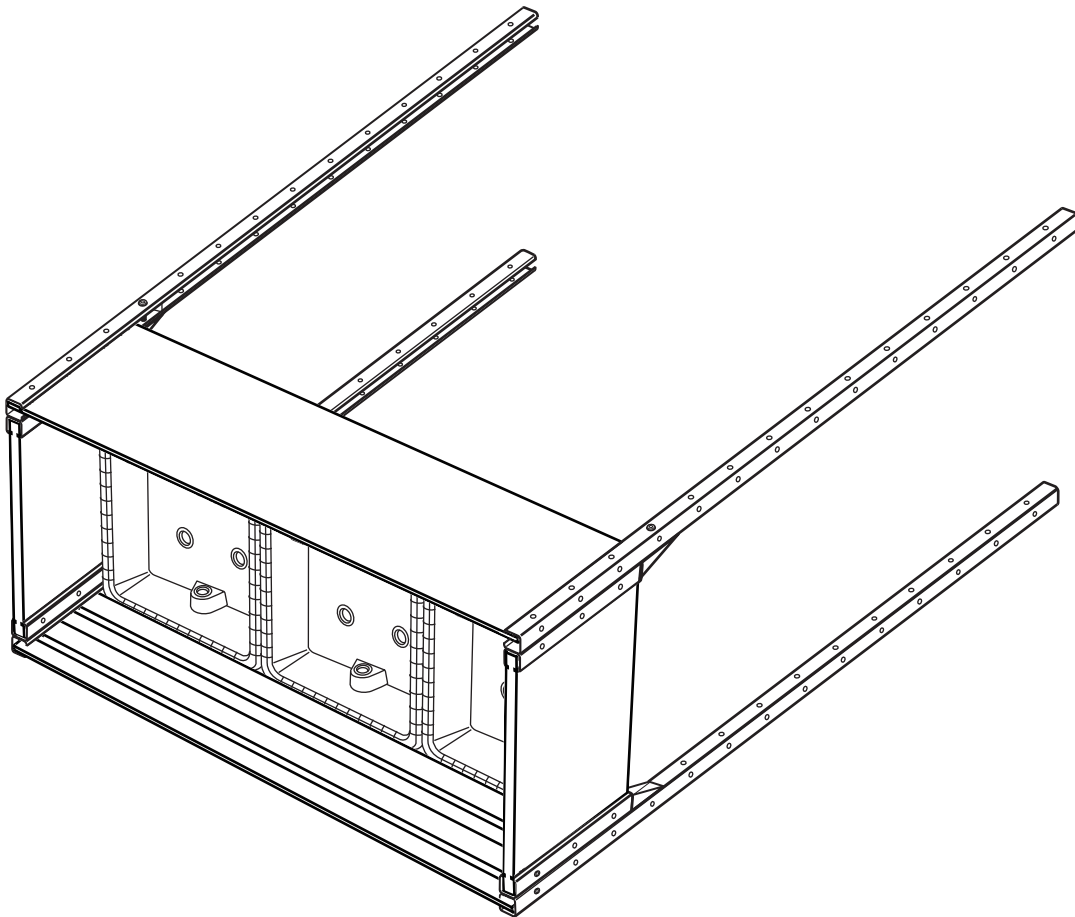

Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Open all the steel connector washers, as shown in Image 11.

Then, clamp the connector washers onto the steel wire panel, as shown in Image 12.

Note: Pay attention to the position and direction of the connector washer on the panel.

Close all the connector washers, as shown in Image 13.

IMAGE 11

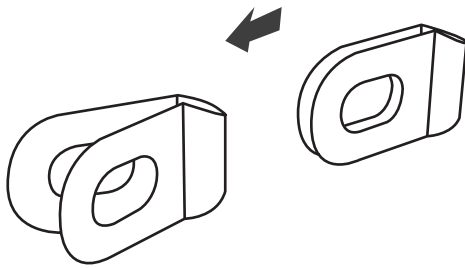


IMAGE 12


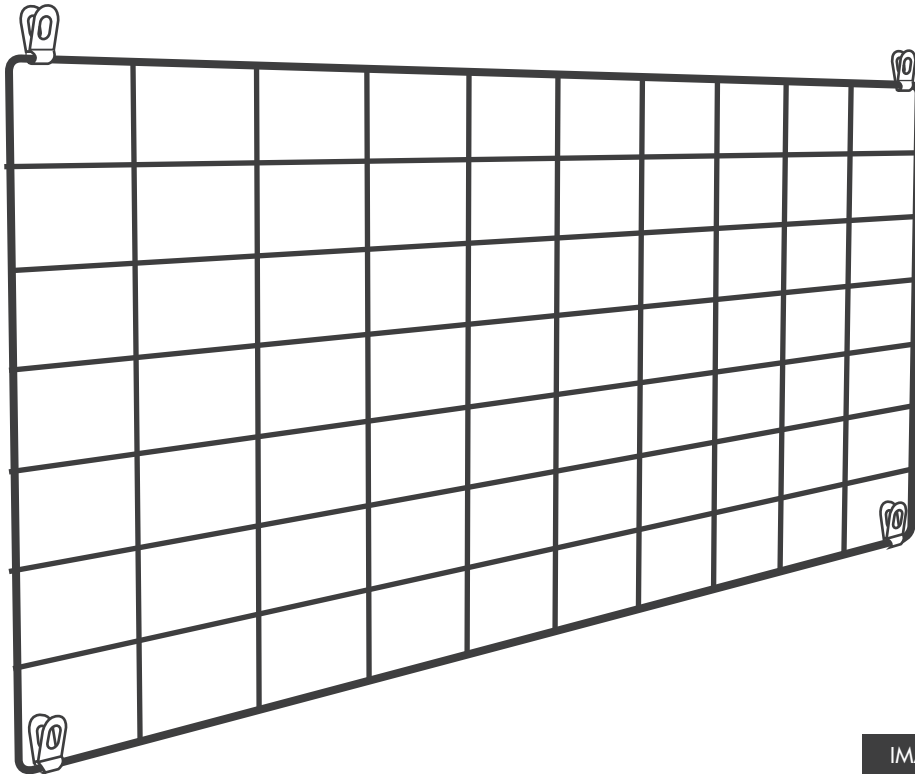


IMAGE 13

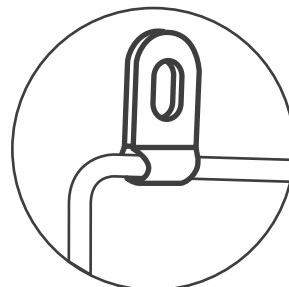


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Align the steel wire panel to four post brackets and fasten a connector washer on the steel wire panel to post bracket with bolts and nuts, as shown in Image 14.

Note: Pay attention to the direction of the connector washer on the panel. The bolts need to be insert from inside of the post.

IMAGE 14

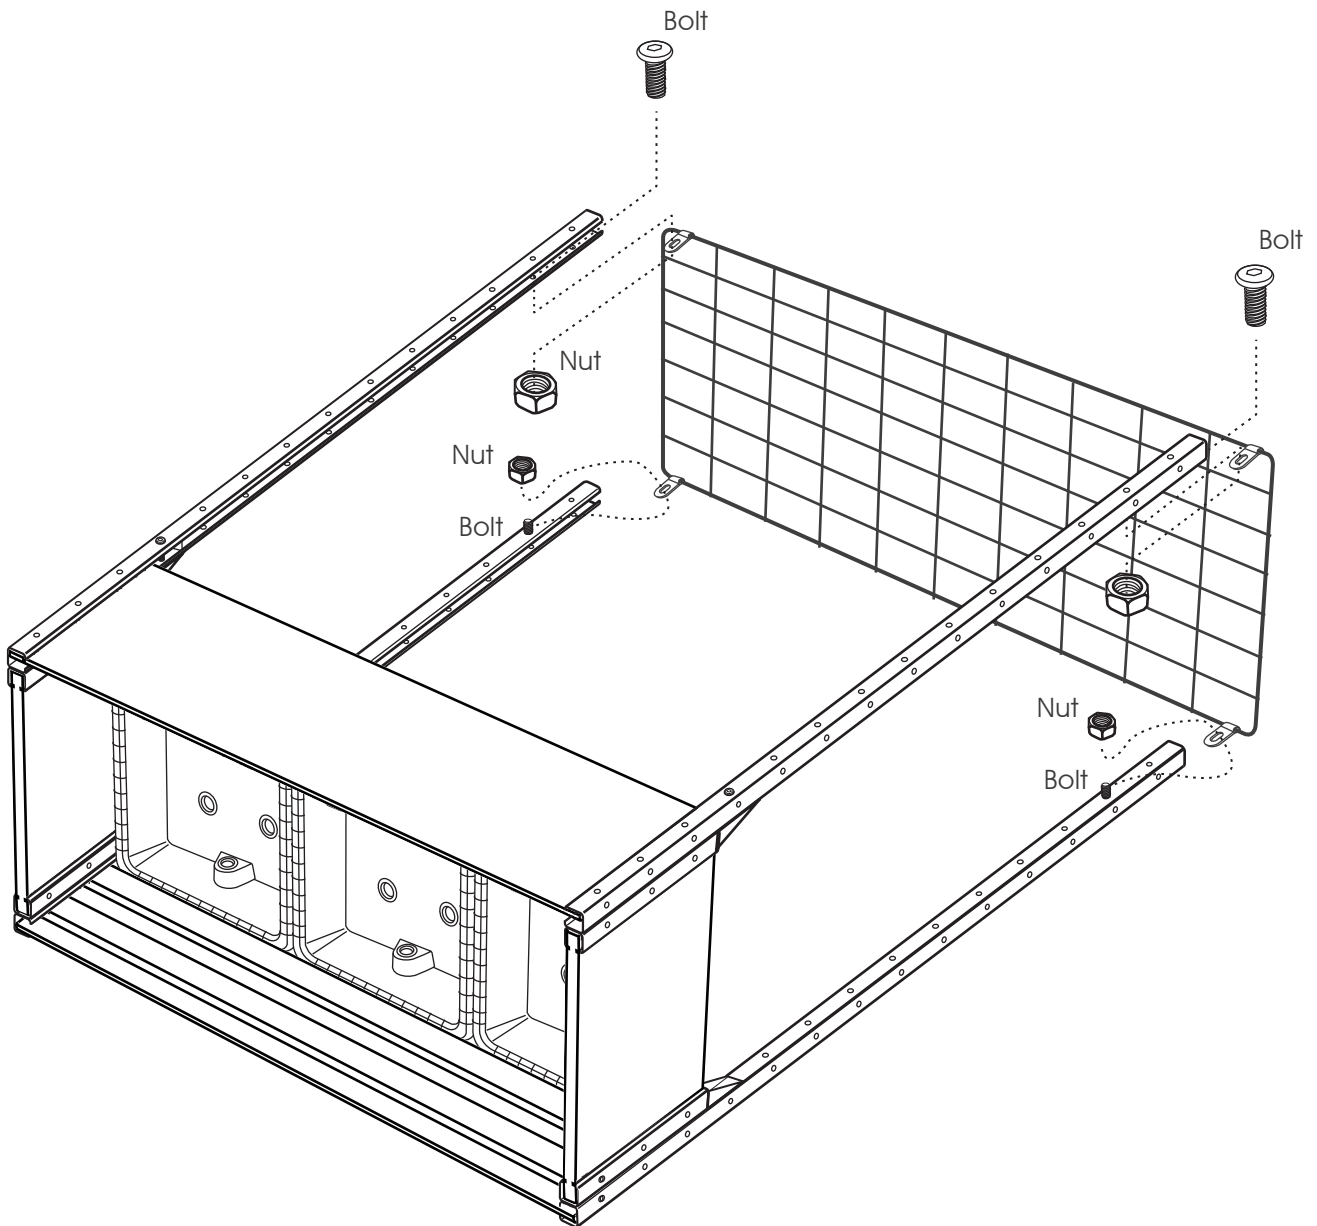


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

fasten the other three connector washers on the steel wire panel to post brackets with bolts and nuts, as shown in Image 15.

IMAGE 15

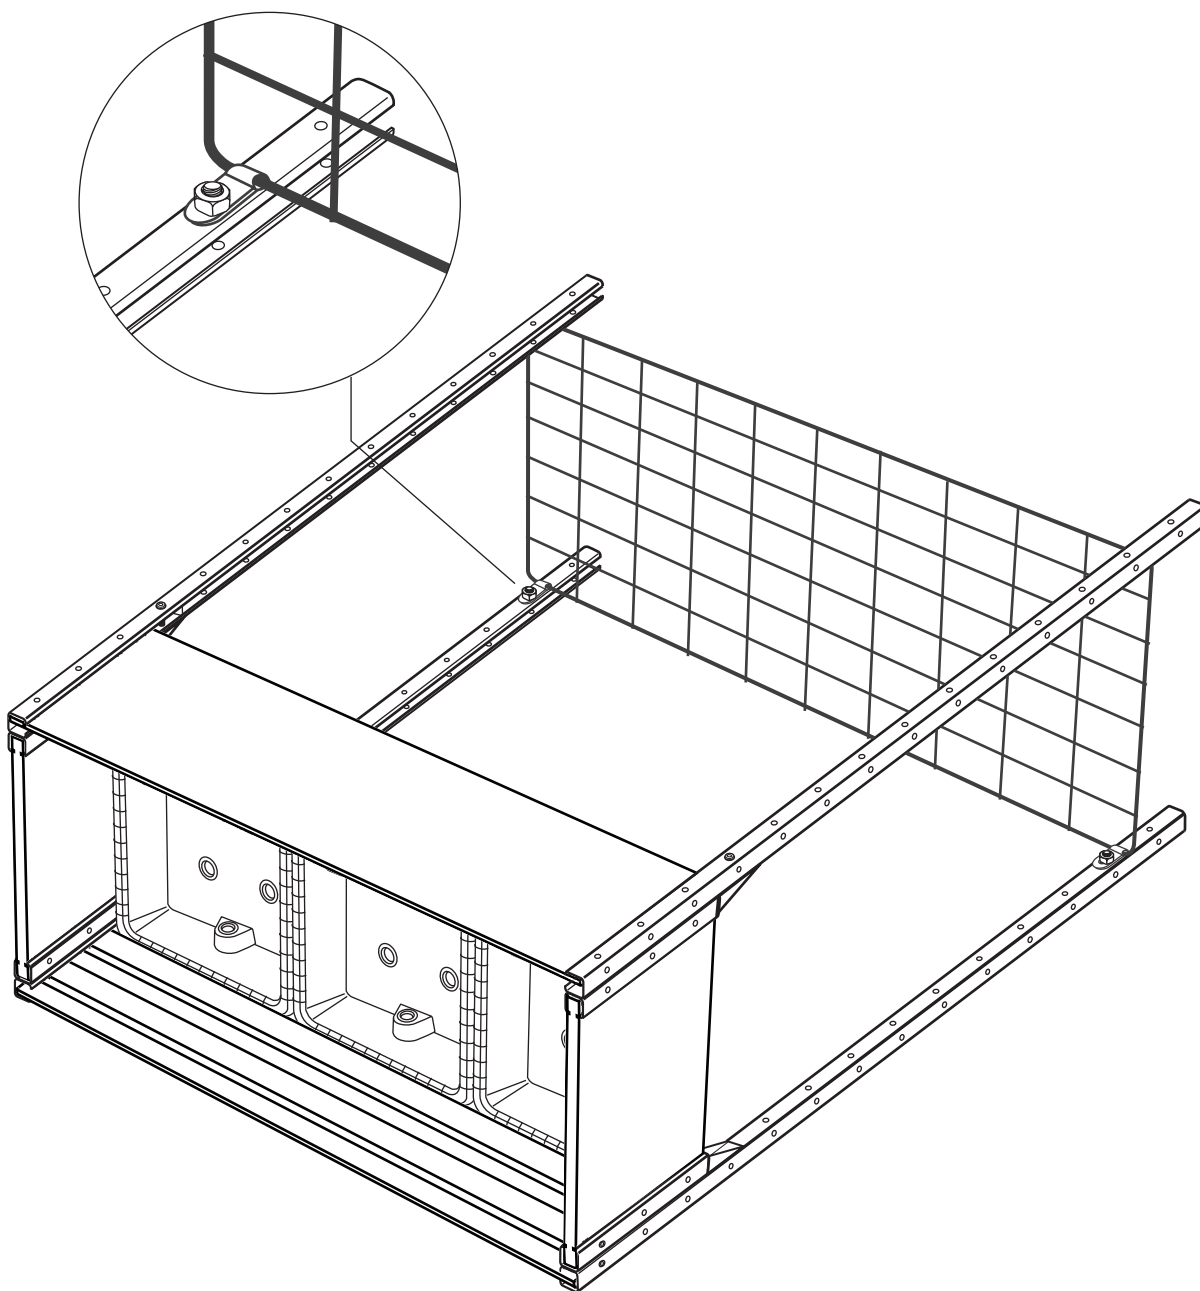

Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Insert caster wheels into corner brackets, as shown in Image 16 and Image 17.

IMAGE 16


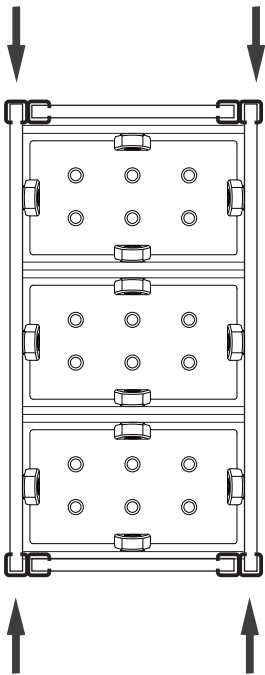


IMAGE 17

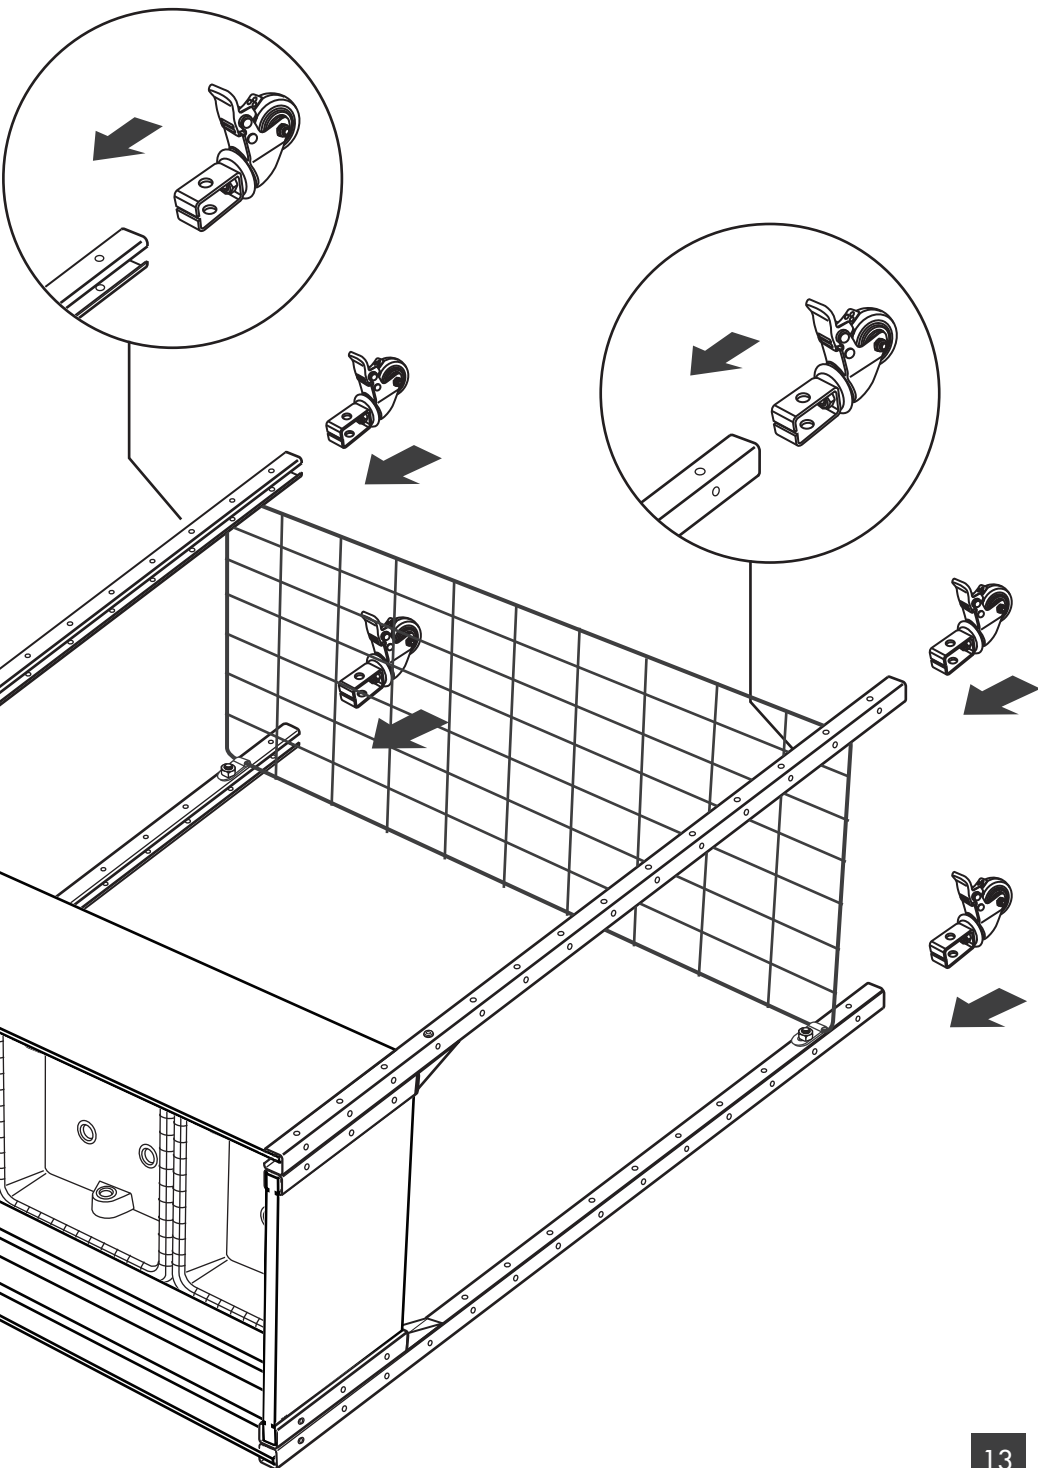


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Fix the wheels with bolts and nuts, as shown in Image 18.

IMAGE 18

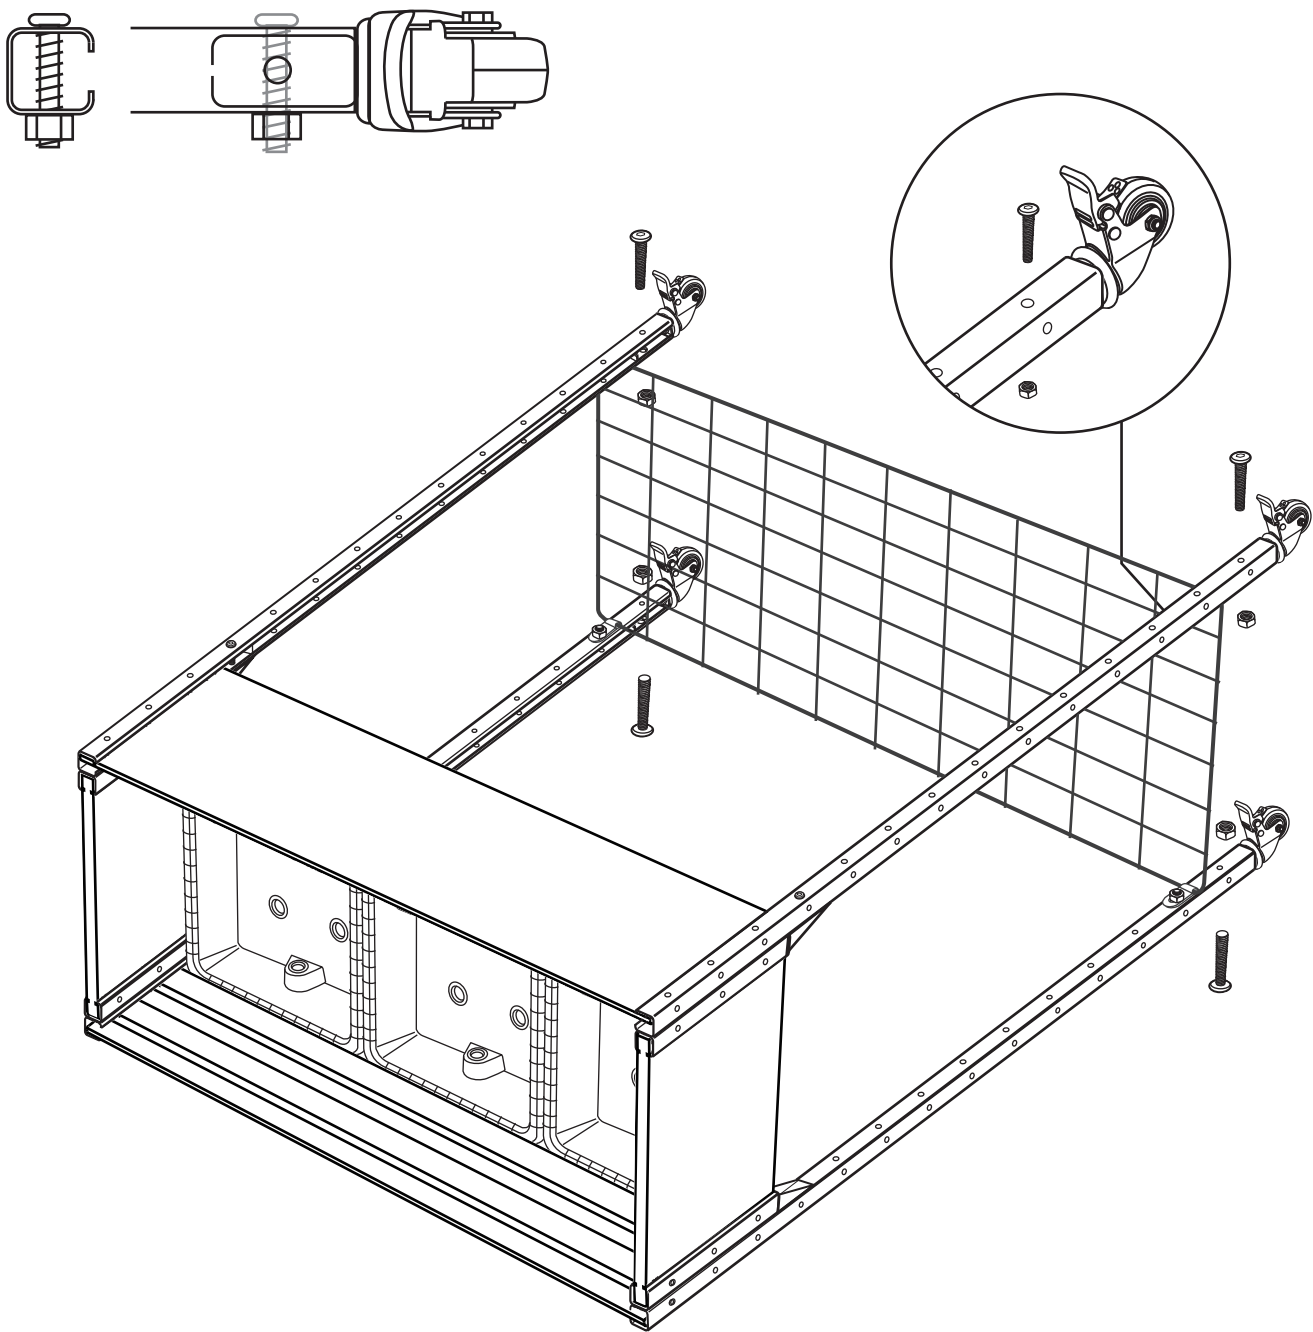


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Fasten bolts and nuts with nut driver and hex key which are included in pack , as shown in Image 19.

IMAGE 19

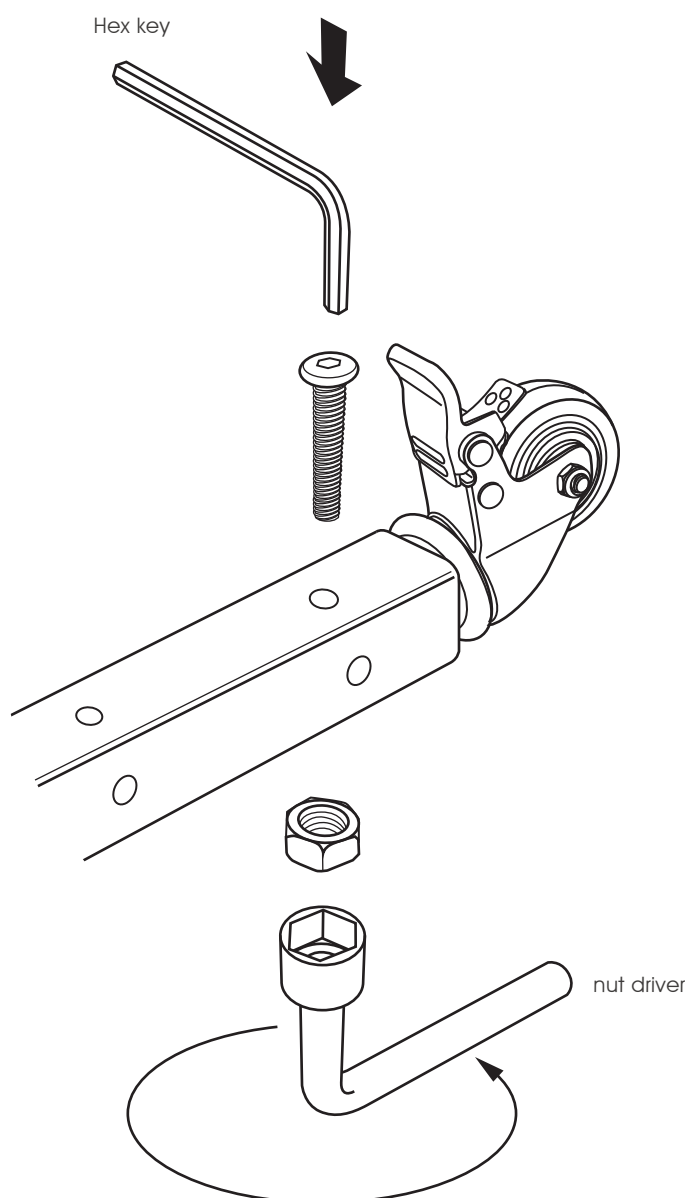


Assembly

Self-Watering Mobile Elevated Garden - 36" L x 18" W x 36" H

Flip over the planter again so it stands upright, as shown in Image 20.

IMAGE 20

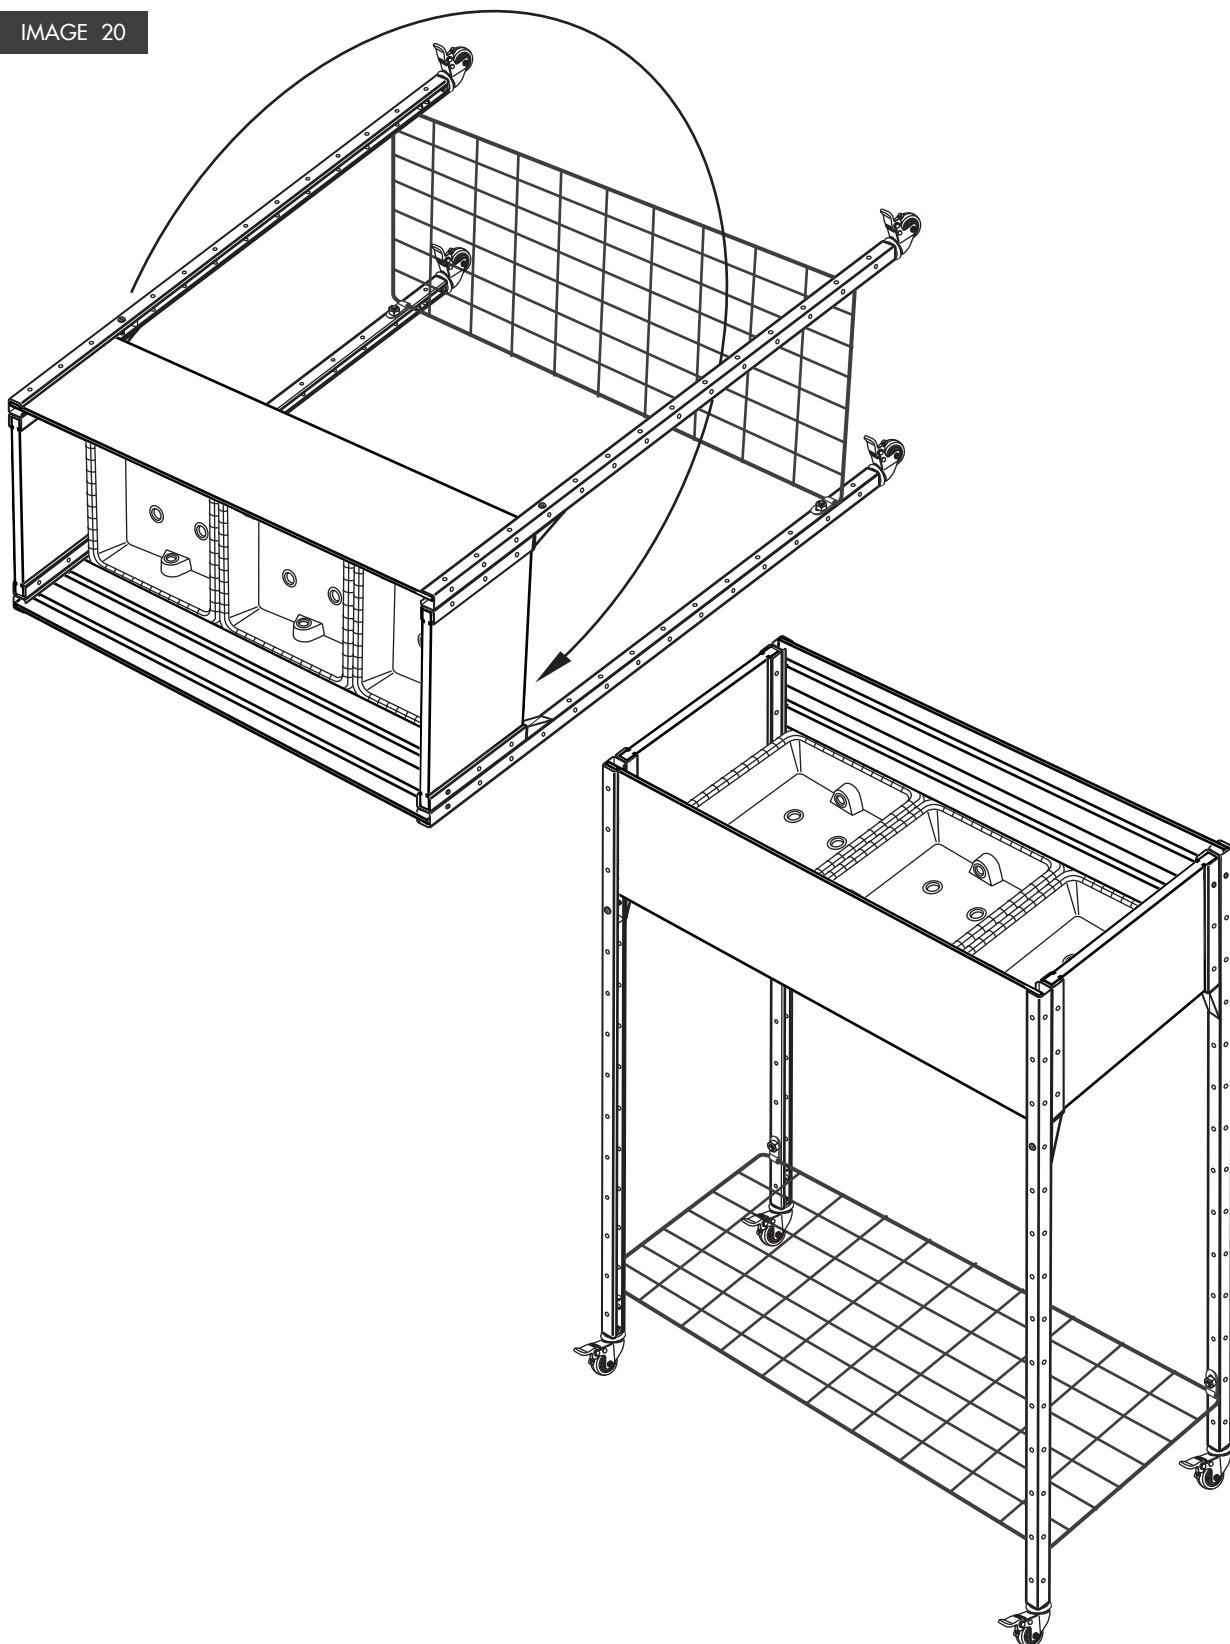


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Seal the small gaps between reservoirs and the gaps between reservoir and short boards with black tape, as shown in Image 21.

IMAGE 21

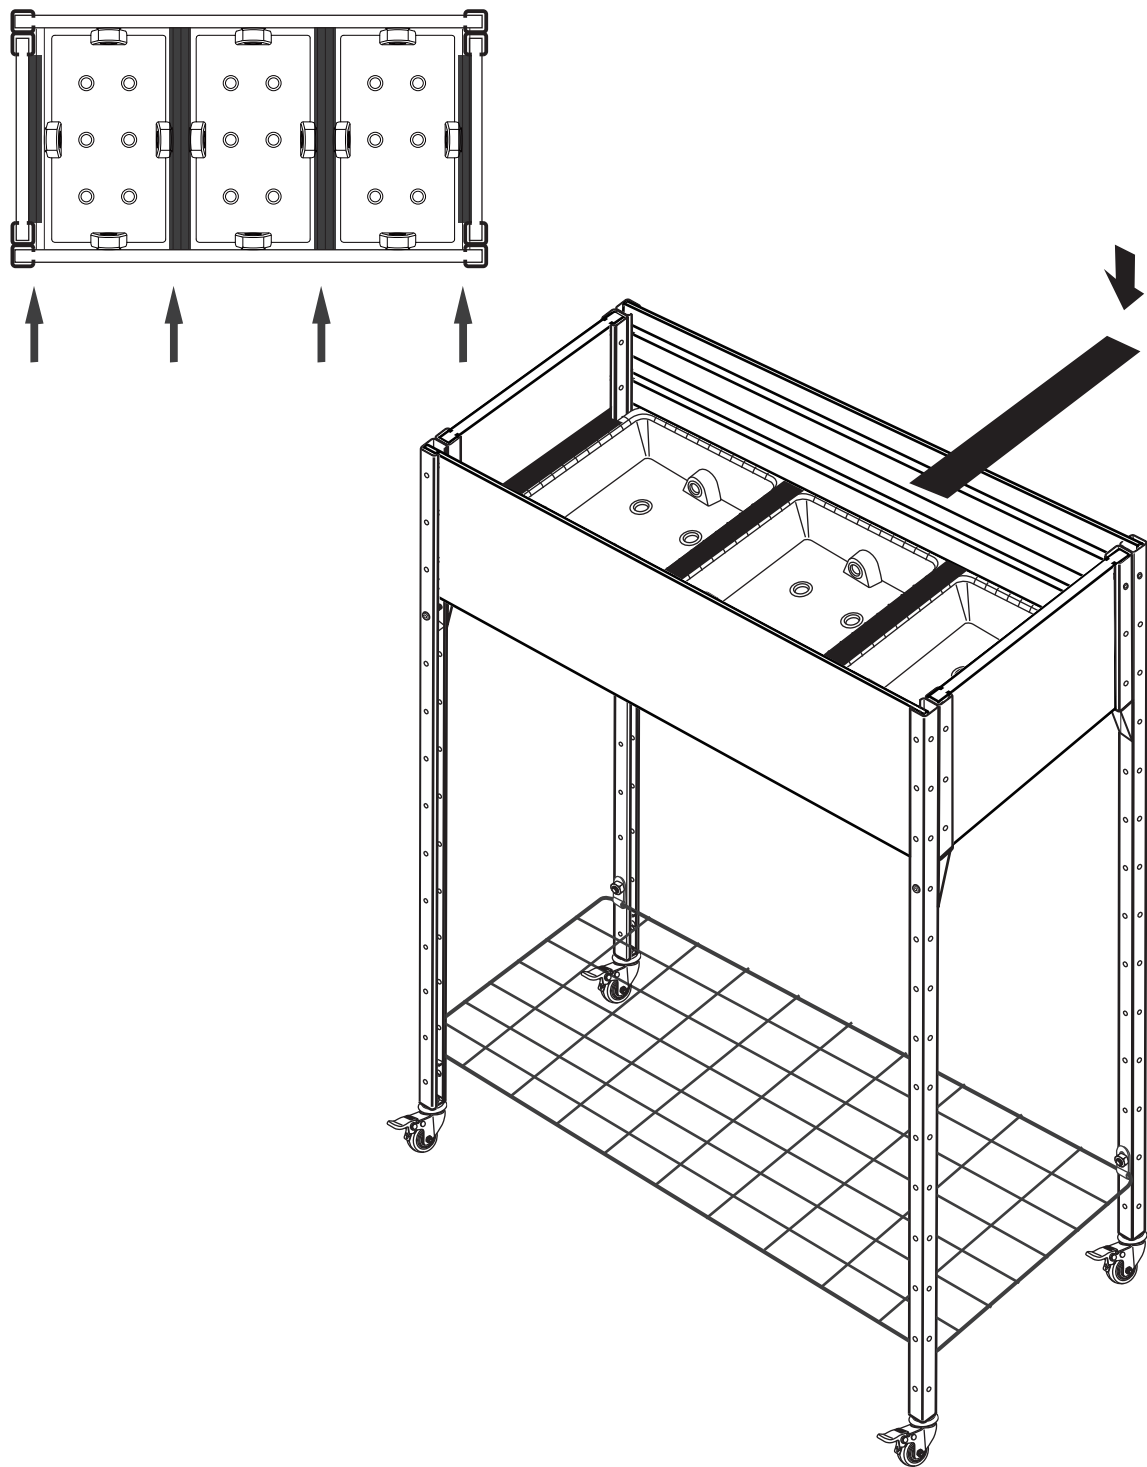


Assembly


Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Bottom trays come with 18 drainage holes each with end caps, enabling adjustable drainage settings. Take off some end caps in advance according to different climates and watering needs as you wish, as shown in Image 22. For example, in rainy seasons, you may remove more end caps for better drainage; for plants that have large water consumption, put the end caps back from bottom to reduce water flowing away.

IMAGE 22

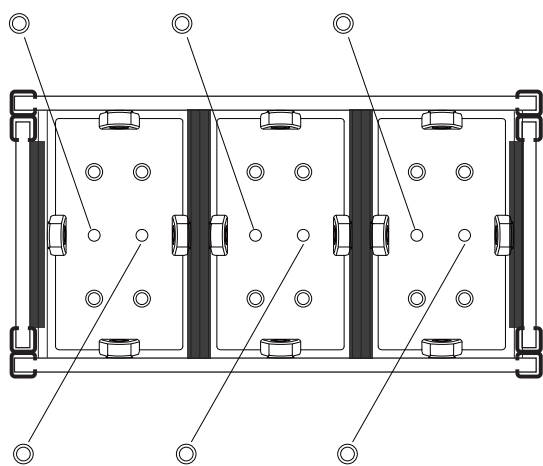

Note: When the climate gets dry, you may insert end caps that have been taken off to backside of bottom trays for reducing water loss.

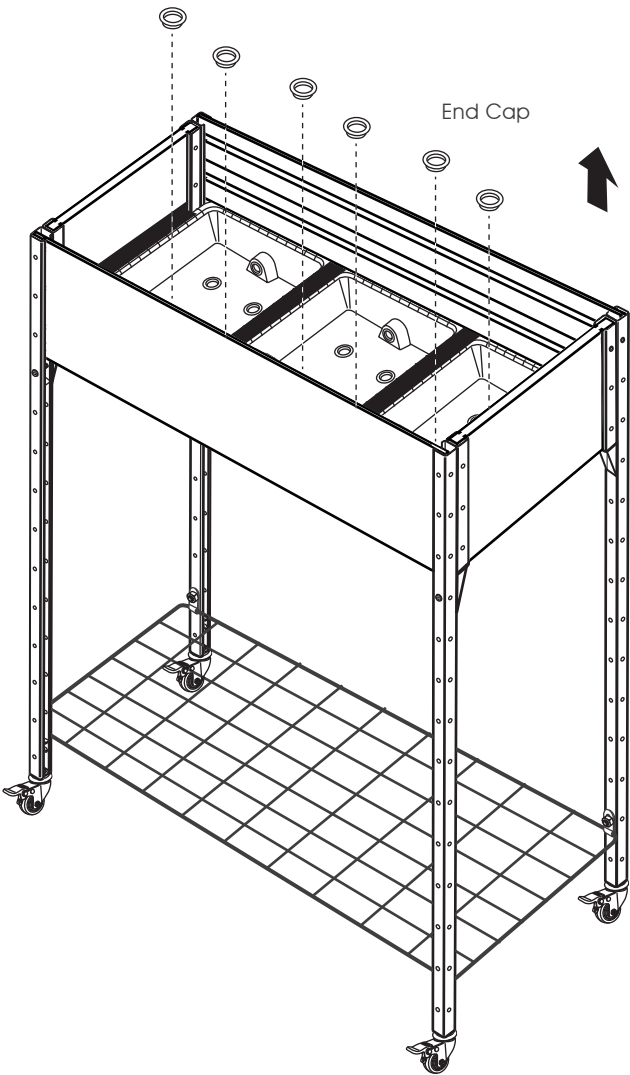


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Cover the holes with liners, as shown in Image 23.

IMAGE 23

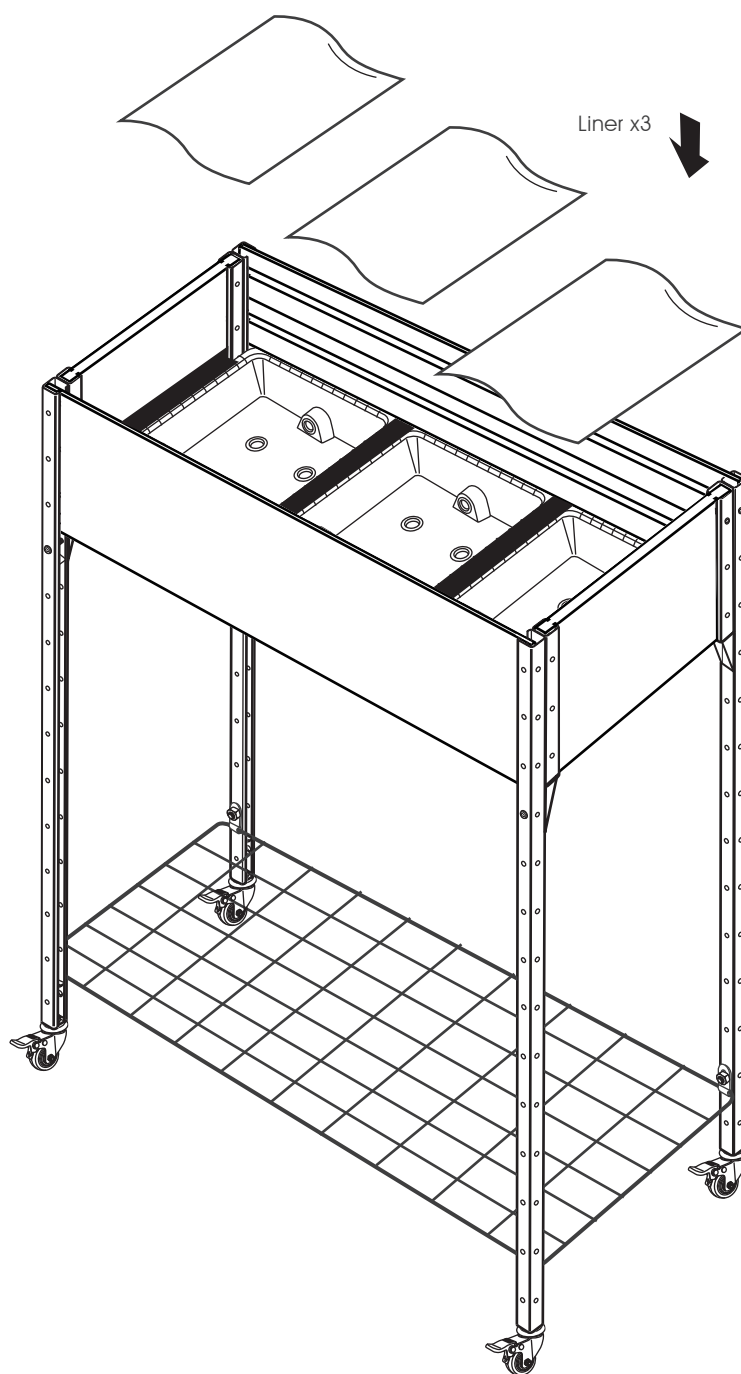


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

If necessary, use your rubber mallet to ensure the boards are tightly in place. Cover the brackets with the 4 end caps, as shown in Image 24.

IMAGE 24

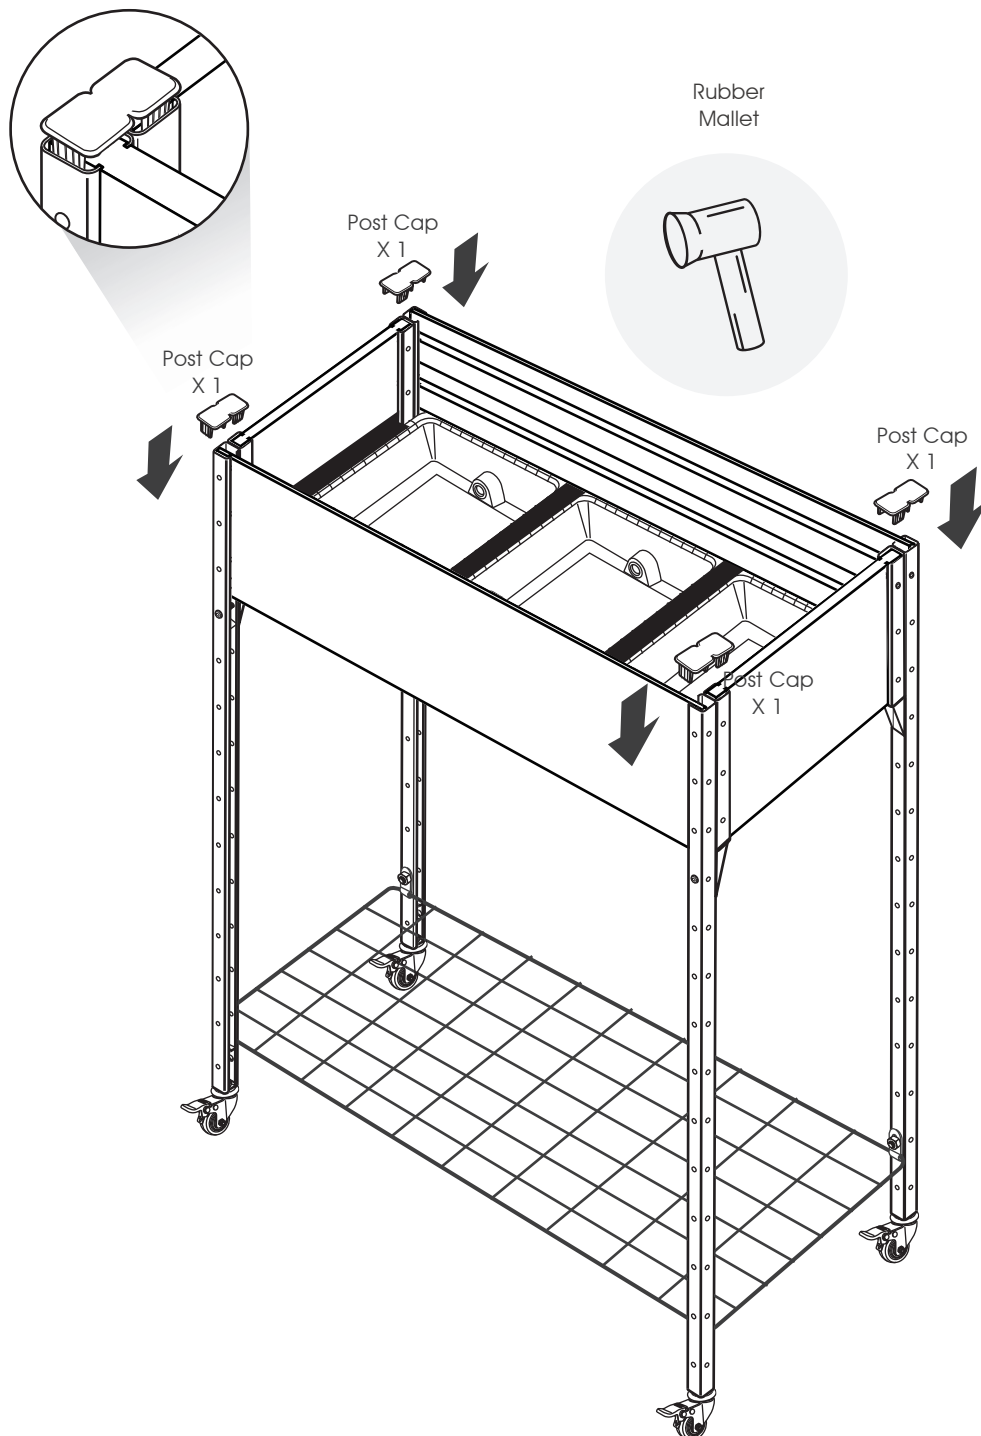


Assembly

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Now you get an EverBloom Rolling Elevated Garden Planter with Under Shelf, as shown in Image 25. Then, enjoy your gardening time!

IMAGE 25

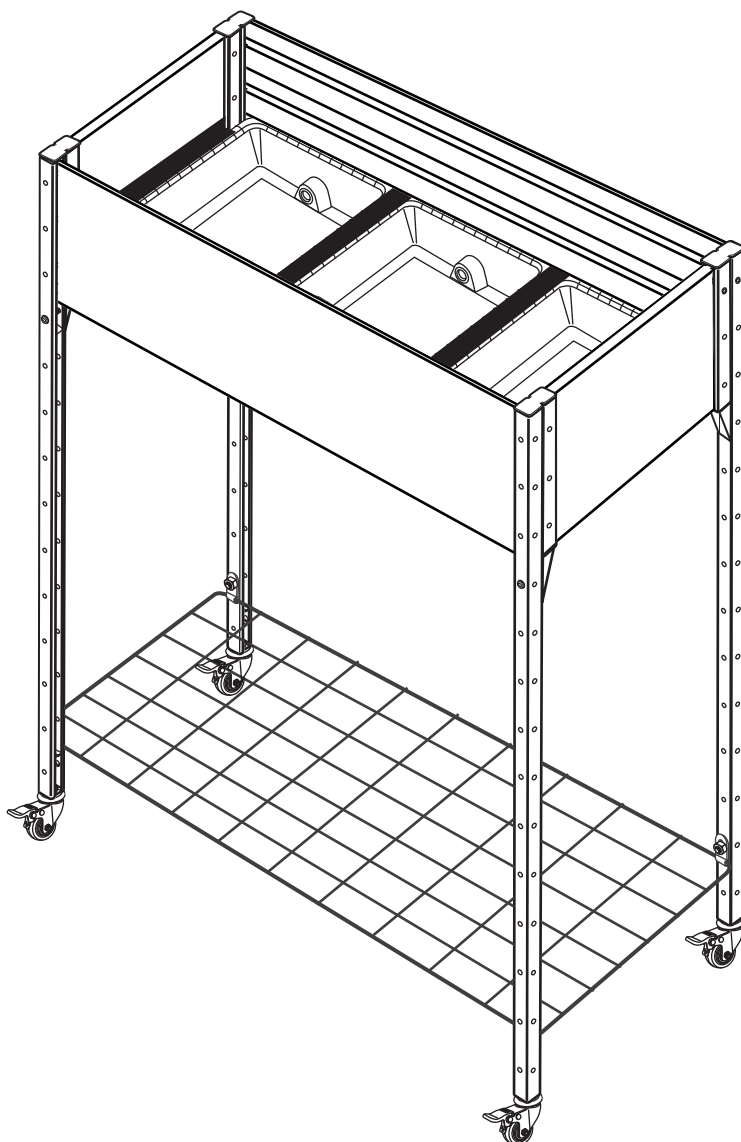

Note

Rolling Elevated Garden Planter with Under Shelf - 36" L x 18" W x 36" H

Sometimes there might be a misalignment of the Corner Posts as shown in Image 26 and Image 27, which may result in difficulty of sliding boards into the brackets. Please adjust them to the right position so that they are parallel to each other, and perpendicular to the ground.

IMAGE 26

Assembling Problem 1


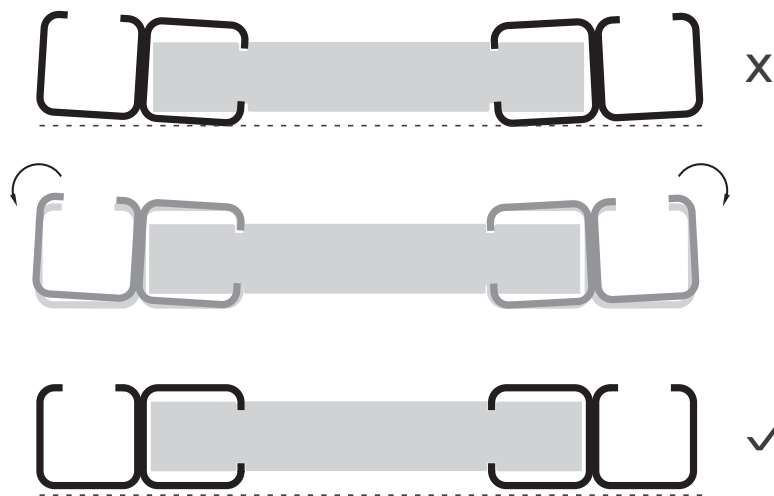 


IMAGE 27

 Assembling Problem 2

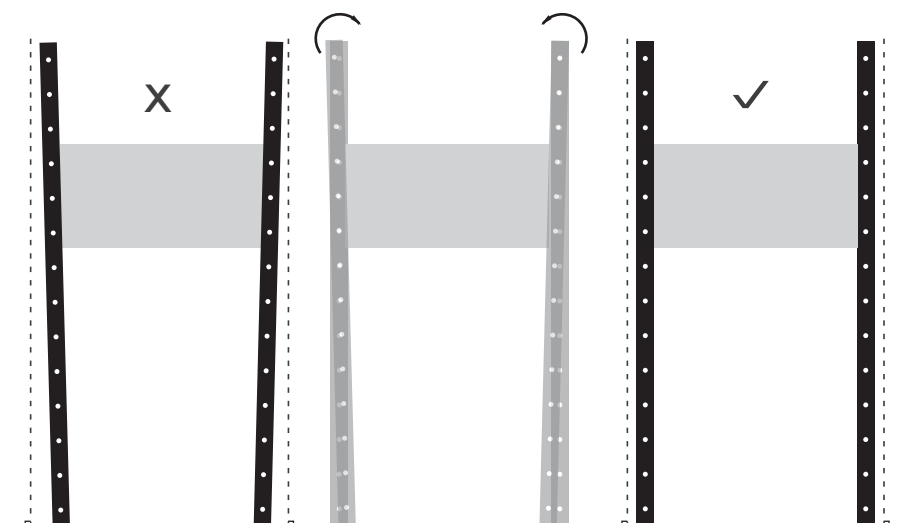

Bloom On.

Everbloom-Garden.com

US Patent Pending

★ Subscribe at www.everbloom-garden.com for
extra savings and upgrading information!



Distributed by:
Dynaforge Trading LLC
St. Paul, MN55101
Email: service@everbloom-garden.com