

IsEasy

WINE COOLER USER MANUAL



Model: JC-32AW

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY
RETAIN THIS MANUAL FOR FUTURE REFERENCE

Customer Service

+1 (888) 907-5060 (Toll Free)

service@iseasy.com

9 AM-5 PM, Mon-Fri

www.iseasy.com



IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS

1. Before use, please read this manual carefully.
2. The range of storage temperature is from 46°F to 66°F, but the test condition for energy consumption is equal to 63°F or higher at the ambient Temperature 77°F.
3. Do not use if supply cord is damaged. If damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Ensure the cooler is unplugged before cleaning or if the cooler is not in use.
7. To clean the cooler use only mild detergents or glass cleaning products. Never use harsh detergents or solvents.
8. It is not recommended to use this thermoelectric cooler with an extension cord or power board. Please ensure that the appliance is plugged directly into the electrical outlet.
9. When positioning the thermoelectric cooler, ensure that there is at least a 5cm clearance at the sides and a 10cm clearance at the back of the cooler as this is the main outlet for heat. This will allow for adequate ventilation.


10. This cooler is designed to store wine bottles.
11. Don't place hot food or drink into the thermoelectric cooler before it cools down to room temperature.
12. Close the cooler door immediately after putting any items so the inside temperature will not rise dramatically.
13. Keep appliance away from any heat source or direct sunlight.
14. To fix stably, the appliance must be placed on a flat and solid surface. Should not be laid on any soft material.
15. Do not place any other appliance on top of the thermoelectric cooler.
16. The Thermoelectric cooler is an electrical appliance, To avoid injury or death from electrical shock, do not operate the thermoelectric cooler with wet hands, while standing on a wet surface or while standing in Water.
17. Never pull the cord to disconnect it from the outlet. Grasp the plug and pull it from the outlet.
18. Never lift or carry the Thermoelectric cooler by the cord.
19. Keep the cord away from heated surfaces.
20. This Thermoelectric cooler is for household use only. Any other use will void the warranty.
21. An empty cooler can be a dangerous attraction to children. If disposing of the cooler remove gaskets, latches, lids or the entire door from your unused appliance, or take other action to ensure the cooler is harmless.
22. Do not store food in your thermoelectric cooler as interior temperature may not get cool enough to prevent spoilage. In summer months or areas of high humidity, the glass door may build up moisture. To remove the moisture, wipe it away.

WARNING

1. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
2. Do not use mechanical devices or other means to accelerate defrosting process, other than those recommended by the manufacturer.
3. Do not damage the refrigerant circuit.
4. Do not use electrical appliance inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. The appliance shall be used for indoor only. Do not use outdoors or in wet conditions.
7. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
8. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

INTRODUCTION FOR USE

STRUCTURE

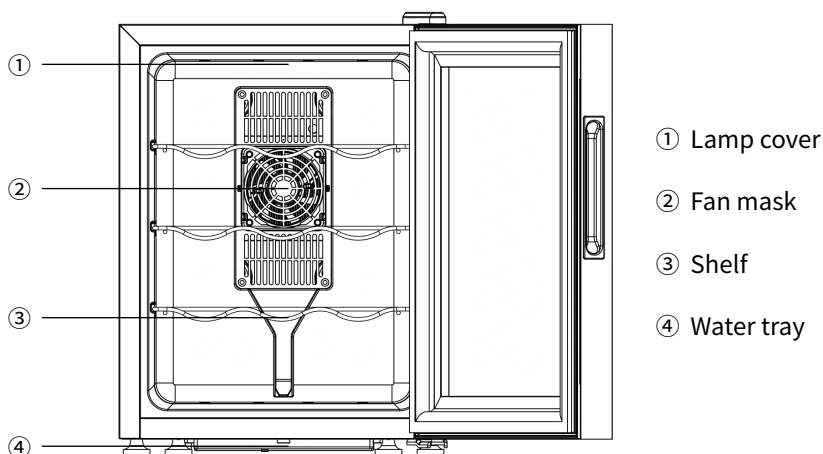

FEATURES

- Dark interior
- Soft light inside
- Adjustable feet
- Vibration-free
- Removable shelves
- Thermoelectric cooling
- Adjustable temperature
- Double-glazed glass door
- Variable temperature from 46°F to 66°F
- Capacity of 12 bottles x 750 mL (25 fl. oz.)

SPECIFICATIONS


- Power requirement: AC 110-127V
60Hz 55W
- Maximum temperature: 18°C +/- 3°C
(66°F +/- 5°F) at 22°C (72°F) temp.
ambient air
- Minimum temperature: 8°C +/- 3°C
(46°F +/- 5°F) at 22°C (72°F) temp.
ambient air

BEFORE USING YOUR WINE COOLER

- Remove the outer and inner packaging.
- Clean the interior surface with lukewarm water using a soft cloth.
- Brand new plastic products may have peculiar smell, please ventilate for 2-3 days.

INSTALLING YOUR WINE COOLER

- This unit is designed for free standing installation. Ensure 50mm of space between the side of the wine cooler and the wall, and 100mm between the back and the wall.
- Place your wine cooler on a floor strong enough to support it when fully loaded. To level your wine cooler, adjust the front leveling leg on the bottom of the wine cooler.
- Make sure it is placed away from the sun and sources of heat (stove, heater, radiator, etc.). Direct sunlight can affect the acrylic coating and heat sources can increase the power consumption of the wine cooler. Extremely cold ambient temperatures can also cause operational problems.
- Avoid placing the device in humid places.
- Plug the wine cooler into an exclusively dedicated grounded wall outlet for its power supply. Do not under any circumstances cut or remove the third prong (ground) from the power cord plug.

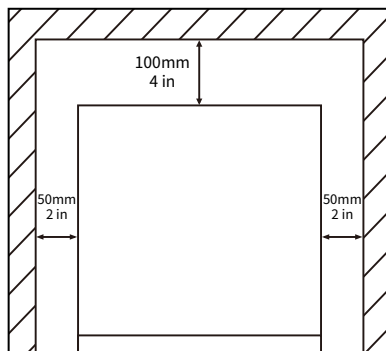

POWER CORD REPLACEMENT


If the Thermoelectric cooler's power cord is damaged, have it replaced by a qualified repair agent.

Any questions regarding electrical supply and/or grounding should be directed to a licensed electrician or authorized service center.

OPERATION GUIDE

- 1. Insert the power plug into the power socket. Make sure the power socket is 110V AC/60Hz.
- 2. Allow the empty thermoelectric cooler to operate for approx. one hour. This will allow the thermoelectric cooler to reach the desired temperature.
- 3. Temperature Control To control the internal temperature, adjust the Temperature adjustor Button and Light button.

The Cooler Light Switch controls the lighting on/off within cooler.

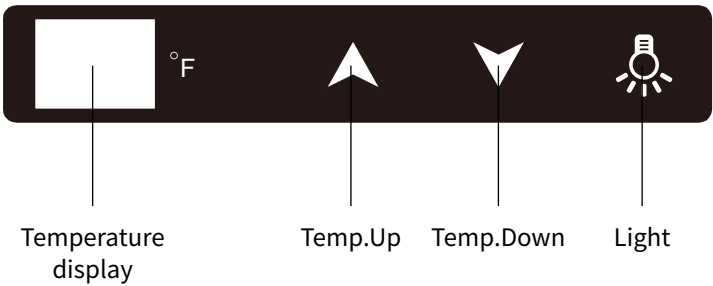

The temperature rang for Thermoelectric cooler is 46°F-66°F.

When the temperature is set on one certain point and the temperature inside reaches this point, the automatic temperature control system begins to work and the cooling system goes into linear temperature keeping status.

When the temperature control is adjusted, the temperature will be balance again in a certain period. The range of the change and the temperature of the environment determine this period.

ENTRETIEN

CLEANING THE APPLIANCE

- Turn off the power, unplug the device and empty the contents including the shelves.
- Wash interior surfaces with warm water and a baking soda solution (2 scoops to $\frac{1}{4}$ of water).
- Wash the shelves with a mild detergent.
- Wring the sponge or cloth well before cleaning the control parts or any electrical part.
- Wash the exterior of the appliance with warm water and mild liquid detergent.
- Rinse well and dry everything with a soft, clean cloth.

POWER OUTAGE

Most power outages recover within a few hours and shouldn't affect your cooler's temperature if you open the door as little as possible. If the power does not recover after a long period of time, take care to protect the contents of the device.

HOLIDAYS

- Short term: Leave the device running if you leave for less than 3 weeks.
- Long term: If the device will not be used for several months, remove all content and turn off the device. Thoroughly clean and dry the interior of the cabinet. To prevent mildew, leave the door partially open, blocking it if necessary.

MOVING THE DEVICE

- Empty the device.
- Screw in the adjustable feet as far as possible.
- Close the door with adhesive tape.
- Take care to secure all loose parts (shelves) inside the unit with adhesive tape.
- Make sure that the device is positioned vertically during transport. Protect the exterior with a blanket, drop cloth, or the like.

ENERGY EFFICIENT TIPS

The appliance should be placed in the coolest part of the room, away from appliances that give off heat and direct sunlight.

WARRANTY

Customer Service Email: **service@iseasy.com**

Website: **www.iseasy.com**

Call: **+1 (888) 907-5060 (Toll Free, 9 AM-5 PM, Mon-Fri)**

Please send relevant videos and pictures to our email address, and attach your order number. After confirming the problem, we will definitely give you a satisfactory solution.

TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTIONS
The device does not work.	Not plugged in. Circuit breaker tripped or fuse blown.	Ensure the cooler is plugged in and the power socket is turned on. Replace the broken fuse in your meter box.
The device is not cold enough.	Check the temperature setting. An outdoor environment may require a higher setting. The door is opened too often. The door is not completely closed. Door gasket not sealing properly.	Keep the cooler away from sunshine or other heat sources. Place the thermoelectric cooler in good ventilation and keep any items away from the fans. Close the door tightly and do not open the door too frequently or for a long period of time.
The light does not turn on.	Not plugged in. Circuit breaker tripped or fuse blown. The bulb is burnt out.	
Vibes.	Be sure to check the leveling of the device.	
The device seems to make too much noise.	The device is not leveled.	
The door does not close properly.	The device is not leveled. The door was knocked over and not installed correctly. The gasket is dirty. The shelves are not well positioned.	