 


Thanks for choosing our goods. Before Install the goods must read carefully on our install manual or check our install video on our shop. If still have install problem or other things can contact our after-sales team

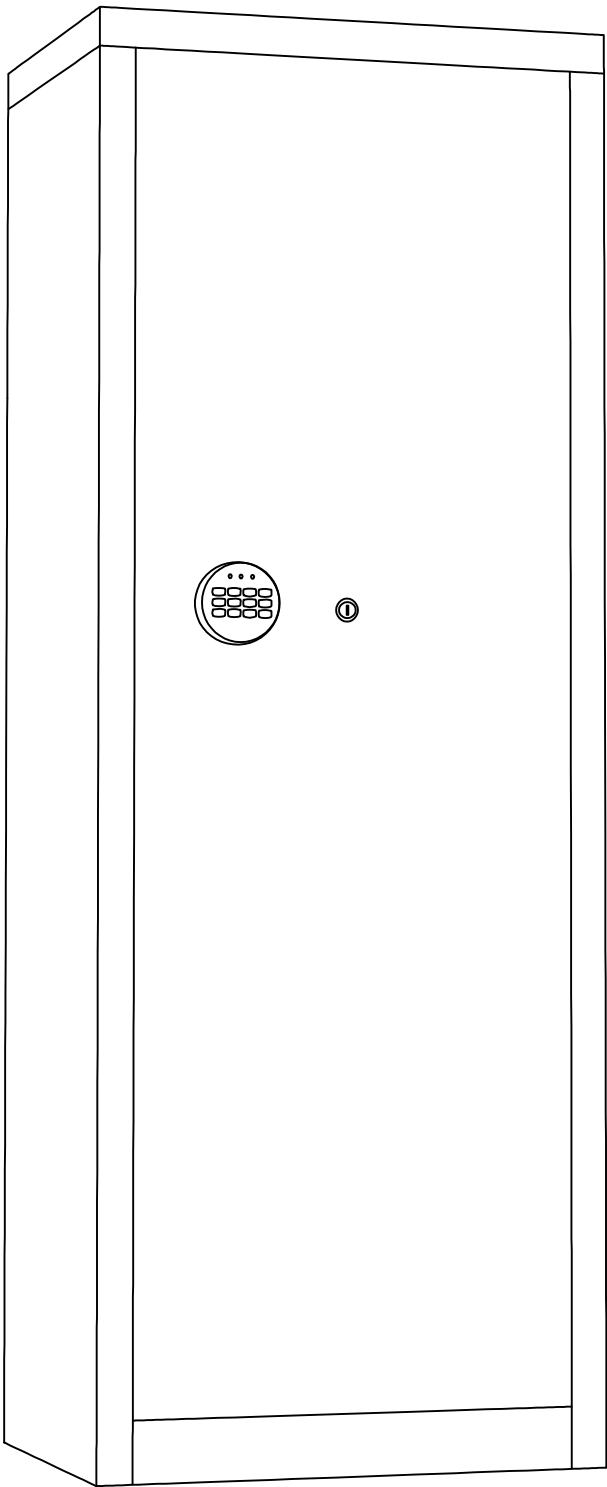




Please scan the QR code to check the assemble video

Before you start, here are a few quick pointers:






The installation requires two people. so call a friend to join the fun!

For more stability, it's best to anchor the cabinet to the wall.



In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer

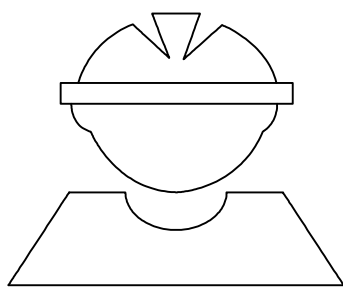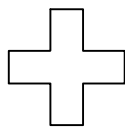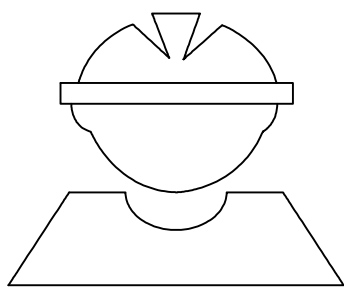

SUGGEST
2 PEOPLE

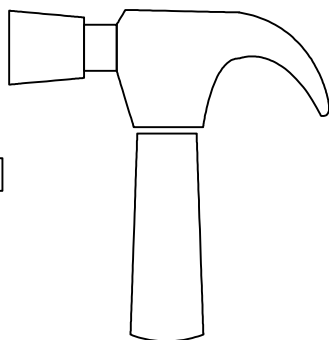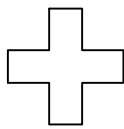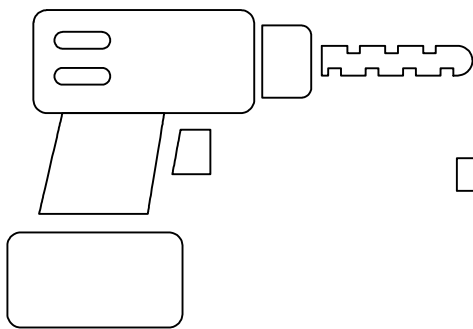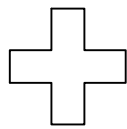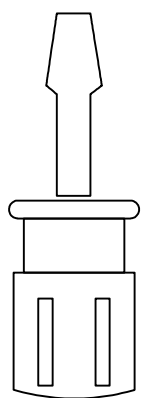

TOOLS
REQUIRED

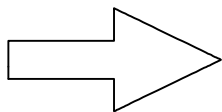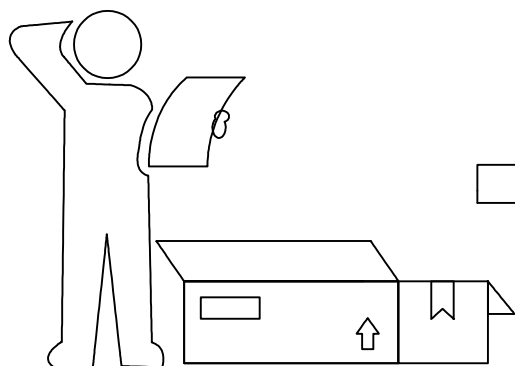

E-mail

TEL

CONTACT US

WE ARE
GLAD TO
HELP

THANK YOU FOR CHOOSING US!

Your new Gun cabinets has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.

But first things first, we need to install it!


When we say we, we mean we're going to guide you, step by step. We created this instructions manual so that you won't feel overwhelmed and get your new cabinet up and ready to use in no time! We also know that if sometimes things just don't seem to fit, so don't hesitate to drop us a line at support@greatmeetcabinet.com if you have questions or need help!

Anyway, this gun cabinet can't wait to be put into use, so let's assemble it!


MISSING A PART?

DON'T WORRY, WE GOT YOUR BACK!


Compare the sketch on the next page with your package. Are all the pieces there? However, sometimes errors happen, so if anything is missing just send us an email and we will make sure to fix it!

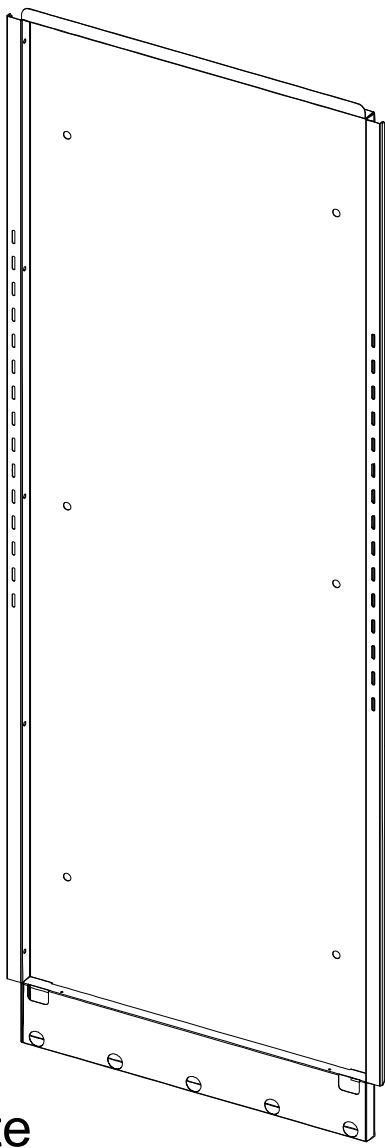


A ×1
Back Plate

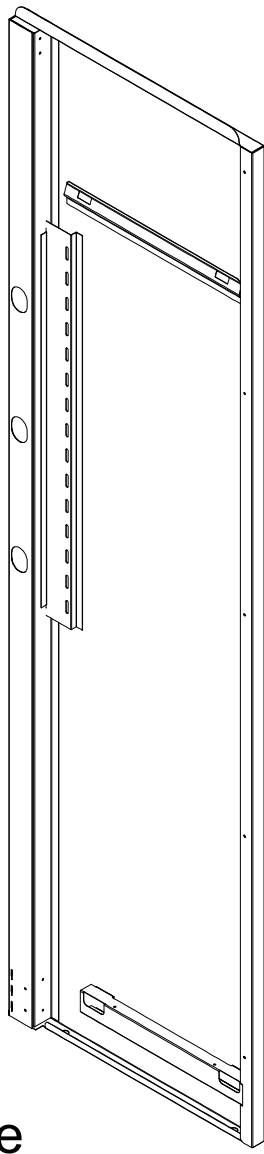


B ×1
Left Side Plate

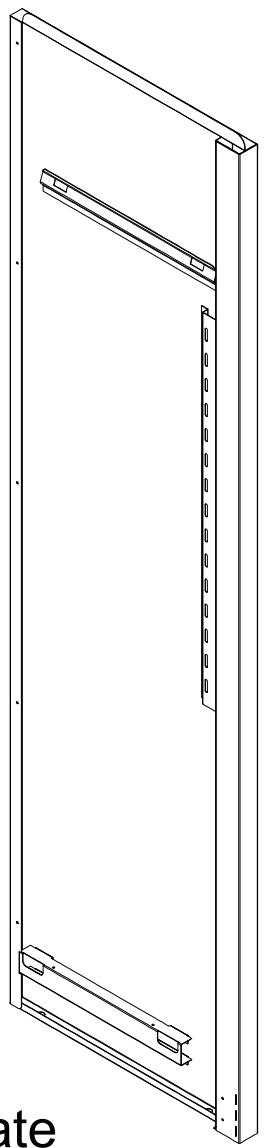


C ×1
Right Side Plate

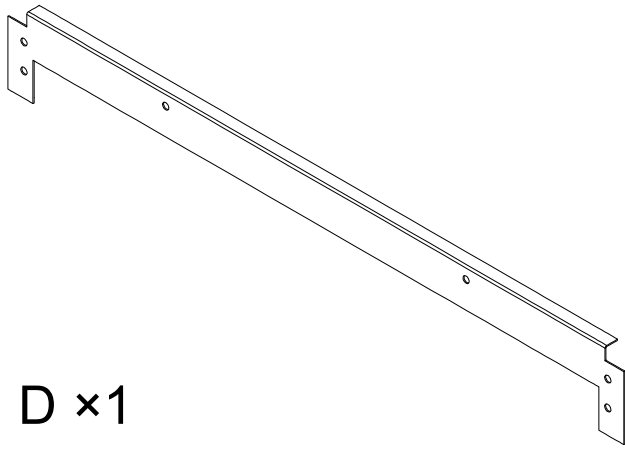


D ×1
Pull Rod

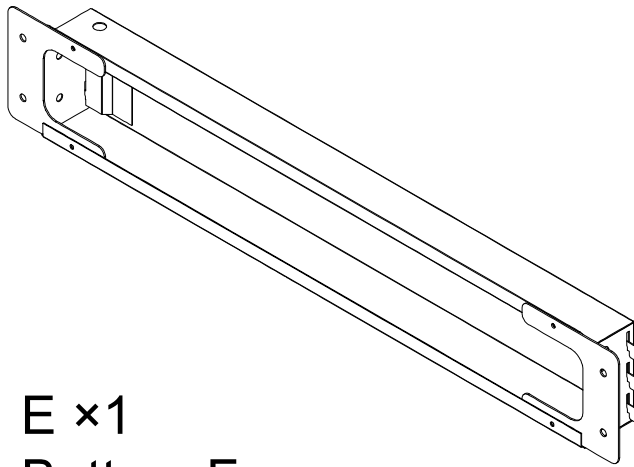


E ×1
Bottom Frame

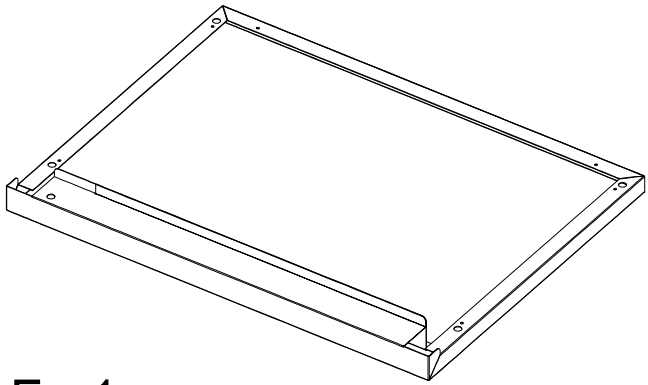


F ×1
Top Plate

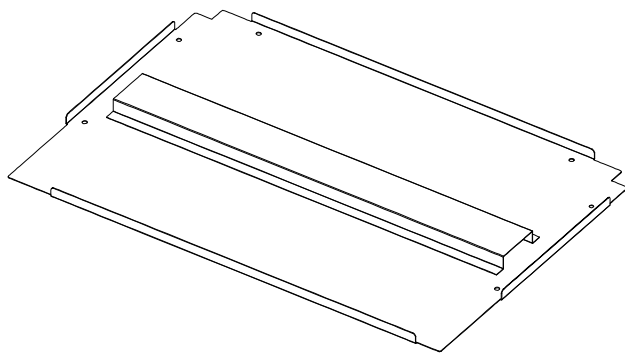


G ×1
Bottom Plate

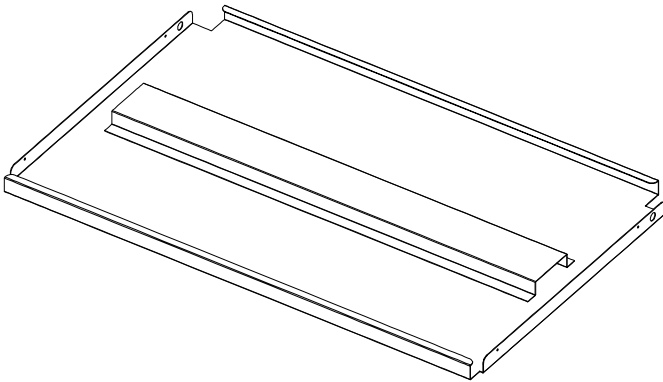


H ×1
Shelf

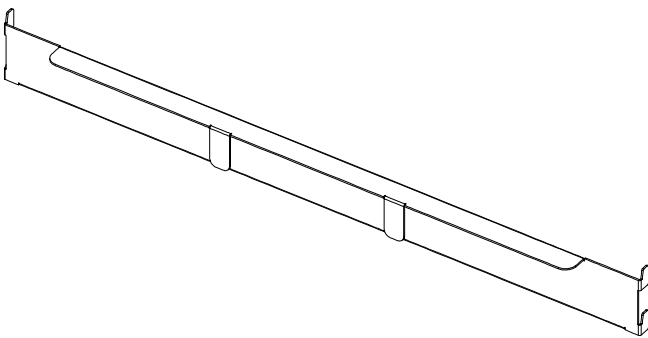


I ×1
Back Gun-Stock Shelf

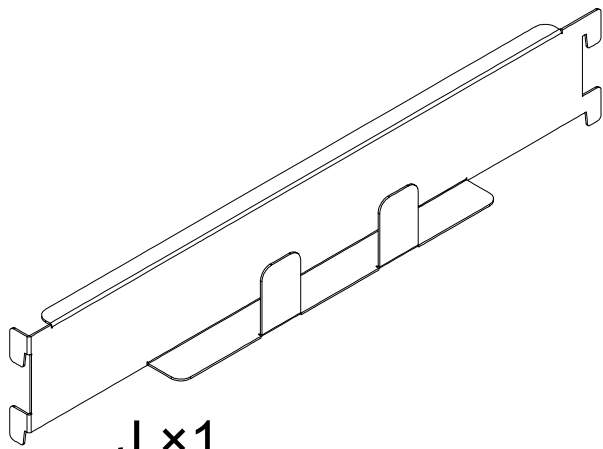










J ×1
Left Gun-Stock Shelf

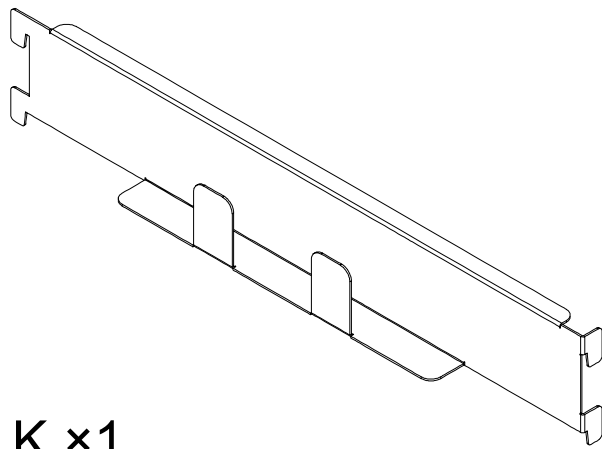



K ×1
Right Gun-Stock Shelf

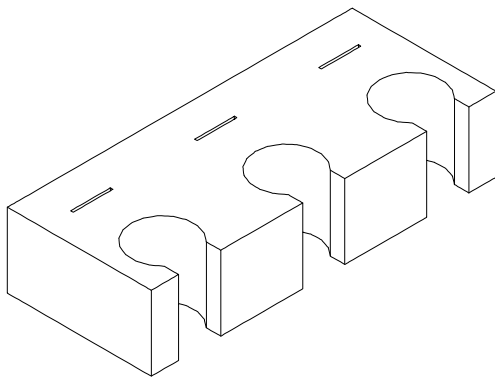

L ×2
Side Gun Stock

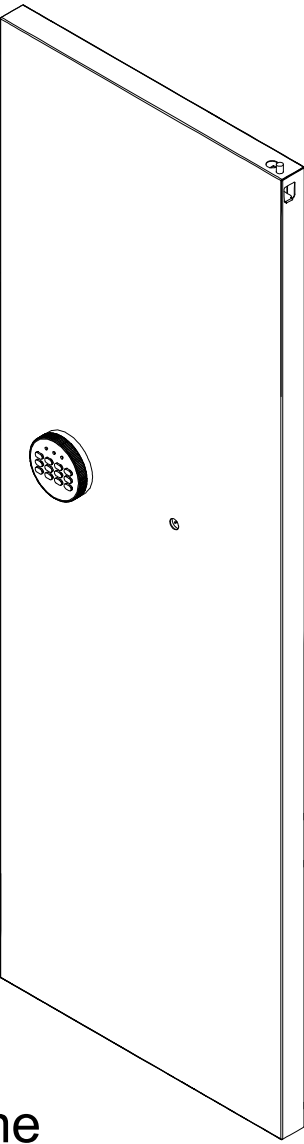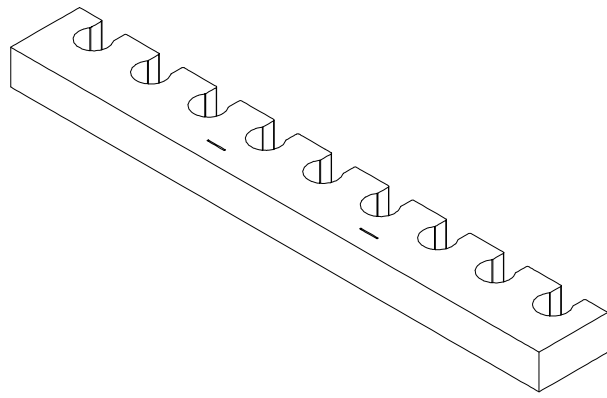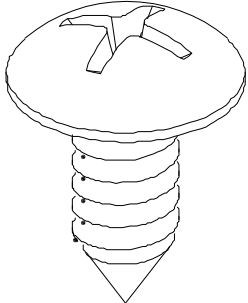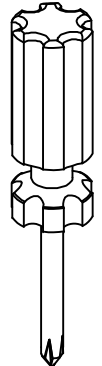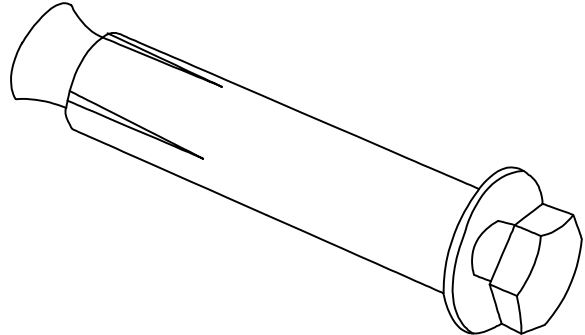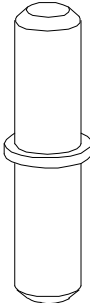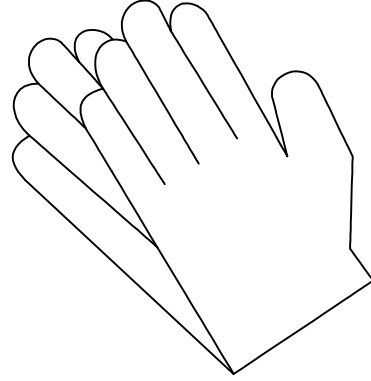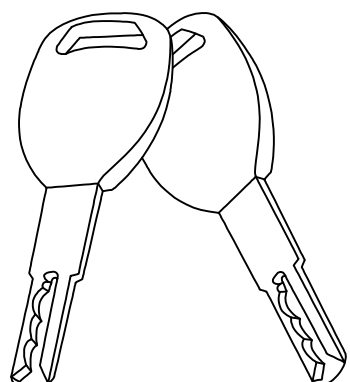
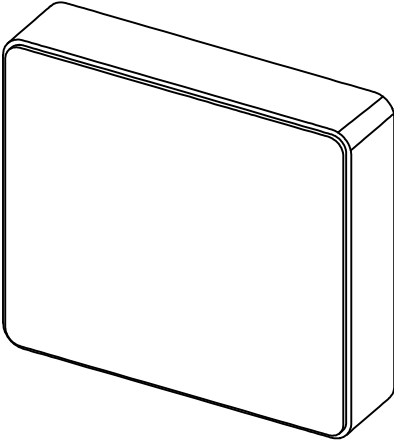
 N ×1 Door Frame	 M ×1 Back Gun Stock	 O ×36 Right Side Plate
 R ×1 Screwdriver	 P ×6 Expansion Bolt	 Q ×1 Right Side Plate
 S ×1 Glove	 T ×1 Emergency Key	 U ×1 External Power Box

1

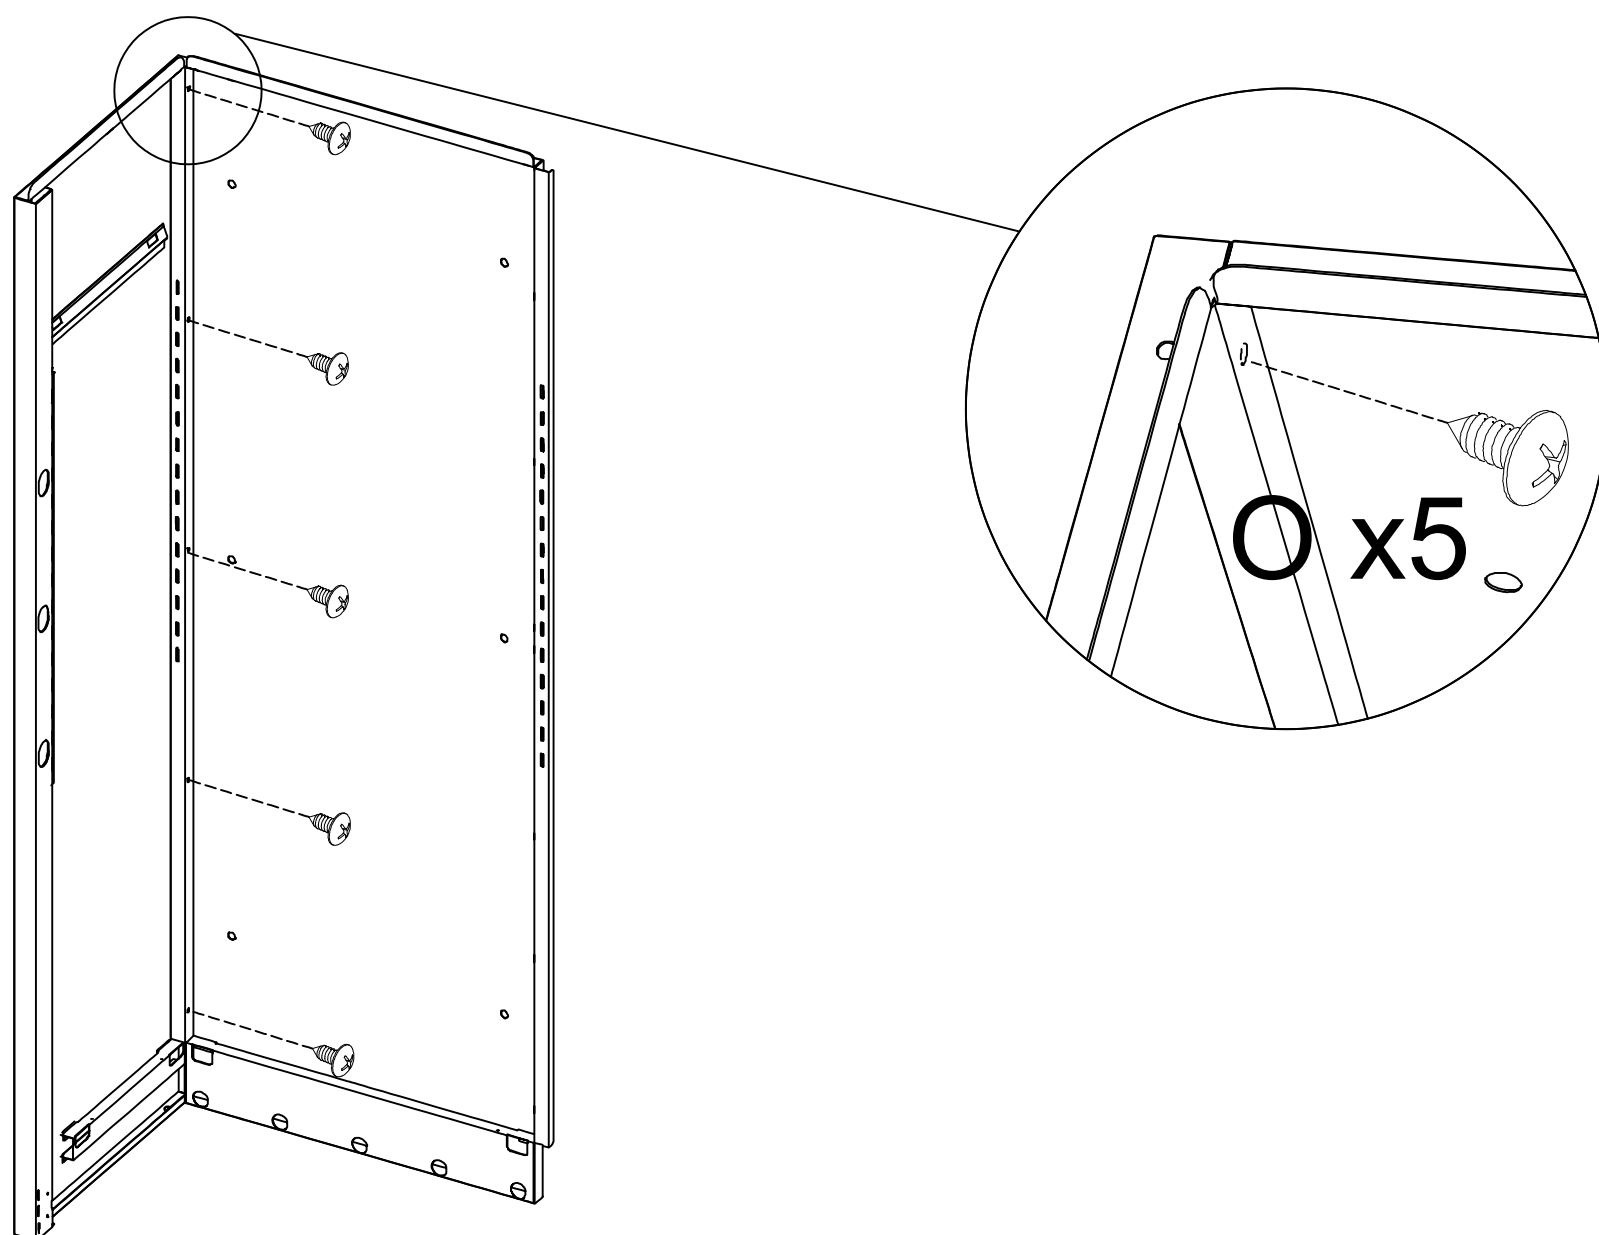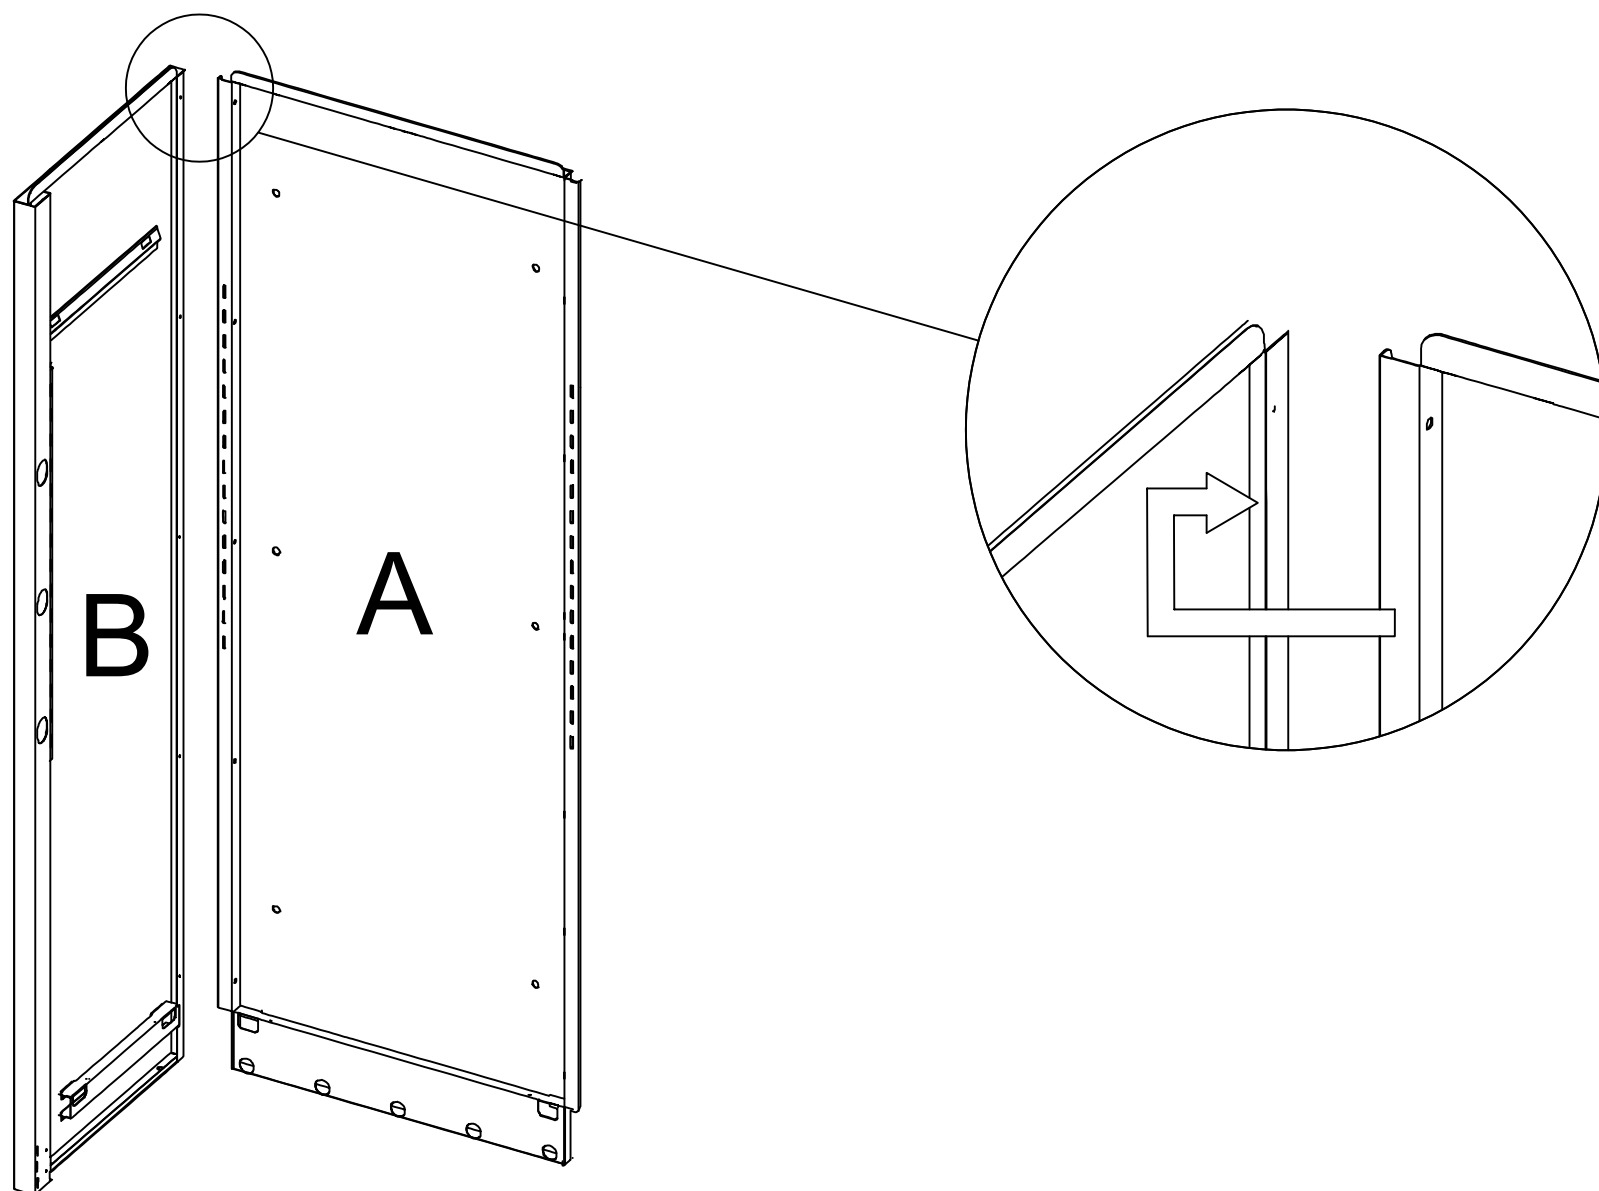





1. Assemble A and B, secure with screw O.

  2

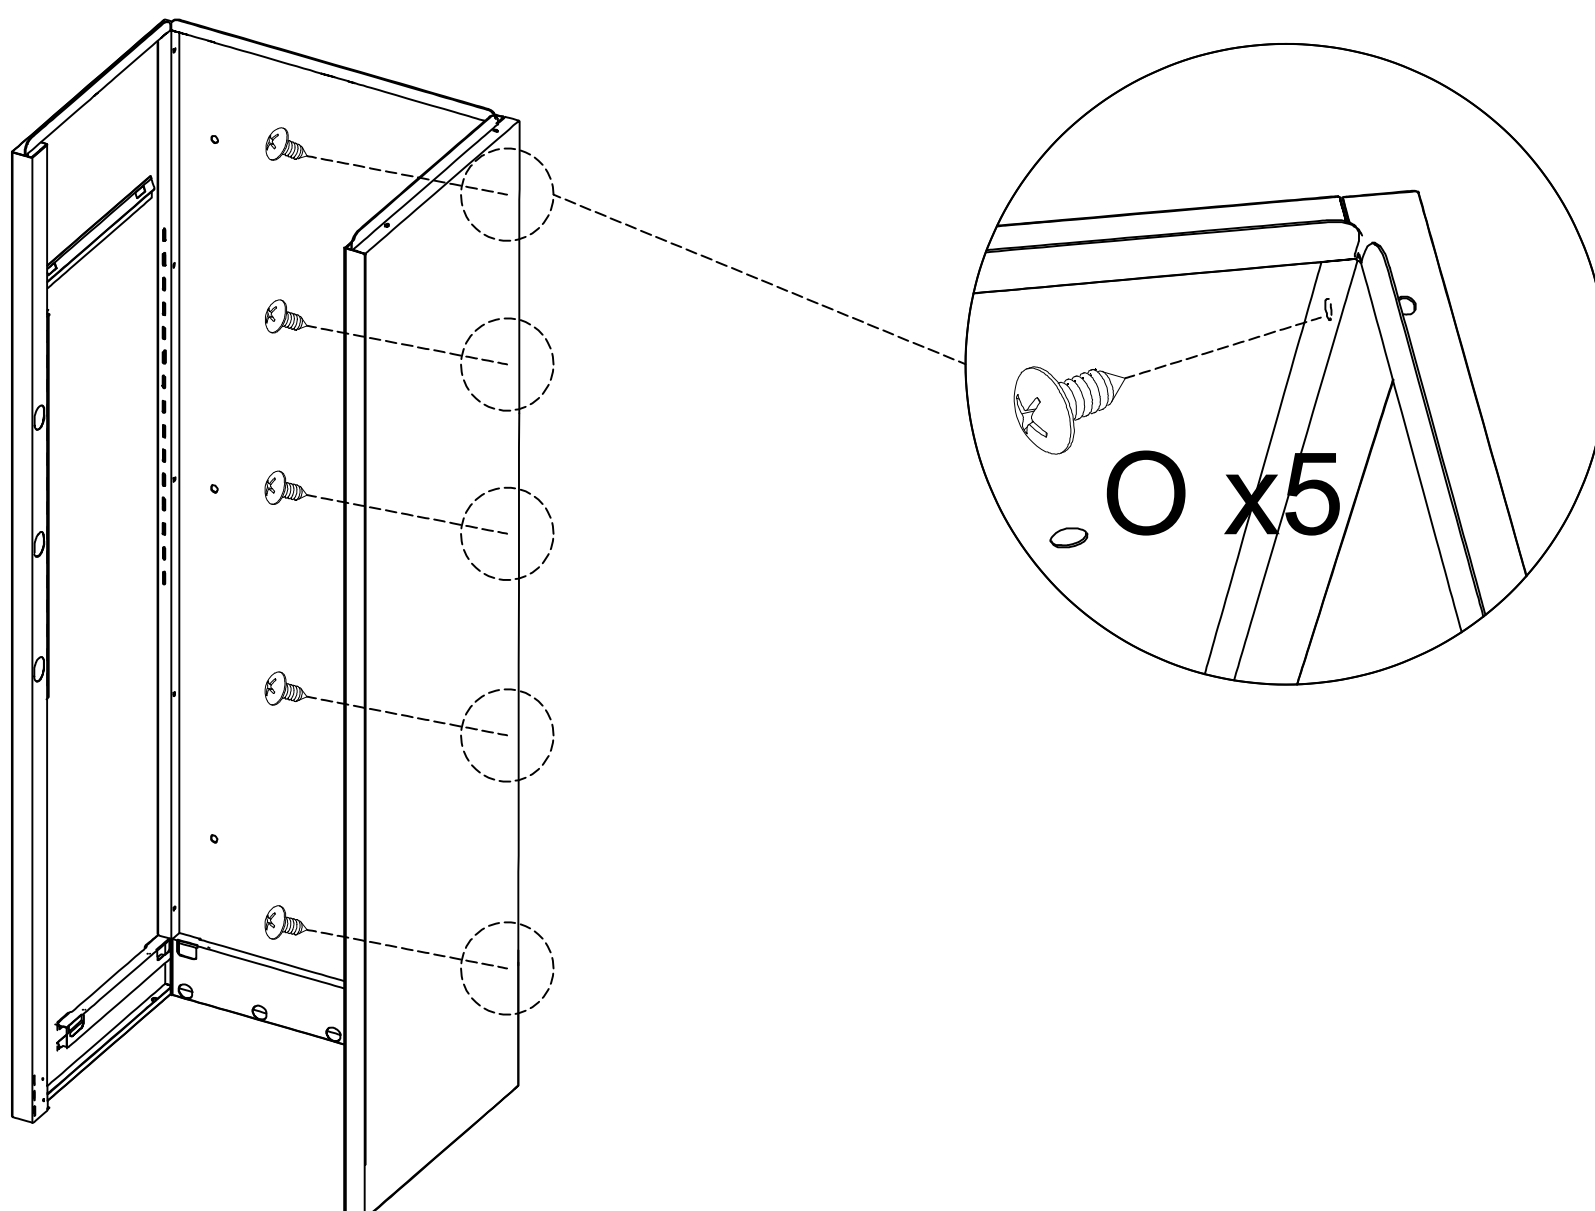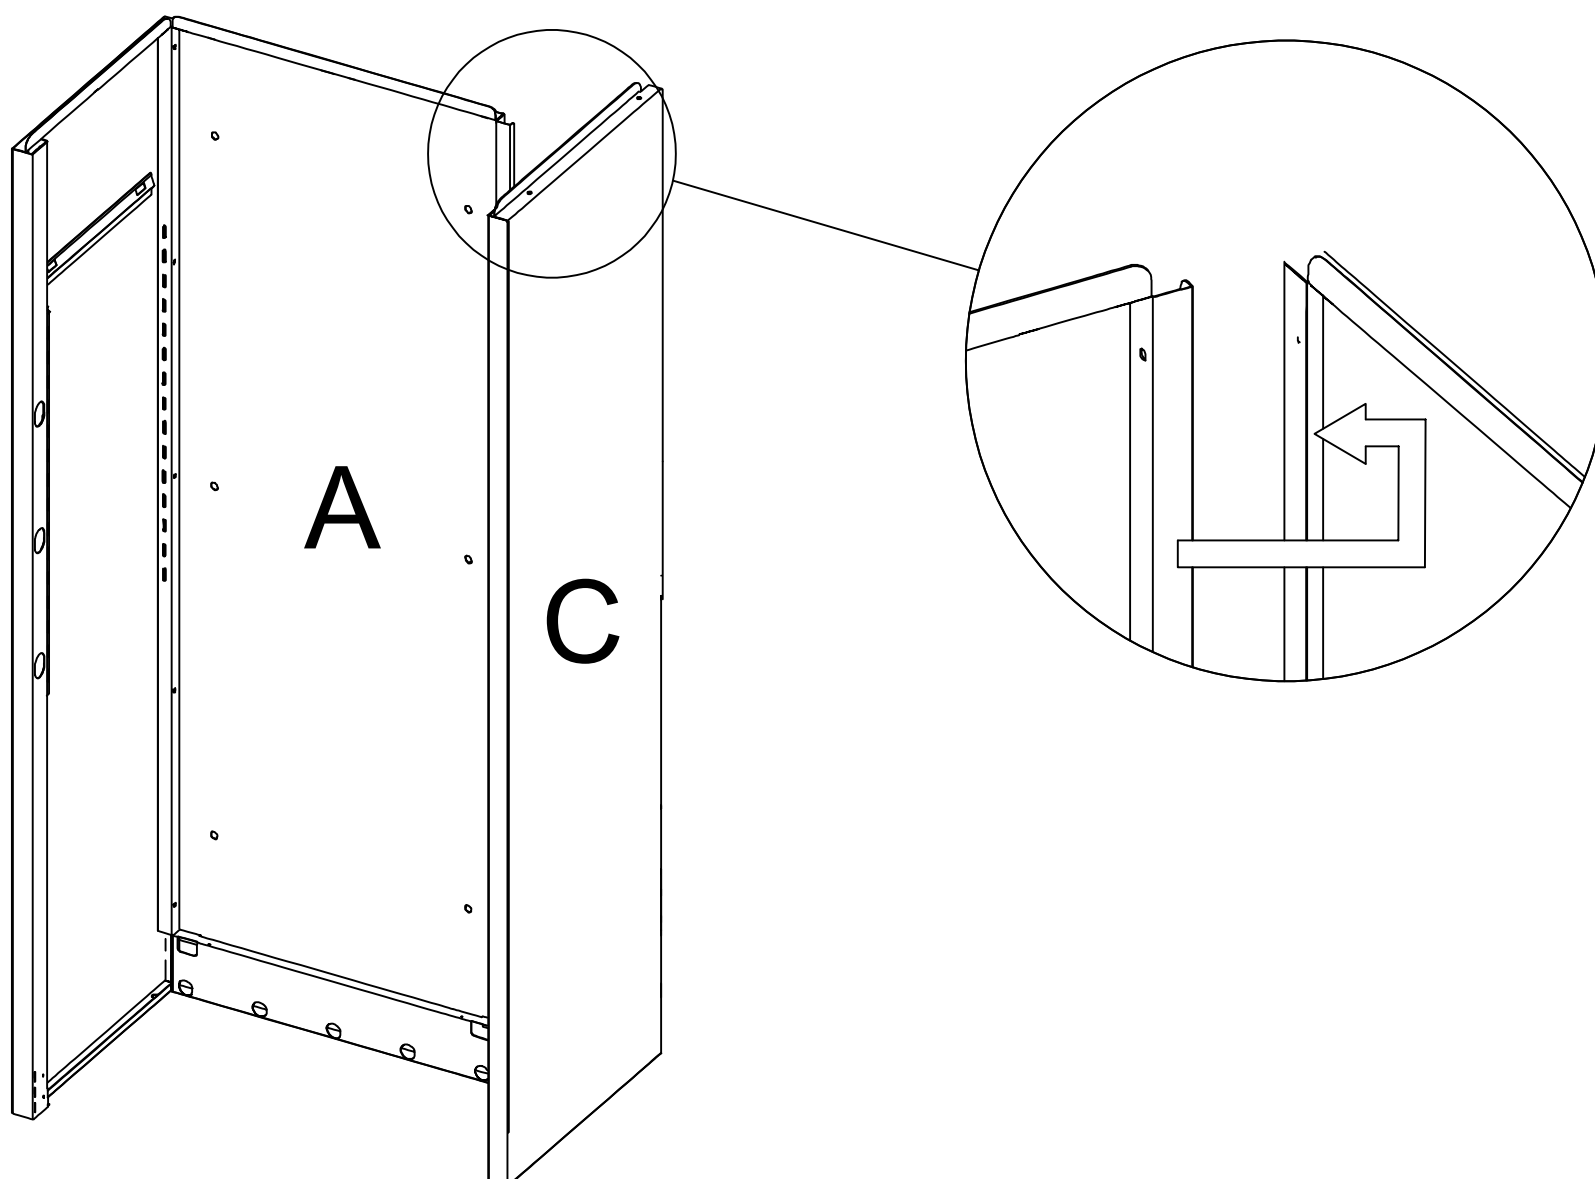

2. Assemble A and C, secure with screw O.





3

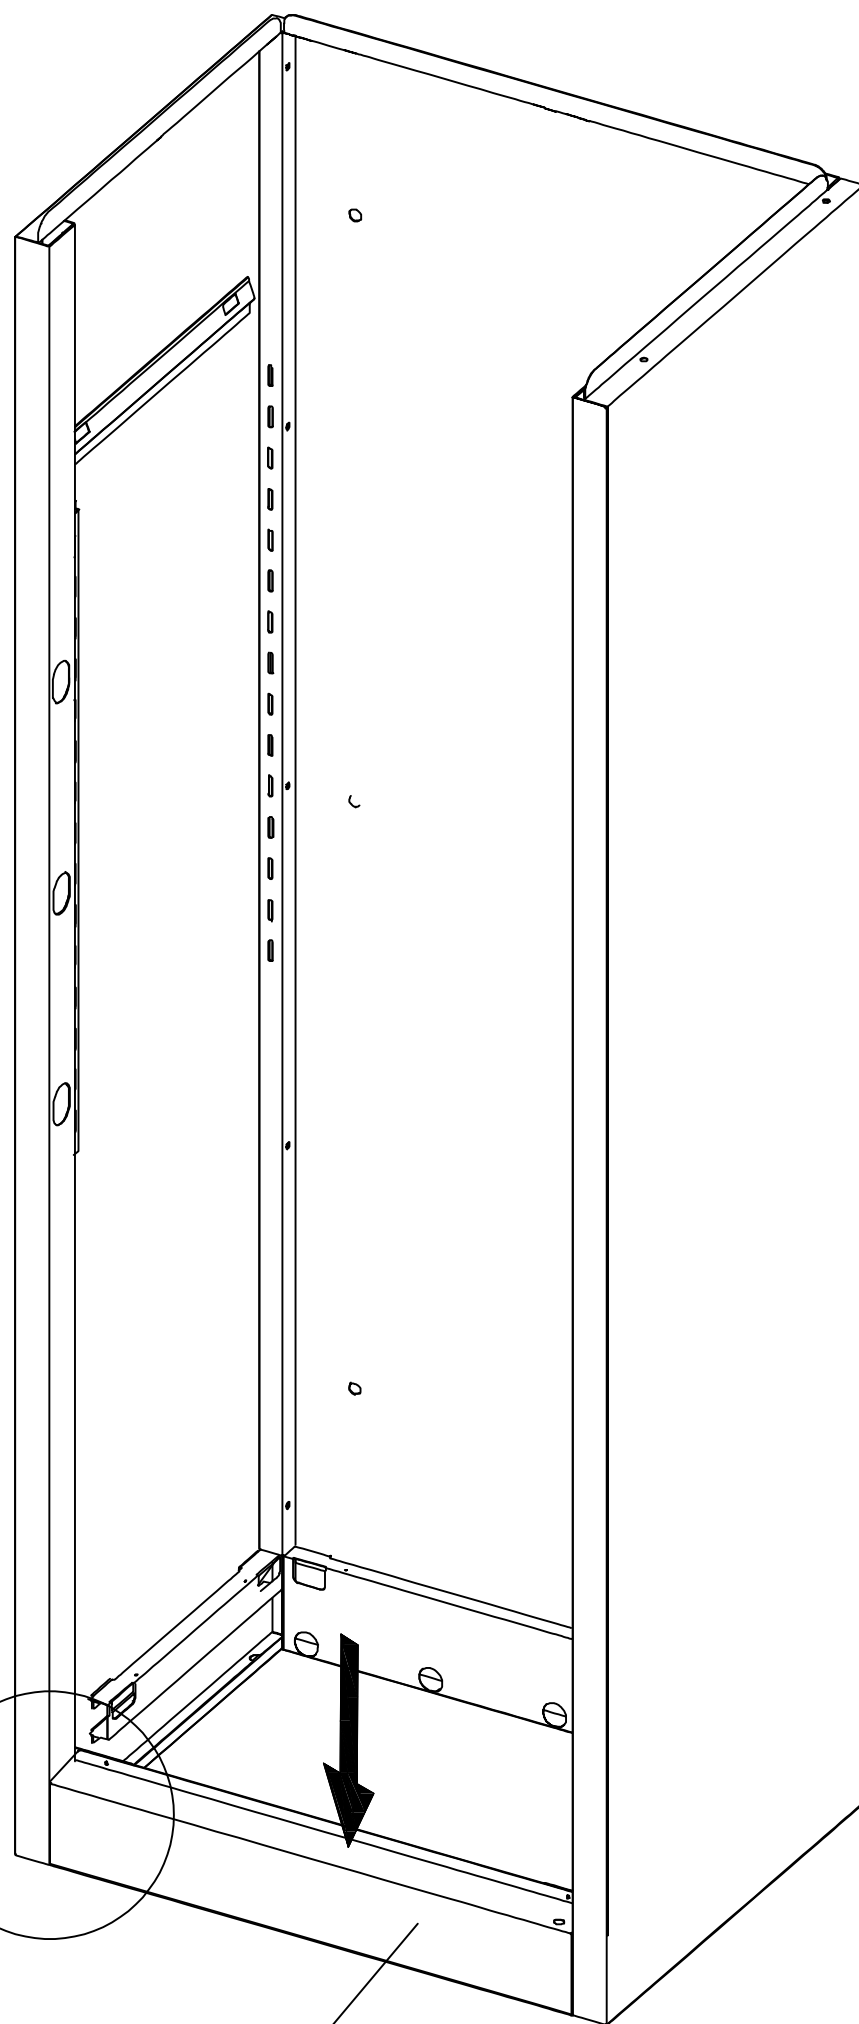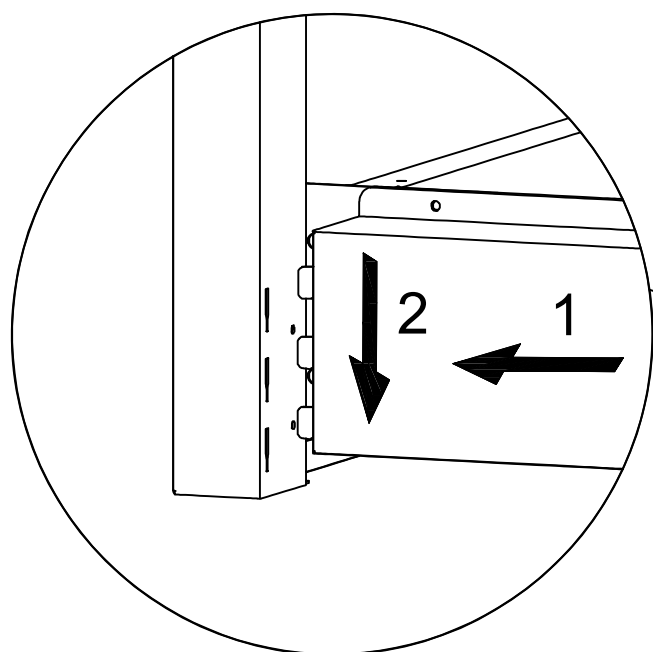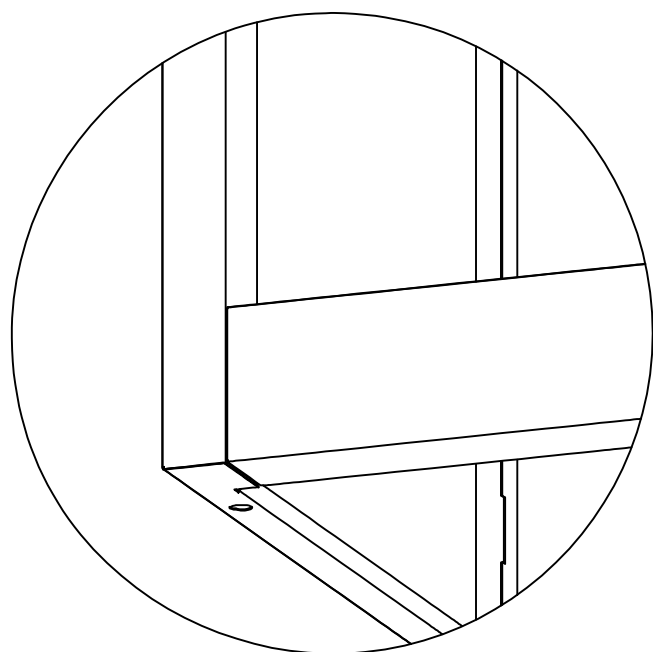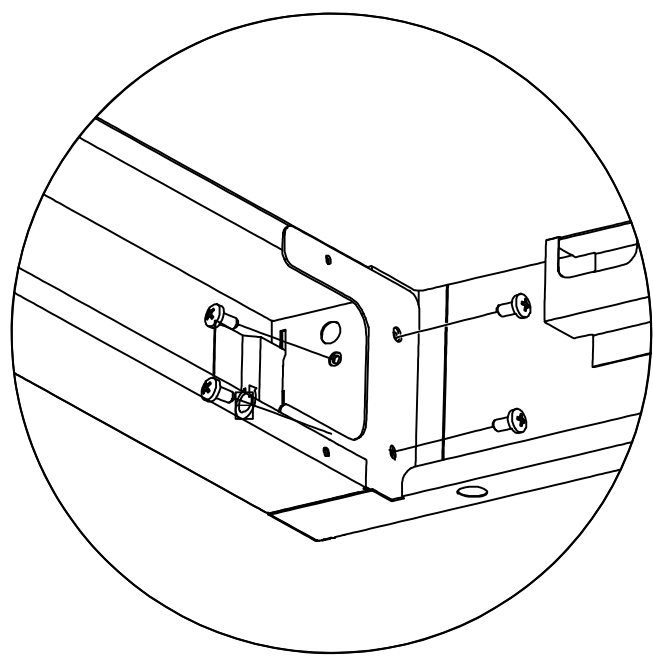

E


3. Install E, secure with screw O.

4

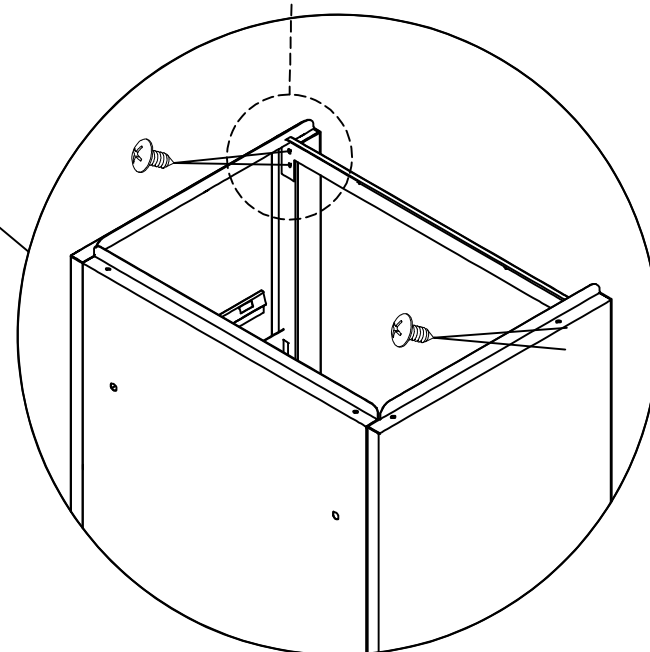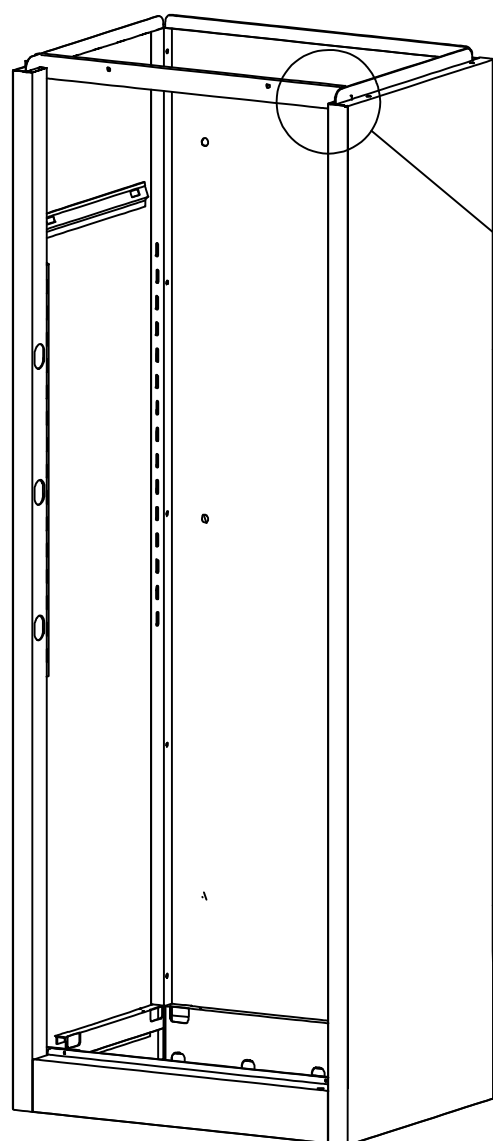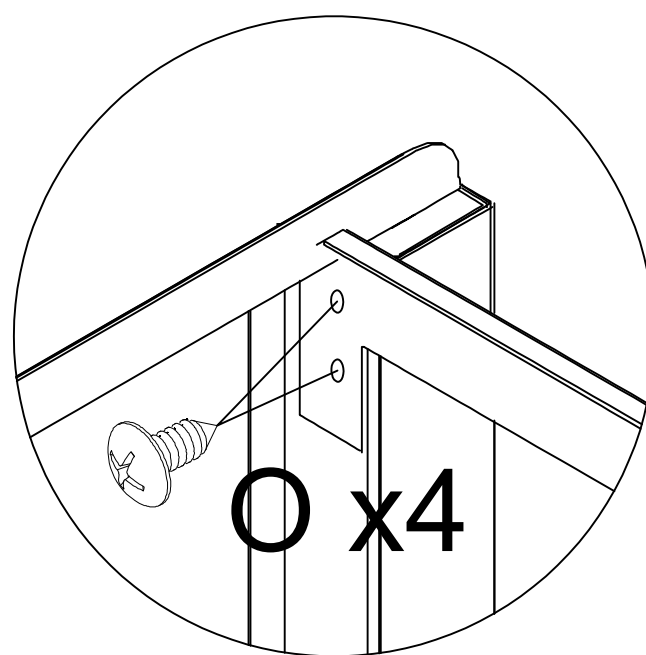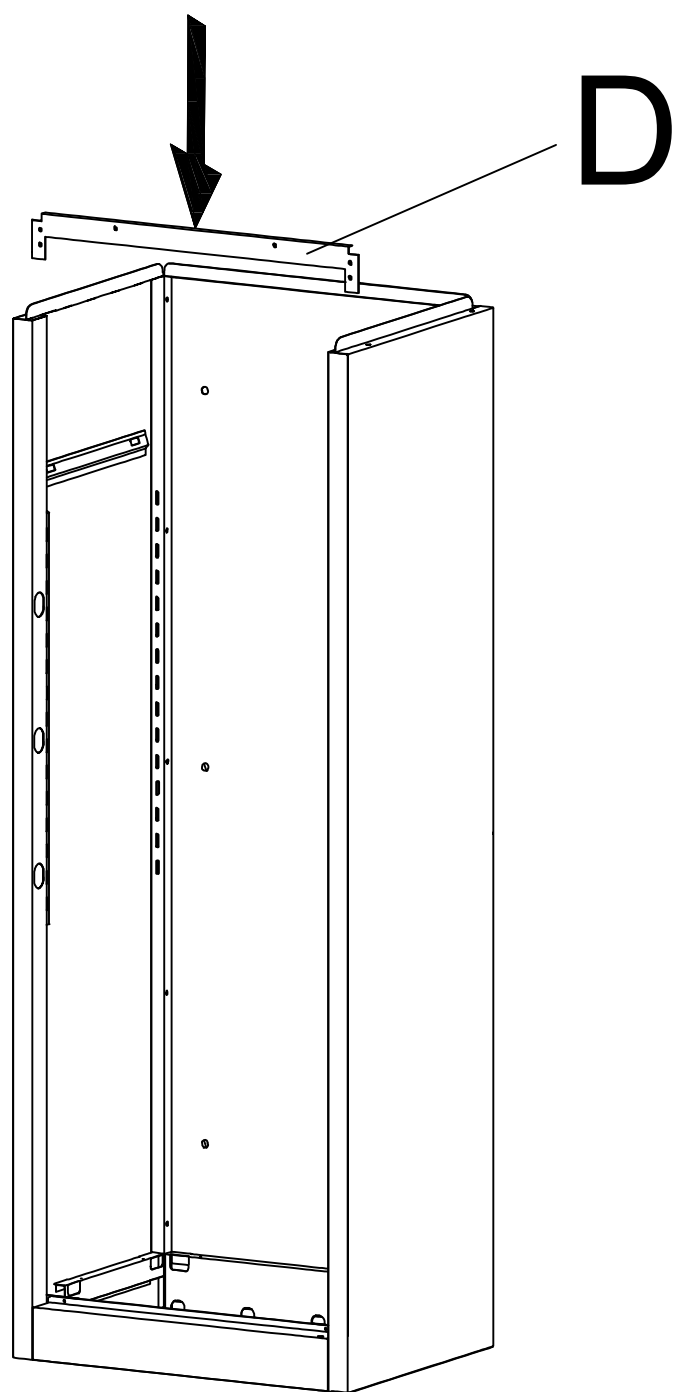


4. Install D, secure with screw O.

5







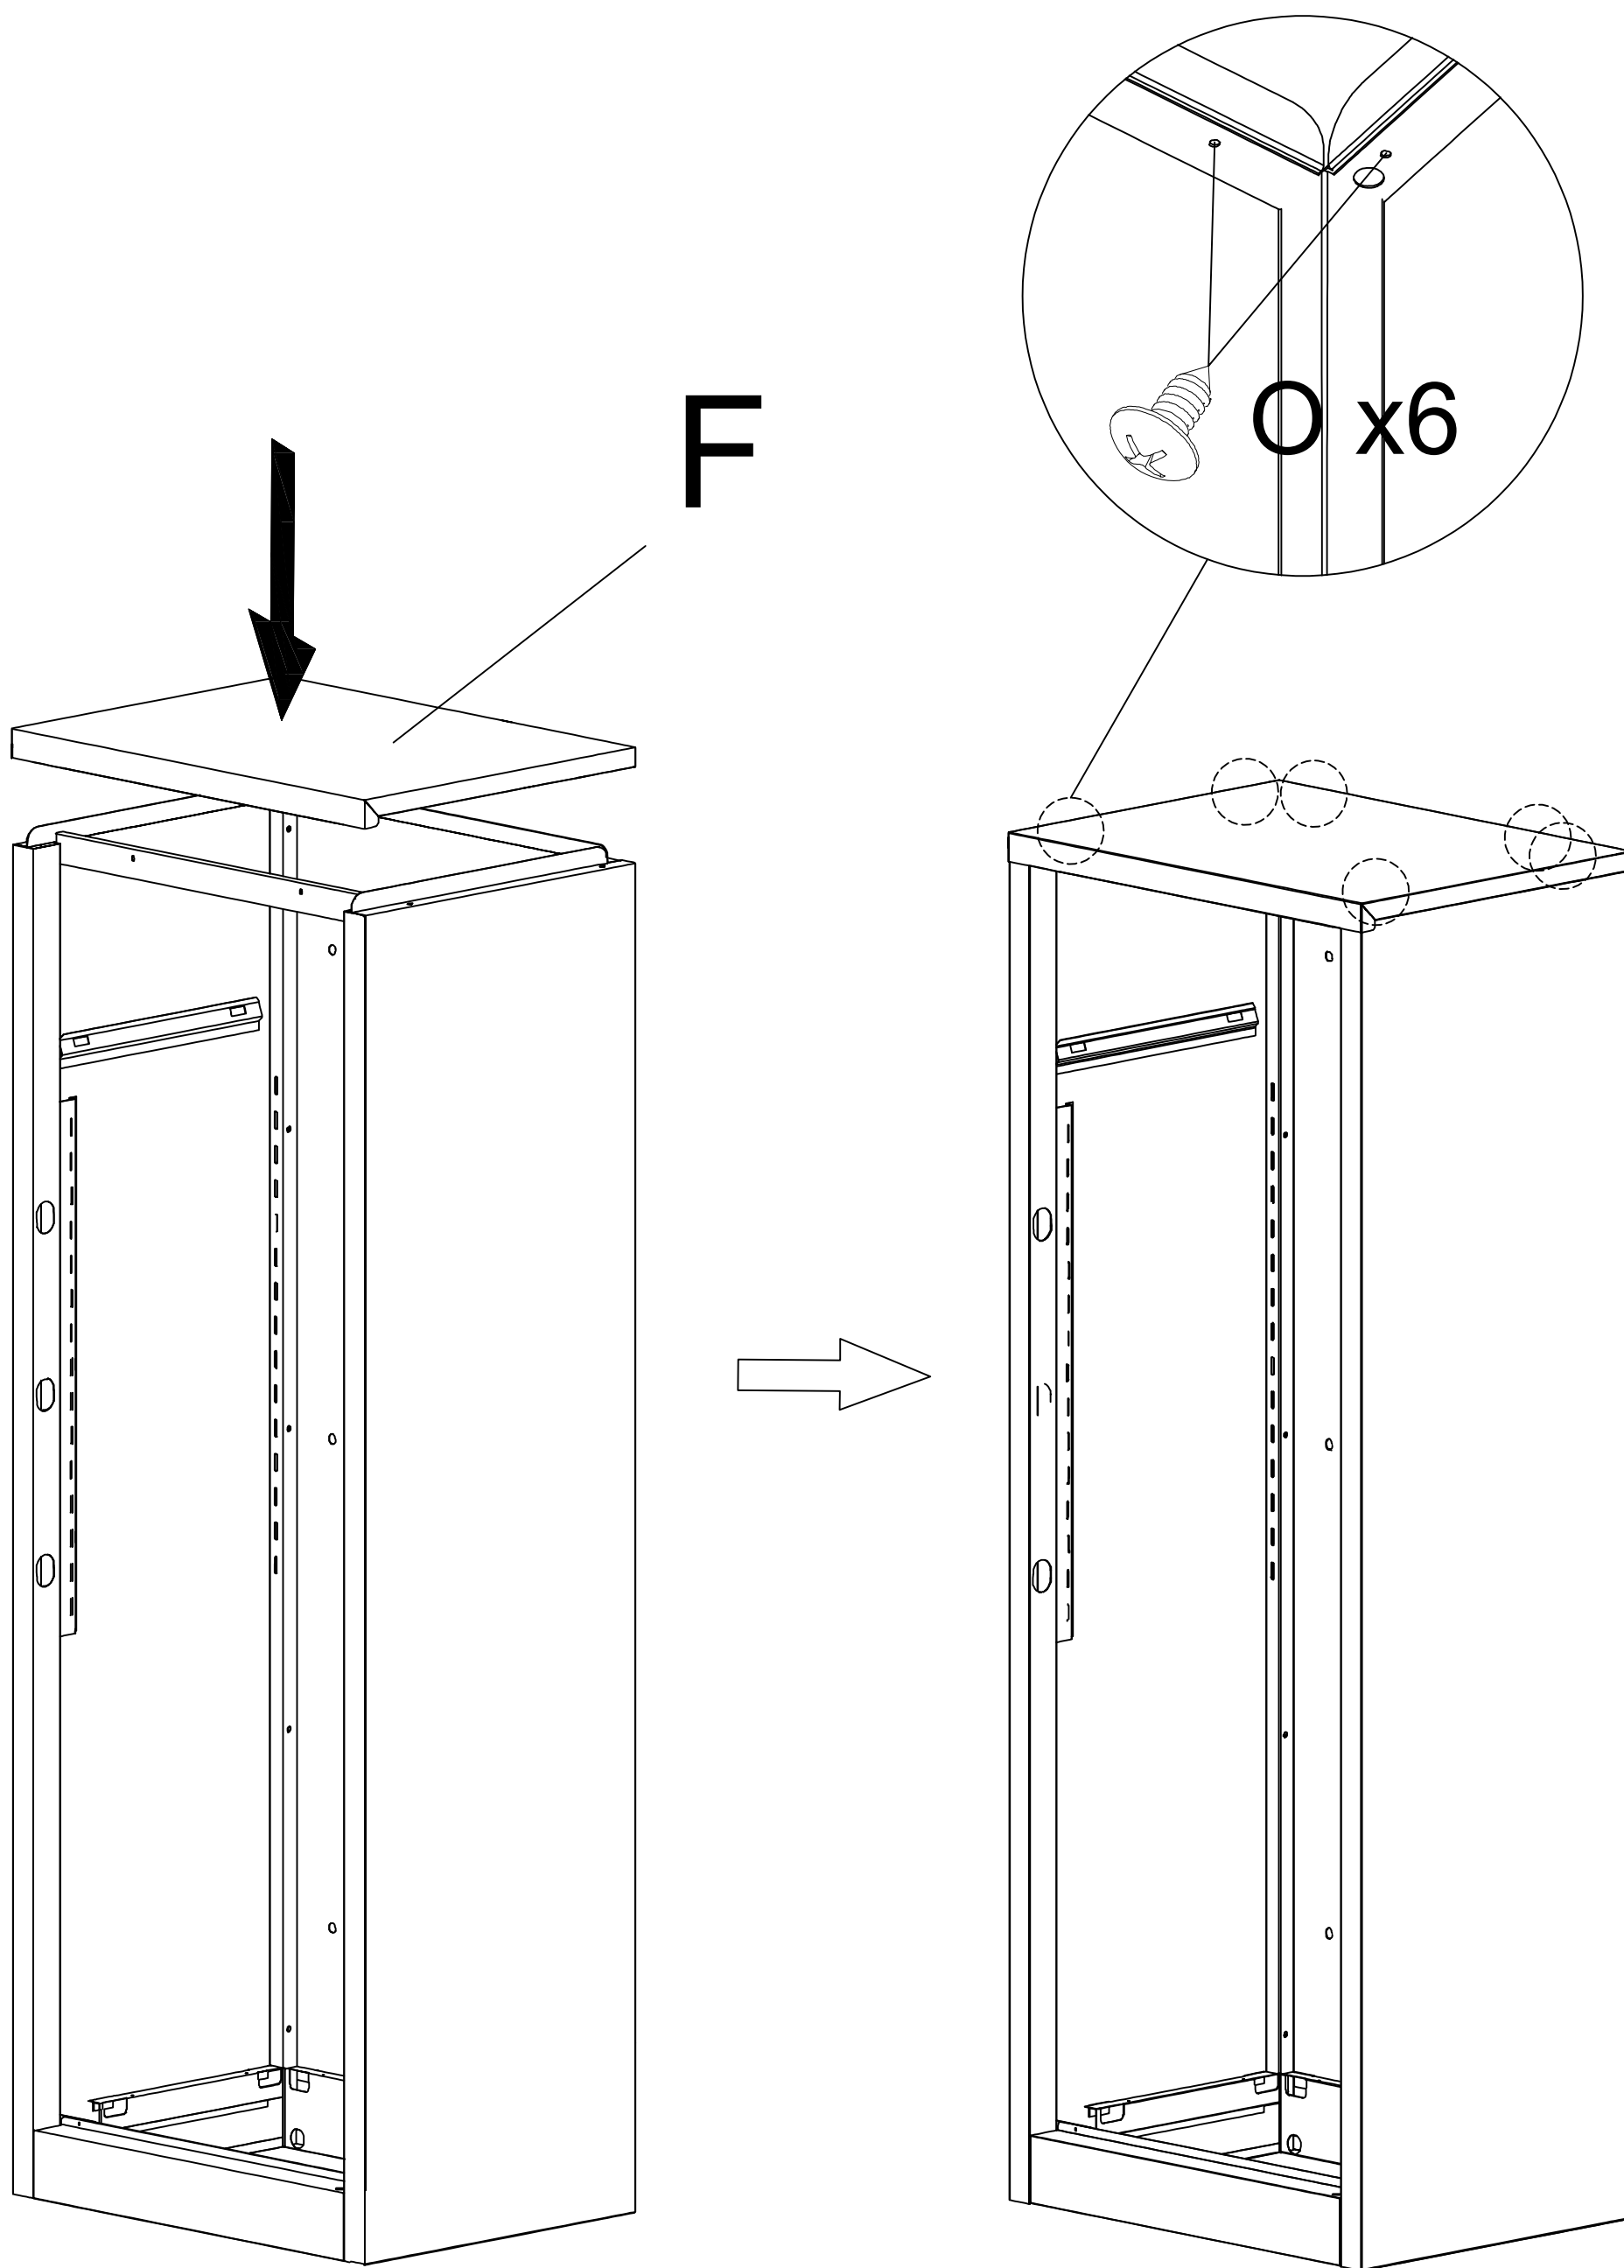


5. Install F, secure with screw O.

6

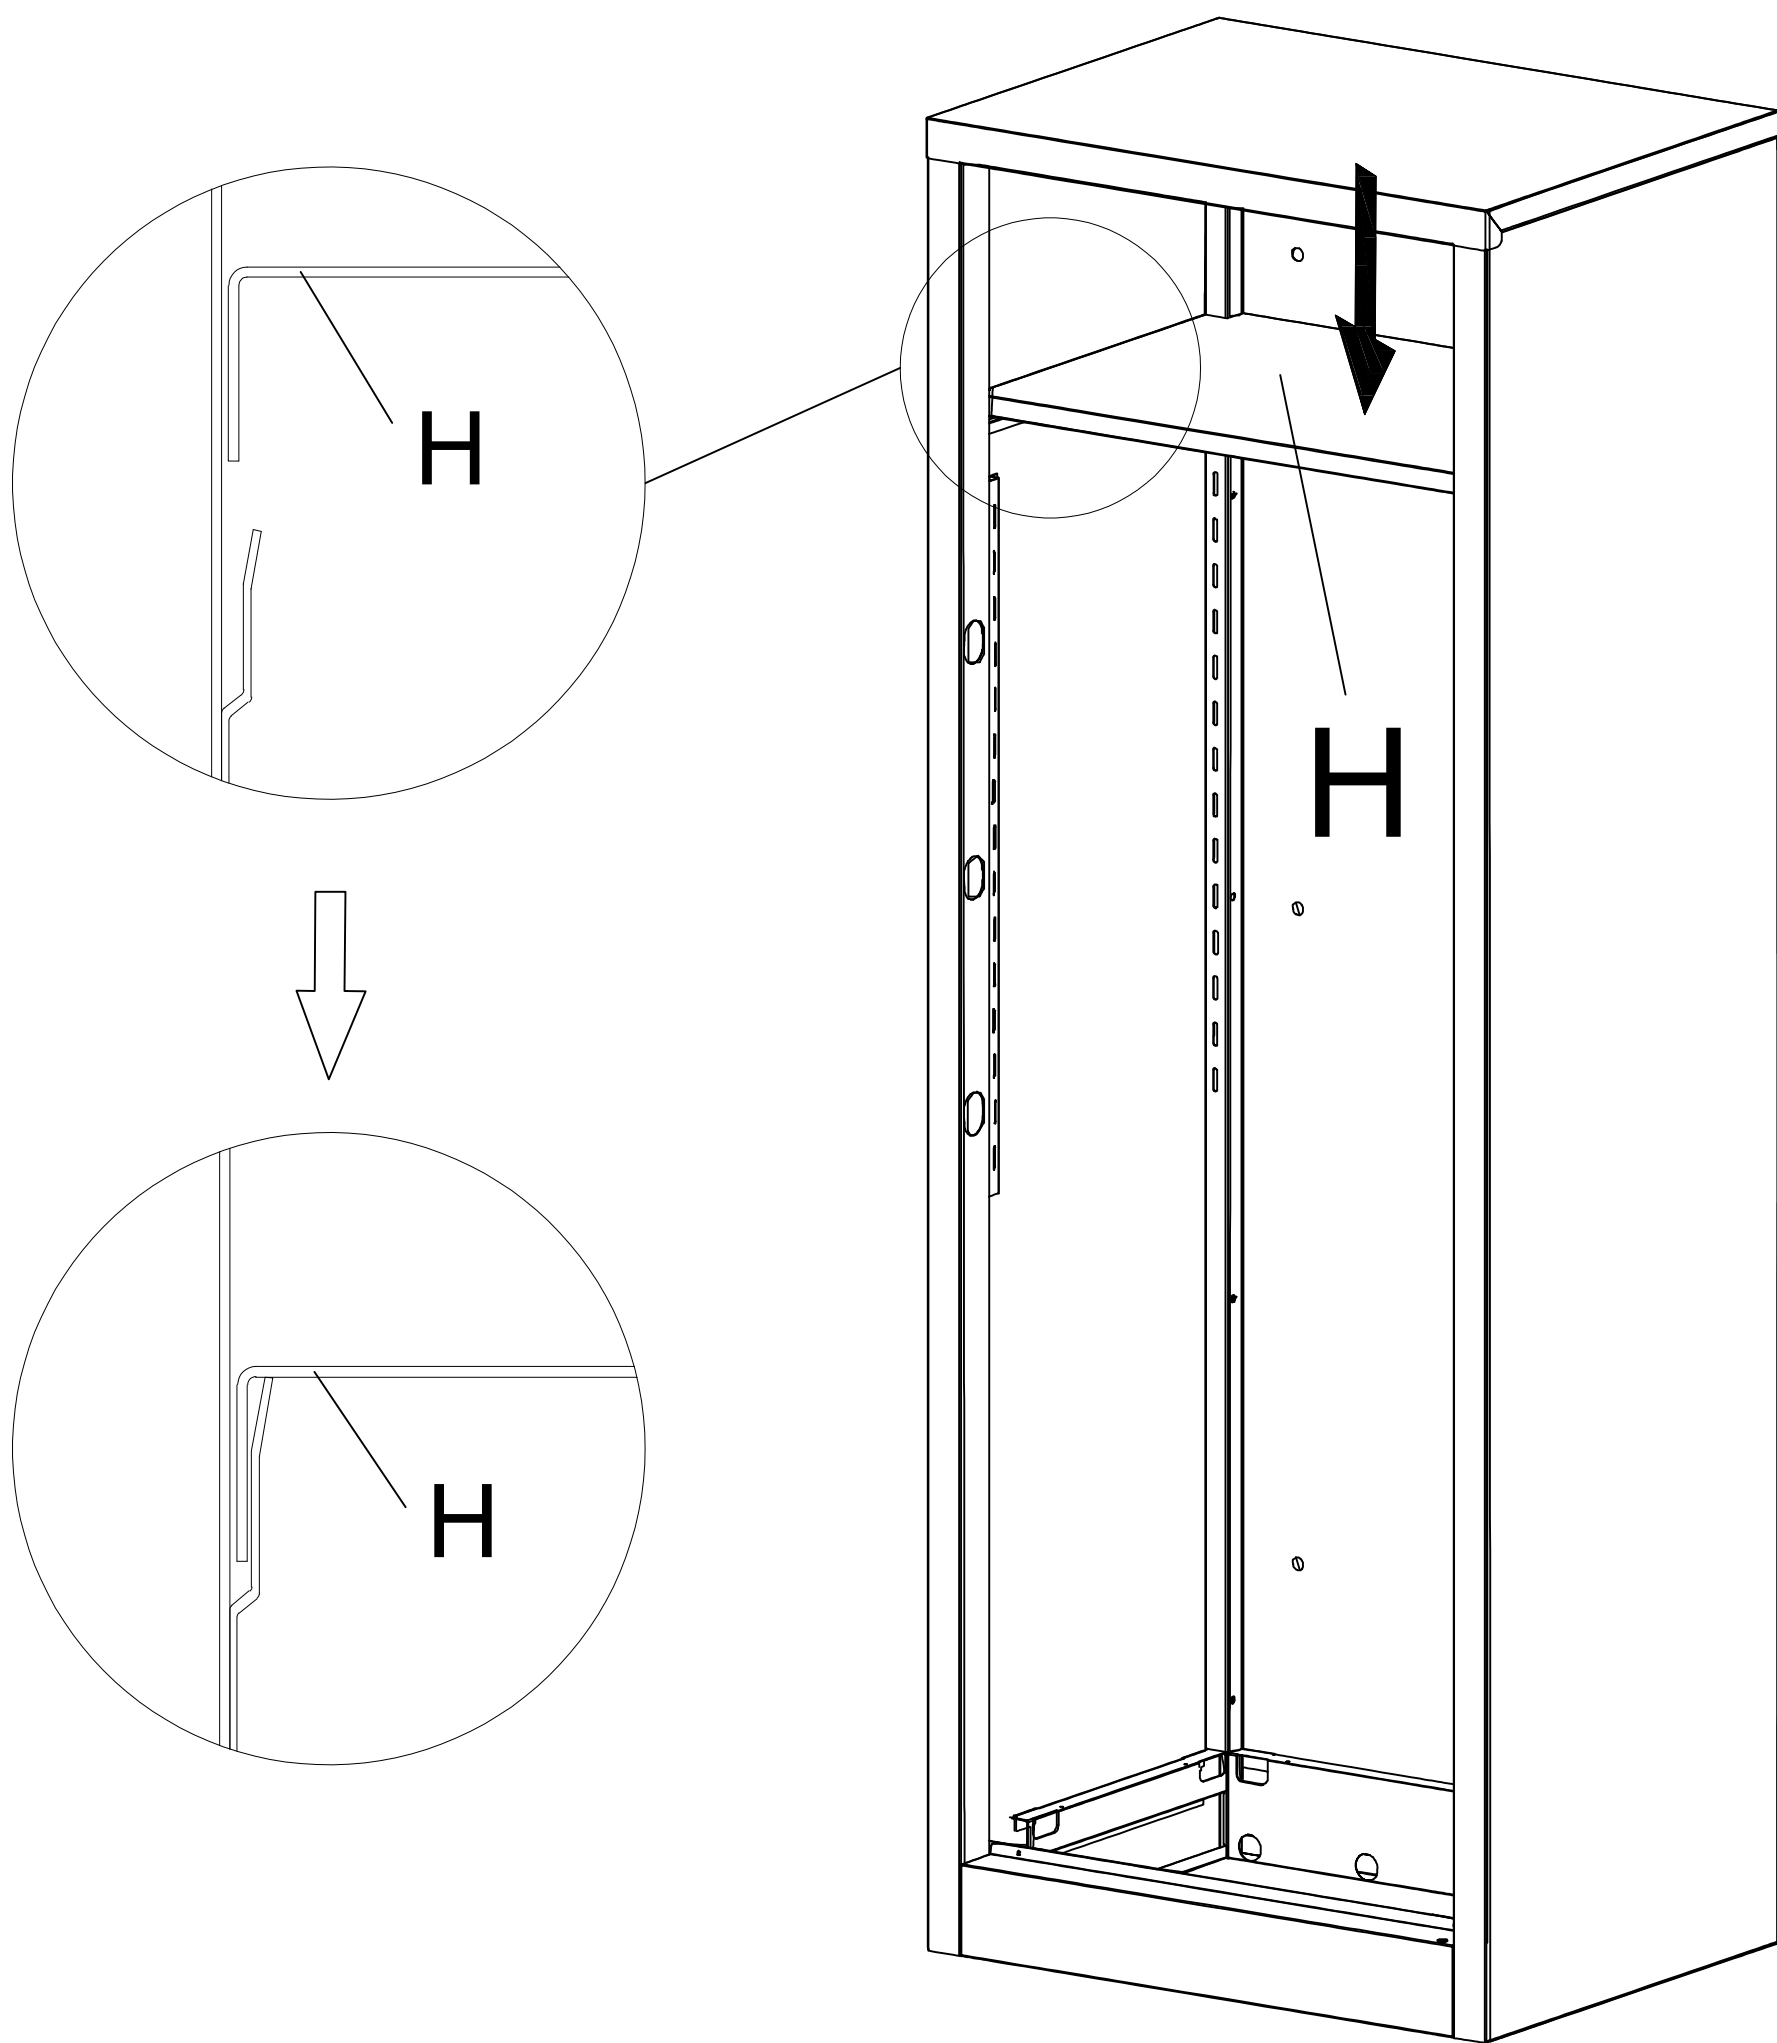


7

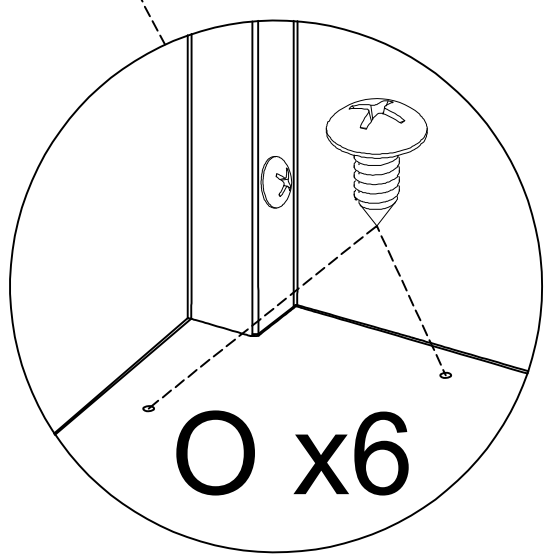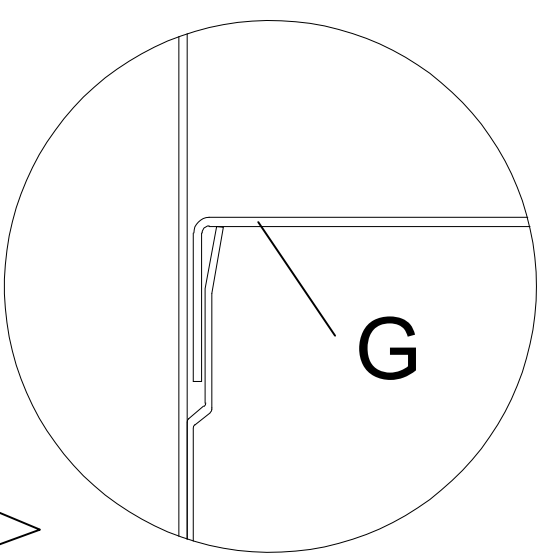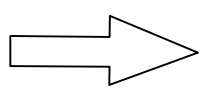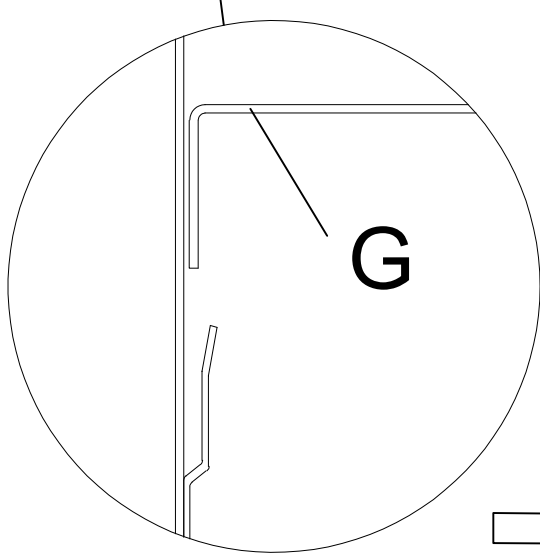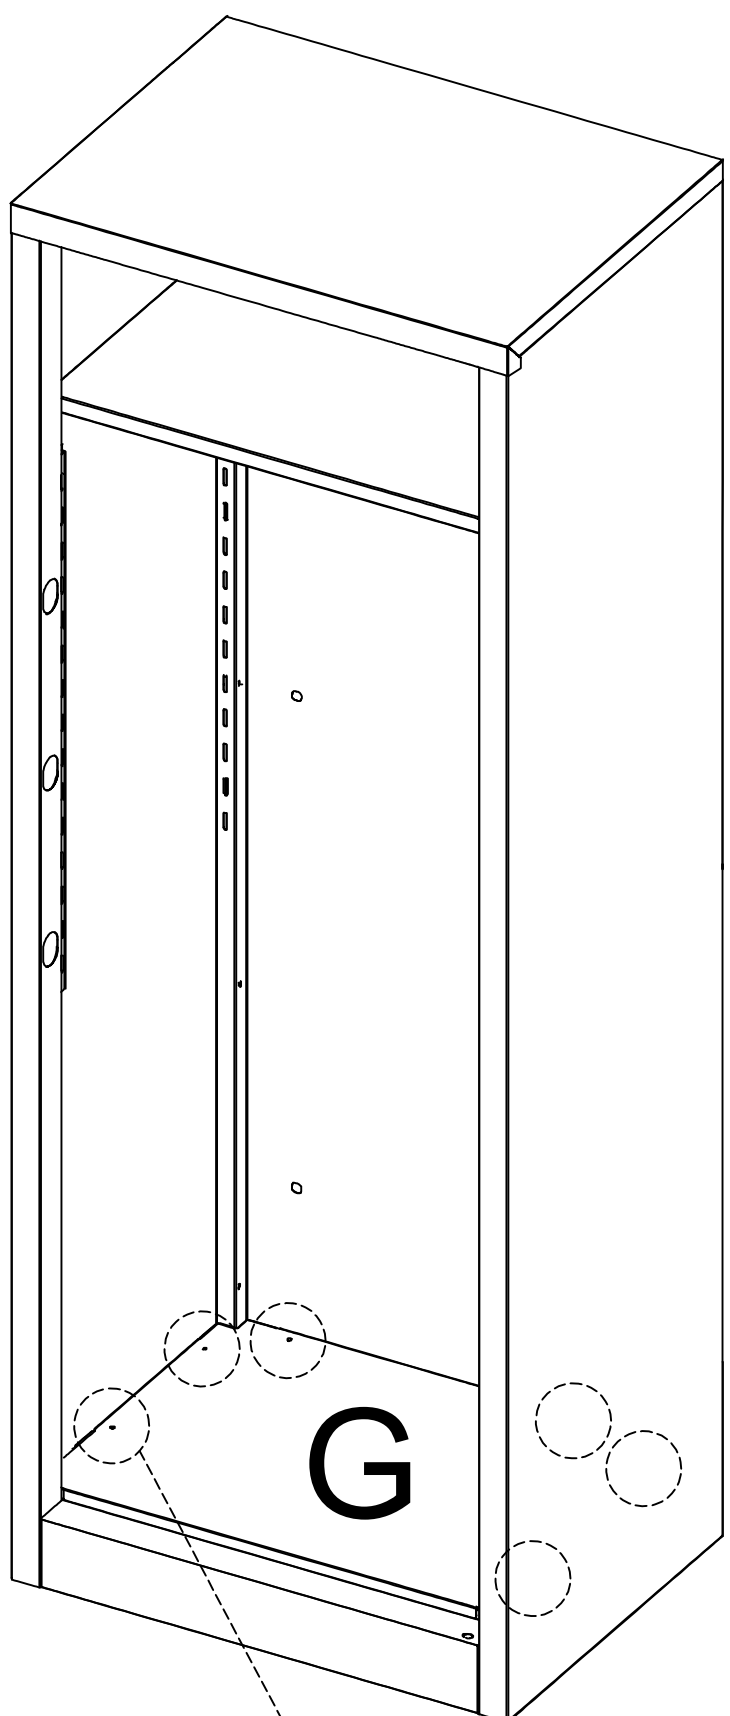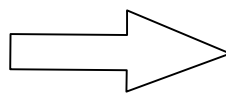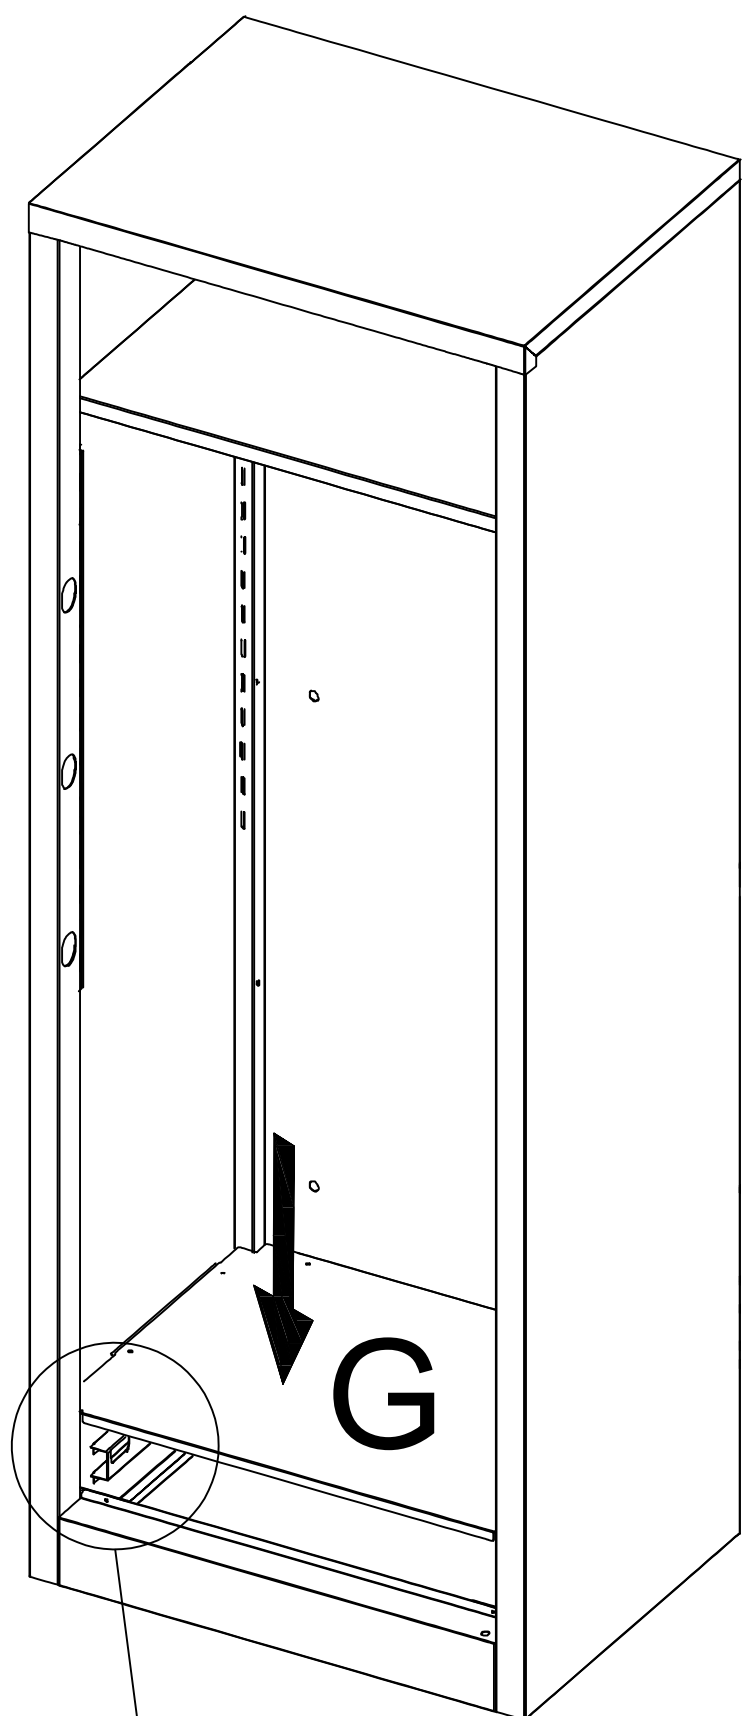


7. Install G

8

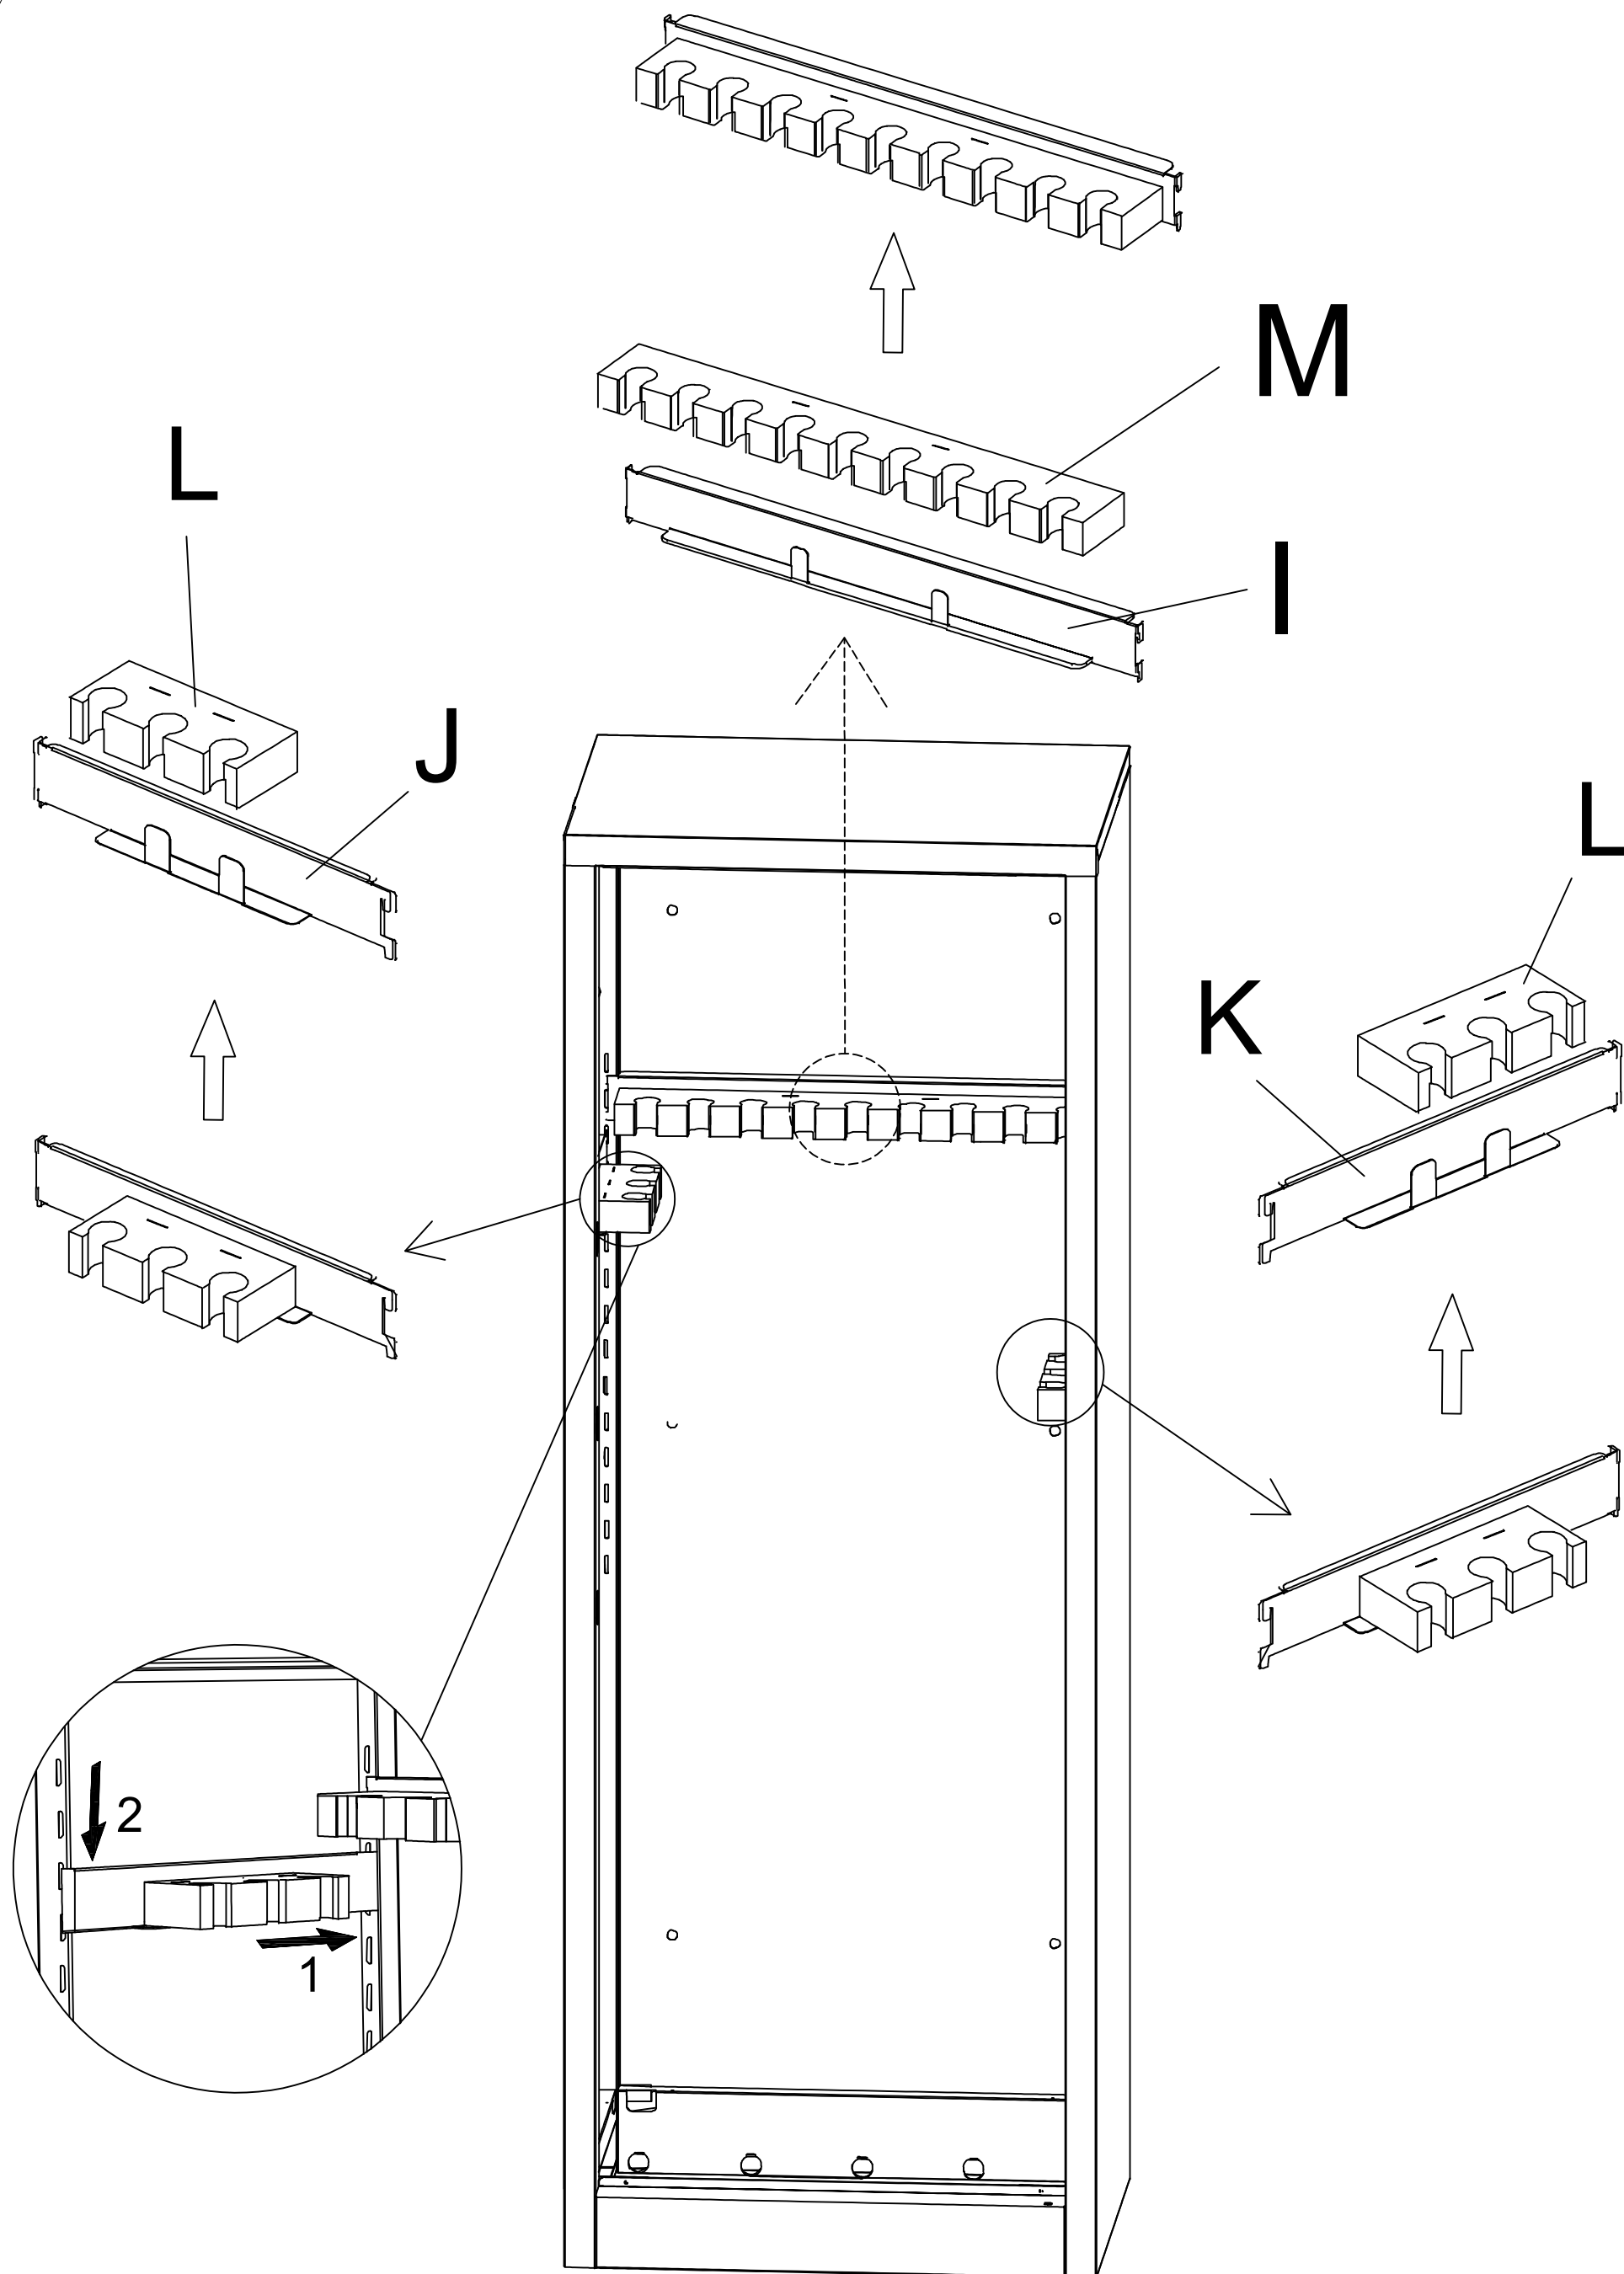


8. Assemble J, K and L. Assemble M and I. Install J, K and I



9

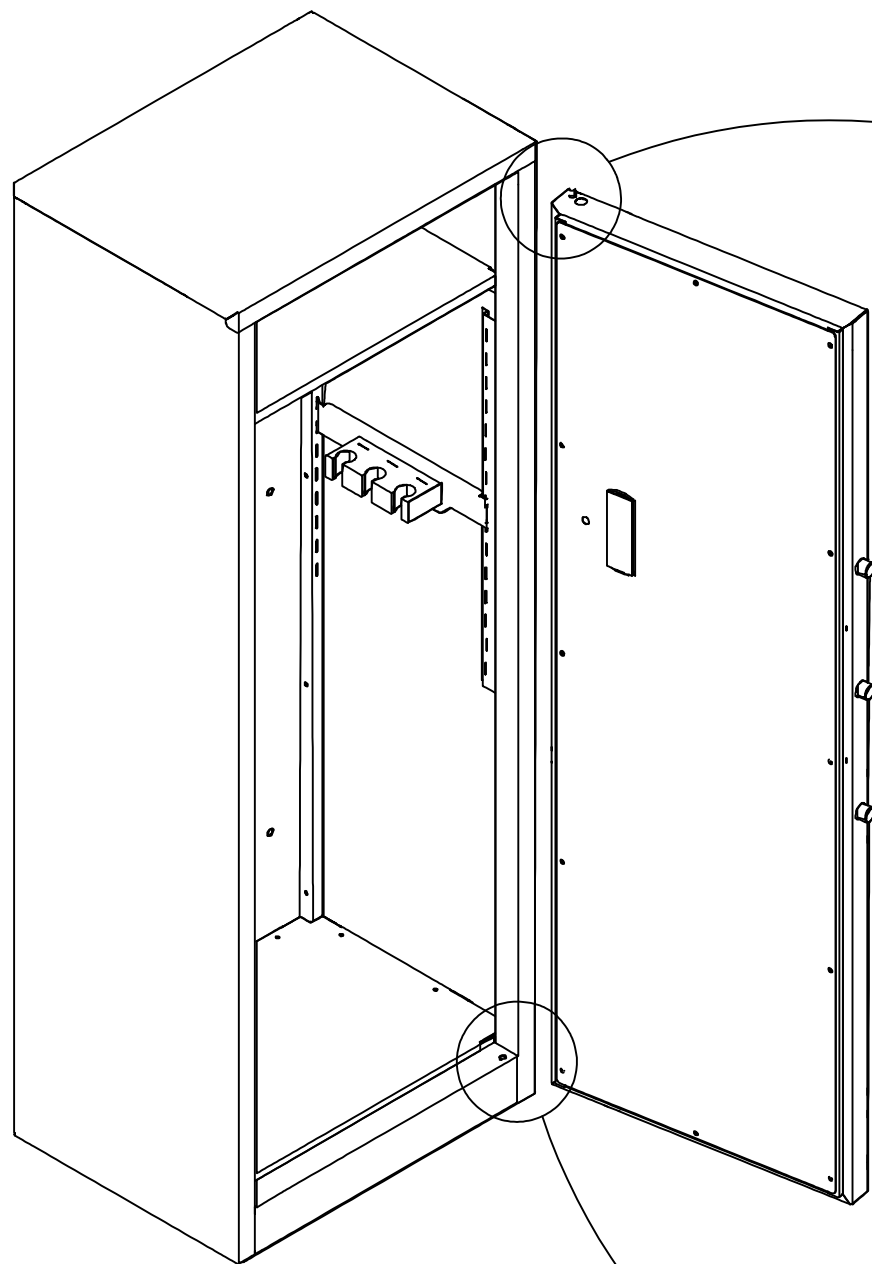

2nd

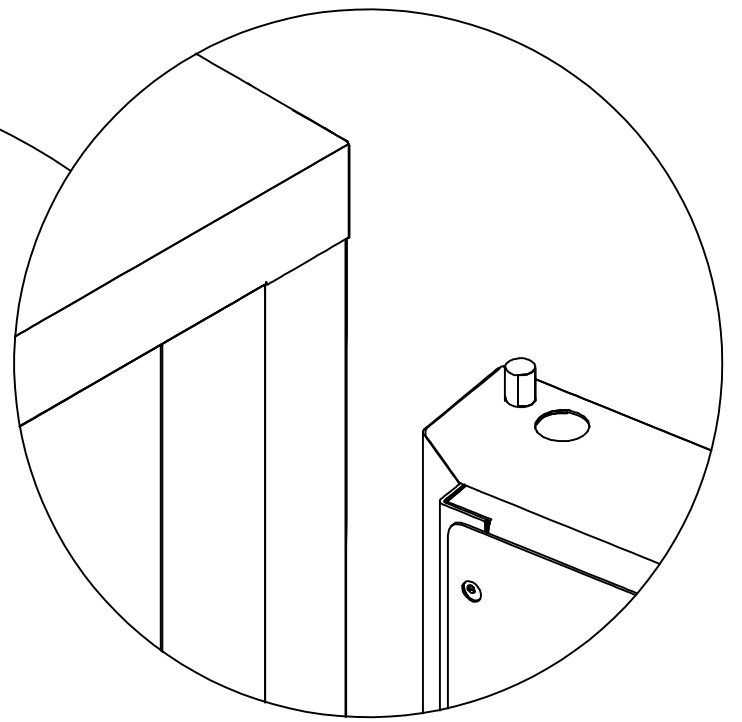

1st

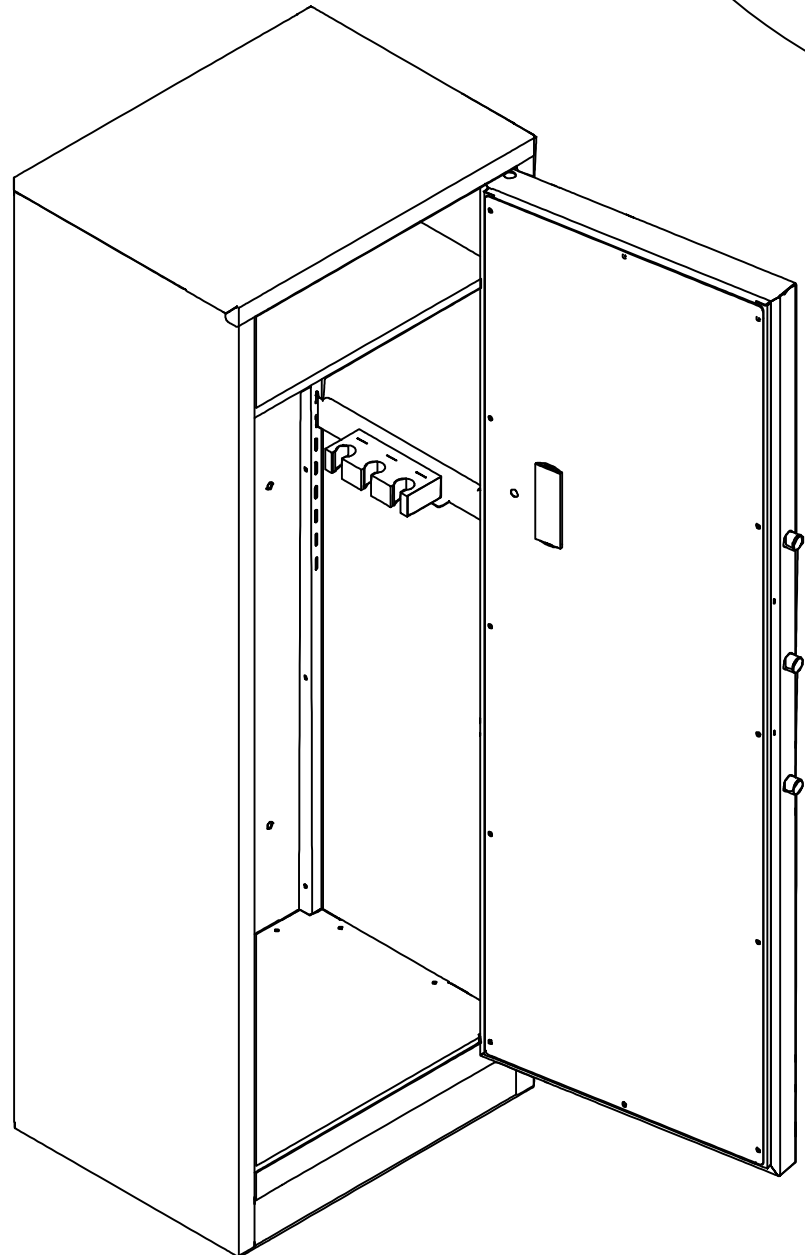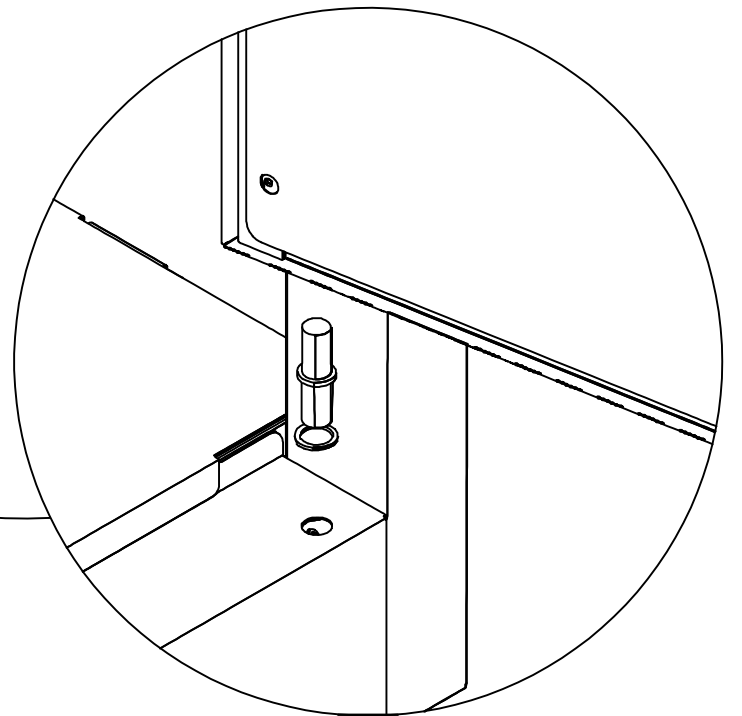



Keypad Instruction Manual

Light

Keypad


Emergency
power socket

Emergency
key hole

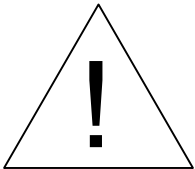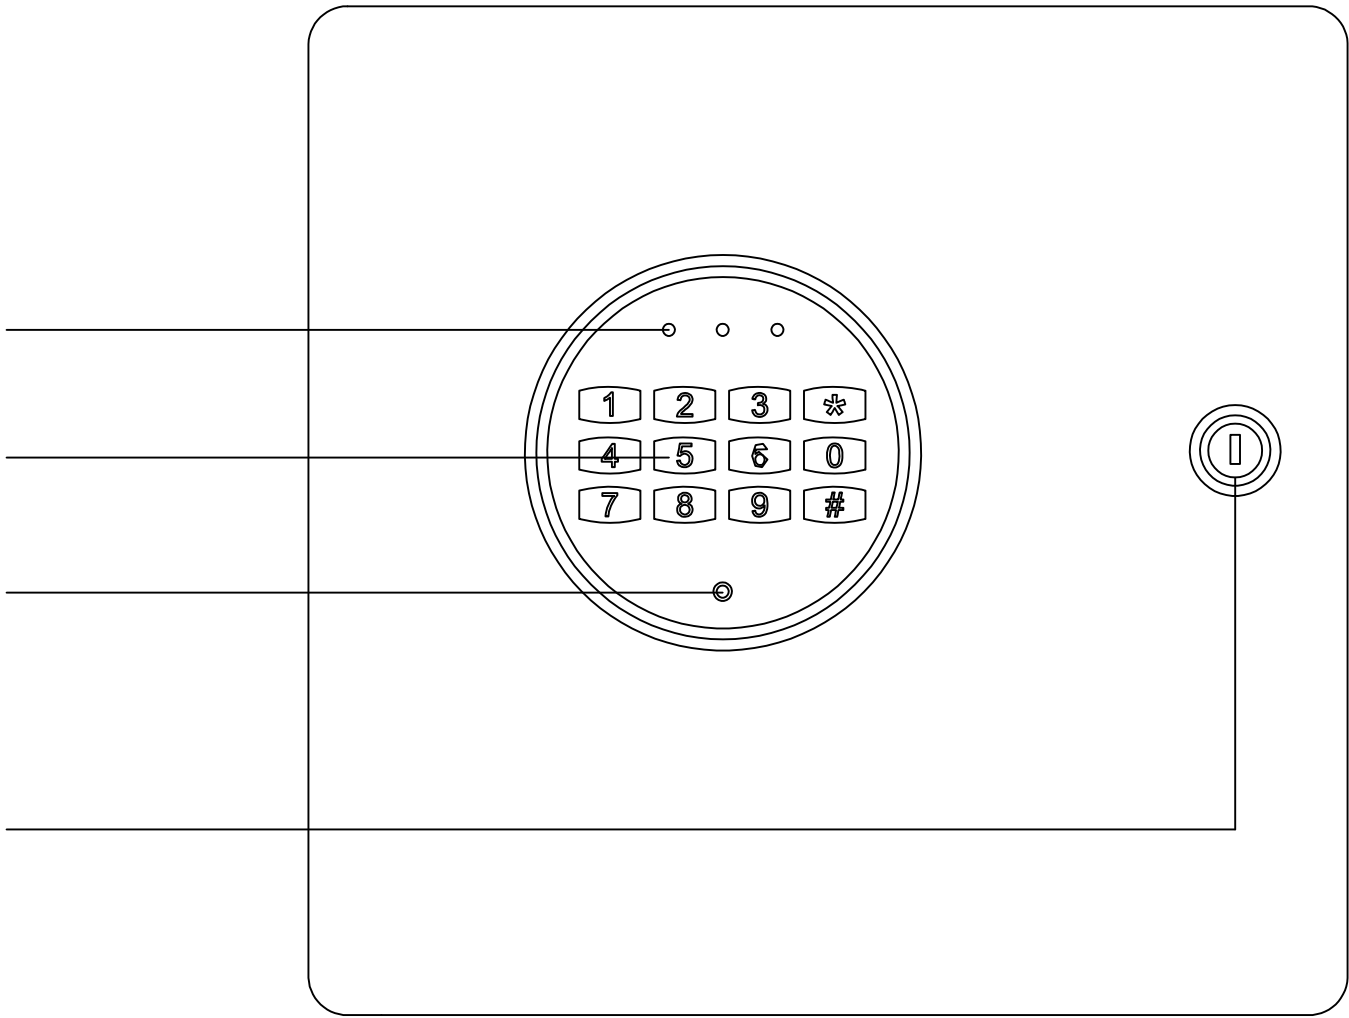

TIP:

Please do not leave the emergency keys & external power box in your safe!

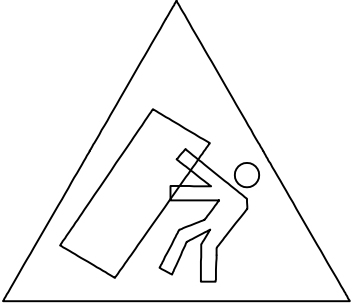WARNING 	Tip Over Hazard • A child or adult can tip the safe and be killed or seriously injured. • Serious injury may occur to children and adults if not secured before installation. • Children should not play with or around the safe at any time.
---	---

Gun Locker Instruction Manual

I. Instructions:

1. OPERATING INSTRUCTIONS

- (1) The yellow light will flash once every time the operation key is pressed.
- (2) The "#" key on the operation keyboard is used to indicate confirmation.
- (3) If there is no subsequent key input after pressing any key for 20 seconds, it will enter sleep mode.
- (4) Once in sleep mode, all operations terminate, and pressing any key wakes up to enter functional operations.
- (5) The management password and personal password can be changed freely without power outage, without affecting each other, and are independent of each other.

FACTORY UNIFIED PERSONAL PASSWORD: 1234:
MANAGEMENT PASSWORD:123456

2. MANAGEMENT PASSWORD SETTINGS AND CHANGES

Press the "00" key and then press the settings button. The buzzer will beep twice and the yellow indicator light will turn on to indicate that the management password has started to be set. Enter any number from 3 to 8 digits and press the "#" or "*" key to confirm that the buzzer beeps twice. The yellow indicator light will turn off to indicate that the personal password has been successfully set or changed.

3. PERSONAL PASSWORD SETTINGS AND CHANGES

Press the settings button directly, the buzzer will sound twice, the yellow indicator light will light up, and the personal password will start to be set or changed. Then enter any number from 3 to 8 digits and press the "#" key to confirm.

The buzzer beeps twice and the yellow indicator light goes out, indicating that the personal password has been successfully set or changed.

4. OPENING AND LOCKING THE DOOR

(1) After entering the correct management password or personal password, press the "#" key to confirm. The buzzer will sound twice and the green indicator light will light up to indicate

The password is correct, and the electromagnet can be activated for 5 seconds to open and lock the door.

(2) After about 5 seconds, the green indicator light goes out and the electromagnet is released.

(3) If the password is entered incorrectly, press the "#" key to confirm and the buzzer will sound three times.

(4) If three inputs are incorrect, an automatic alarm will sound for one minute. Enter the correct password to clear the alert.

5. VIBRATION ALARM

(1) Set alert method: Press the "#" key, and the computer board will automatically enter the alert state. Immediately sound the alarm after the safe box vibrates.

(2) Release Alert Method: After the safe box alarms, enter the set password and press the "#" key to open the door, which will eliminate the alert.

6. UNDER VOLTAGE INDICATION

(1) When there is under voltage, the red indicator light will also light up when the green light is on. At this time, it can still continue to work for a period of time, but we hope to replace the battery as soon as possible.

(2) This model comes with a memory chip, which provides password protection that will never be lost after power failure.

7. TECHNICAL PARAMETERS

(1) Working power: four 5th "AA" alkaline batteries

(2) Working voltage range: 4.0V~6.8V

(3) Working under voltage point: 4.50V plus or minus 0.30V

(4) Working current: $\leq 380\text{mA}$

(5) Quiescent current is less than 5Ua

(6) Working temperature: -10°C ~ $+70^{\circ}\text{C}$

(7) Working humidity: 10%-90%RH