
INSTALLATION INSTRUCTIONS

If you have any questions, please feel free to contact us. Email: lowesteam@aminalife.com


Spout

connector

1.Use special tools to chisel holes on wall for installing spout, shower valve body and water pipe.

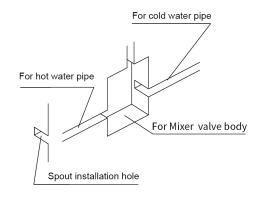


2.Recommended depth for installing shower valve body before tiling tiles: 40-50mm. Note: Tile opening should be bigger than shower valve diameter at least 5 mm.

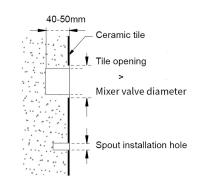


3.Connect water pipes to shower valve body as picture shows. And then install the shower valve body with screws.

Mixed water pipe

 Cold water pipe




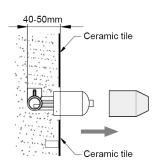



- 5.Put decorative cover on the shower valve, and tighten the handle as picture shows.
- 6. Twist some Teflon tape on the adapter and screw it to the water pipe with big Allen key. Insert spout to the dapter then tighten it with screws.
- 7. Installation finished. Clean the with clean water and soft cloth.


Hot water pipe

  8. Another installation reference



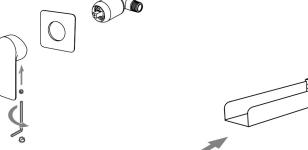


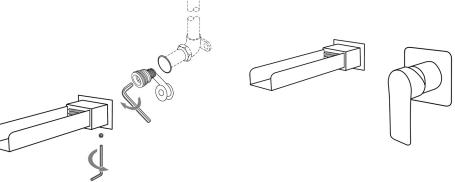




INSTALLATION INSTRUCTIONS

Parts list

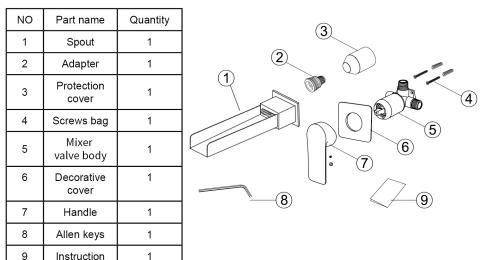


Dimensional drawing

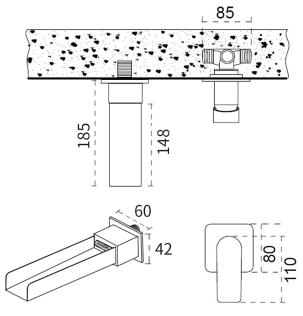


Instructions for use

 Turn on the faucet as picture 1 shows. The greater the handle angle, the greater the water flow; Conversely, the smaller the handle angle, the smaller the water flow, until it is closed.

 

(Picture 1

 Turn on the faucet. Adjust handle to left to get more hot water; Adjust handle to right to get more cold water. Showed as picture 2.

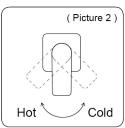

Cautions:

- 1.Before installation, all water lines must be flushed at least 60 seconds to remove any foreign material so that the foreign material will not block the aerator or damage the cartridge.
- 2.After installation, please check if all connections were well installed, and make sure there are no leakage.
- 3. Use water and soft cloth to clean the faucet.
- 4. Use a mild liquid detergent for cleaning, do not use abrasive detergent that may scratch or dull the surface.

Marning:

You can seal the wall only when there are no any leakage after install the shower valve body and water pipe.