




ITEM #0879887

ROPE LIGHT

MODEL #UCL48L

Français p. 8

Español p. 15

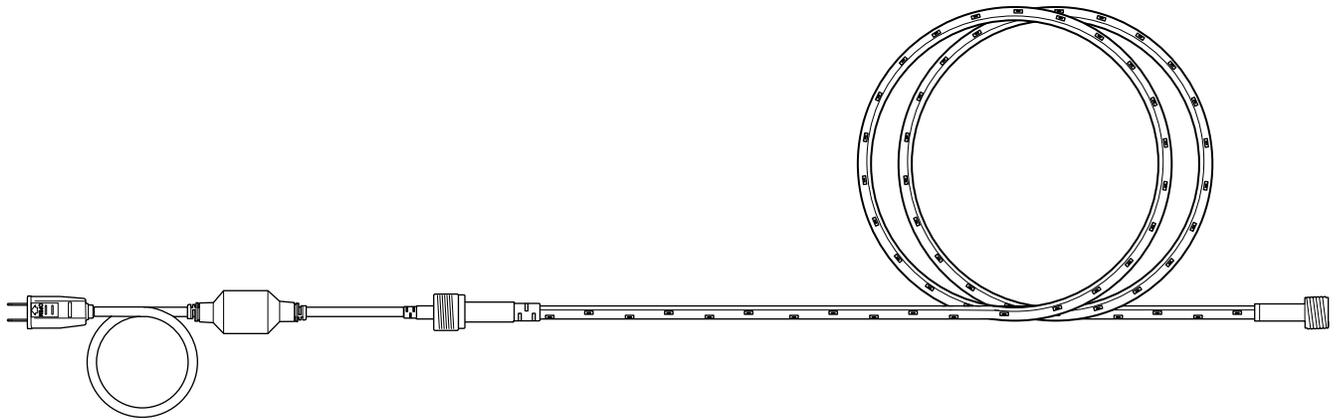

ATTACH YOUR RECEIPT HERE

Purchase Date _____



LISTED

E237798


**For
Wet Location**



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **1-866-994-4148**, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.


PACKAGE CONTENTS

PART	DESCRIPTION	QUANTITY
A	Rope Light	1
B	Power Cord	1

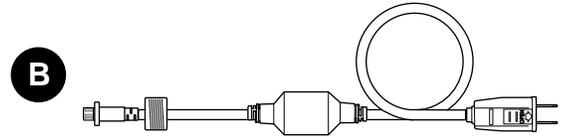

HARDWARE CONTENTS (shown actual size)

 AA



Mounting Clip

Qty. 16

BB



Screw

Qty. 16

SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.

DANGER

- For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.
- If using this light fixture in a WET location, this light fixture must be connected to a supply circuit that is protected by a Ground Fault Circuit Interrupter (GFCI) to reduce the risk of personal injury, electrical shock or death.

WARNING

- This fixture has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. The plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. NEVER use with an extension cord unless the plug can be fully inserted. DO NOT alter the plug.
- To reduce the risk of electric shock, always unplug this fixture from the electrical outlet before cleaning.

SAFETY INFORMATION

WARNING

- To reduce the risk of fire and electric shock, use only the power supply adapter provided with the fixture.
- DO NOT use an extension cord.
- To reduce the risk of burns, fire, electric shock or injury to persons, unplug from outlet before attaching or removing parts.
- To reduce the risk of burns, fire, electric shock or injury to persons, DO NOT use the fixture if power supply cord is frayed or broken or plug is damaged, if the fixture is not working properly, if it has been dropped or damaged, or it has been submerged in water.
- To reduce the risk of burns, fire, electric shock or injury to persons, use this fixture ONLY for its intended use as described in these instructions. DO NOT use attachments not recommended by the manufacturer.
- To reduce the risk of burns, fire, electric shock or injury to persons, DO NOT mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- This is an electrical product, NOT a toy! To avoid the risk of fire, burns, personal injury or electric shock, this product should not be played with or placed where small children can reach it.
- DO NOT use staples or nails to secure fixture; DO NOT place power cord on sharp hooks or nails.
- DO NOT place the fixture on products plugged into receptacles or luminaires.
- DO NOT plug in or operate the fixture when it is tightly coiled.
- DO NOT route the fixture through walls, doors, windows, or any similar part of the building structure.
- DO NOT install the fixture near flammable liquids.

- **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - * Reorient or relocate the receiving antenna.
 - * Increase the separation between the equipment and receiver.
 - * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

CAUTION

- **ELECTRICAL PRODUCT.** Keep away from children. Not recommended for children under the age of six (6).
- **TURN OFF ELECTRICITY** at main fuse box (or circuit breaker box) before beginning installation by removing the fuse (or switching the circuit breaker off).

SAFETY INFORMATION

CAUTION

- **DO NOT USE THIS FIXTURE WITH A DIMMING CIRCUIT.** If you presently have dimmer controls, you will need to remove them and replace them with regular electrical switches. If you have a three-way dimmer, you will have to replace it with a regular three-way switch. If you are unfamiliar with electrical installations, it is recommended you have a qualified electrician install your fixture.
- As a safety precaution, unplug power cord when not in use.
- **DO NOT** close doors and/or windows on the fixture or power cord as doing so may damage the insulation wire(s).
- Do **NOT** tamper with or attempt to repair LED component of fixture. The light source is designed for this specific application and should not be serviced by untrained personnel. If any servicing is required, call our customer service department.
- Total wattage for this fixture is 38.4 watts; do not attempt to replace the LEDs. Do not overload. Connect end-to-end a maximum of six (6) rope lights.
- This fixture should be used for decorative purposes only.
- To replace power cord, contact customer service or manufacturer.
- Replace fuse only with 3-amp, 125-volt fuse.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes

Tools Required for Assembly (not included): Phillips Screwdriver, Flathead Screwdriver, Safety Glasses.

Helpful Tools (not included): Stepladder


ASSEMBLY INSTRUCTIONS

1. Carefully remove all parts from the packaging.
Uncoil the rope light (A).

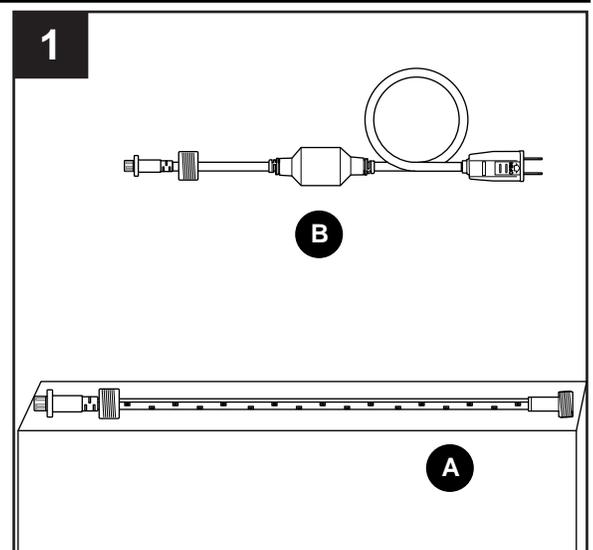


ASSEMBLY INSTRUCTIONS

2. Plug the male end of rope light (A) into female end on power cord (B). Slide plastic ring on power cord (B) over threads at male end of rope light (A). Securely tighten plastic ring.

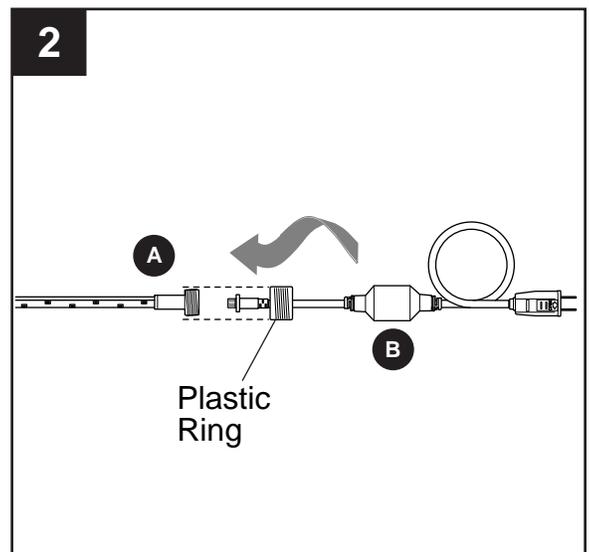


- 3a. Determine the approximate location for the rope light (A). Temporarily place mounting clips (AA) against the mounting surface and mark the location of the screw holes using a pencil or marker (not included). Attach mounting clips (AA) to the mounting surface with screws (BB).

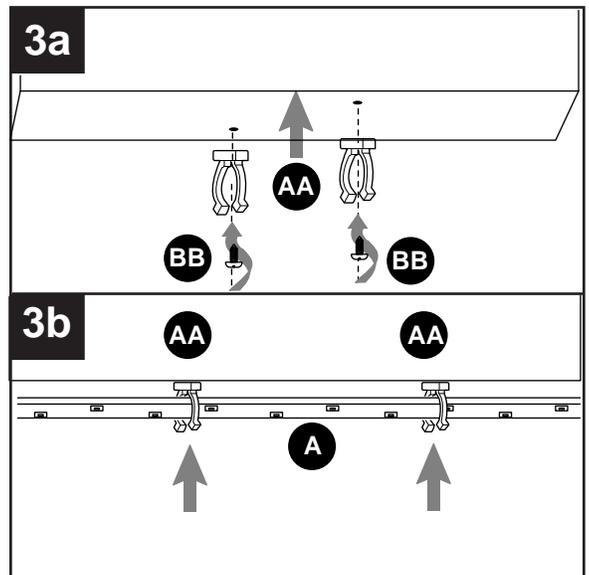


- 3b. Attach rope light (A) to the mounting surface with mounting clips (AA).

 Hardware Used

AA	Mounting Clip		x 16
BB	Screw		x 16

4. Plug power cord (B) into wall outlet.

⚠ DANGER: If using this light in a WET location, connect this product to a Ground Fault Circuit Interrupting (GFCI) outlet to reduce the risk of personal injury, electrical shock or death. If one is not provided, contact a qualified electrician for proper installation.

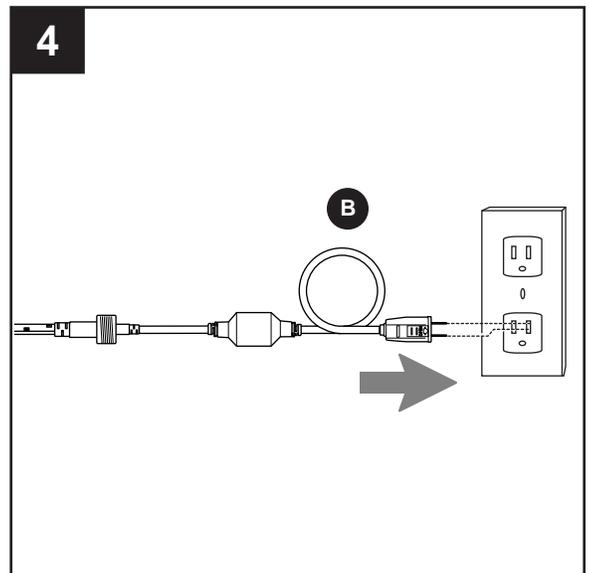


REPLACING THE FUSE


WARNING

Disconnect the power before replacing the fuse. Remove plug from receptacle or other outlet device. Do not unplug by pulling on power cord. Do not remove or replace plug. The plug on the rope light contains a safety device (fuse access cover). Discard product if the plug is damaged.

- 1a. Open fuse cover on plug by sliding cover toward blades. (It may be necessary to use a small flathead screwdriver to open cover.)
- 1b. One spare fuse is located in the plug. Turn plug over to remove spare fuse.

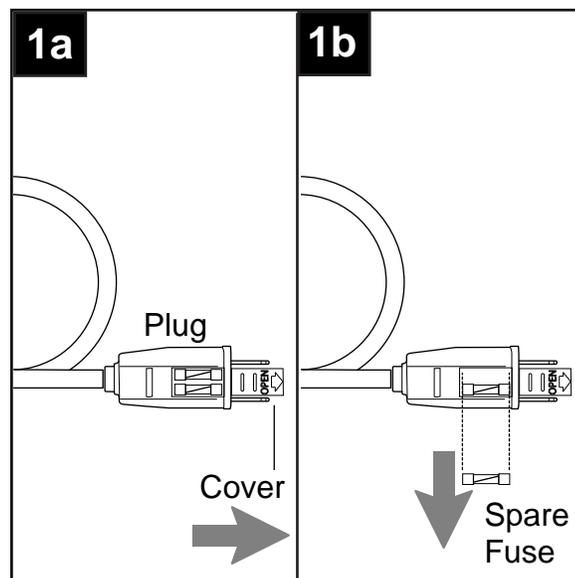


2. Remove old fuse carefully. Gently pry the metal end nearest the blade with a very small flathead screwdriver to loosen, then turn plug over to remove. Discard old fuse.

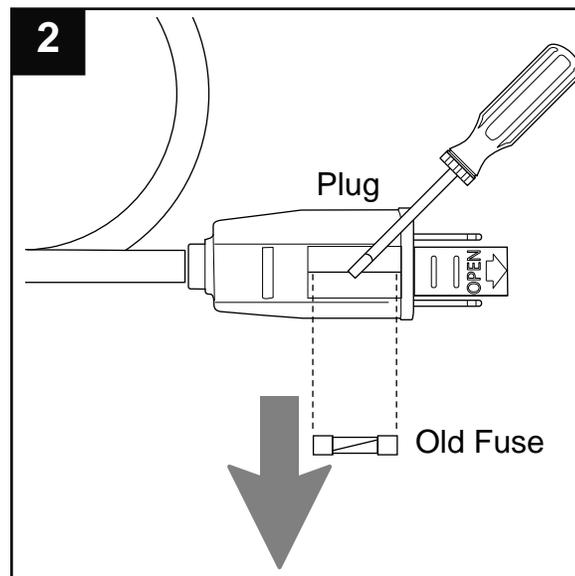

REPLACING THE FUSE

3. Replace old fuse with spare fuse and close fuse access cover firmly and completely.

NOTE: Replace fuse only with a 3-Amp, 125-Volt fuse.

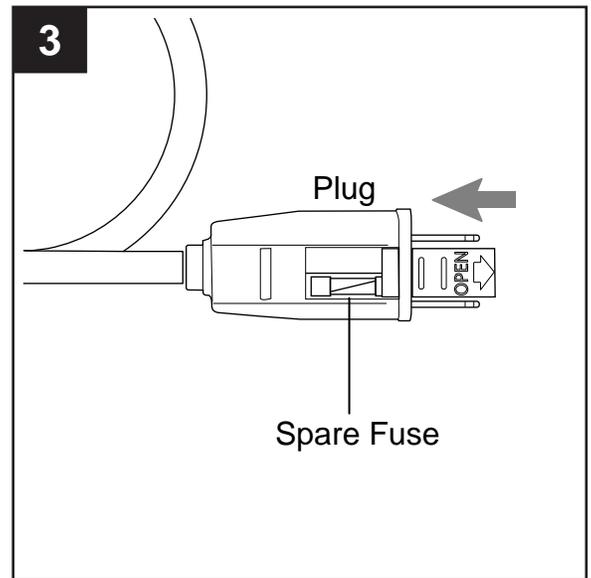

CARE AND MAINTENANCE

- Wipe fixture with soft, damp cloth. Do not use an abrasive cleaner on fixture.

TROUBLESHOOTING

⚠ WARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Light does not come on initially or no longer comes on.	<ol style="list-style-type: none">1. Power is OFF.2. Fixture is not plugged in.3. LED component is not working properly.	<ol style="list-style-type: none">1. Make sure power supply is ON.2. Plug fixture into outlet.3. Contact customer service.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for five (5) years from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.