 


1 ¼ in. (1.25") Louver Faux Wood Shutter - INSIDE MOUNT

① Measure Your Window and Select Proper Size Shutter

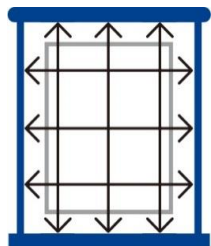

Measure the **INSIDE WIDTH** of the window opening in 3 places: Top, Middle and Bottom. Record the **WIDEST** measurement.

 
Measure the **INSIDE LENGTH(HEIGHT)** of the window opening in 3 places; Left, Middle and Right. Record the **LONGEST** measurement.

Using the chart below, select the shutter size that best matches your recorded measurements.

② Choose Your Shutter Style/Configuration

Single Hung

A single shutter length covers the entire height of the window opening.

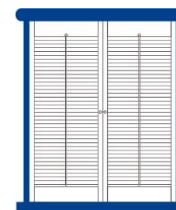

Café

The height of the shutter is less than the full height of the window opening.



INSIDE MOUNT		Window Opening Width (W) Range				
1 ¼ in. (1.25") Louver Shutter		23" - 25"	27" - 29"	29" - 31"	31" - 33"	35" - 37"
Window Opening Length (L) Range	17 ¾" - 20"	Model# <u>1A232520</u> 23"-25"(W) x 20"(L) 2 panels no mid-rail	Model# <u>1A272920</u> 27"-29"(W) x 20"(L) 4 panels no mid-rail	Item is not available	Model# <u>1A313320</u> 31"-33"(W) x 20"(L) 4 panels no mid-rail	Model# <u>1A353720</u> 35"-37"(W) x 20"(L) 4 panels no mid-rail
	21 ¾" - 24"	Model# <u>1A232524</u> 23"-25"(W) x 24"(L) 2 panels no mid-rail	Model# <u>1A272924</u> 27"-29"(W) x 24"(L) 4 panels no mid-rail	Item is not available	Model# <u>1A313324</u> 31"-33"(W) x 24"(L) 4 panels no mid-rail	Model# <u>1A353724</u> 35"-37"(W) x 24"(L) 4 panels no mid-rail
	25 ¾" - 28"	Model# <u>1A232528</u> 23"-25"(W) x 28"(L) 2 panels no mid-rail	Model# <u>1A272928</u> 27"-29"(W) x 28"(L) 4 panels no mid-rail	Model# <u>1A293128</u> 29"-31"(W) x 28"(L) 4 panels no mid-rail	Model# <u>1A313328</u> 31"-33"(W) x 28"(L) 4 panels no mid-rail	Model# <u>1A353728</u> 35"-37"(W) x 28"(L) 4 panels no mid-rail
	29 ¾" - 32"	Model# <u>1A232532</u> 23"-25"(W) x 32"(L) 2 panels no mid-rail	Model# <u>1A272932</u> 27"-29"(W) x 32"(L) 4 panels no mid-rail	Model# <u>1A293132</u> 29"-31"(W) x 32"(L) 4 panels no mid-rail	Model# <u>1A313332</u> 31"-33"(W) x 32"(L) 4 panels no mid-rail	Model# <u>1A353732</u> 35"-37"(W) x 32"(L) 4 panels no mid-rail
	33 ¾" - 36"	Model# <u>1A232536</u> 23"-25"(W) x 36"(L) 2 panels no mid-rail	Model# <u>1A272936</u> 27"-29"(W) x 36"(L) 4 panels no mid-rail	Item is not available	Model# <u>1A313336</u> 31"-33"(W) x 36"(L) 4 panels no mid-rail	Model# <u>1A353736</u> 35"-37"(W) x 36"(L) 4 panels no mid-rail

 
***NOTE:** At least 1" of flat surface area inside the recess of the window opening is recommended in order to properly secure an inside mount frame.

For flush-mounted reference, the shutter frames and strips thickness are the same as 16mm. (disregard the louver thickness)

Length(Height) measurements related to the adjustments (shorten the shutter). Trim limits are ¾ in.(0.75") on the TOP and 1 ½ in.(1.5") on the BOTTOM.

1 ¼ in. (1.25") Louver Faux Wood Shutter - OUTSIDE MOUNT

① Measure Your Window and Select Proper Size Shutter

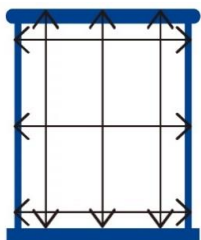

Measure the **WIDTH** and **LENGTH(HEIGHT)** from point to point on your molding or wall where the frame will be hung (a minimum of ¾ in. (0.75") **FLAT SPACE** is needed at the point on your molding or wall where the frame will be hung.)

 
If you have a window sill, measure from the top of the sill to the point on your molding or wall where the frame will be hung.

Using the chart below, select the shutter size that best matches your recorded measurements.

② Choose Your Shutter Style/Configuration

Single Hung

A single shutter length covers the entire height of the window opening.

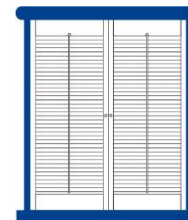

Café

The height of the shutter is less than the full height of the window opening.



OUTSIDE MOUNT		Window Opening Width (W) Range				
1 ¼ in. (1.25") Louver Shutter		20 ½" - 21"	24 ½" - 25"	26 ½" - 27"	28 ½" - 29"	32 ½" - 33"
Window Opening Length (L) Range	17 ¾" - 20"	Model# 1A232520 23"-25"(W) x 20"(L) 2 panels no mid-rail	Model# 1A272920 27"-29"(W) x 20"(L) 4 panels no mid-rail	Item is not available	Model# 1A313320 31"-33"(W) x 20"(L) 4 panels no mid-rail	Model# 1A353720 35"-37"(W) x 20"(L) 4 panels no mid-rail
	21 ¾" - 24"	Model# 1A232524 23"-25"(W) x 24"(L) 2 panels no mid-rail	Model# 1A272924 27"-29"(W) x 24"(L) 4 panels no mid-rail	Item is not available	Model# 1A313324 31"-33"(W) x 24"(L) 4 panels no mid-rail	Model# 1A353724 35"-37"(W) x 24"(L) 4 panels no mid-rail
	25 ¾" - 28"	Model# 1A232528 23"-25"(W) x 28"(L) 2 panels no mid-rail	Model# 1A272928 27"-29"(W) x 28"(L) 4 panels no mid-rail	Model# 1A293128 29"-31"(W) x 28"(L) 4 panels no mid-rail	Model# 1A313328 31"-33"(W) x 28"(L) 4 panels no mid-rail	Model# 1A353728 35"-37"(W) x 28"(L) 4 panels no mid-rail
	29 ¾" - 32"	Model# 1A232532 23"-25"(W) x 32"(L) 2 panels no mid-rail	Model# 1A272932 27"-29"(W) x 32"(L) 4 panels no mid-rail	Model# 1A293132 29"-31"(W) x 32"(L) 4 panels no mid-rail	Model# 1A313332 31"-33"(W) x 32"(L) 4 panels no mid-rail	Model# 1A353732 35"-37"(W) x 32"(L) 4 panels no mid-rail
	33 ¾" - 36"	Model# 1A232536 23"-25"(W) x 36"(L) 2 panels no mid-rail	Model# 1A272936 27"-29"(W) x 36"(L) 4 panels no mid-rail	Item is not available	Model# 1A313336 31"-33"(W) x 36"(L) 4 panels no mid-rail	Model# 1A353736 35"-37"(W) x 36"(L) 4 panels no mid-rail

***NOTE:** 1" flat space on the wall or window frame is recommended in order to properly secure the shutter. Above width ranges are based on the suggestion.

For other outside-mounted reference, each hanging strip is 1 ¼ inch wide, each stile (shutter panel frame) is 1 ¼ inch wide.

When install an shutter onto a smaller window opening than suggested, the overlap of the window would cause the shutter louvers not operate.

Length(Height) measurements related to the adjustments (shorten the shutter). Trim limits are ¾ in.(0.75") on the TOP and 1 ½ in.(1.5") on the BOTTOM.