ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench

(Included)



2 - People Recommended

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 21-07-16



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

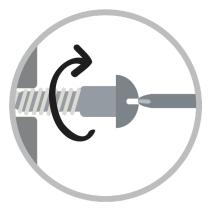

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

TABLE



- · Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

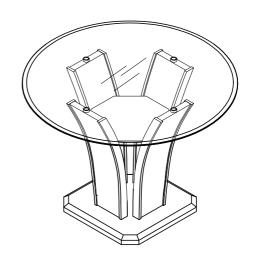

PARTS











Glass Top



Shelf Panel



Stand



Base

HARDWARE



(®)

Bolt

Ø1/4" x 3/4"





#C)8pcs

Flat Washer Ø1/4"



Allen Wrench M4



4pcs



Lock Washer

Ø1/4"

(#F) 4pcs



#G) 8pcs

#D)1pc



L - Bracket



Threaded Stud

Ø1/4" x 3/4"

1pc

 
Bolt



(#H) 8pcs

Ø5/16" x 2"





(#I) 8pcs



Flat Washer Ø5/16"




Allen Wrench **M5**



Spacer


Exploded View

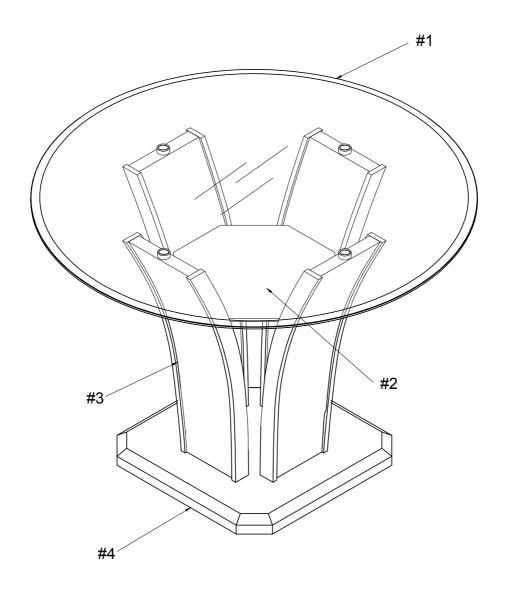


is packed in 3 cases

Carton	Disignation	Part		Hardware
	Glass Top	#1		
	Stand	#3		
	Shelf Panel	#2		#A x8pcs #B x8pcs #C x8pcs #D x1pc #E x4pcs #F x4pcs
	Base	#4		#H x8pcs

ASSEMBLY INSTRUCTIONS

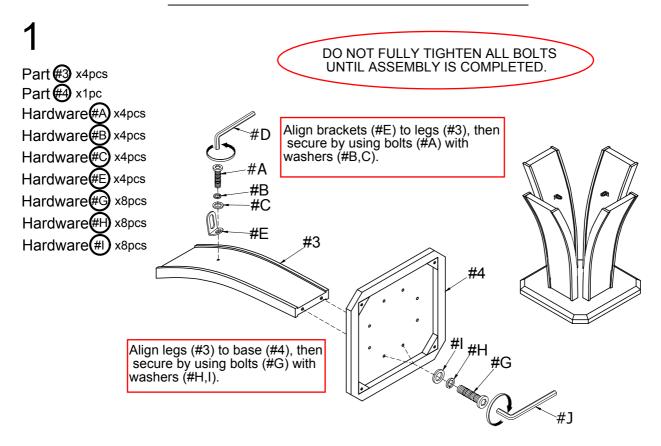


2

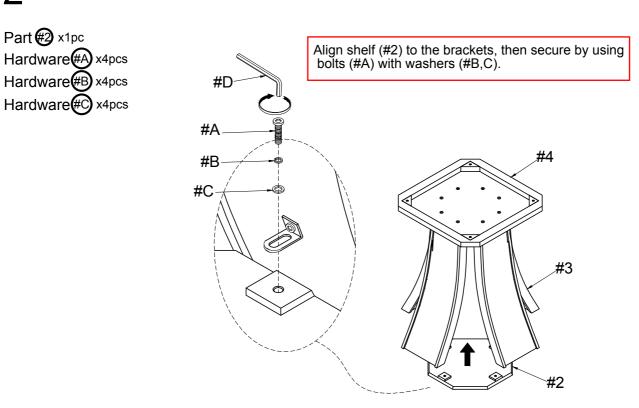


ASSEMBLY INSTRUCTIONS

3

Hardware#F x4pcs
Hardware#K x4pcs

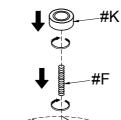


Attach threaded bolts (#F) to the top of the legs, then attach spacers (#K) onto threaded bolts (#F).

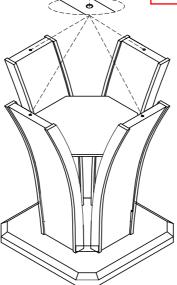

4

Part #1 x1pc

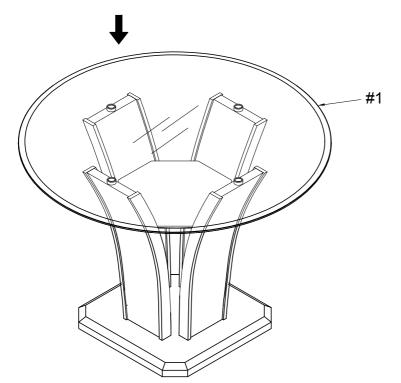

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.