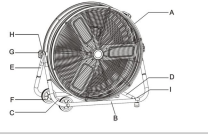
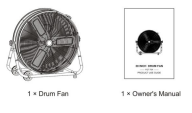

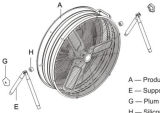

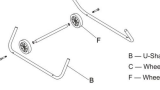
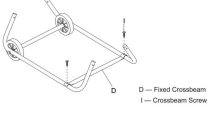
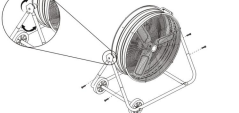
 

 <p style="text-align: center;">30 INCH DRUM FAN FQT-76A PRODUCT USE GUIDE</p>	<p style="text-align: center;">INTRODUCTION</p> <p style="text-align: center;">Thank you for choosing our fan. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few minutes to read it.</p>	<p style="text-align: center;">TABLE OF CONTENTS</p> <p>SECTION 1 IMPORTANT INSTRUCTIONS PAGES 3-4</p> <p>SECTION 2 TECHNICAL PARAMETERS PAGES 4 PRODUCT DIAGRAM PAGES 4 PACKAGE INCLUDES PAGES 5</p> <p>SECTION 3 ASSEMBLY INSTRUCTIONS PAGES 5-7 OPERATION INSTRUCTIONS PAGES 8</p> <p>SECTION 4 STORAGE MAINTENANCE GUIDELINES PAGES 8</p>																
<p>IMPORTANT INSTRUCTIONS</p> <p>PLEASE READ CAREFULLY-ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE.</p> <ol style="list-style-type: none"> 1. Check that the mains voltage corresponds with the rating of the appliance before operating. 2. To protect against electric shock. Do not immerse cords or appliances in water or any other liquid. 3. Do not leave any appliance unattended while it is operating. 4. Close supervision is necessary when any appliance is used by or near children or infirm persons. 5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts. 6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard. 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries. 8. Do not use outdoors. 9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces. 10. To disconnect-retrieve the plug from the outlet. Do not pull the plug out by the cord. 11. Do not use this product for anything other than its intended use. This appliance is for household use only. 12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling. 13. Do not use the appliance without the protective grills. 14. Do not attempt to force the grill to make the fan turn or stop. 15. Never put objects into the grill when the appliance is connected to the mains. 16. It is not advisable to expose people (e.g. babies or older people) to a continuous cold air stream for a long time. 	<p>TECHNICAL PARAMETERS</p> <table border="1"> <tr><td>Model No.</td><td>FQT-76A</td></tr> <tr><td>Item Name</td><td>DRUM FAN</td></tr> <tr><td>Rated Voltage</td><td>120V (60Hz)</td></tr> <tr><td>Rated Power</td><td>320W</td></tr> <tr><td>3 Mode Fan Speeds</td><td>Low / Medium / High</td></tr> <tr><td>Max Oscillation</td><td>360 Degrees</td></tr> <tr><td>Fan Blade Diameter</td><td>30 inch</td></tr> <tr><td>Package Size</td><td>33.45x48.07x33.07 inch</td></tr> </table> <p>PRODUCT DIAGRAM</p>  <p>A — Product Body*1 D — Fixed Crossbeam*1 G — Plum Knob*2 B — U-Shaped Rod*2 E — Support Frame*4 H — Silicone Gasket*2 C — Wheel Crossbeam*1 F — Wheel*2 I — Crossbeam Screw*2</p> <p>Note: For the convenience of transportation, two sets of plum knobs and silicone gaskets will be locked on the main body of the product. Please dismantle in advance when assembling the product.</p>	Model No.	FQT-76A	Item Name	DRUM FAN	Rated Voltage	120V (60Hz)	Rated Power	320W	3 Mode Fan Speeds	Low / Medium / High	Max Oscillation	360 Degrees	Fan Blade Diameter	30 inch	Package Size	33.45x48.07x33.07 inch	<p>PACKAGE INCLUDE</p>  <p>1 x Drum Fan 1 x Owner's Manual</p> <p>ASSEMBLY INSTRUCTIONS</p> <p>Step 1: Rotate and remove the two plum knobs and silicone gasket on the product.</p>  <p>A — Product Body G — Plum Knob H — Silicone Gasket</p>	<p>Step 2: Install the two support frames as the figure shows. Repeat once, and install the other side.</p>  <p>A — Product Body E — Support Frame G — Plum Knob H — Silicone Gasket</p> <p>Step 3: Rotate and remove the screws and gasket on the left and right sides of the wheel crossbeam.</p>  <p>C — Wheel Crossbeam</p> <p>Step 4: Install the two U-shaped rods and wheels as the figure shows.</p>  <p>B — U-Shaped Rod C — Wheel Crossbeam F — Wheel</p>
Model No.	FQT-76A																		
Item Name	DRUM FAN																		
Rated Voltage	120V (60Hz)																		
Rated Power	320W																		
3 Mode Fan Speeds	Low / Medium / High																		
Max Oscillation	360 Degrees																		
Fan Blade Diameter	30 inch																		
Package Size	33.45x48.07x33.07 inch																		
<p>Step 5: Fasten the fixed crossbeam with screws.</p>  <p>D — Fixed Crossbeam I — Crossbeam Screw</p> <p>Step 6: Remove the four screws on the support frames, put the support frames on the U-shaped rods, and lock it with the screws.</p> <p>NOTE: If the angle of the support frame is not enough, loosen the plum knob to adjust.</p> 	<p>OPERATION INSTRUCTIONS</p> <ol style="list-style-type: none"> 1. Plug the power cord into 120V the volt AC wall outlet. 2. You can turn the switch to 1, 2, or 3 to select low / medium / high speed (Figure A) 3. You can loosen the plum knobs and adjust the vertical oscillation of the fan, max 360 degrees (Figure B) <p>NOTE: After the product body angle is adjusted to 180°, the handle will rotate to the bottom of the fan. If you want to use the handle, please adjust it by another 180°.</p>   <p>Figure A Figure B</p> <p>STORAGE & MAINTENANCE GUIDELINES</p> <ol style="list-style-type: none"> 1. Turn the control OFF and unplug the fan before cleaning. 2. Use only a soft damp cloth to clean the fan. 3. Do not place the fan in water and never allow water to drip into the Motor Housing. 4. Do not use gasoline, paint thinner or other chemicals to clean the fan. 5. To clean the fan blades, remove the front grill and wipe the blades and grills. 6. Store the fan in its original box or cover the fan to protect it from dust. 7. Store it in a cool and dry place. 																		