

WARNING



KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT'S FABRIC

This tent is not fireproof. The fabric will burn if left in continuous contact with any flame source.

EXERCISE EXTREME CAUTION IF USING LIGHTING OR HEATING APPLIANCES IN THE TENT.

Don't leave appliances unattended while in use. Keep appliances away from the tent walls.

EXERCISE EXTREME CAUTION IF OPERATING ANY DEVICE WHICH BURNS FUEL INSIDE THIS TENT.

Combustion produces carbon monoxide which is lethal. Maintain adequate ventilation inside your tent at all times. Carbon monoxide is a poison you cannot see, smell or detect.

Do not smoke inside the tent. Do not lit candles inside the tent.

BUILD CAMPFIRES DOWNWIND AND AT LEAST 10 FT (3M) FROM THE TENT.

Always extinguish campfires before leaving the campsite or going to sleep.

ONLY SET UP THE TENT ON FLAT, FIRM AND LEVELLED SURFACES.

Avoid slippery grounds, mud, sand, gravel, or angled surfaces. Carefully choose campsite and consider weather conditions, falling rocks, tree limbs, flash floods, avalanches, strong winds or other objective hazards to reduce the risk of loss or injury to the tent and occupants.

DO NOT LEAVE CHILDREN UNATTENDED INSIDE THE TENT.

ONLY OPERATE YOUR VEHICLE WITH THE TENT COMPLETELY CLOSED AND LATCHES SECURED. ALWAYS VERIFY THAT THE TENT IS SECURELY MOUNTED BEFORE DRIVING THE VEHICLE.

Notice to California residents:



WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

If you do not understand any part of this warning, contact TRUSTMADE at (909) 390 7788 before using the tent.'