


Quick Start Guide- Side 1

Ceiling Mount Power Cord System

1. MOUNT

1. Mount **CEILING BRACKET** securely to ceiling beam (do not mount on drywall).
2. Pull out and twist **SPRING LOADED SAFETY PIN** (fig.1a) and loosen **LOCKING SCREW** to clear rail.
3. Slide **ROBOREEL** onto **CEILING BRACKET** (Fig. 1b).
4. Twist and release **SPRING LOADED SAFETY PIN** and adjust **ROBOREEL** until pins lock in place.
5. Tighten **LOCKING SCREW** (fig.1b). Connect **POWER ENTRY CABLE** to outlet.

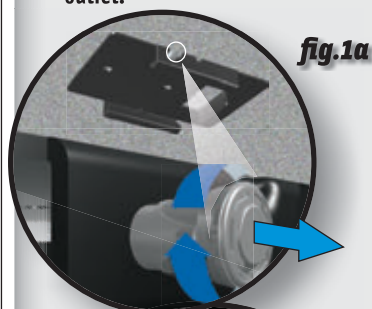

2. SET RESTING HEIGHT AND DOCKING DISTANCE

ROBOREEL CAN BE EASILY ADJUSTED TO SLOW DOWN AT DESIRED DISTANCE TO PREVENT INJURY OR DAMAGE.

1. To Customize Resting Height of Receptacle Ball
 - a) Extract Cord to Desired Height.
 - b) Attach **BALL STOPPER** (5) to cord at **ROBOREEL's** opening. (screws included)

2. To Customize the Docking Distance


NOTE: The cord reel can be easily adjusted to slow down at a desired distance (docking distance) to prevent dangerous whipping action.

- a) Pull down the **RECEPTACLE BALL** (2) until it touches the floor or to desired location.

- b) Press and hold **POWER/RETRACT** button (1) until LED lights turn on. Release the button.

- c) Press and HOLD same button a **SECOND** time until LED lights blink **TWICE**. Release the button.

Programming is now complete.

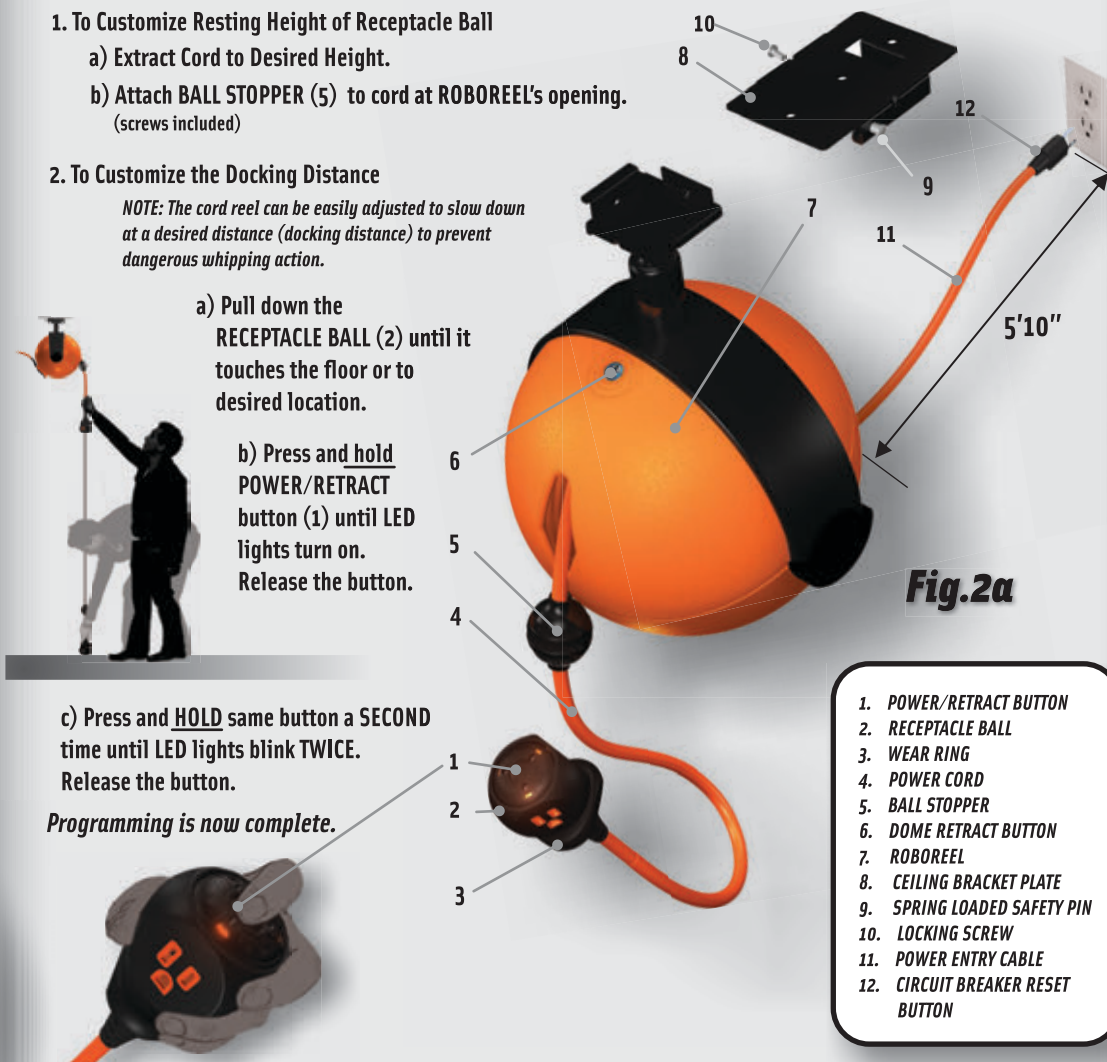

1. **POWER/RETRACT BUTTON**
2. **RECEPTACLE BALL**
3. **WEAR RING**
4. **POWER CORD**
5. **BALL STOPPER**
6. **DOME RETRACT BUTTON**
7. **ROBOREEL**
8. **CEILING BRACKET PLATE**
9. **SPRING LOADED SAFETY PIN**
10. **LOCKING SCREW**
11. **POWER ENTRY CABLE**
12. **CIRCUIT BREAKER RESET BUTTON**



**CAUTION: THIS PRODUCT IS RATED FOR INDOOR USE.
DO NOT OPERATE IN WET ENVIRONMENT.**

3. RETRACT

1. If power is **ON** (LED lights **ON**) press and release the **POWER/RETRACT** button (fig.3) to turn power **OFF** (LED lights **OFF**).

*NOTE: Retract can only be activated when power is **OFF** (LED lights **OFF**).*

2. Once power is **OFF** (LED lights **OFF**), press and release either the **POWER/RETRACT** button (fig.3) or the **DOME RETRACT** button to retract the extension cord.



POWER BUTTON:



- 1. To Power Cord- Press and HOLD Power/ Retract Button Until Lights on Ball Illuminate.**
- 2. Press Once to Turn Power off.**

NOTE: Cord will not Retract while Power is Turned ON.



CAUTION: THIS PRODUCT IS RATED FOR INDOOR USE.
DO NOT OPERATE IN WET ENVIRONMENT.