 


ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

Dining Table

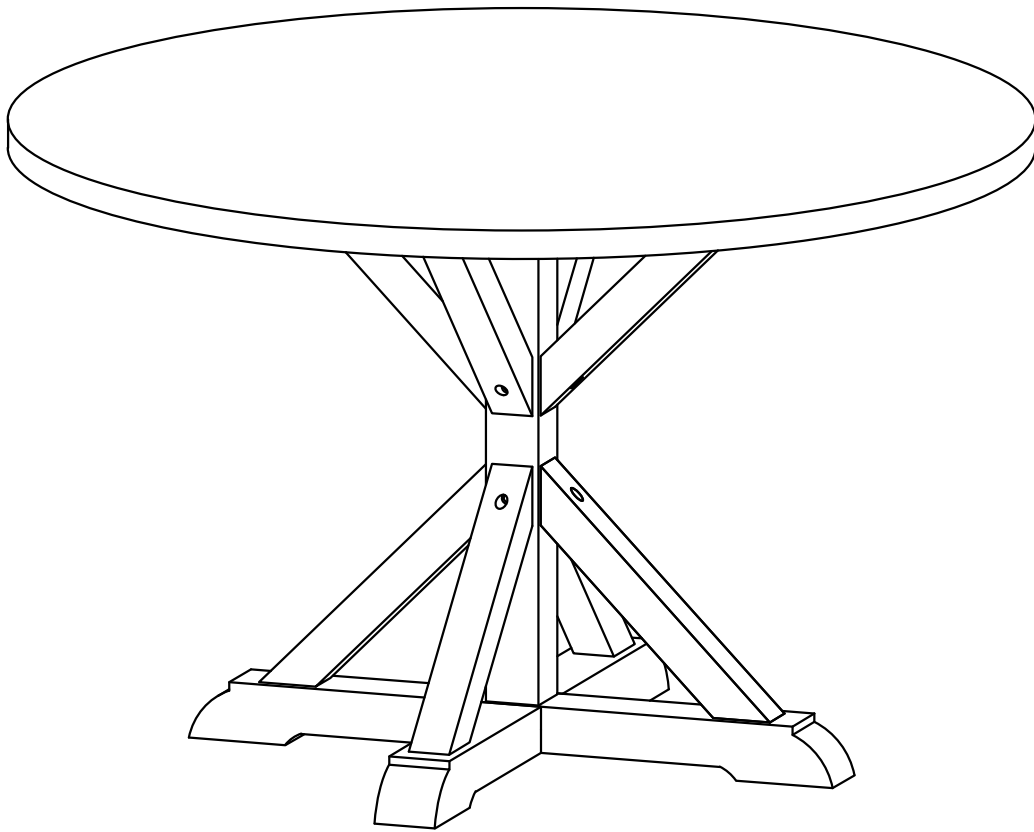

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

Please read these instructions fully before starting assembly:

 
1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

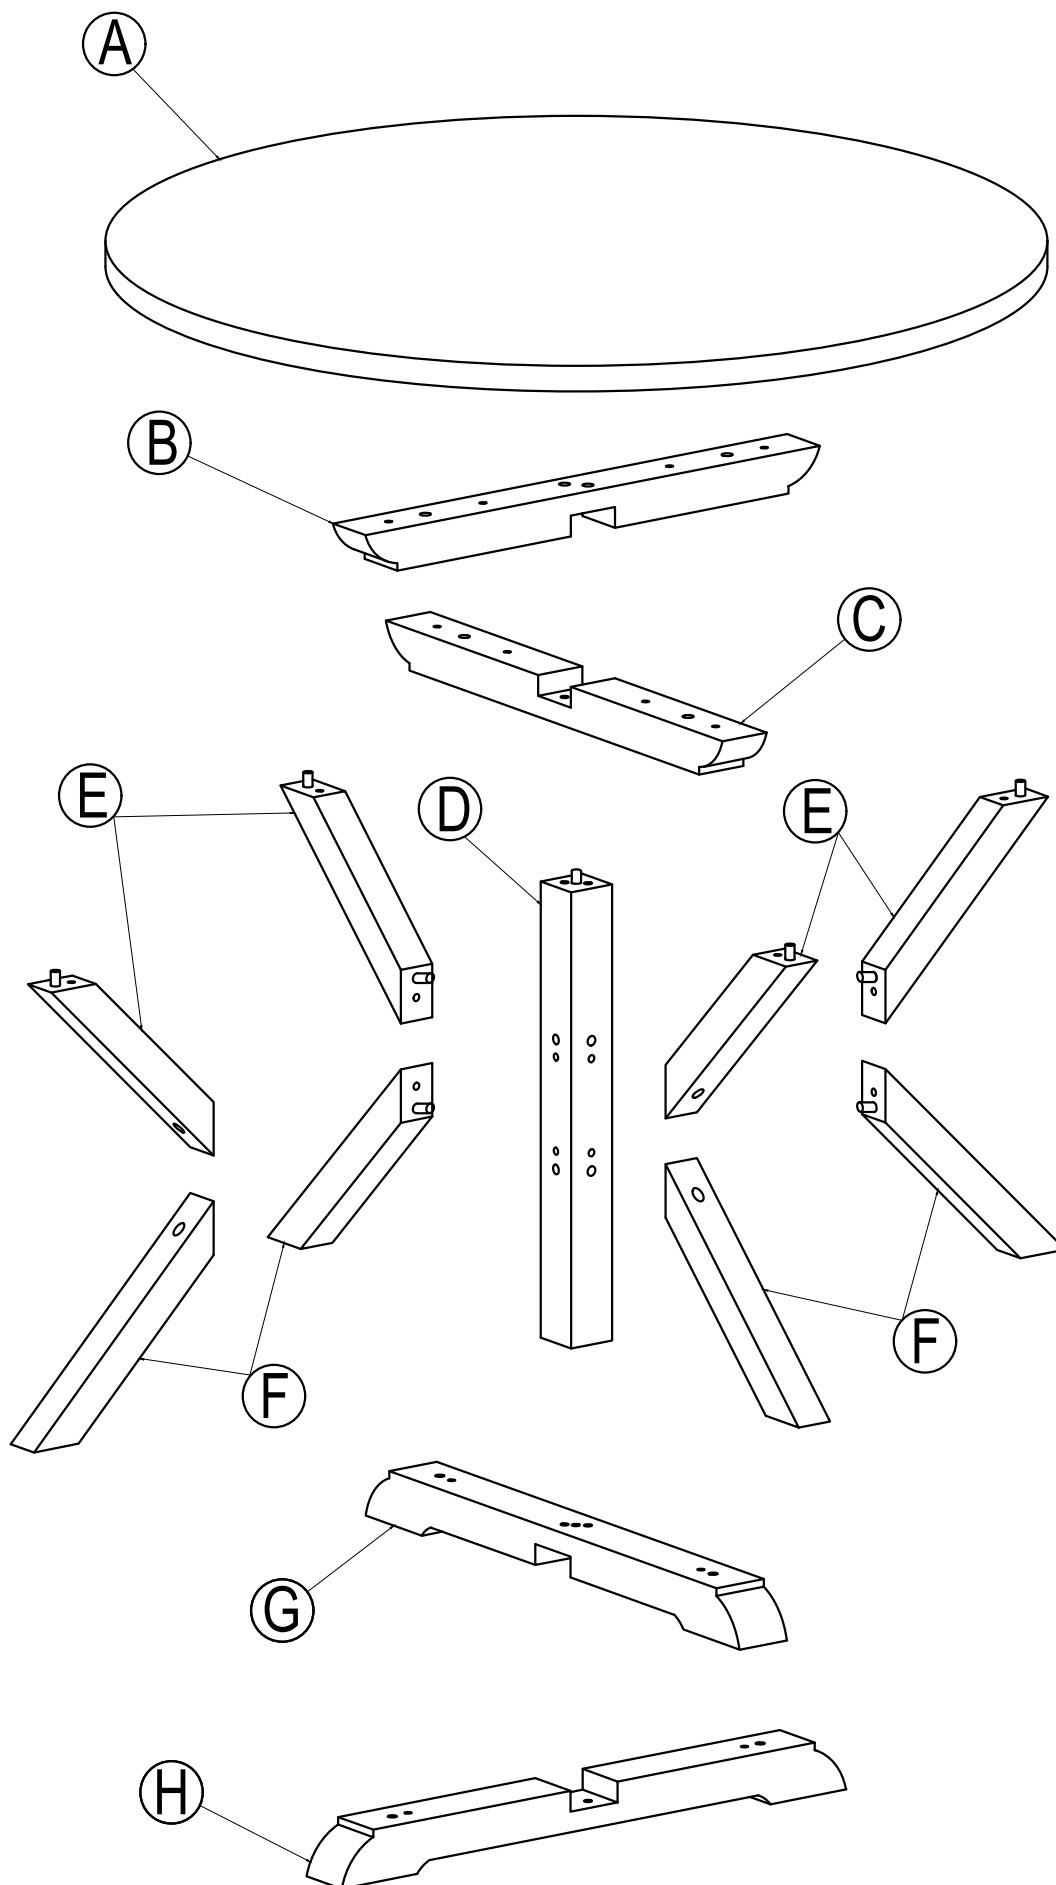

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

Part List

(A)


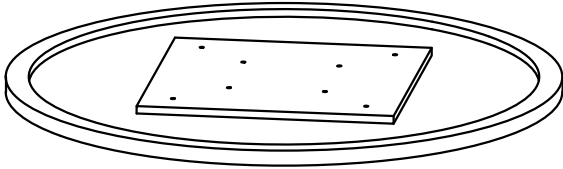 



TABLE TOP (1pc)

 (B)




TOP STRETCHER TOP (1pc)

 (C)




BOTTOM STRETCHER TOP (1pc)

 (D)

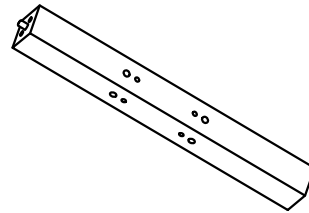


BETWEEN LEG (1pc)

 (E)

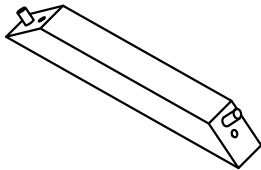


DECORATIVE COTTON TOP (4 pcs)

 (F)

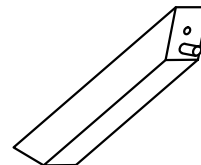


DECORATIVE COTTON BOTTOM (4 pcs)

 (G)

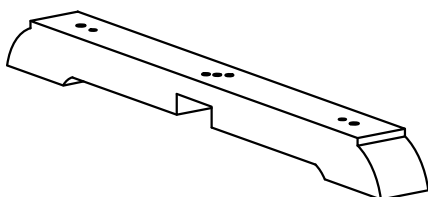

TOP STRETCHER BOTTOM (1pc)

 (H)

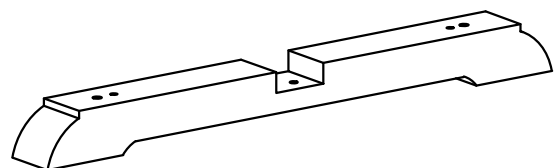


BOTTOM STRETCHER BOTTOM (1pc)

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

Hardware List

 
①

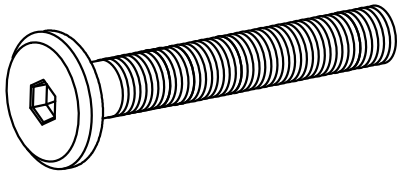

Ø 5/16" x 40 mm

BOLT (8 pcs)

 
②

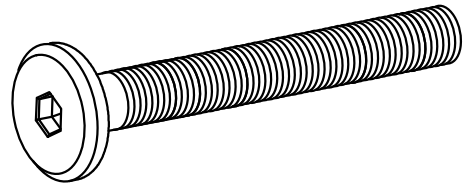

Ø 5/16" x 65 mm

BOLT (20 pcs)

 ③



Ø5/16" x 13 mm

FLAT WASHER (28 pcs)

④



 
4 mm

ALLEN KEY (1 pc)


ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

STEP 1:

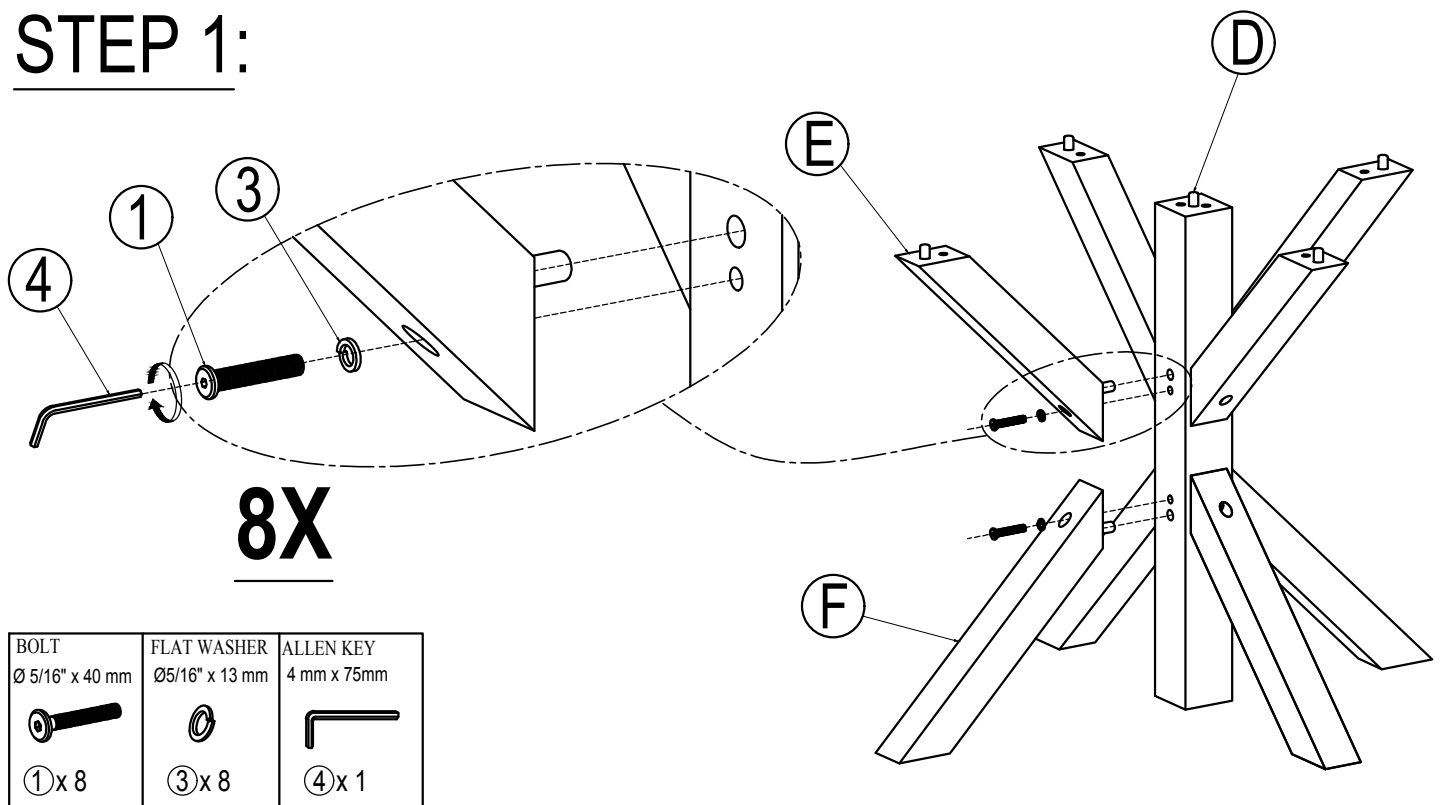

 
STEP 2:

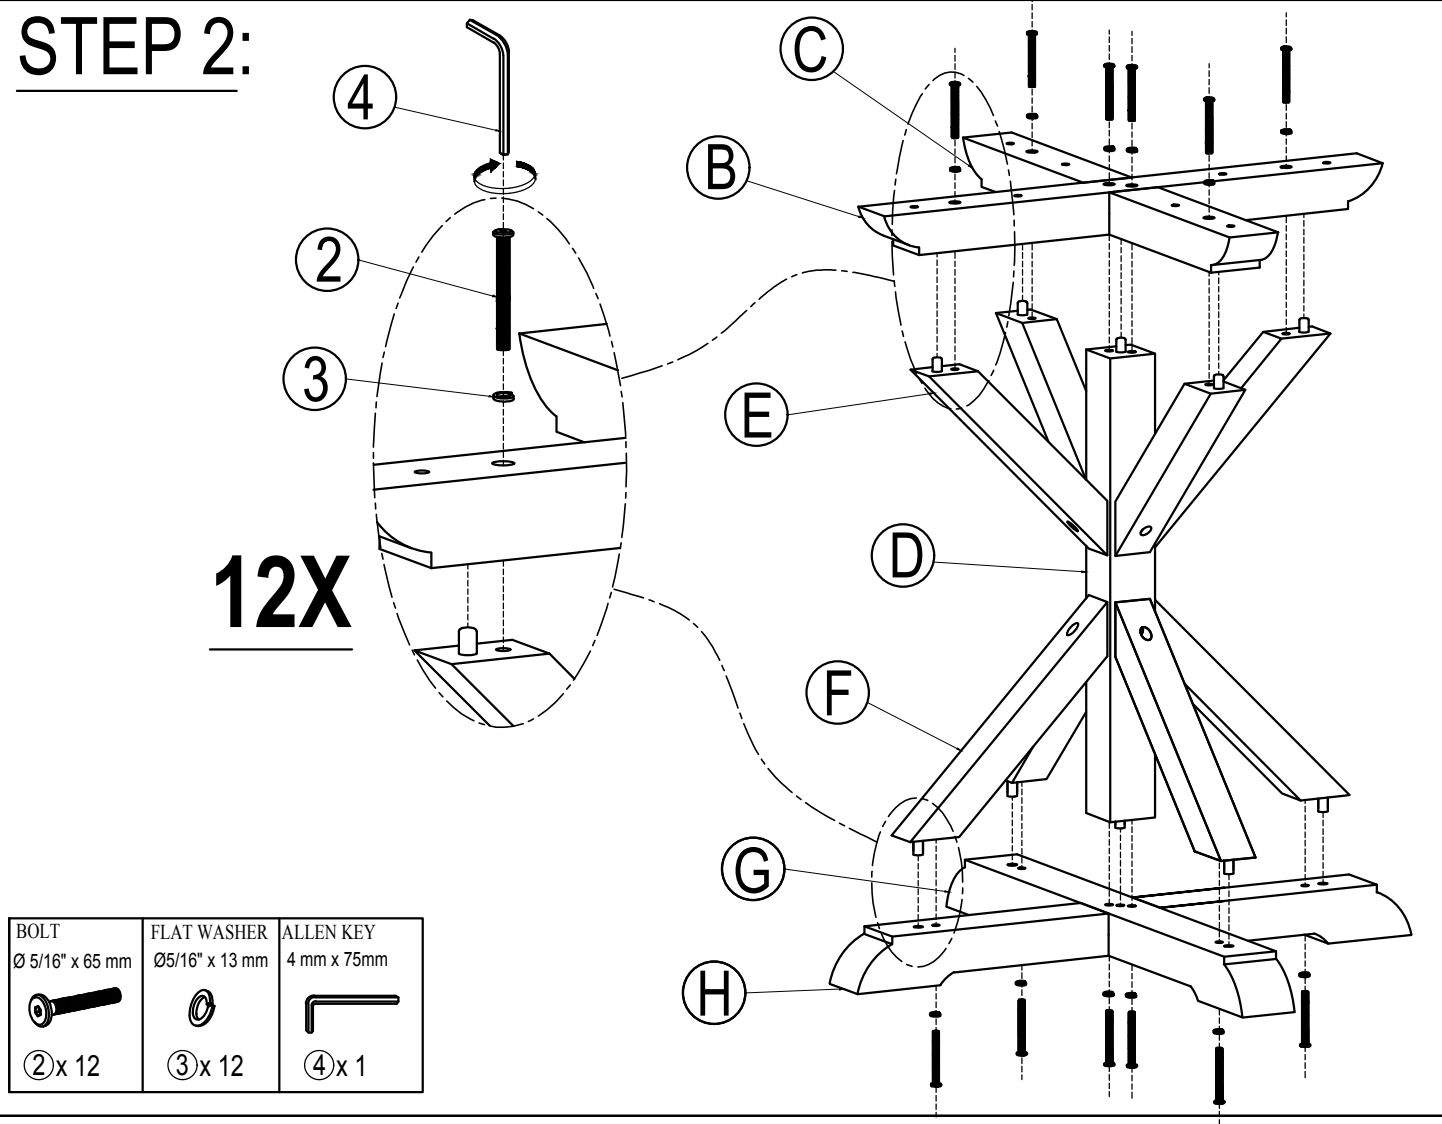

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

 STEP 3:


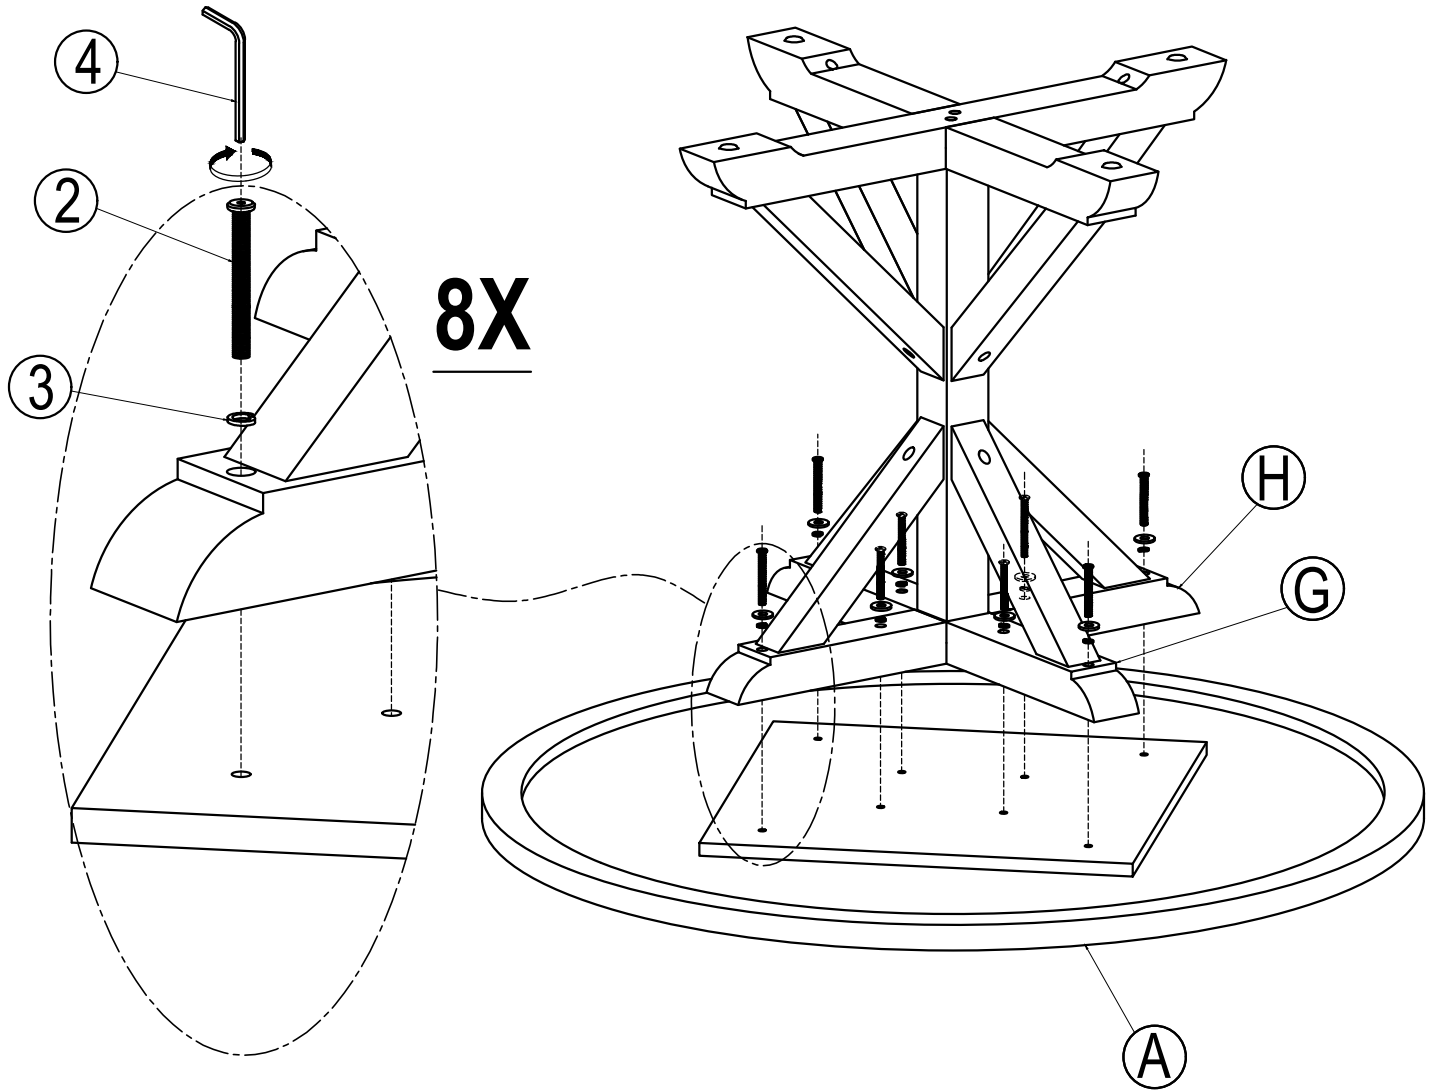


BOLT Ø 5/16" x 65 mm	FLAT WASHER Ø 5/16" x 13 mm	ALLEN KEY 4 mm x 75mm
		
② x 8	③ x 8	④ x 1

ASSEMBLY INSTRUCTIONS

ITEM NO.WF318793

  COMPLETE

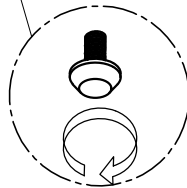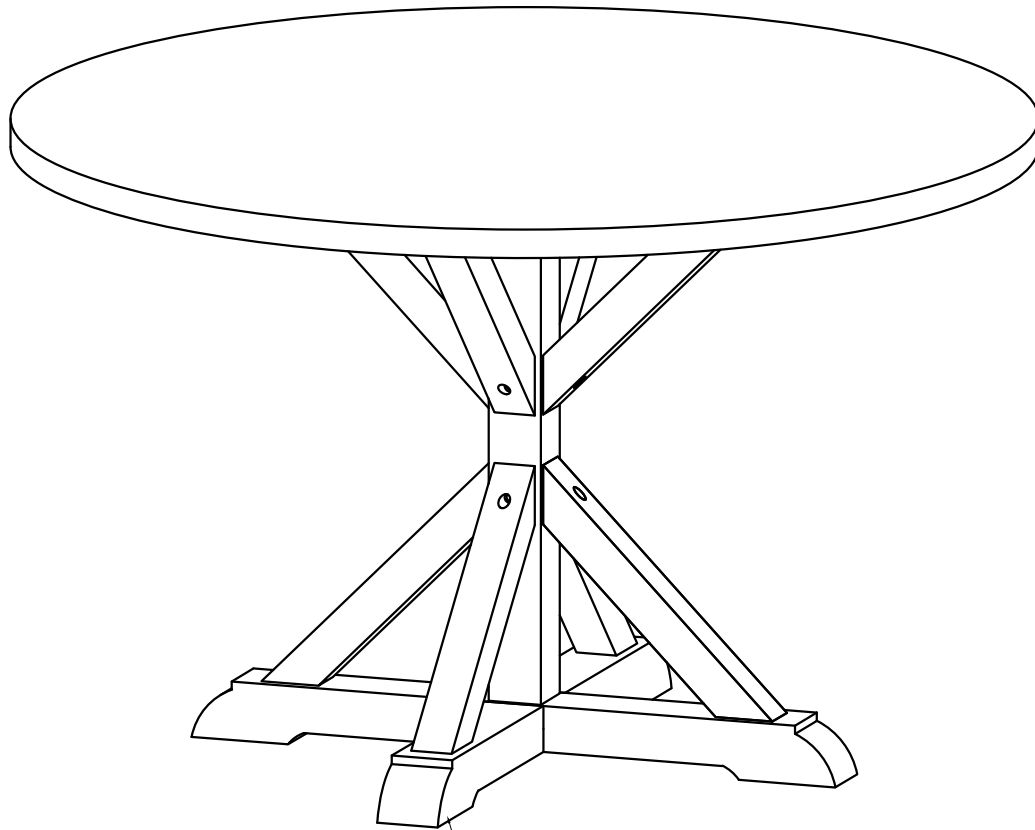

Adjust Leveler = 4 pcs